LOOK INSIDE

PKG-004 · Medical & CBRN Pack

Sample pages from: Negative Pressure Quarantine Room Blueprint

These are unaltered pages from the actual guide, taken from the current fixed library (Stage 4, 2026-10-30). Every EOTWSG guide opens with an action card, states its safety boundaries up front, and ends with printable fields for your household.

Full pack: shop.eotwsg.com · 14-day no-questions refund · Household license

Negative-Pressure Quarantine Room Blueprint

EOTWSG | MODULE 12 | REV 2026-09-22 | STATUS: SOURCE-VERIFIED ONLY

Authored by: EOTWSG

REVISION LOG

Date	Revision	Description
2026-09-22	REV 2026-09-22	Front-matter standardization: cover block, revision log, action card, and local fields added; source normalized to house Typst dialect.

ACTION CARD

Use this guide to this is an expedient planning aid, not a certified airborne infection isolation room. A residential room may not provide the pressure control, outdoor exhaust, filtration, monitoring, fire rating, or infection-control performance of a healthcare AIIR. Contact public health and qualified HVAC/infection-control personnel for suspected airborne disease.. Carry one copy in the master box and one copy in the working binder.

Step	Do this now	Completion check	Stop / escalate when
1	Confirm this copy is current: check the module ID (12) and REV date on the cover.	Module ID and REV noted on the working copy.	If the REV predates 2026-09-22, replace this copy before use.
2	Work through the Scope and Limitation section against your household's actual people, conditions, and equipment.	Section completed with household-specific entries; gaps flagged.	If a required capability is missing, flag it in the binder and resolve before the next drill.
3	Record completion, date, and any deviations in the working binder; schedule the next review.	Binder entry dated and filed.	If the household situation changes, re-run the guide.

PURPOSE AND ACTIVATION

Purpose: This is an expedient planning aid, not a certified airborne infection isolation room. A residential room may not provide the pressure control, outdoor exhaust, filtration, monitoring, fire rating, or infection-control performance of a healthcare AIIR. Contact public health and qualified HVAC/infection-control personnel for suspected airborne disease.

Activation triggers: utility failure, evacuation order, sudden service uncertainty, or a planned verification drill. This module is usable on its own; linked module IDs preserve the shared decision order from the master index.

Residential Isolation Planning — Airflow, Barriers, and HEPA Exhaust

Scope and Limitation

This is an expedient planning aid, not a certified airborne infection isolation room. A residential room may not provide the pressure control, outdoor exhaust, filtration, monitoring, fire rating, or infection-control performance of a healthcare AIIR. Contact public health and qualified HVAC/infection-control personnel for suspected airborne disease.

Expedient Barrier and Airflow Concept

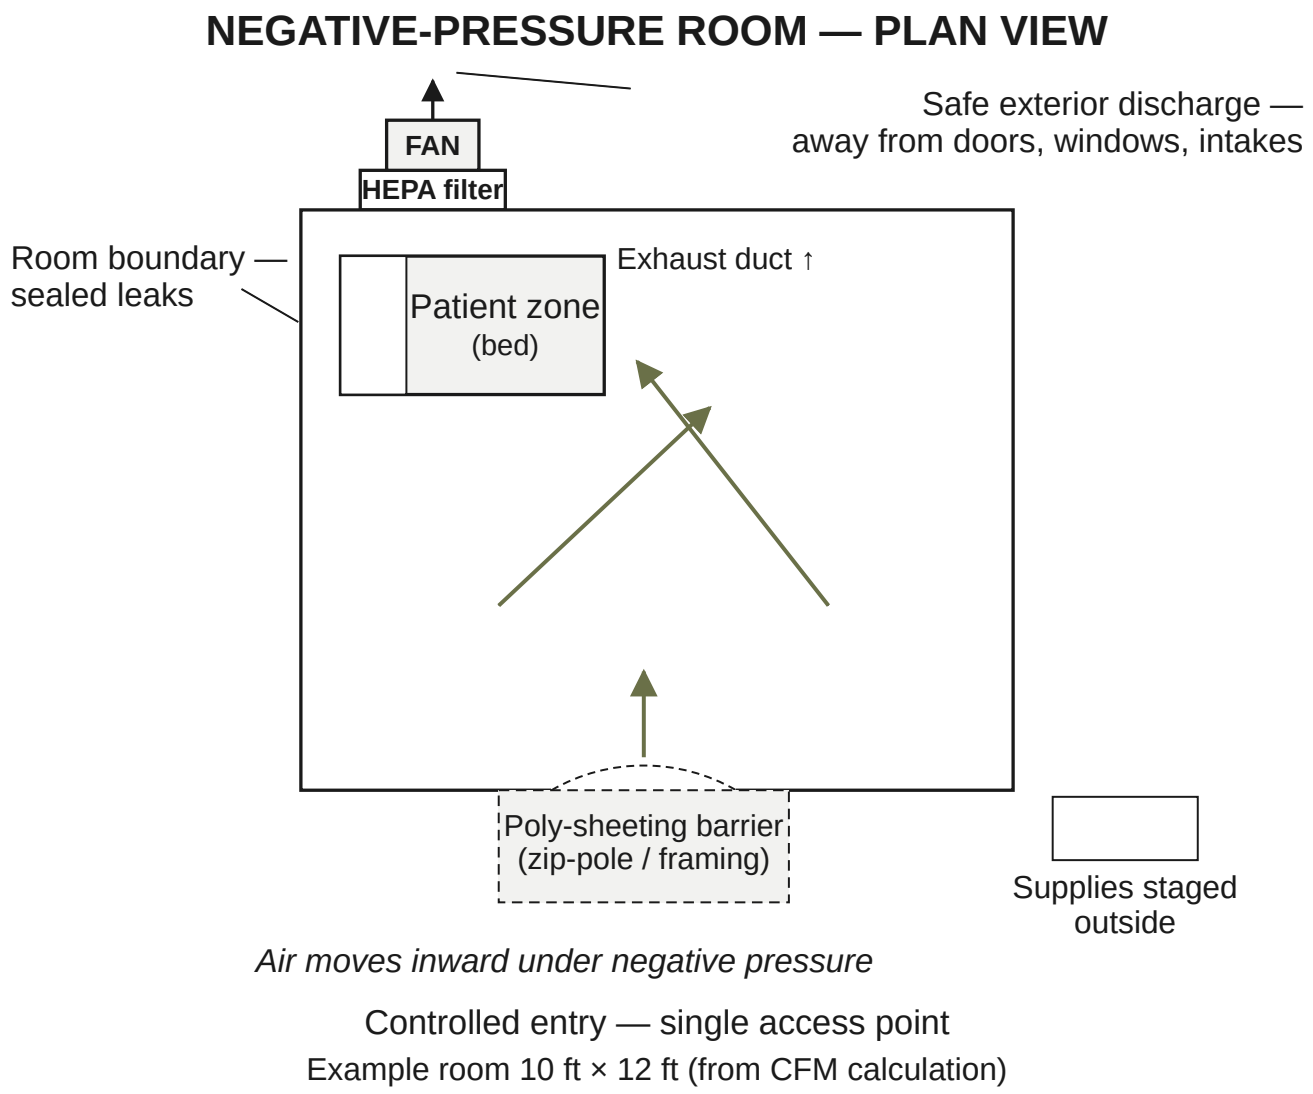


Figure 1: Negative-pressure room plan and airflow arrows.

CFM / ACH Calculation

Use **CFM = (Room volume in cubic feet × target ACH) ÷ 60**. For the planning target of **12 ACH**, a 10 ft × 12 ft × 8 ft room has 960 cubic feet, requiring **192 CFM** of total airflow at the room condition. Select a fan with verified delivered airflow after filter, duct, bends, and outdoor termination losses; do not use the free-air rating.

Input	Example	Record / verify
Room length × width × height	10 × 12 × 8 ft	**Record:** _____
Room volume	960 ft³	**Record:** _____
Target air changes	12 ACH planning target	**Record:** _____
Required airflow	192 CFM before system losses	**Record:** _____
Fan delivered airflow	Must exceed calculated need after filter/duct losses	**Record:** _____

Barrier Setup Notes

1. Use poly-sheeting and zip-poles/framing only as an expedient visual and airflow barrier; keep exits, sprinklers, electrical panels, and required ventilation unobstructed.
2. Seal obvious leaks around the door and temporary barriers while preserving a safe egress path.

3. Use sealed ducting and a 12 V DC HEPA-filtered exhaust assembly only if the fan, filter, wiring, weather protection, and discharge are rated for the duty.
4. Discharge exhaust away from people, doors, windows, intakes, and rainwater collection; a qualified professional must verify the location.
5. Use a smoke pencil or other safe airflow indicator at the door gap; do not use flames.
6. Place a CO2/particulate or pressure monitor only as supplementary information; a consumer monitor does not certify infection control.

EXHAUST DUCT — HEPA — FAN DETAIL

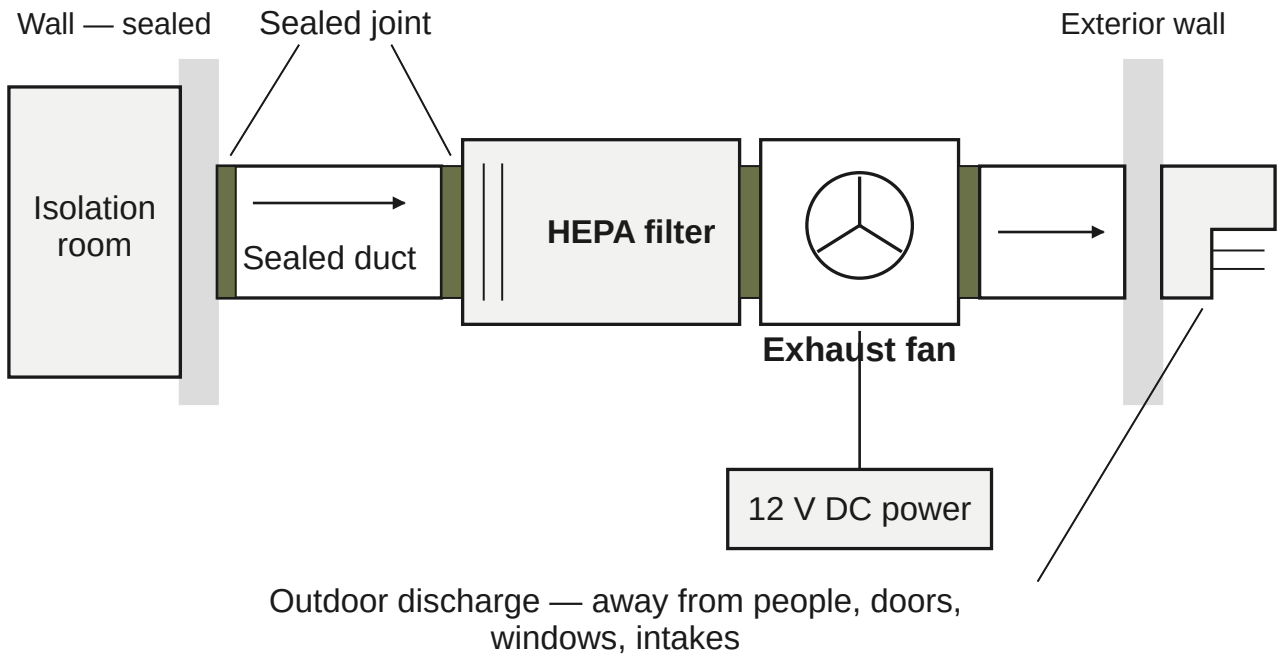


Figure 2: Duct, HEPA filter, fan, power, and outdoor discharge detail.

STOP CONDITIONS

If airflow direction cannot be confirmed, the fan fails, the filter loads, exhaust re-enters the building, a person becomes severely ill, or the patient needs urgent care, stop relying on the room and contact emergency/public-health services.

Credit: Excerpts, schematics, and tactical protocols adapted from the End of the World Survival Guide (EOTWSG) by Matthew Danielson. Reproduce only for off-grid resilience and survival training.

SAFETY BOUNDARIES

WARNING - MODULE LIMITS

Do not perform medical, electrical, or structural procedures beyond this guide's stated limits. When in doubt, stop and consult qualified professionals. This guide is a preparedness aid, not a guarantee of safety. Follow current instructions from local emergency management and authorities.

- This module directs specific actions; those actions carry the safety limits stated above. Do not improvise beyond them.
- Use nonviolent de-escalation and withdrawal as the primary security response.
- If conditions exceed the household's capability, escalate to professional responders.