

Owner's Manual, Installation Instruction and Trouble Shooting Guideline:

Applies to the following models:


1. All BMW 10.25" / 12.5" Product Series

For installation video instruction, please have a look [HERE](#)

Before the installation, please confirm you ordered the correct model for your vehicle: [HERE](#)

- For vehicles which comes with CIC or NBT, please confirm with the LVDS connectors behind the original screen. If your vehicle comes with CIC, the LVDS connector should be 4-Pins. If your vehicle comes with NBT, the LVDS connector should be 6-Pins.

[Wiring Instruction]

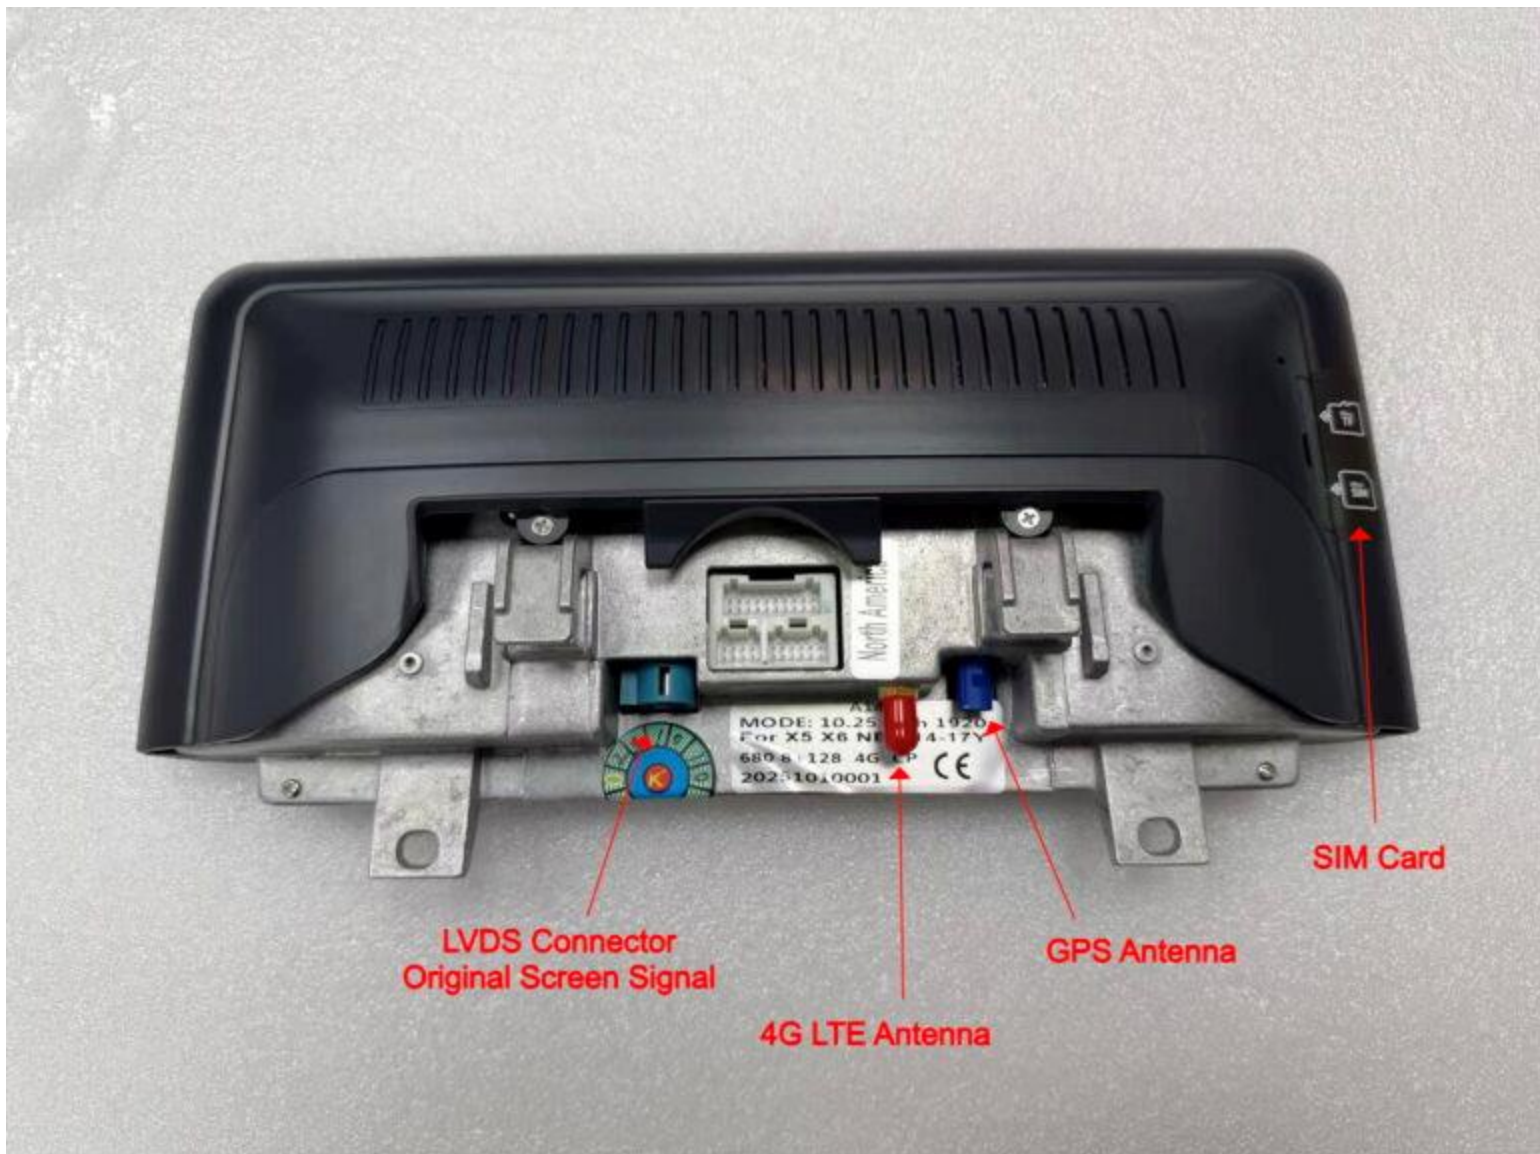


Important: If your radio harness includes a fiber optic cable, please transfer it to the corresponding slot on the new harness; otherwise, there will be no audio.

- The fiber optic cable color may vary by vehicle; some may appear orange.



Original Radio
Fiber Optic Cable


If your original radio harness includes a fiber optic cable,
please transfer it to the corresponding slot on the new harness.
Otherwise, there will be no audio.

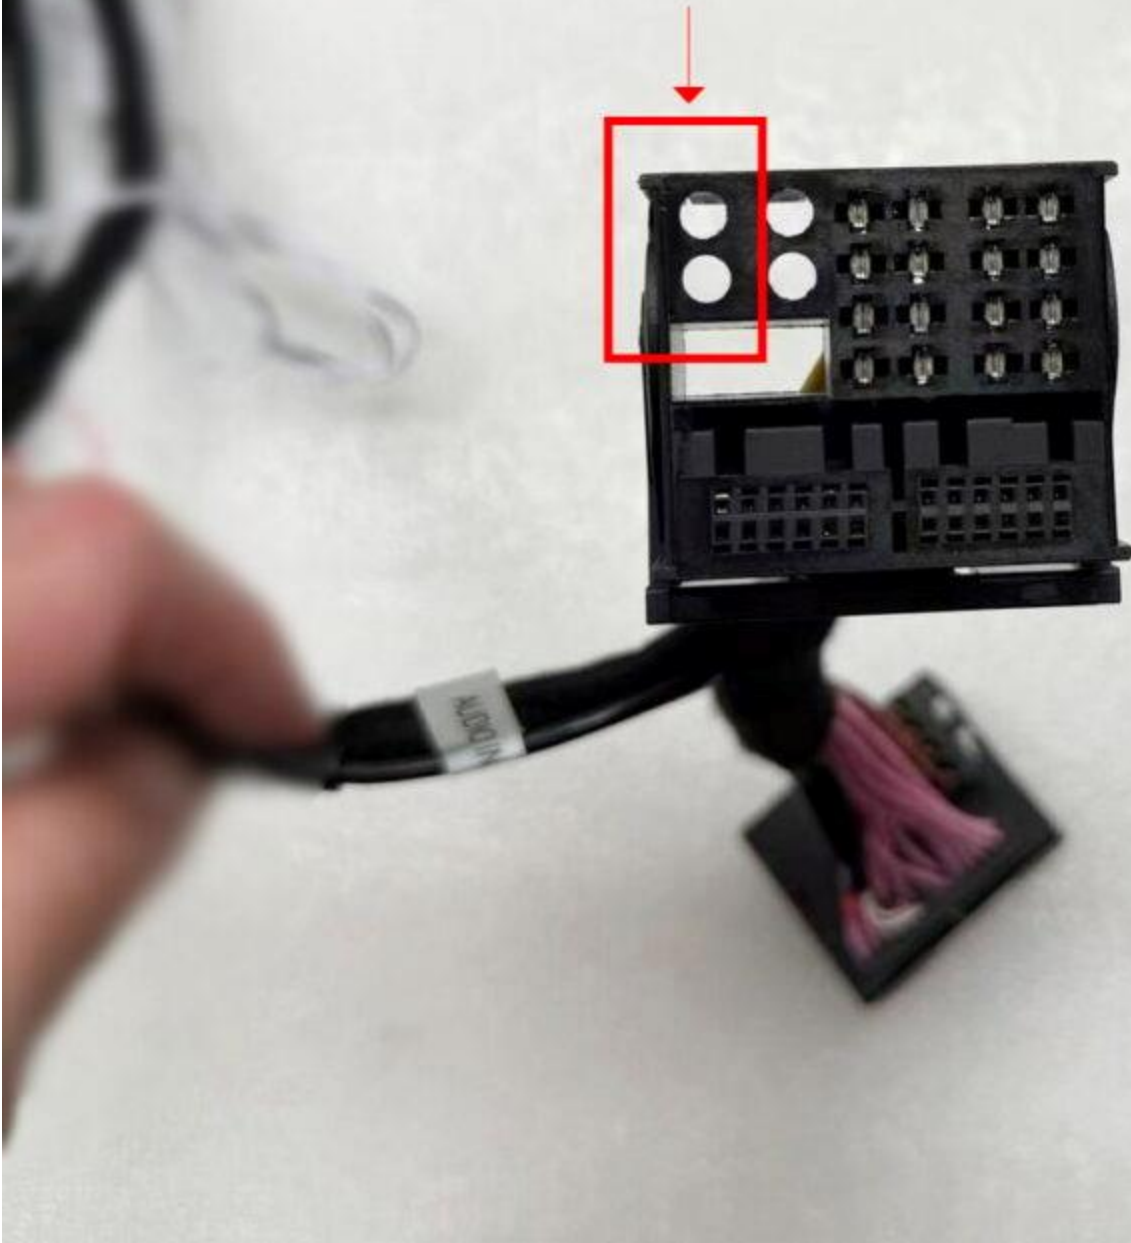

Wiring Instruction for CCC, CIC and NBT i-Drive systems:

Note:


- *For CCC, CIC and NBT iDrive systems, the audio is routed through the original AUX channel.*
- *After installation, you will need to go to the original radio interface and switch the audio source to AUX mode, then keep it on this mode to ensure the new system audio works properly.*

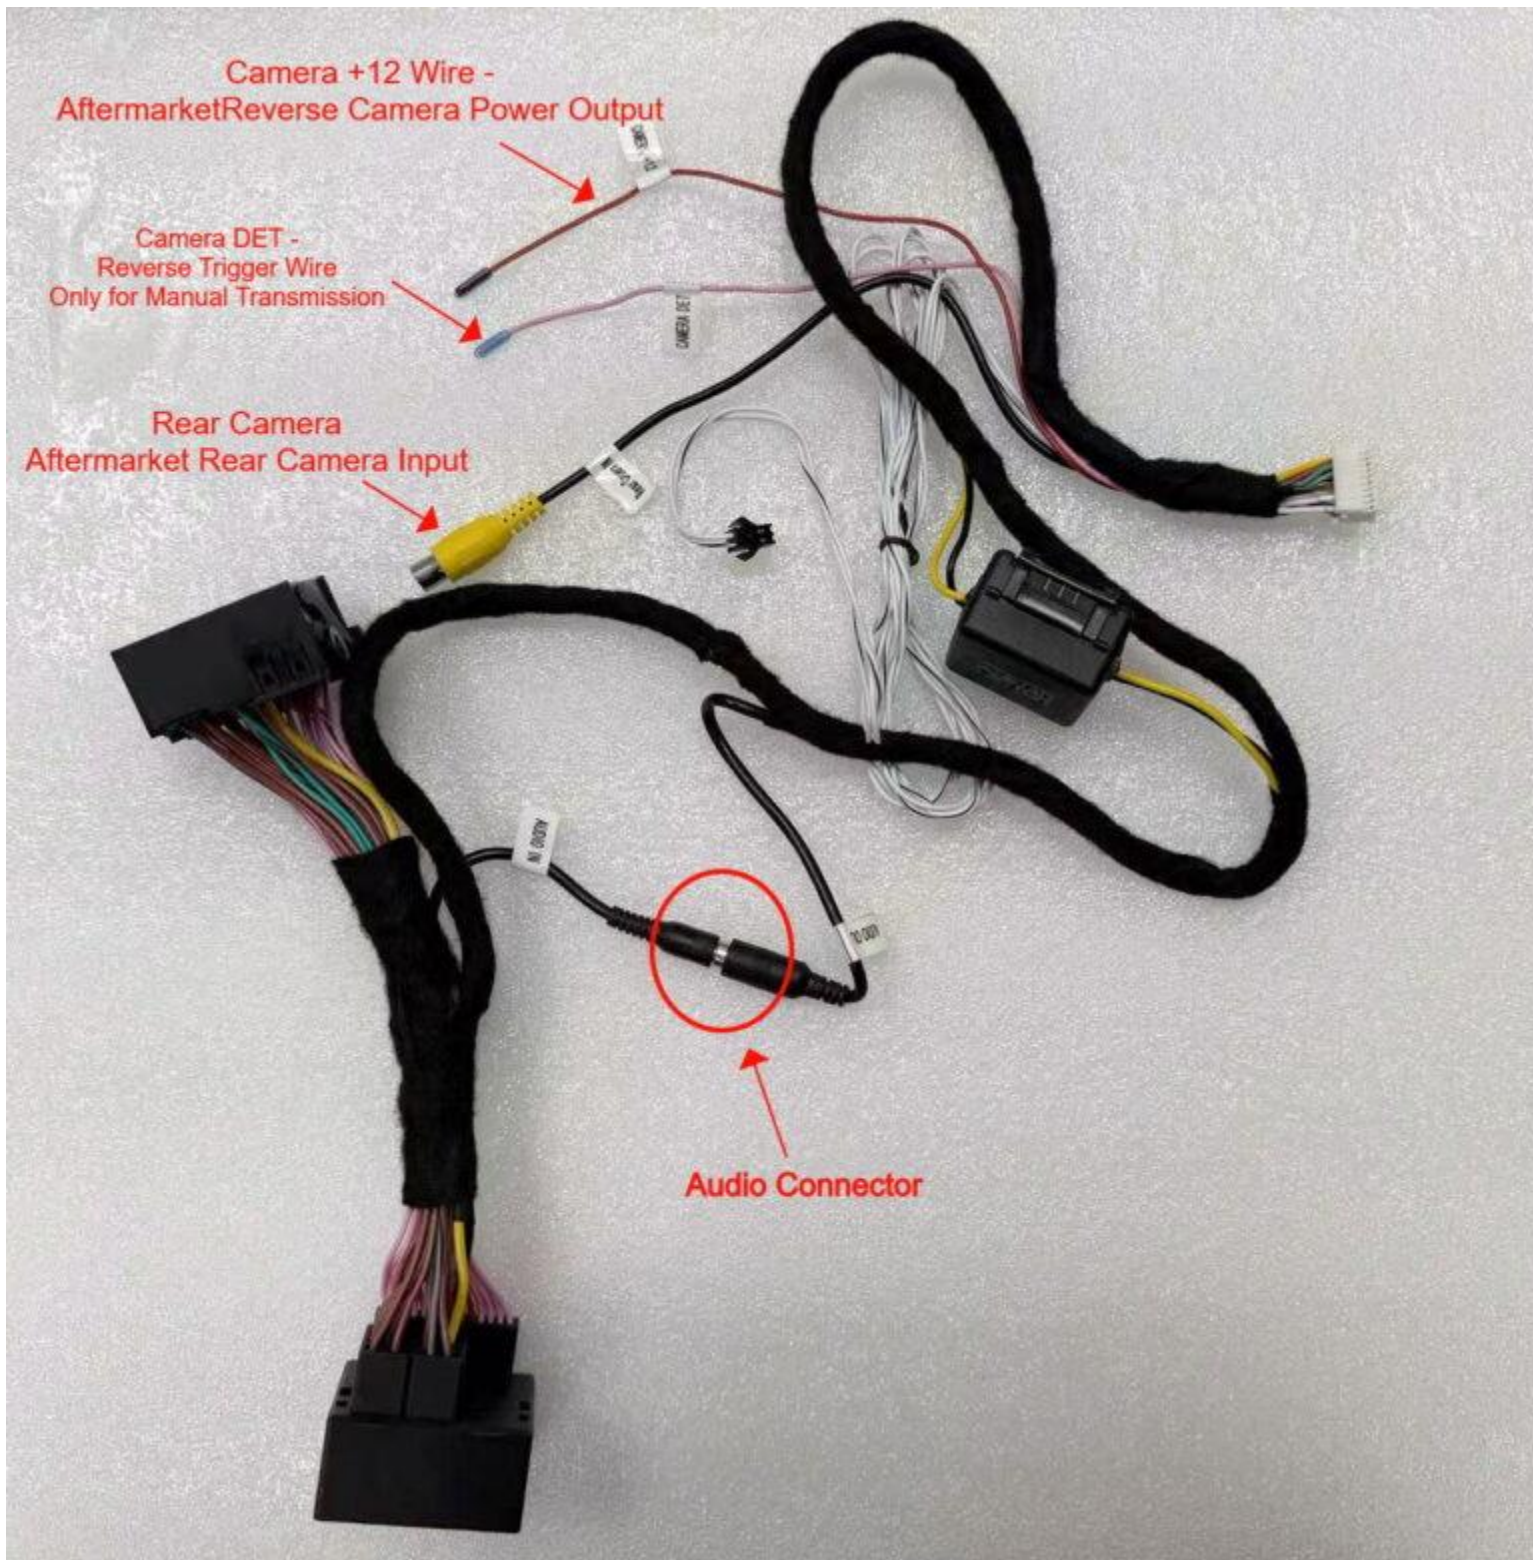

Wiring Instruction for EVO iDrive Systems:

Note:

- For EVO iDrive systems, the audio is routed through the original USB channel.
- After installation, you will need to go to the original radio interface and switch the audio source to USB Interface mode, then keep it on this mode to ensure the new system audio works properly.

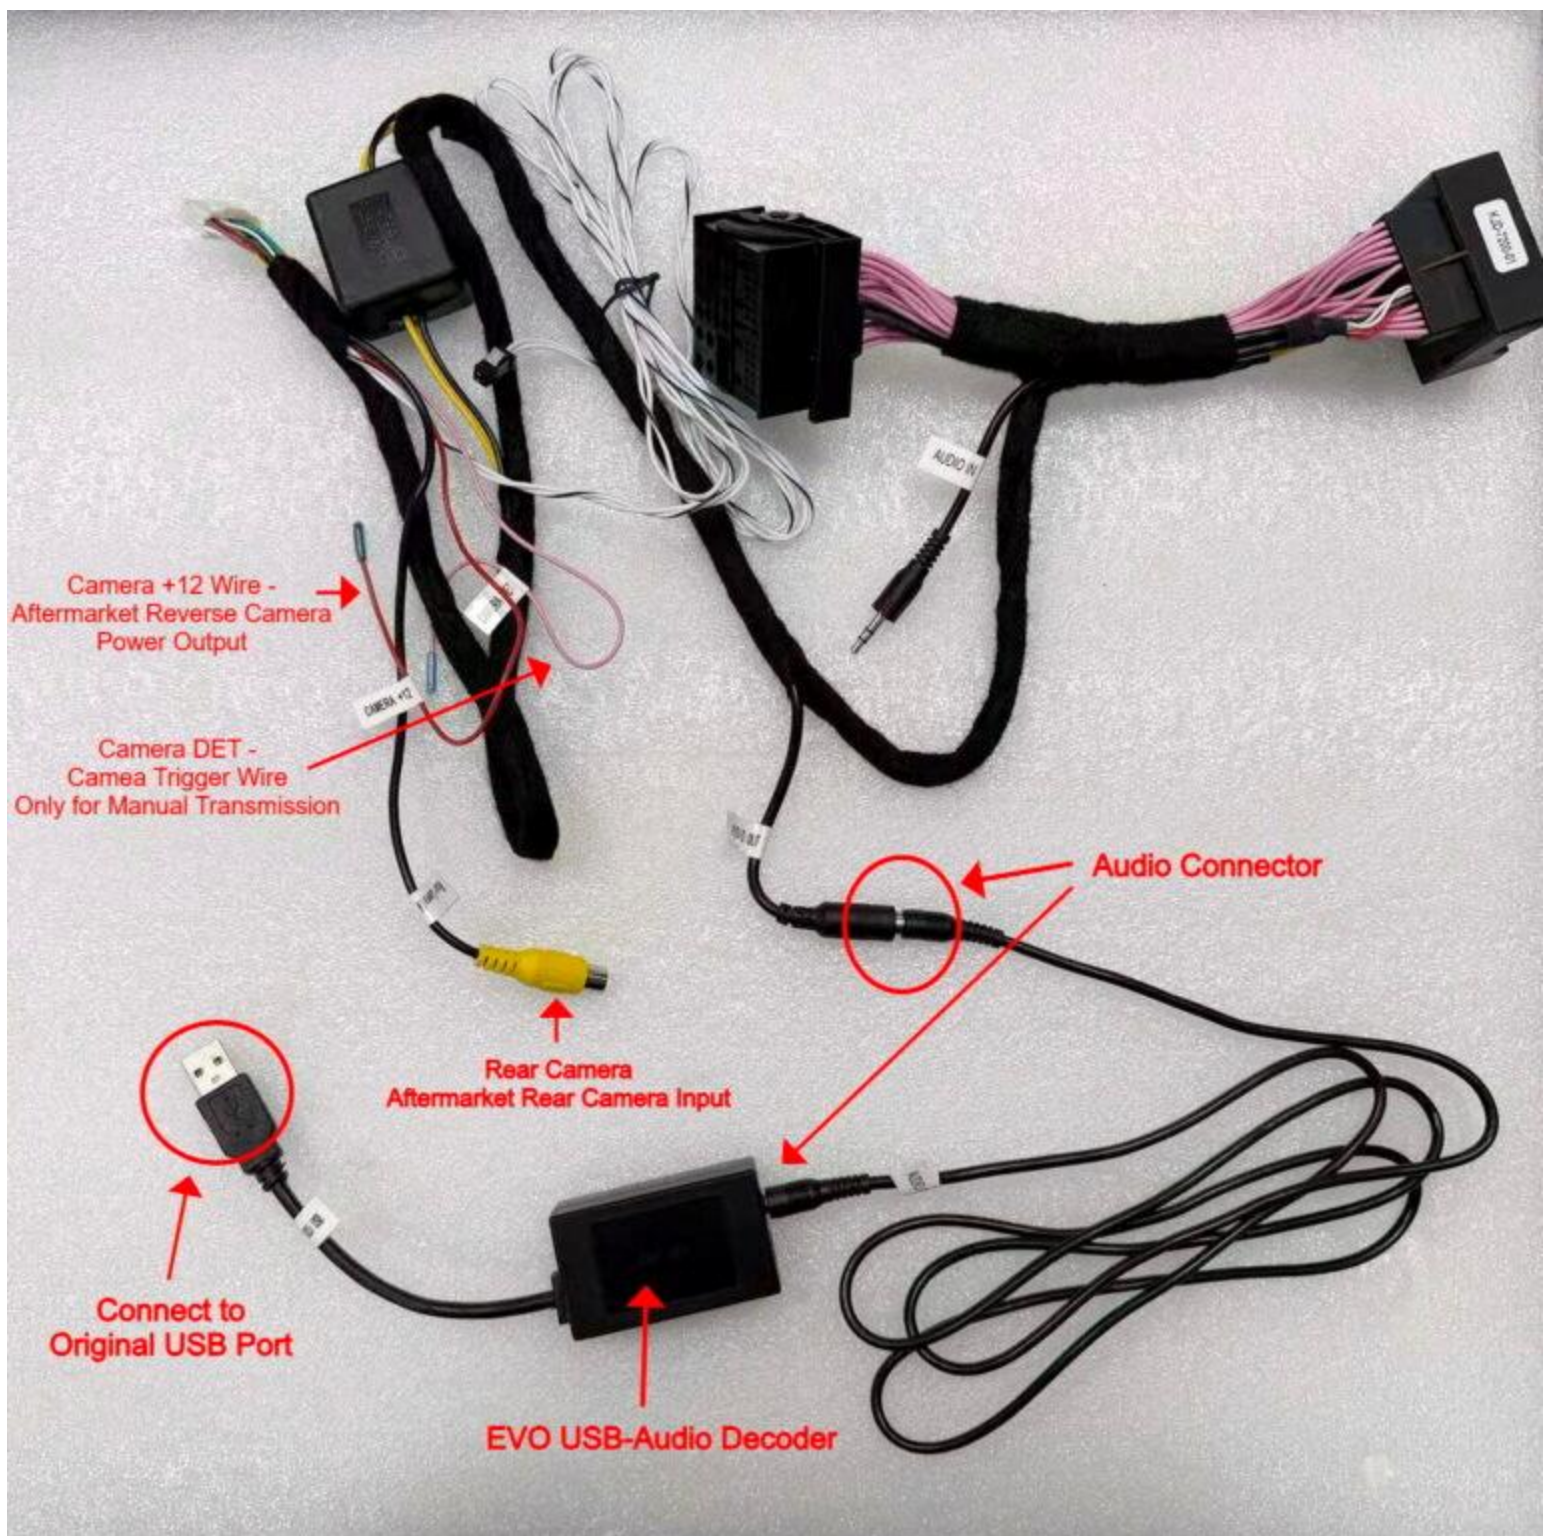

USB-Audio Decoder
(Only for EVO iDrive Series)



AUX Cable


Accessory Wiring:



[System Settings] – IMPORTANT

You can switch between the original screen and the new system using the “Car Info” icon.

- When using the original screen, touch control is not available. Please use the control knob to navigate the menu. Tapping the screen will switch back to the new interface.

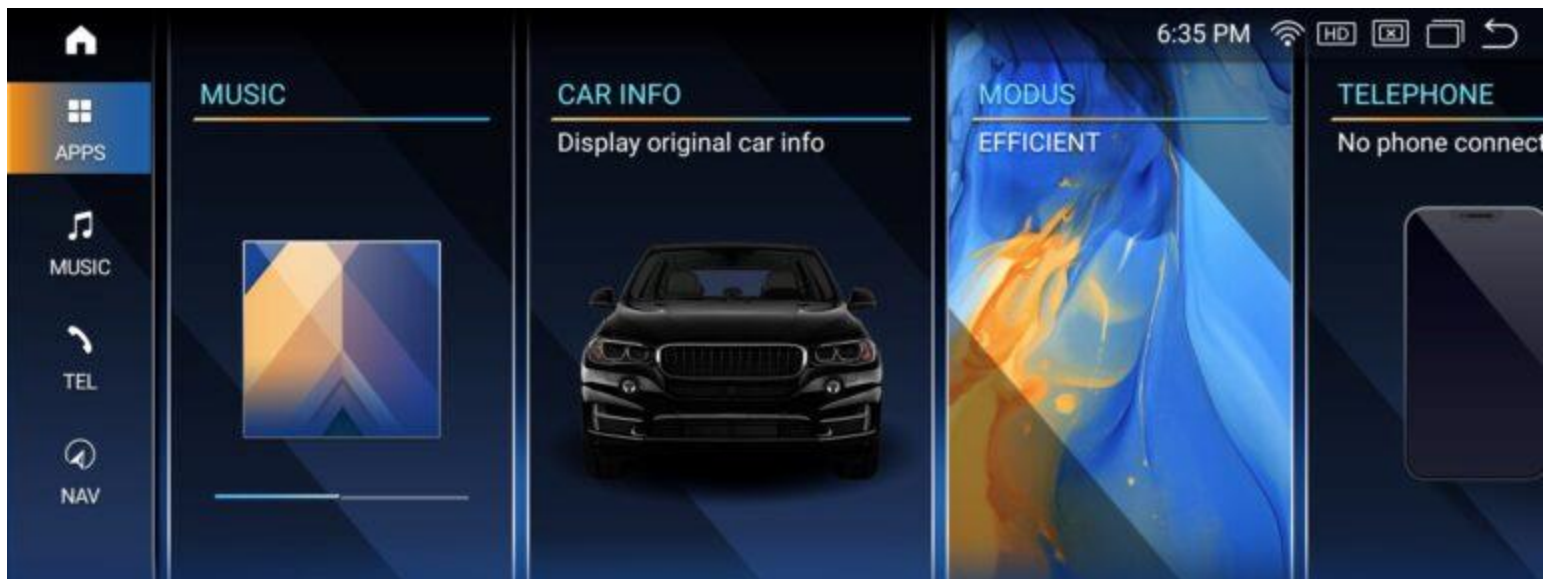


After installation, please access Factory Settings and adjust the necessary settings as outlined below.

- **Settings → System → Factory**
- **Password: 1314**



- Go to “Vehicle Display”
- Select “Adaptive Resolution”
- If you would like the original screen to display in full screen on the new system, simply tap “Full Screen.”
- Other than the settings mentioned above, please do not change any other settings under “Vehicle Display.”

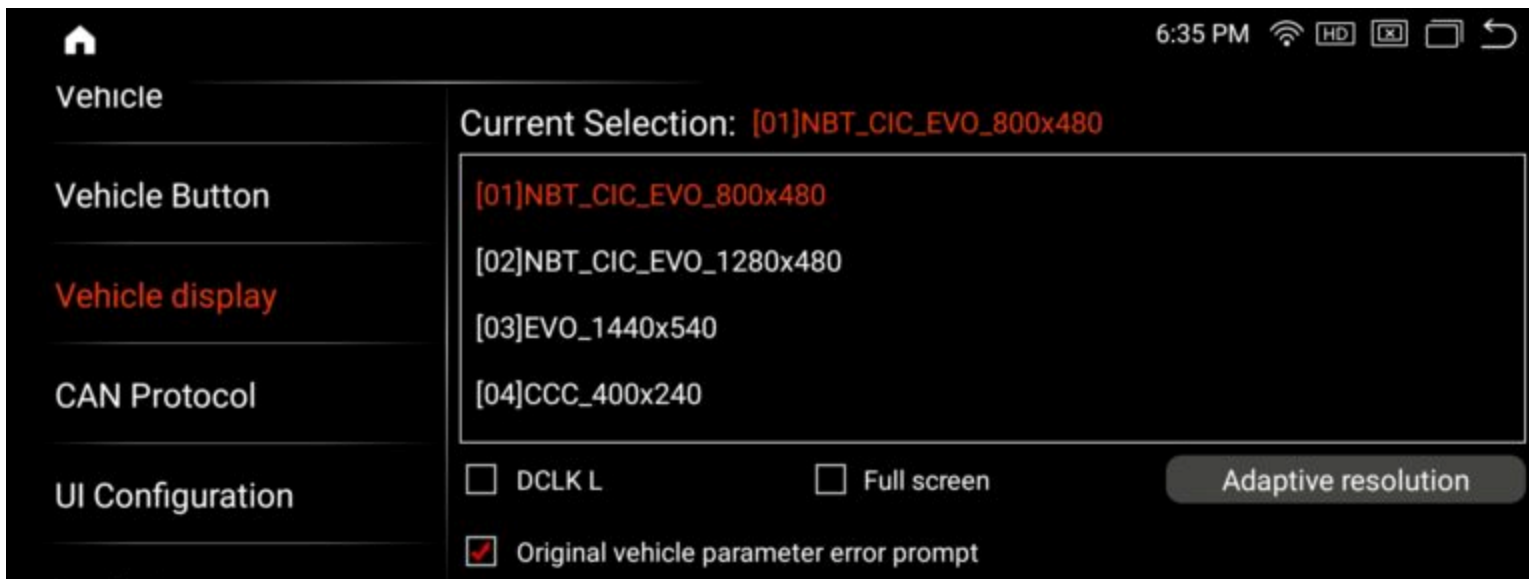


After installation, if the original command knob does not work on the new system, please adjust the settings under CAN Protocol.

- Go to “CAN Protocol”
- Try a different Protocol
- CCC
- CIC
- NBT
- EVO


1. EVO_1.0DIN_OldCAN
2. EVO_1.0DIN_NewCAN
3. EVO_1.5DIN_OldCAN
4. EVO_1.5DIN_NewCAN

- Each time you change the protocol, please turn off the vehicle and the screen for 2 minutes for the changes to take effect.

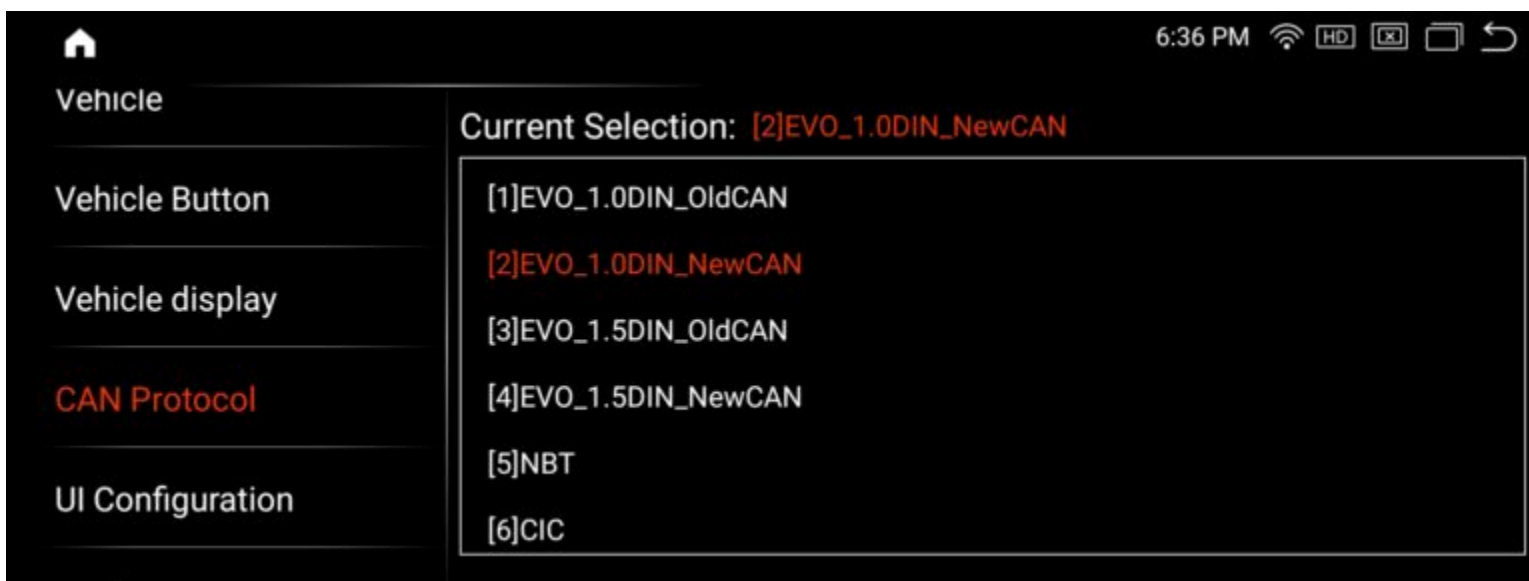


After installation, if the original camera is not working, please adjust the reversing settings.

- Go to Setting → System → Reversing Settings
- Original Camera
- Aftermarket Camera
- Other than the settings mentioned above, please do not change any other settings under “Reversing Settings.”
- If the camera image appears reversed (left and right swapped), please adjust the “Rear Camera Mirrored” setting under Reversing Settings.

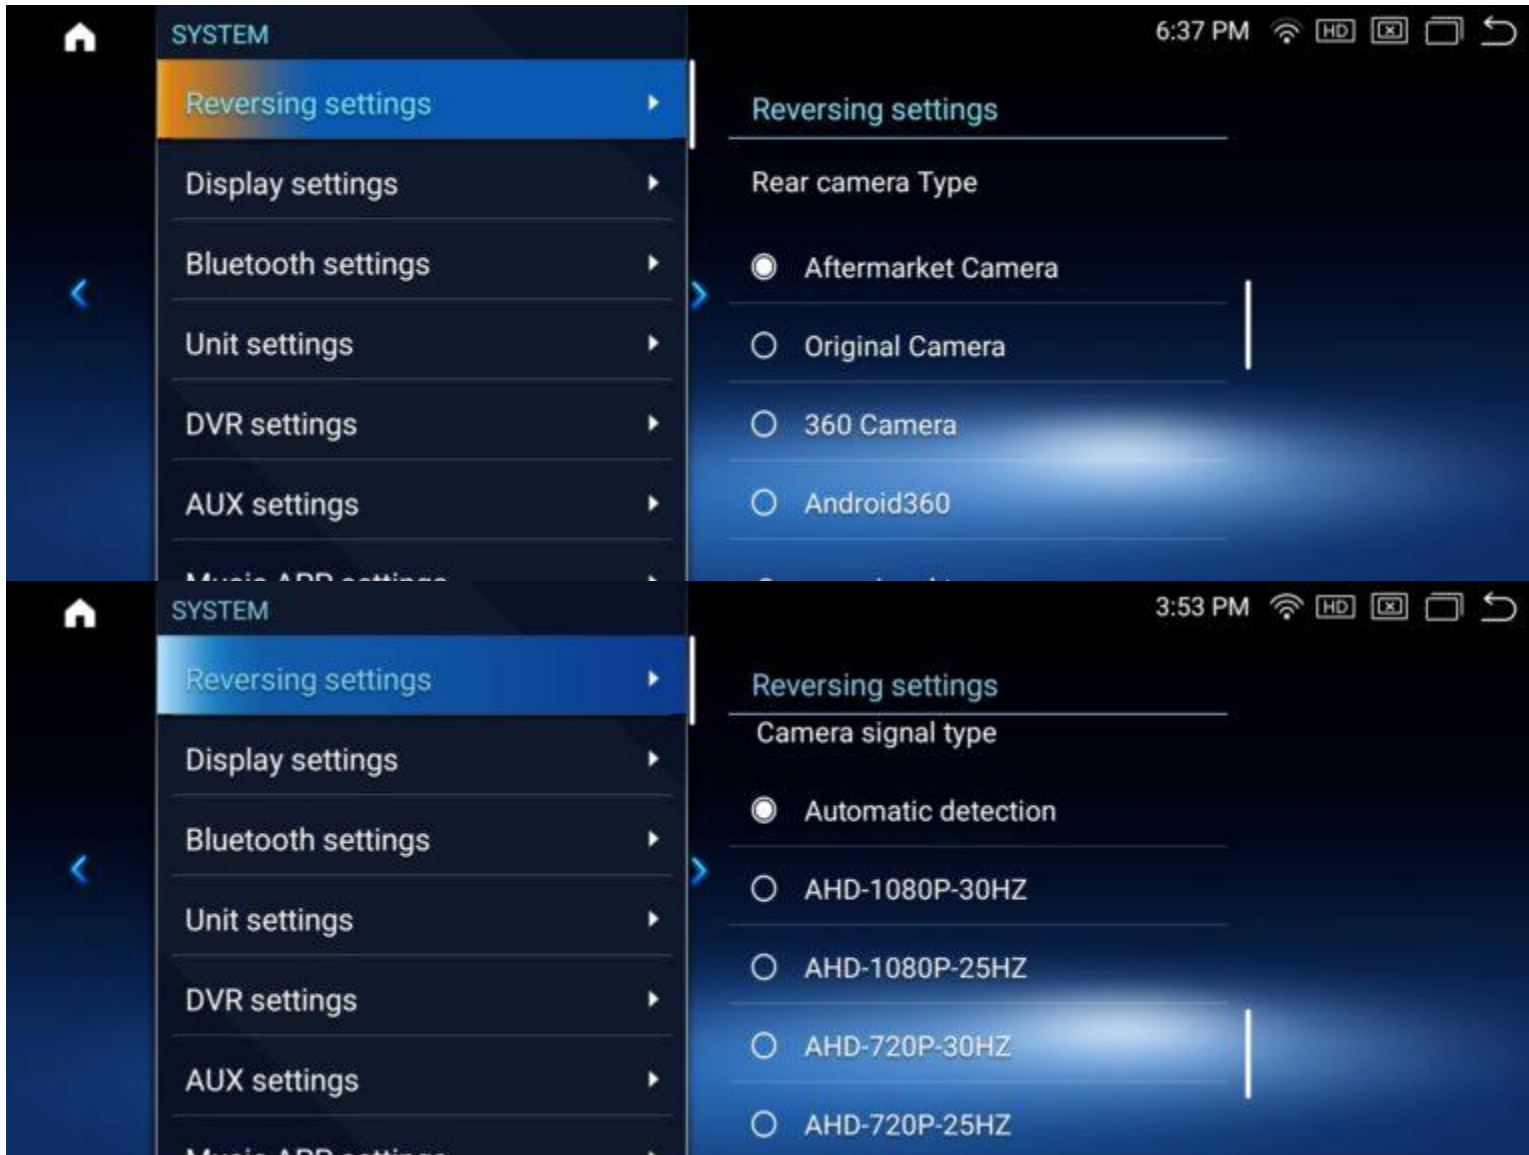


Display Brightness Setting:

- You can adjust the brightness levels for Day Mode and Night Mode under Display Settings.

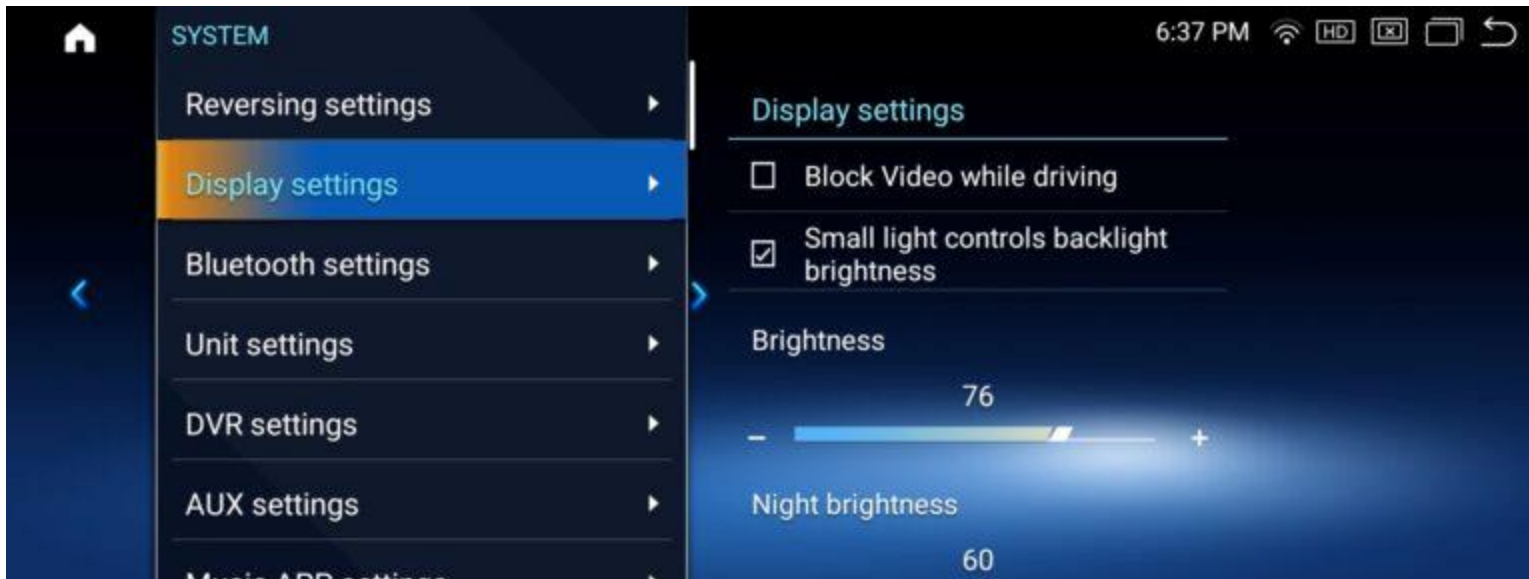


You can assign the function of the original Voice Command button from the menu below.

- Go to Setting → System → Factory (Enter Password: 1314).
- Go to “Vehicle Button” → Voice Key Selection
- Select the desired feature based on your preference.

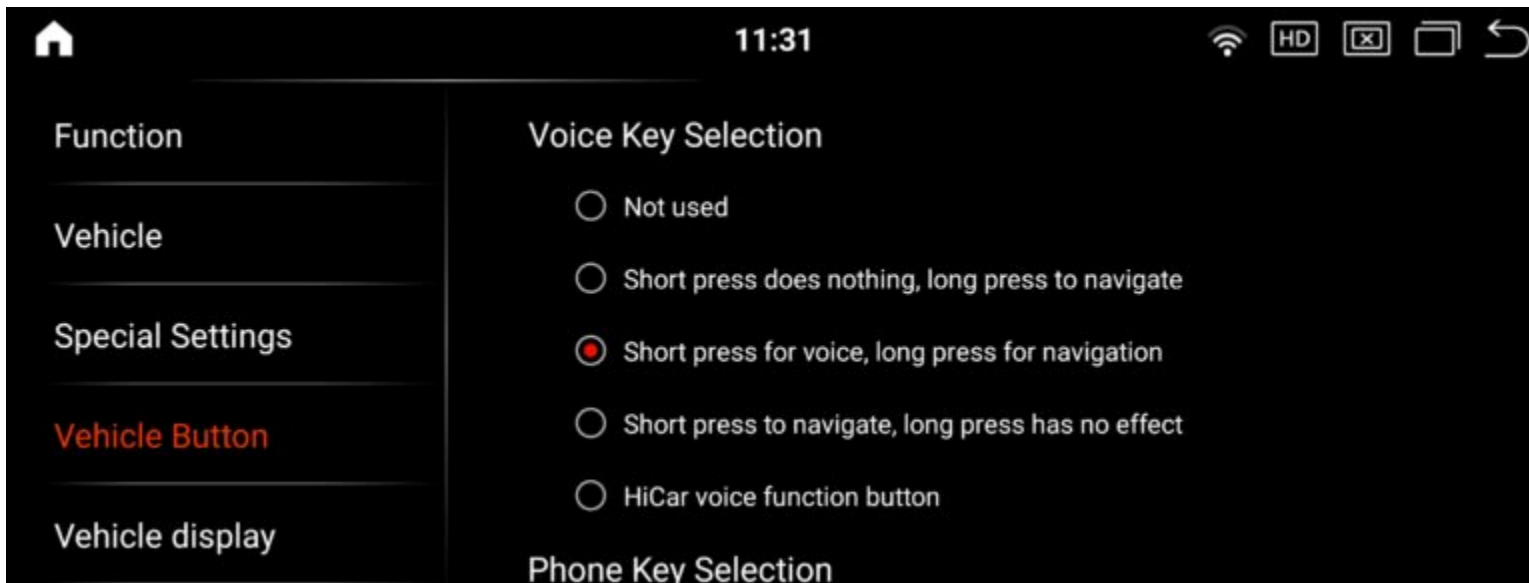

Audio Equalizer:

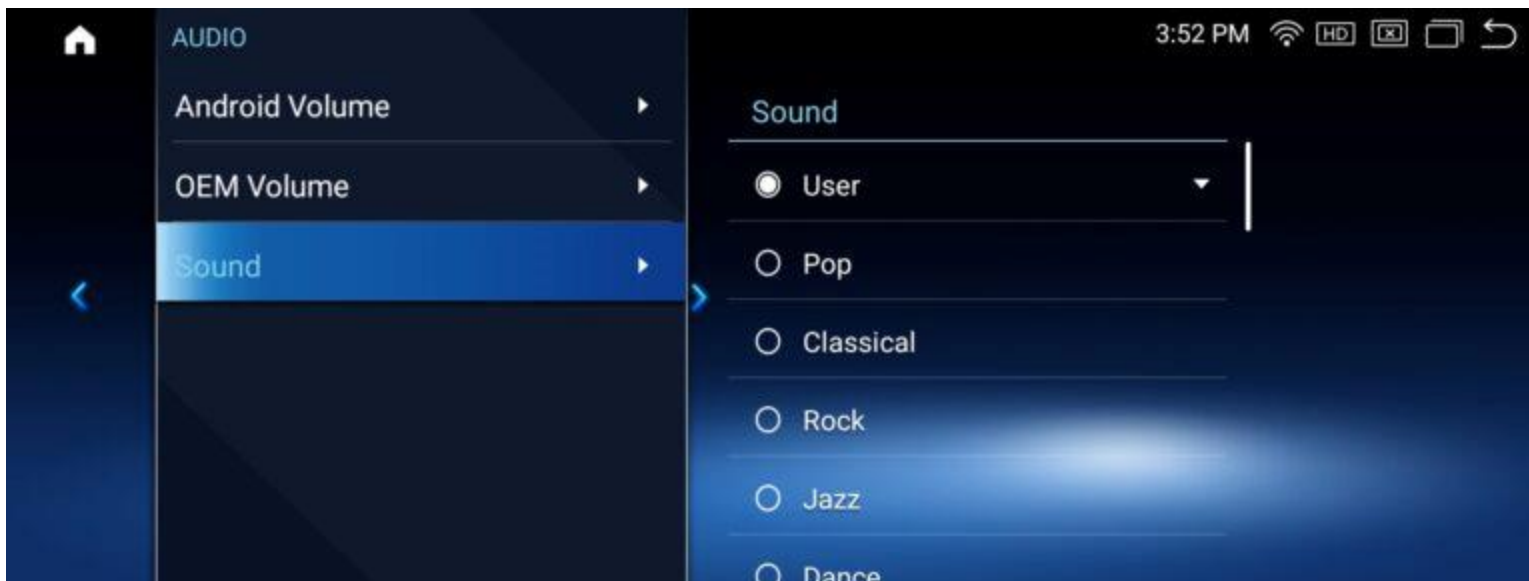

[BMW EVO – Installation Instruction]



[Audio Issues – For CCC, CIC and NBT Version]

For CCC, CIC and NBT, the audio from the system goes through the original AUX channel. If there is no audio come from the new system after the installation, please check the AUX cable in the package, it comes with a AUX cable, which needs to be connected between the AUDIO OUT connector from the main harness and the USB port in the armrest. In order to activate the AUX channel, you will need to first switch to the Original BMW interface, then go to media menu, select the “AUX – External Audio Source” Next is to click on the screen to switch to the new Android interface.

If the vehicle comes with fiber optic, you will also need to transfer the fiber optic cable from the original harness to the new main harness, for more details, please refer to our installation video instruction.

[Audio Issues – For EVO Version]

For EVO, the audio from the system goes through the original USB channel. In the package, it comes with a AUX cable, it needs to be connected between the AUDIO OUT connector from the main harness and the USB AUX adapter. The USB AUX adapter needs to be connected to the USB port in the arm rest of the vehicle. In order to activate the USB AUX adapter after the installation, you will need to first switch to the Original BMW interface, then go to media menu, select the “USB”. Next is to click on the screen to switch to the new Android interface.

If the vehicle comes with fiber optic, you will also need to transfer the fiber optic cable from the original harness to the new main harness, for more details, please refer to our installation video instruction.

For more details, please refer to the trouble shooting guideline below:



Dmonstration Video:



Trouble Shooting Guideline (PDF Format):



[Original Car Display Issues – For CCC, CIC and NBT Version]

After the installation, if the original BMW screen does not show up properly, you will need to change the settings under the factroy setting screen:

1. Please make sure the LVDS cable is connected properly behind the new screen. LVDS cable is the screen signal cable behind the origianl screen.
2. Go to Settings – Factory Settings (Password: 1314) – Car Display
3. Change different settings according to your original vehicle's iDrive version and original screen size.
4. Select “Back” and try again.

For more details, please refer to the trouble shooting guideline:

Trouble Shooting Guideline (PDF Format):



[Bluetooth]

In order to use the Bluetooth, Apple CarPlay or Android Auto of the new system, you will need to unpair and delete the the connection with the original BMW Bluetooth first. Then you can connect to the new bluetooth again.

[BT Microphone Volume]

The system comes with external microphone connectivity. It's not necessary to connect an external microphone since the system comes with built-in microphone. However, you can also connect a high quality microphone to enhance the Bluetooth phone call quality.

The system also comes with settings which will allow you to increase the quality of the built-in microphone. Please follow the step below to adjust the settings:

1. Setting – Factory Settings (Password: 1314)
2. Mic Gain (You can adjust the value here)

The system also retains the original Bluetooth as well. You can also connect to the original OEM Bluetooth instead of the Android Bluetooth if necessary.

[Reverse Camera]

After the installation, if the camera is not functional, please follow the steps below to change the settings:

- For **Original Camera**: Please go to Setting – Camera Setting – OEM Camera
- For **Aftermarket Camera**: Please go to Setting – Camera Setting – Aftermarket Camera

[How to change UI Interface:]




[Offline Navigation]

Using Google Maps for Offline Navigation. To use navigation without an internet connection, follow these steps:

1. Connect to WiFi – Ensure the device is connected to a stable WiFi network.
2. Update Google Maps – Open the Google Play Store, search for Google Maps, and update it to the latest version.
3. Download Offline Maps
4. Open the Google Maps app.
5. Tap your profile icon in the top right corner.
6. Select Offline maps > Select your own map.
7. Zoom and position the area you want to download.
8. Tap Download.

Once the map is downloaded, you'll be able to use navigation and search for locations in that area without an internet connection.

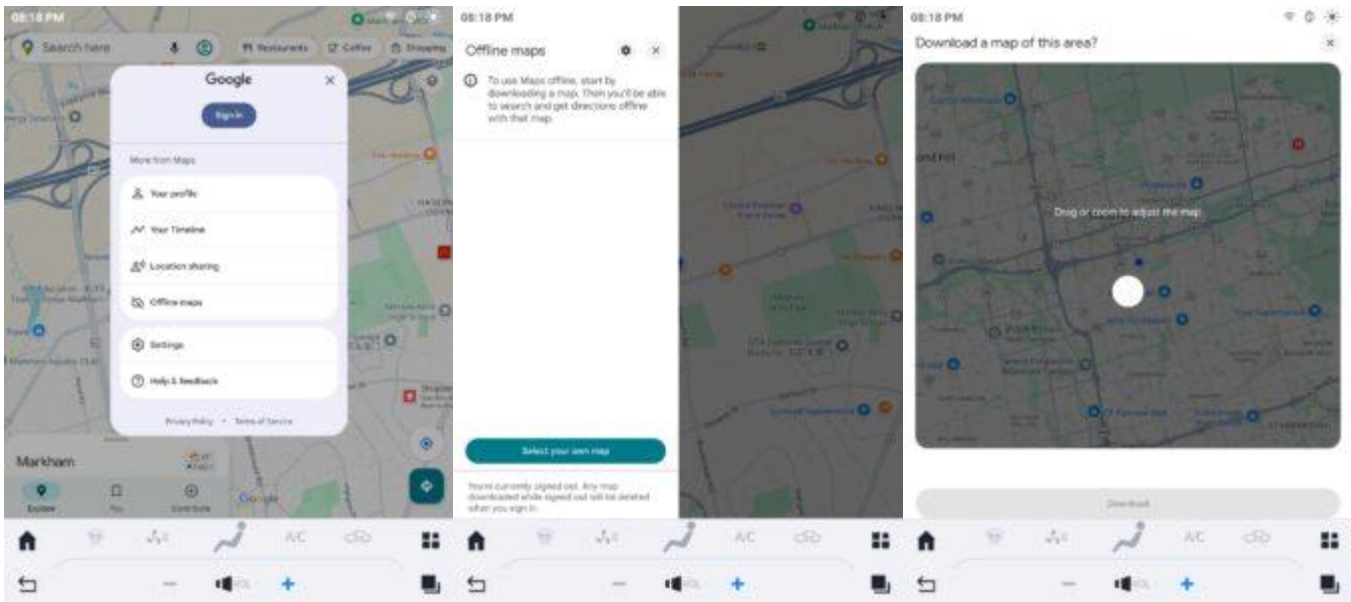

[How to install offline Navigation software and APK files]



[Apple CarPlay]

How to connect / reset wireless Apple CarPlay:

Note: If you have any difficulties on connecting the CarPlay on the new system, please make sure you have **DISCONNECTED** the cellphone from the original Bluetooth first. You can go to the Bluetooth menu of the cellphone to confirm it. If you see any connections with the original system, please disconnect and unpair it before try to connect the CarPlay from the New Android Screen.

Wireless Apple CarPlay only use Bluetooth to pair at the beginning, once it got paired, it will automatically switch to the WiFi channel at the background. While using Wireless Apple CarPlay, you can not turn on WiFi hotspot at the same time. If you would like to turn on the WiFi Hotspot to use some of the applications (such as YouTube..etc), you will need to turn off the CarPlay first. The procedure to turn off the CarPlay shows as below:



CarPlay Reset Procedure:

Part 1: Reset and Erase all previous pairing record

Step 1: Go to CarPlay Setting Menu on the iPhone. (It's under General Setting menu of the phone. Under General Setting, Search CarPlay)

Step 2: Delete and forget all the devices under the CarPlay list.

Step 3: Restart the iPhone.

Step 4: Go to the Bluetooth menu on the New Android Screen.

Step 5: Select the connection icon on the Bluetooth menu (Located at the upper right corner of the Bluetooth menu). Delete and unpair all previous connected device under the Bluetooth menu.

Step 6: Reset the new system by using a tiny pin to click on the reset button which is usually located on the left of the unit. There are two holes on the left, the upper one is the Reset button.

Step 7: Once both the phone and the screen are both restarted, you can start to pair the carplay again.

Part 2: How to connect Wireless Apple CarPlay:

Step 1: Go to Bluetooth menu of the New Android System. Select the connection icon on the Bluetooth menu (Located at the upper right corner of the Bluetooth menu).

Step 2: Go to the Bluetooth menu of your iPhone. Pair the New Android System with the iPhone.

Note: Wireless Apple CarPlay ONLY use Bluetooth to pair at the beginning. Once they got paired, both devices will switch to WiFi channel at the background. Therefore, the Bluetooth will show "Disconnected" on the iPhone and the tablet. This is "Normal" and please do not Manually

Connect the Bluetooth when the CarPlay connection is established.

Step 3: Once it got paired, the Bluetooth will be disconnected automatically and the connection will be switch to WiFi channel at the background

Step 4: System will automatically open CarAuto (CarPlay) on the table screen.

Step 5: Grant the authorization message of "Using CarPlay" on the iPhone.

Guidelines for Using CarPlay/Android Auto:

Connection Requirements

- **Wireless CarPlay/Android Auto uses your phone's WiFi channel** to operate.
- While connected, your phone's WiFi is occupied by CarPlay/Android Auto.

- **Do not manually connect your phone's WiFi hotspot to the Tesla system** while CarPlay/Android Auto is active — this may cause conflicts or connectivity issues.

Automatic Switching Behavior

- After pairing is complete, the system will **automatically switch from Bluetooth to WiFi** to run CarPlay/Android Auto.
- Once connected via WiFi, **Bluetooth will show as “Disconnected”** — this is normal.
- **Do not manually reconnect Bluetooth** after CarPlay/Android Auto is running.

How to Disconnect CarPlay and Use WiFi Hotspot Instead

If you prefer to use your phone's WiFi hotspot for internet on the system rather than CarPlay/Android Auto, follow these steps:

Step 1: Disable CarPlay on iPhone

- Go to: **Settings > General > CarPlay**
- Find the Tesla system and **turn off CarPlay** (do not delete the connection).

Step 2: Enable Phone's WiFi Hotspot

- Turn on the **WiFi hotspot** feature on your phone.

Step 3: Connect the System to Hotspot

- On the Tesla system, open **WiFi settings**.
- Connect to your phone's hotspot.
- The system may automatically open the **CarAuto app** and disable WiFi again.

If this happens:

- **Close the CarAuto app.**
- **Manually re-enable WiFi** on the Tesla system.

Note: The system will automatically try to launch CarPlay/Android Auto anytime your phone connects via Bluetooth.

To Keep the System in Hotspot Mode

- Open the **CarAuto app settings** on the Tesla screen.
- **Disable the “Auto Connect” option** to prevent automatic switching back to CarPlay/Android Auto.

[Android Auto]

How to connect / reset wireless Android Auto:

Note: If you have any issues when connecting to Apple CarPlay, please make sure you have unpaired and forgot the **Original** bluetooth connection from the phone and from the original system. You can manually go to the original BT menu to delete your mobile device before start to connect to the CarPlay on the new system.

Wireless Apple CarPlay only use Bluetooth to pair at the beginning, once it got paired, it will automatically switch to the WiFi channel at the background. While using the Wireless Apple CarPlay, you can not turn on WiFi hotspot at the same time. If you would like to turn on the WiFi Hotspot to use some of the applications (such as YouTube..etc). you will need to turn off the CarPlay first. The procedure to turn off the CarPlay shows as below:



[How to run a Factory Reset]

System Recovery Procedure:

This step will reset the system to factory default settings. It will also erase the application that you installed previously. You can also re-install it again afterwards.

1. Go to Setting – System info – System Recovery (Note: Make sure the engine is running and do not turn off the unit.)
2. Wait until the system recovery finished and reboot by itself
3. Once the system restarted, you will need to connect to WiFi internet to activate the Apple CarPlay again
4. Connect to WiFi internet (Hoptspot from cellphone will work). Open Z-Link. It will activate automatically.
5. Set up the camera settings again.
6. Re-install the Map (Map installation procedure is at the end of this user menu)

[Bootup Logo]

In order to change the booup logo, you can download the file from the link below.

1. Use a PC computer to download the file (mylogo12.zip) from the link below. No need to unzip or extract the file
2. Copy the zip file to the parent directory of a USB stick.
3. Make sure the USB is recognized by the system. If it's recognized by the unit, there will be a tiny USB icon shows on the upper right corner of the screen.
4. Go to Setting – Factory (Password: 1314)
5. Go to Boot Logo, choose “Import”.
6. Bootup logo will show on the second page.



For previous version of the system, please follow the step below:

In order to change the booup logo, you can download the file from the link below. Extract the file and copy the folder “OEM” into a USB. Insert the USB to the unit, make sure it’s been recognized by the system. If it’s been recognized, it should show a USB icon on the upper right corner of the screen. Wait for about 5 seconds, the system will update the bootup logo at the background automatically



For further technical inquiries, please refer to our technical support page for more details: [HERE](#)