

Owner's Manual, Installation Instruction and Trouble Shooting Guideline:

Applies to the following models:

1. Mercedes-Benz Sprinter (2019-2021) | Without Stock Screen

Installation Video Instruction (Video 1):



Installation Video Instruction (Video 2):



How to fix the backlight of Sprinter 10.25" infotainment system:



How to setup the system after the installation:



How to change interface and bootup logo:



New Launcher Interface Application can be downloaded from below:



Bootup Logo can be downloaded from the below:




Setting Guideline

- 1. Setting – Car Infotainment – About Device – Setting (Password: 8878)

For OEM Camera Settings:

- 1. CamType: 0 (CVBS)
- 2. CamFormat: 1 (NTSC)

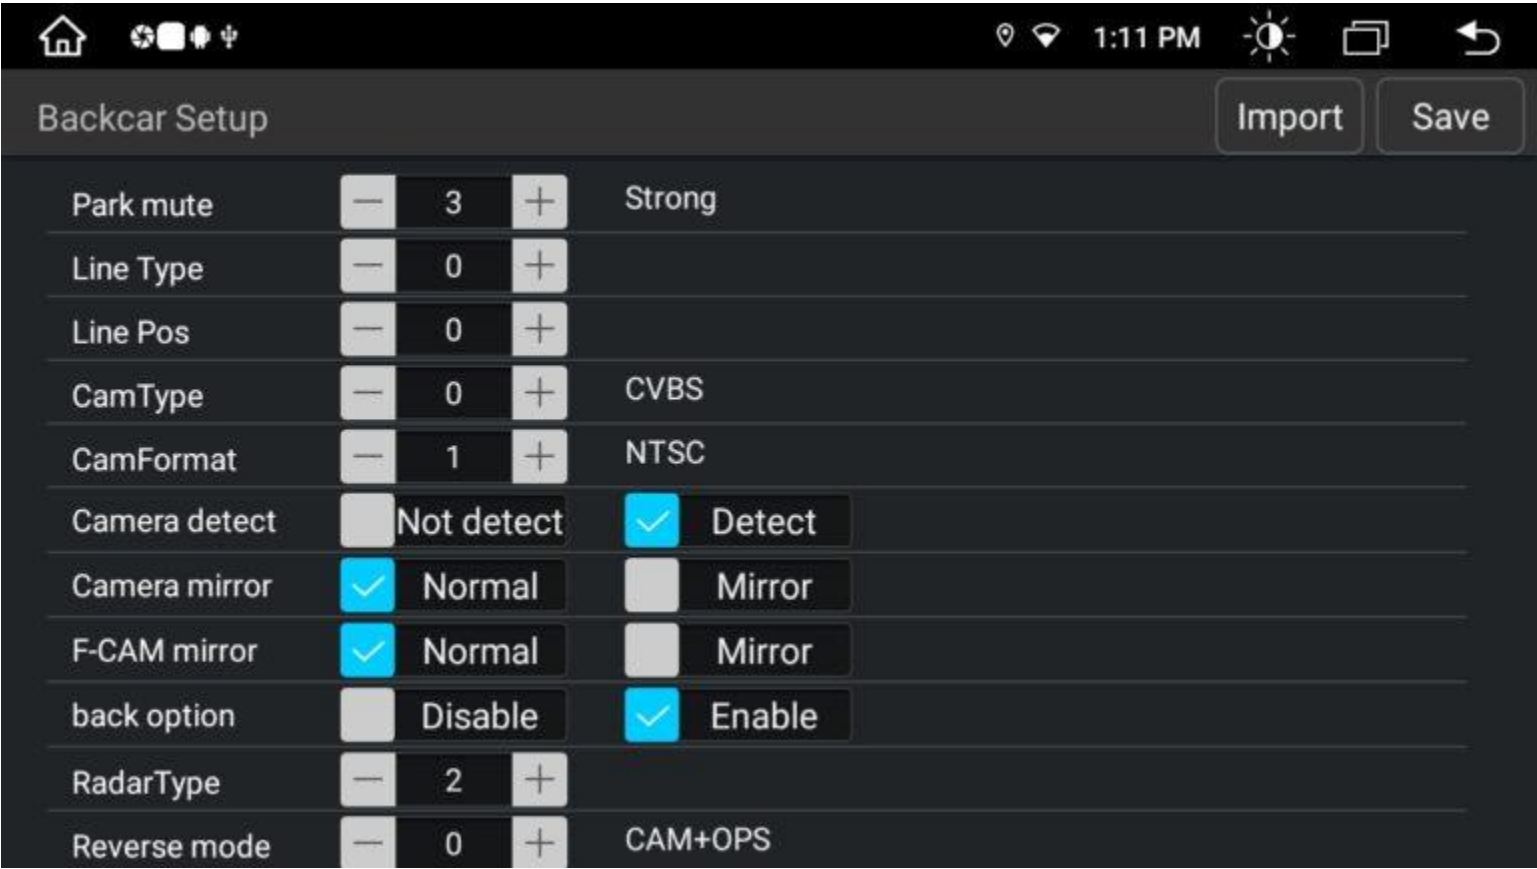

For Radio Region:

1. Zone: 2 (USA1)

Radio				Import	Save
IC Type	—	5	+	7708	
Zone	—	2	+	USA1	
FM Sense	—	18	+		
AM Sense	—	25	+		
OSC_6686	—	4M	+		
FM Sort	☒	SD Level	☐	Freq	
OT Band	☒	No	☐	OT	
FM Band	☐	FM1	☐	FM1/2	☒ FM1/2/3
MW Band	☐	No	☐	MW1	☒ MW1/2
RDS	☐	Off	☐	AF ON	☒ AF OFF
	☐	AF ON	☐	AF OFF	

[WiFi Connectivity]

In order to connect to WiFi, first you will need to make sure you are not using wireless Apple CarPlay or Android Auto at the same time. If you have connected to wireless Apple CarPlay, please turn it off from the cellphone first. For more details, please refer to the section below [Apple CarPlay].

1. Pull down the menu from the top edge of screen, hold the WiFi icon to open the WiFi connection menu.
2. Connect the WiFi to the hotspot of the cellphone.
3. Go to Setting – System – Android – Time Setting
4. Turn ON Network Time
5. Turn OFF auto time zone and manually adjust the time zone according to your area
6. Make sure the time on the upper left corner of the screen matches with your area's local time.
7. Once the time matches with the local time, WiFi should work.
8. To check whether the internet connection is working, you can simply open YouTube in the internet browser. If it loads, the connection is successful.

[4G LTE]

After inserting the SIM card, please use a small pin (such as a SIM card tray ejector tool) to gently press the RESET button. The reset button is usually located at the front of the unit and labeled as “**RST**”. Once pressed, the system will restart and recognize the SIM card automatically.

Important: Do **not** use any object larger than the ejector pin, as it may crack the screen.

For better compatibility, we recommend using a data-only medium (micro) size SIM card, as cellular voice plans are not supported, only data plans will work. You may also need to configure the APN (Access Point Name) settings depending on your network provider. We have tested the unit with AT&T, Mint Mobile and T-Mobile, and both work well. Please also ensure that the 4G LTE antenna is positioned in a location with strong signal reception. If you experience weak signal or connection issues, try relocating the antenna to another spot with better coverage.

For Mint Mobile: All you need to do is to insert the SIM card with the unit power off and then power the unit back on and after a few seconds it recognizes the SIM card. Mint Mobile will ask you to download their app online whether you use your smartphone or your laptop and so you can activate the card online.

IMEI Number:

To locate the IMEI number, please follow these steps:

Go to Settings > Android Settings > Mobile Network, and you will find the IMEI number listed there.

In order to access the internet, please make sure the system time is synchronized with your local time.


1. Go to Setting – System – Android – Time Setting
2. Turn ON Network Time
3. Turn OFF auto time zone and manually adjust the time zone according to your area
4. Make sure the time on the upper left corner of the screen matches with your area’s local time.
5. Once the time matches with the local time, WiFi should work.
6. To check whether the internet connection is working, you can simply open YouTube in the internet browser. If it loads, the connection is successful.

[Offline Navigation]

Using Google Maps for Offline Navigation. To use navigation without an internet connection, follow these steps:

1. Connect to WiFi – Ensure the device is connected to a stable WiFi network.
2. Update Google Maps – Open the Google Play Store, search for Google Maps, and update it to the latest version.
3. Download Offline Maps
4. Open the Google Maps app.
5. Tap your profile icon in the top right corner.
6. Select Offline maps > Select your own map.
7. Zoom and position the area you want to download.
8. Tap Download.

Once the map is downloaded, you’ll be able to use navigation and search for locations in that area without an internet connection.

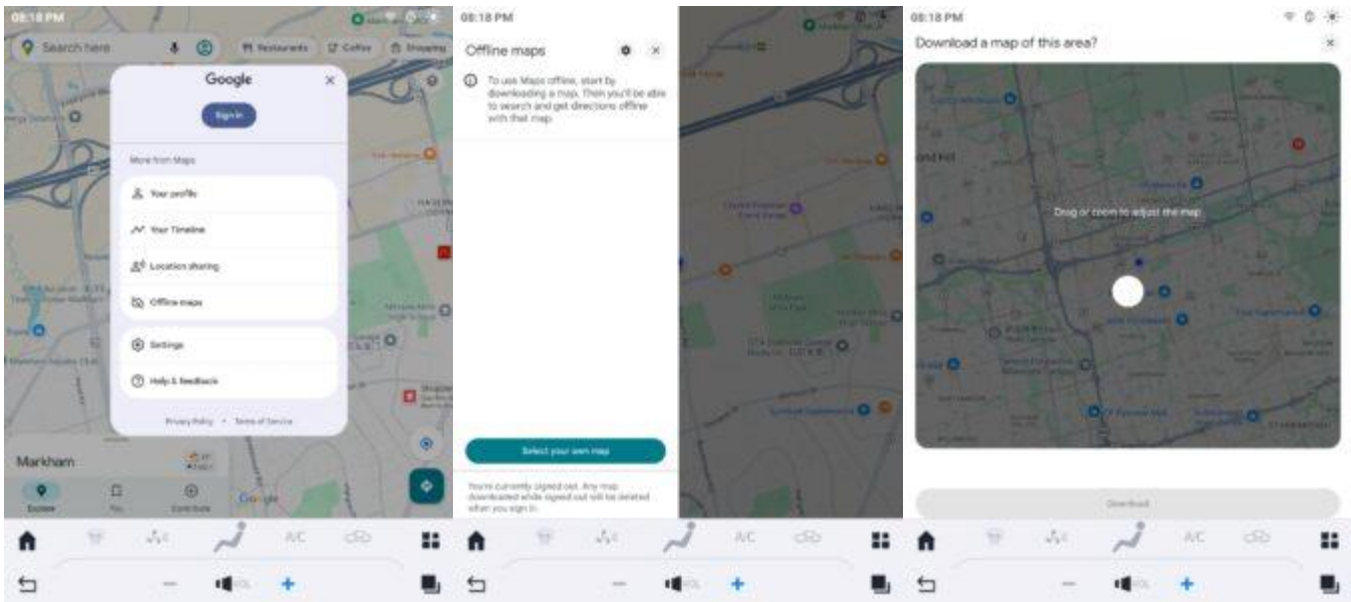

[Apple CarPlay]

How to switch between Apple CarPlay and WiFi Hotspot:



How to connect / reset wireless Apple CarPlay:

Note: If you have any difficulties on connecting the CarPlay on the new system, please make sure you have **DISCONNECTED** the cellphone from the original Bluetooth first. You can go to the Bluetooth menu of the cellphone to confirm it. If you see any connections with the original system, please disconnect and unpair it before try to connect the CarPlay from the New Android Screen.

Wireless Apple CarPlay only use Bluetooth to pair at the beginning, once it got paired, it will automatically switch to the WiFi channel at the background. While using Wireless Apple CarPlay, you can not turn on WiFi hotspot at the same time. If you would like to turn on the WiFi Hotspot to use some of the applications (such as YouTube..etc), you will need to turn off the CarPlay first. The procedure to turn off the CarPlay shows as below:



CarPlay Reset Procedure:

Important Notes Before Pairing:

- **Disconnect the Original Bluetooth:** Ensure your phone is **disconnected and unpaired** from the vehicle's **original Bluetooth system**. Your phone can only connect to **one Bluetooth system** at a time.
- **Avoid USB Connection to the Original System:** Do **not connect your phone via USB** to the original car system, as it may cause conflicts.
- **Charging Recommendation:** If you need to charge your phone, use a **12V cigarette lighter charger** instead of the USB port. It provides faster charging (12V vs. 5V).
- **Wi-Fi Hotspot Limitation:** Wireless Apple CarPlay or Android Auto cannot be used while your phone's **Wi-Fi hotspot is active**.

How to Reset & Reconnect CarPlay/Android Auto

Part 1: Clear Previous Connection Data from Phone

1. Erase CarPlay Settings (iPhone only):

- Go to: Settings > General > CarPlay
- Delete all previously connected vehicles.

2. Remove Bluetooth Pairing:

- Go to your phone's Bluetooth settings.
- Locate the Tesla screen's Bluetooth name.
- Select **"Forget"** or **"Unpair"**.

3. Restart Your Phone.

Part 2: Clear Previous Connections on Tesla Screen

1. Open the Bluetooth menu on the Tesla screen.
2. Tap the **connection icon** (upper-right corner).
3. **Delete all previously paired phones** from the list.
4. **Restart the Tesla unit:**
 - Use a pin to press the **"RST" reset button**, usually located at the front of the unit.

How to Connect Wireless Apple CarPlay:

1. On the Tesla Screen:

- Go to the Bluetooth menu.
- Tap the **connection icon**.

2. On Your Phone:

- Go to Bluetooth settings.
- Pair your phone with the new Tesla system.

Note: CarPlay uses Bluetooth only for initial pairing. After pairing, it switches to Wi-Fi automatically in the background. It's normal for Bluetooth to show “Disconnected”—do not reconnect it manually.

3. Once paired, the screen should automatically launch **CarAuto** (CarPlay/Android Auto). If it doesn't, open the **CarAuto** app manually from the app list.

4. On your iPhone, **accept the prompt** to authorize CarPlay connection.

Once setup is complete, you're ready to enjoy Wireless CarPlay/Android Auto!

Guidelines for Using CarPlay/Android Auto:

Connection Requirements

- **Wireless CarPlay/Android Auto uses your phone's WiFi channel** to operate.
- While connected, your phone's WiFi is occupied by CarPlay/Android Auto.
- **Do not manually connect your phone's WiFi hotspot to the Tesla system** while CarPlay/Android Auto is active — this may cause conflicts or connectivity issues.

Automatic Switching Behavior

- After pairing is complete, the system will **automatically switch from Bluetooth to WiFi** to run CarPlay/Android Auto.
- Once connected via WiFi, **Bluetooth will show as “Disconnected”** — this is normal.
- **Do not manually reconnect Bluetooth** after CarPlay/Android Auto is running.

How to Disconnect CarPlay and Use WiFi Hotspot Instead

If you prefer to use your phone's WiFi hotspot for internet on the system rather than CarPlay/Android Auto, follow these steps:

Step 1: Disable CarPlay on iPhone

- Go to: **Settings > General > CarPlay**
- Find the Tesla system and **turn off CarPlay** (do not delete the connection).

Step 2: Enable Phone's WiFi Hotspot

- Turn on the **WiFi hotspot** feature on your phone.

Step 3: Connect the System to Hotspot

- On the Tesla system, open **WiFi settings**.
- Connect to your phone's hotspot.
- The system may automatically open the **CarAuto app** and disable WiFi again.

If this happens:

- **Close the CarAuto app.**
- **Manually re-enable WiFi** on the Tesla system.

Note: The system will automatically try to launch CarPlay/Android Auto anytime your phone connects via Bluetooth.

To Keep the System in Hotspot Mode

- Open the **CarAuto app settings** on the Tesla screen.
- **Disable the “Auto Connect” option** to prevent automatic switching back to CarPlay/Android Auto.

[Android Auto]

How to connect / reset wireless Android Auto:



How to Prevent CarPlay from Auto-Launching:

To keep the Tesla system connected to your phone’s WiFi hotspot instead of automatically launching CarPlay/Android Auto:

1. **Disconnect your phone from the Tesla system** (turn off Bluetooth or forget the connection temporarily).
2. On the Tesla screen, **open the CarAuto app**.
3. Tap the **Settings icon** located at the bottom-right corner.
4. In the Settings menu, **disable the “Auto Connect” option**.

Result: CarPlay/Android Auto will no longer launch automatically when your phone connects. This allows the system to remain in WiFi Hotspot mode for internet access.

For further technical inquiries, please refer to our technical support page for more details: [HERE](#)