



# Phase 5 · B4 — Emergency stop when the island is blind


When the island has lost the sensing that B2 and B3 both depend on, decelerate to a standstill where the vehicle already is — no lane keeping, no refuge, no lateral manoeuvre.  
The phase-5 drawing, unchanged: what B4 runs on — and the SHARED nodes every behaviour runs through — is in full colour, what it merely passes through is half-tone, and the rest of the island is faded.

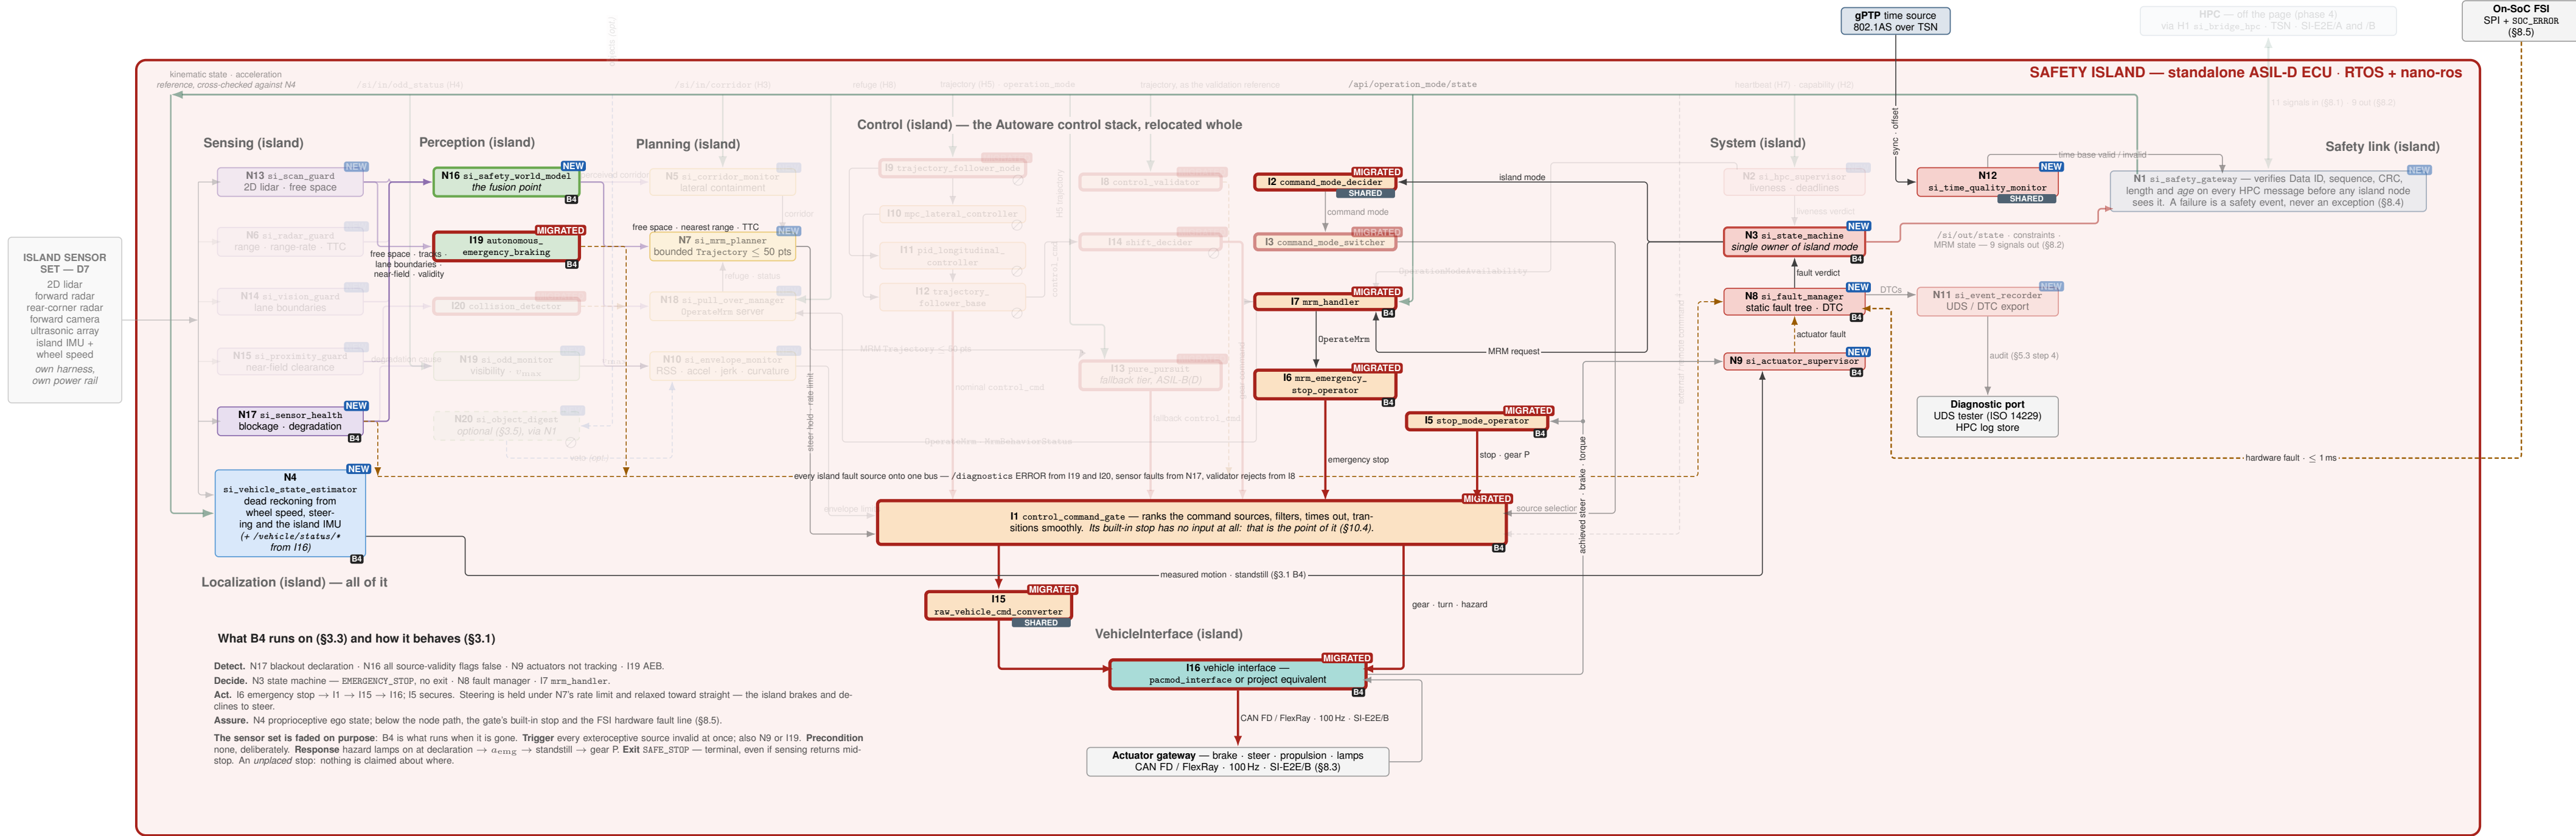

## Stacks — the colours of ArchitectureMain.pdf




## Where each node came from



18 migrated + 19 new = 37, plus the optional N20. Not drawn: I4, a header-only library with no topics, and I17 + I18, the legacy alternative of §4.3. I10 and I11 are plugins inside I9 and publish no topic of their own. † the external / remote command reaches the gate (§5.2, §10.4) but has no row in the §8.1 table.

## Behaviours each node enables (§3.3)

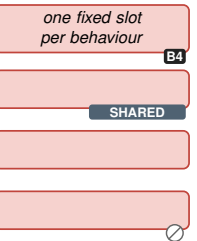

B1 degrade the ADS · B2 lane-keep hold after HPC loss · B3 pull over · B4 blind emergency stop. A filled tag means the node appears in that behaviour's Detect, Decide, Act or Assure cell of §3.3.

SHARED — every behaviour runs through it, so §3.3 names it against none: I2 turns island mode into command mode, I15 converts whichever command wins the gate, N12 qualifies the time base behind every age and deadline check.


Hollow tag — not in §3.3, but §3.1 puts the node on that behaviour's path: N15 feeds I20, B2's independent last line, and is the near-field check behind B3's success criterion.

Used by no behaviour — I9–I12 and I14 track the HPC's nominal trajectory, which B2–B4 deselect and B1 only constrains. N20 is optional (§3.5) and required by none.

## Messages



## In this view — B4, blind emergency stop

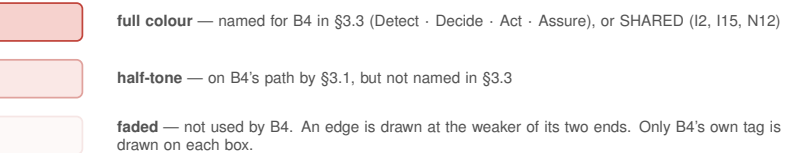

Every edge on this page, with the design-document section it is taken from, is catalogued in ../messageflow/, which draws the same 37 nodes coloured by execution partition instead.