



VOX Fluted Outdoor
Strength in Style, Built for the Outdoors.



Interlocking




Rust-Free Structure



Anti Termite



Eco-Friendly

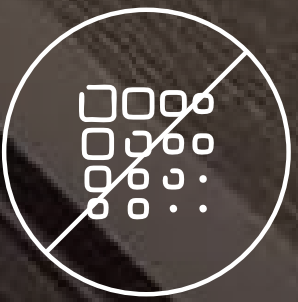

Fade Resistant



Lightweight



Waterproof



Durable

Why VOX Fluted Outdoor?


Enjoy long-lasting beauty without the maintenance.

WPC panels offer the look of natural wood without the problems — no rotting, no termites, and no repainting.



Safe for Families, Certified by ENF

VOX Fluted Outdoor uses ENF Grade materials, the highest standard for low formaldehyde emission.

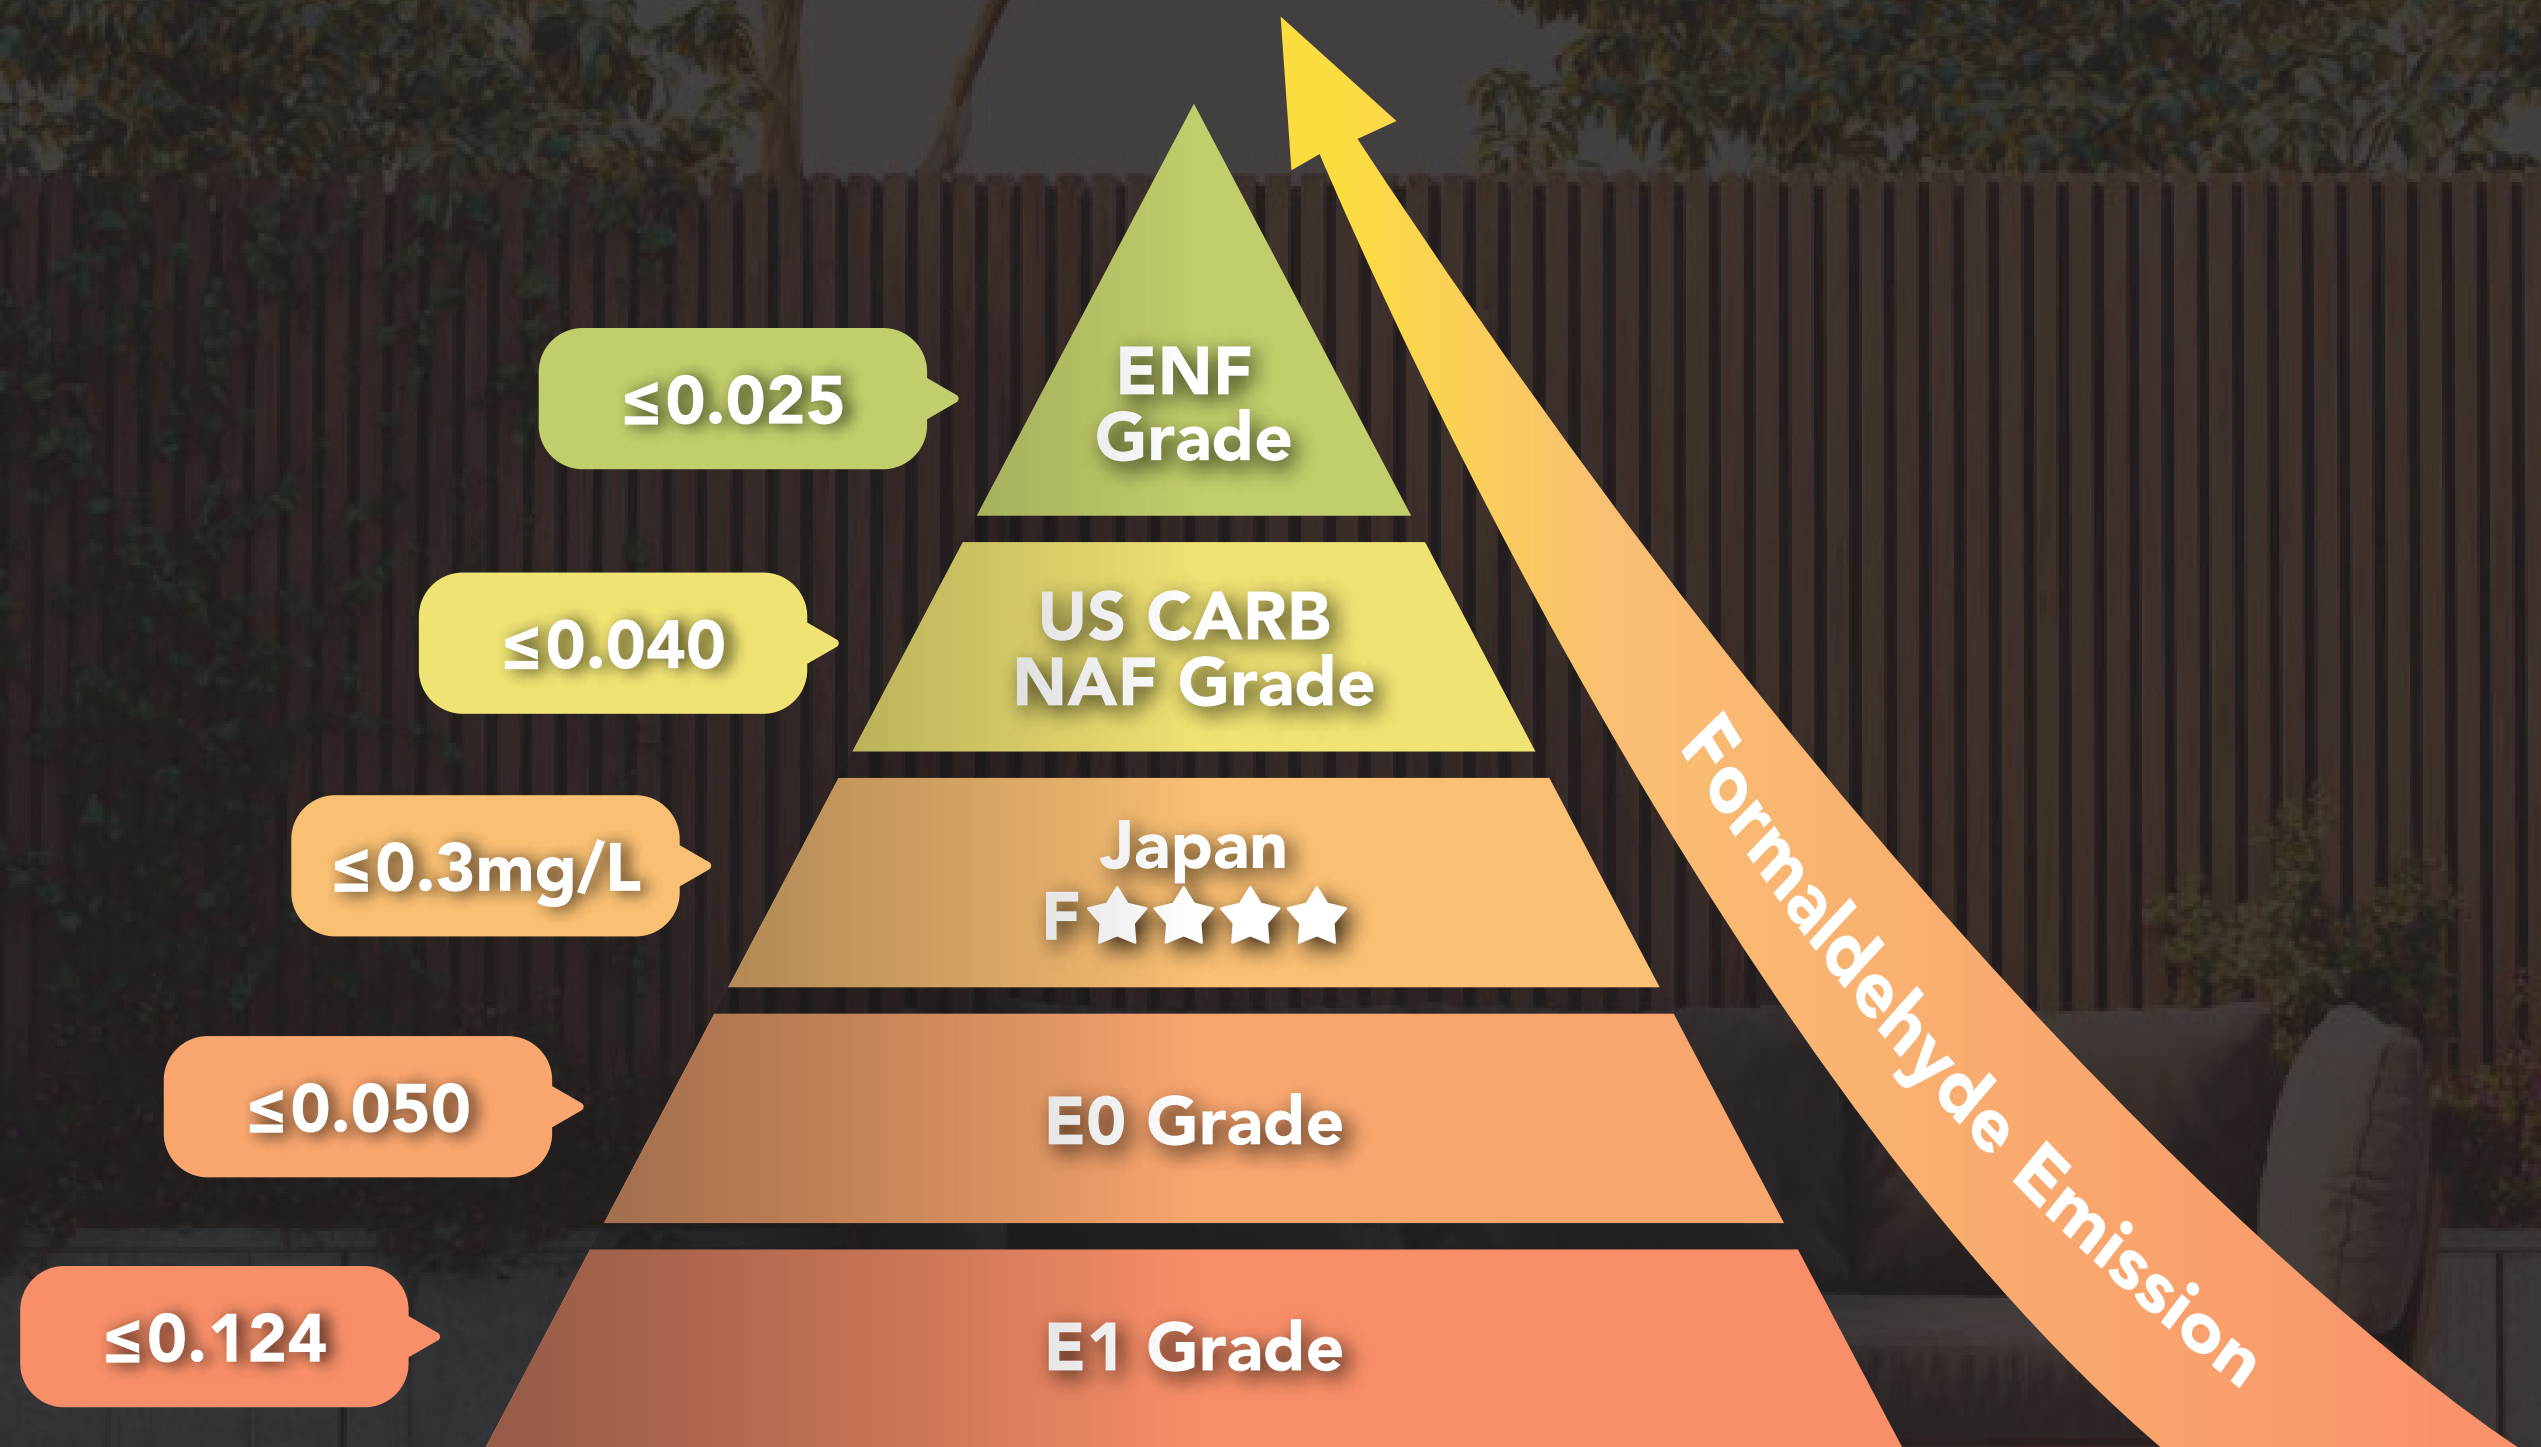

The skin-friendly board meets the ENF standard, free from aldehyde and odors. It's a healthy and environmentally friendly choice.

Made with Recycled Materials. Built for the Future.



Our WPC panels are made from **recycled wood and plastic, reducing waste and protecting natural resources.**

They are safe for the environment and built to last, with no need for harmful paint or chemicals.





WPC - Wood Plastic Composite
made with advanced extrusion molding technology

Core Material of VOX Fluted Outdoor



Fencing

Standard Fencing Design

Wall Panel

A Stylish Alternative

DUO method

Our fluted panels are versatile
perfect for fencing and wall applications



COLOR OPTIONS




VOFP 2191
Chocolate Brown



VOFP 2192
Warm Teak

Width : 219mm
Length : 2900mm
Thickness : 26mm

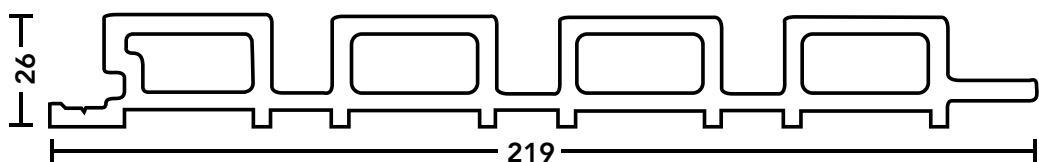

ANGLE PROFILE



VAP5052
Warm Teak

VAP5051
Chocolate Brown



Width : 50mm
Length : 2900mm
Thickness : 50mm

Installation Guideline

Tools

Standard carpentry tools: Power saws (desktop or portable), power drills, electric portable drill, toolkits, level, tape, plumb bob etc.



Environment



A clean, smooth, flat, and strong surface is needed to install WPC products correctly. Please check with local building codes before ever installing any type of wall cladding. If the installation does not occur immediately, WPC products need to be put on a flat surface at all times. Never ever should it be put on a surface that is NOT flat.

Backing installation


WPC products CANNOT be directly installed onto a flat surface. It must be installed onto a substructure, so there is adequate and unobstructed air flow under the cladding to prevent excessive water absorption. A minimum of 25 mm (1 inch) of continuous net free area under the cladding surface is required for adequate ventilation on all wallcladding, so air can circulate between adjacent members to promote drainage and drying.




1. Before installation, make sure the wall is smooth and solid. It's recommended to use backing made of aluminum.

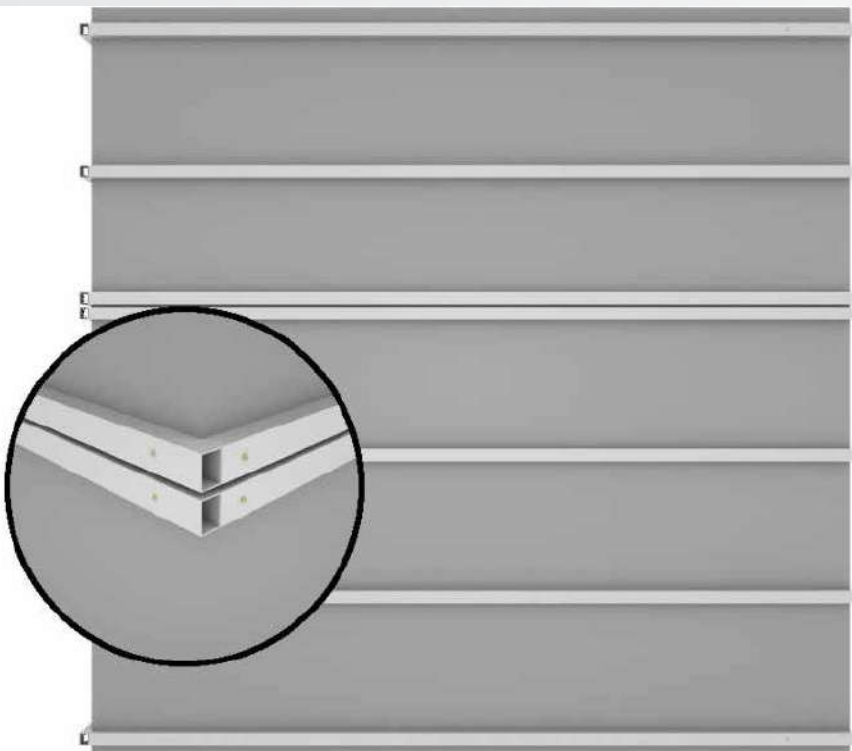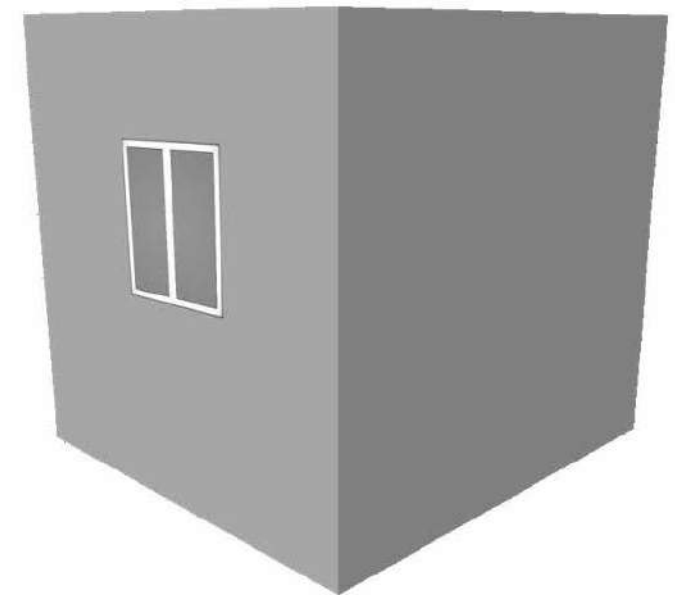

2. Fix backing to the wall with anchors. The spacing between backing on-center should be no more than 450 mm. The spacing between anchors should be 500 mm.

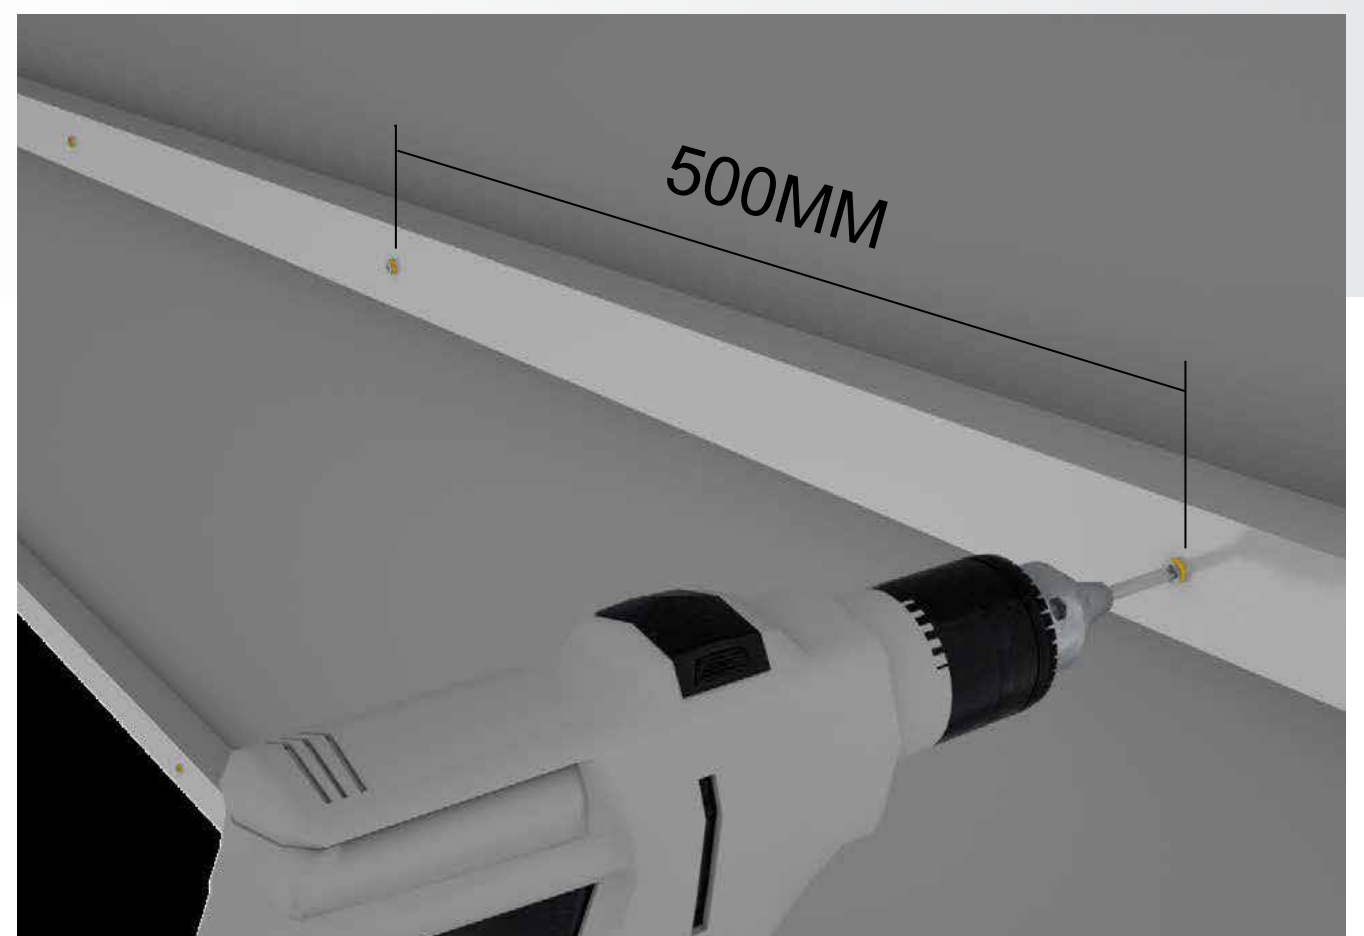

Note: Plan the backing layout with respect to the board length. Double backing are needed at the butt seam between cladding boards, so each board is on its own backing.

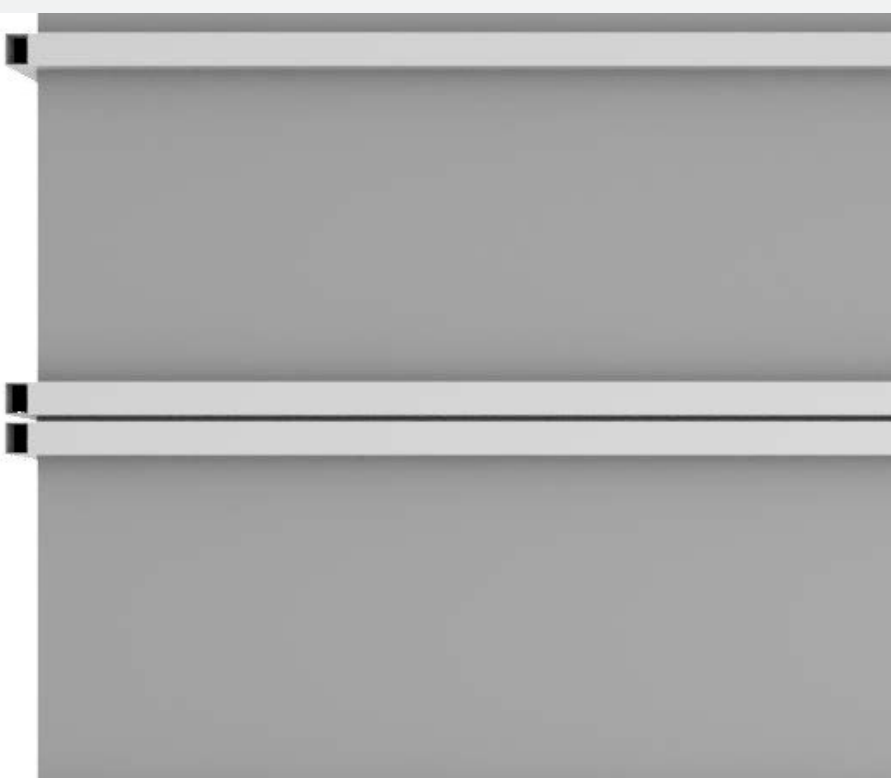


Plastic expansion tubes to fix backing and screw.




Note:

(1) A minimum gap of 40mm needs to be left between the lowest backing and the floor


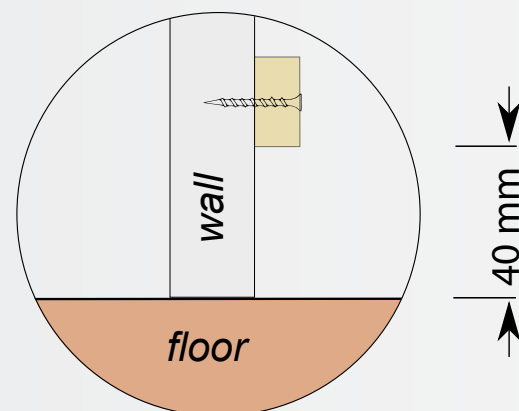


(2) A minimum gap of 10mm needs to be left between the ceiling and the top of the backing

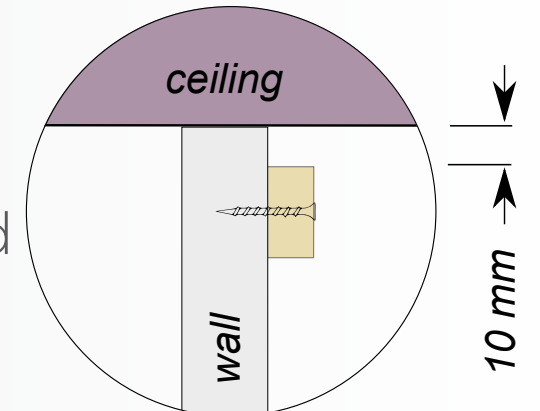

Cladding board installation


1. Put the first piece of wall cladding on the backing, then fix it to the backing with screws. Note that the screws should be installed in the groove of the cladding.

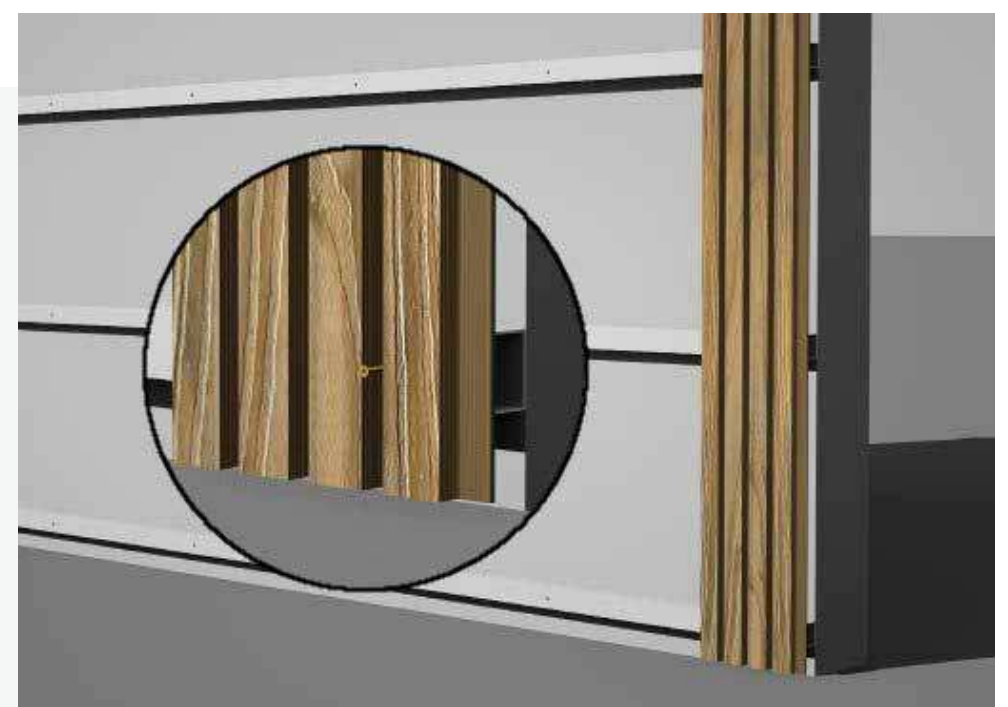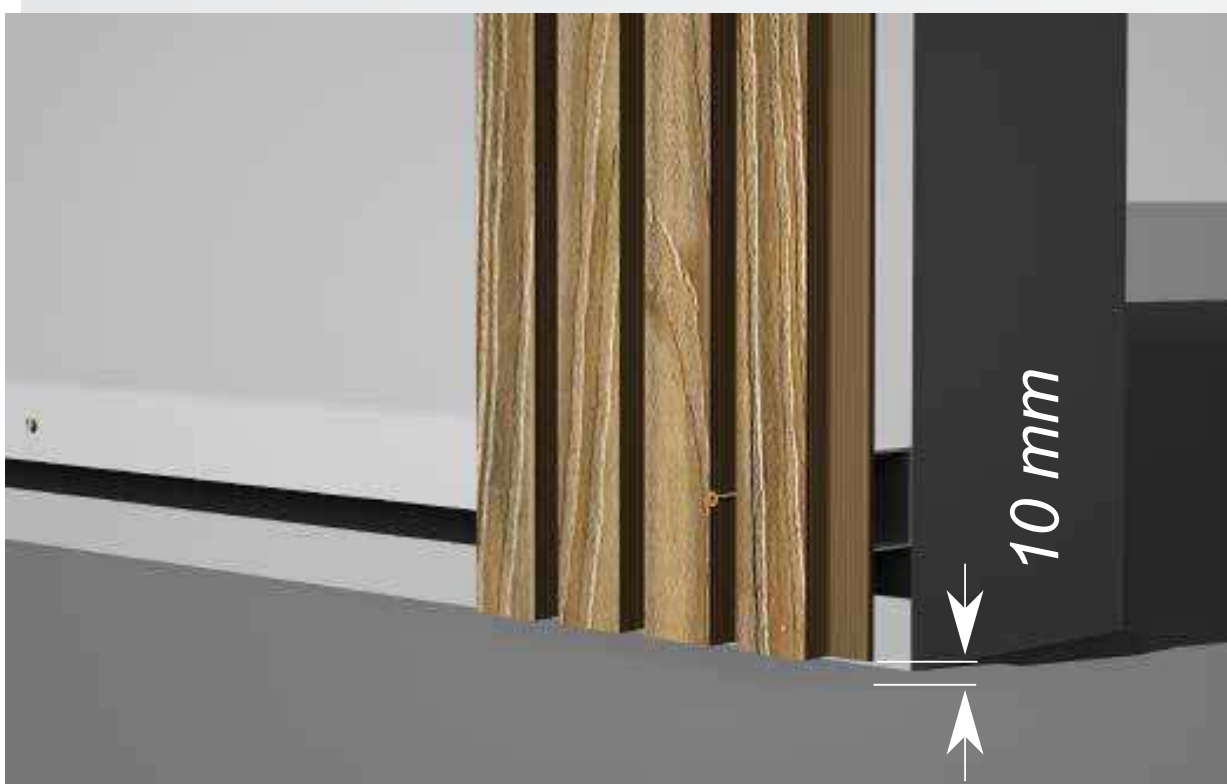

Note: Make sure that there's a gap of at least 10 mm between the cladding and the ground to promote ventilation and offer room for expansion and contraction.

Note:



Always pre-drill a pilot hole before screwing to avoid damage to WPC product!

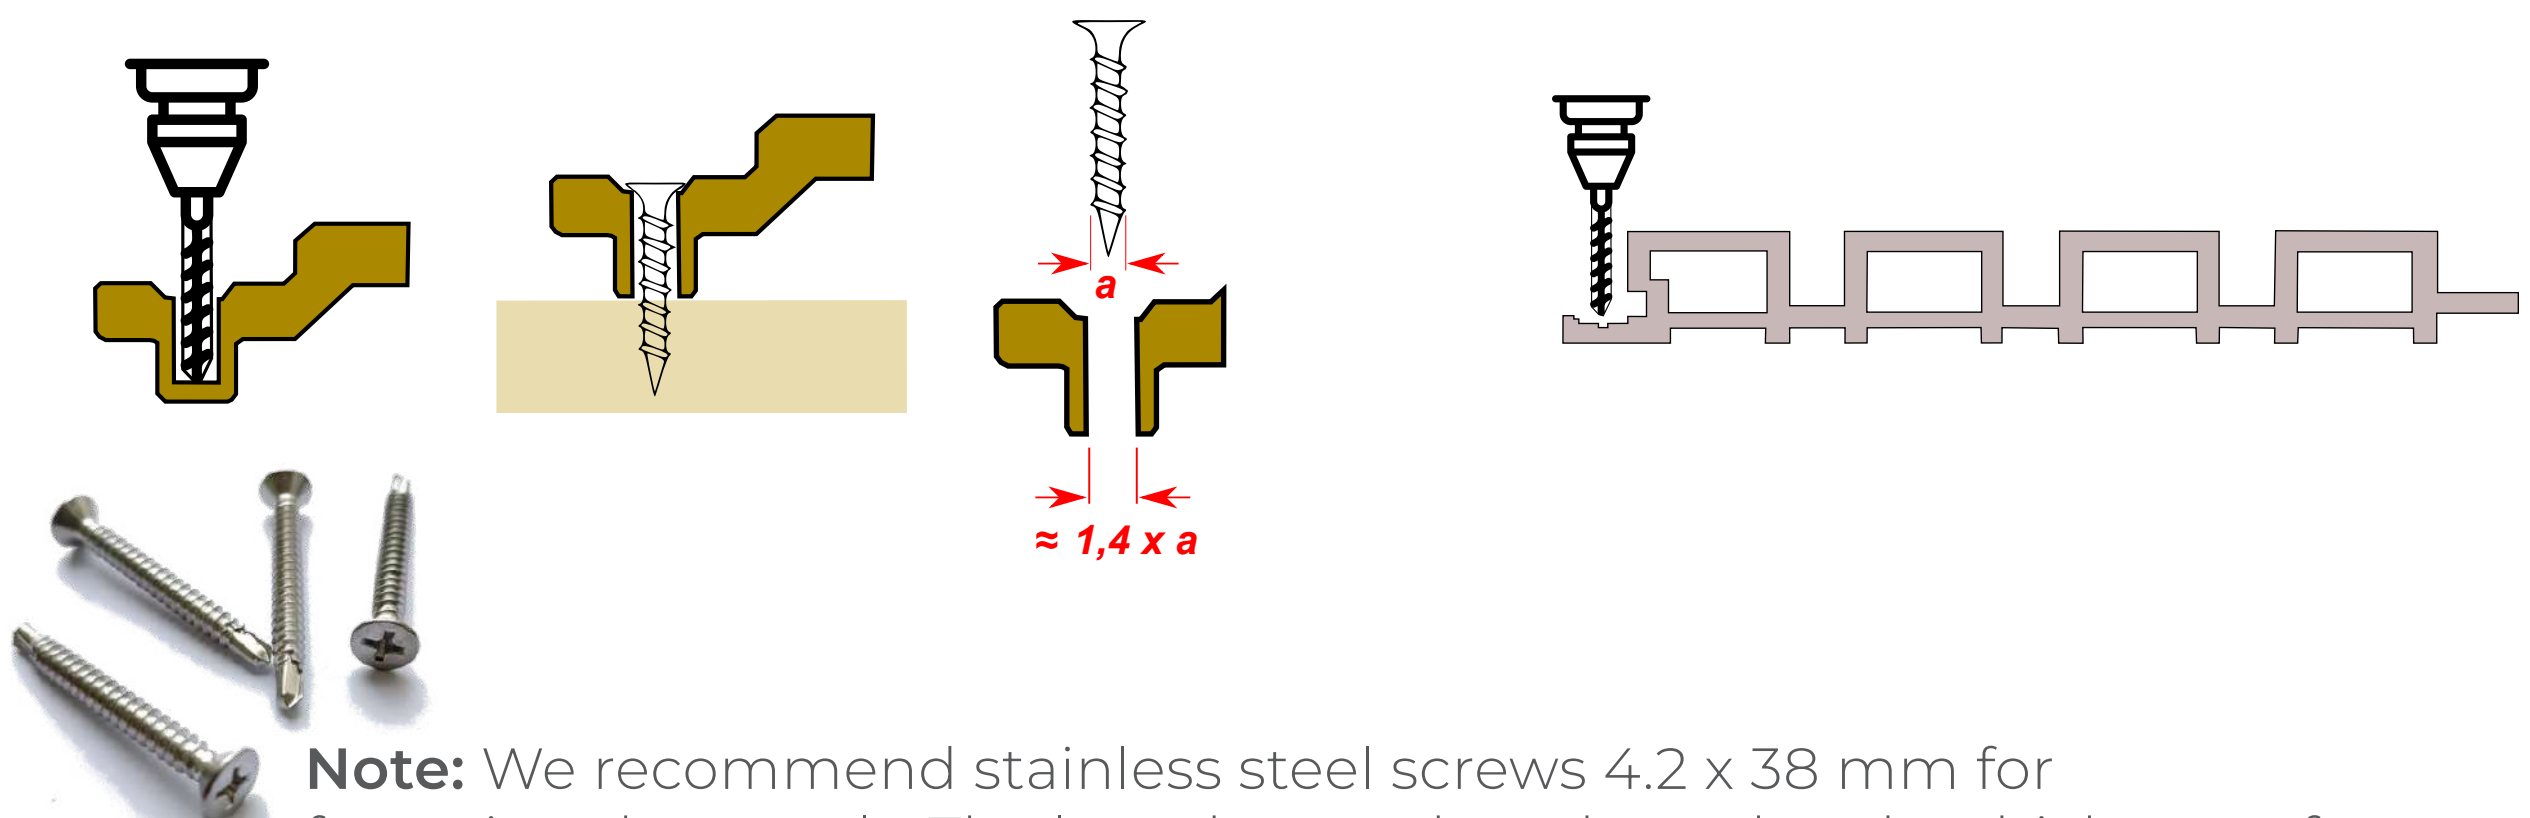


Note: We recommend stainless steel screws 4.2 x 38 mm for fastening the panels. The length must be adapted to the thickness of the backing. The screws are not included in the delivery.




Starting plank

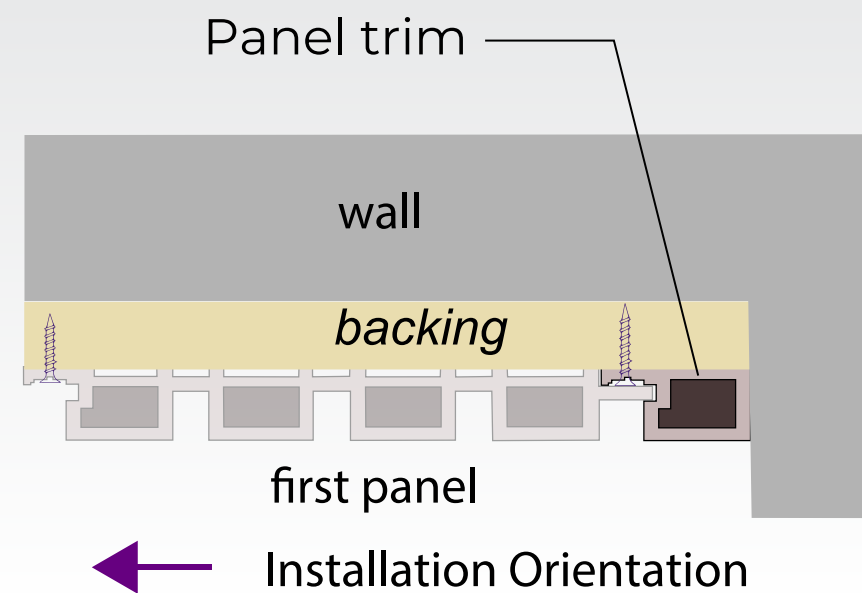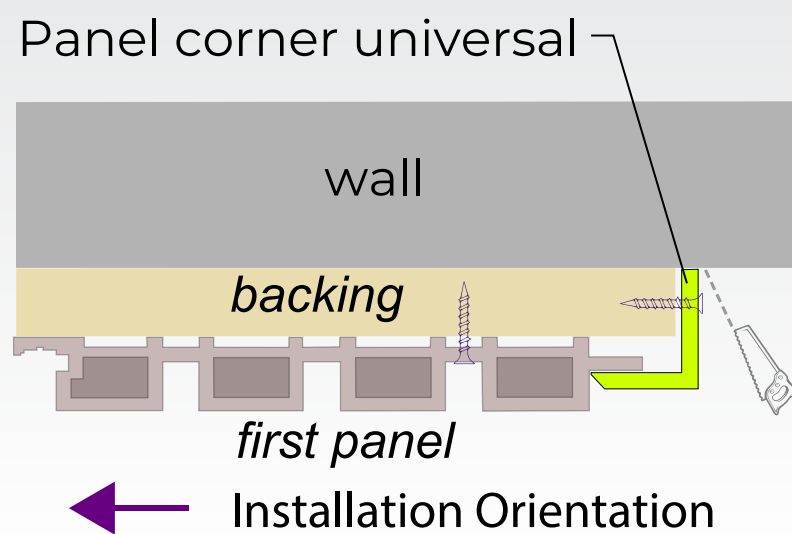

2. Fix the cladding with screws to the backing.
The screws should be installed in the screw groove of the cladding.

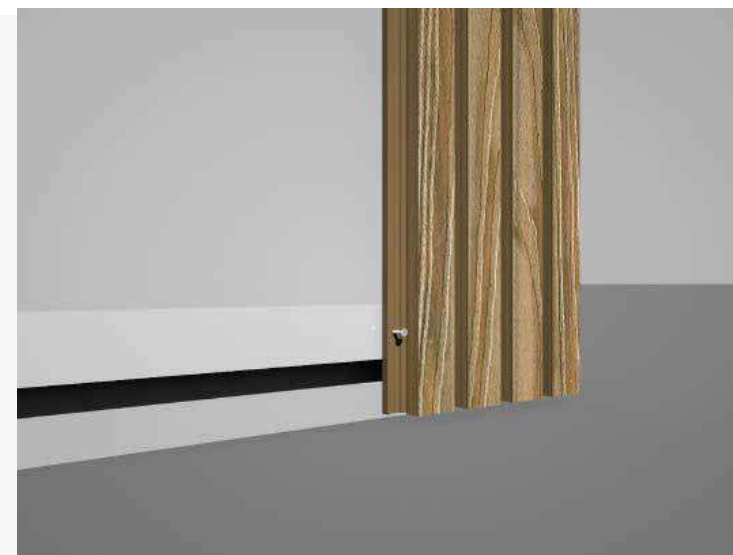



3. Connect the second piece of cladding to the first one.
Fix the cladding to the backing with screws. The screws should be installed in the screw groove of the cladding.

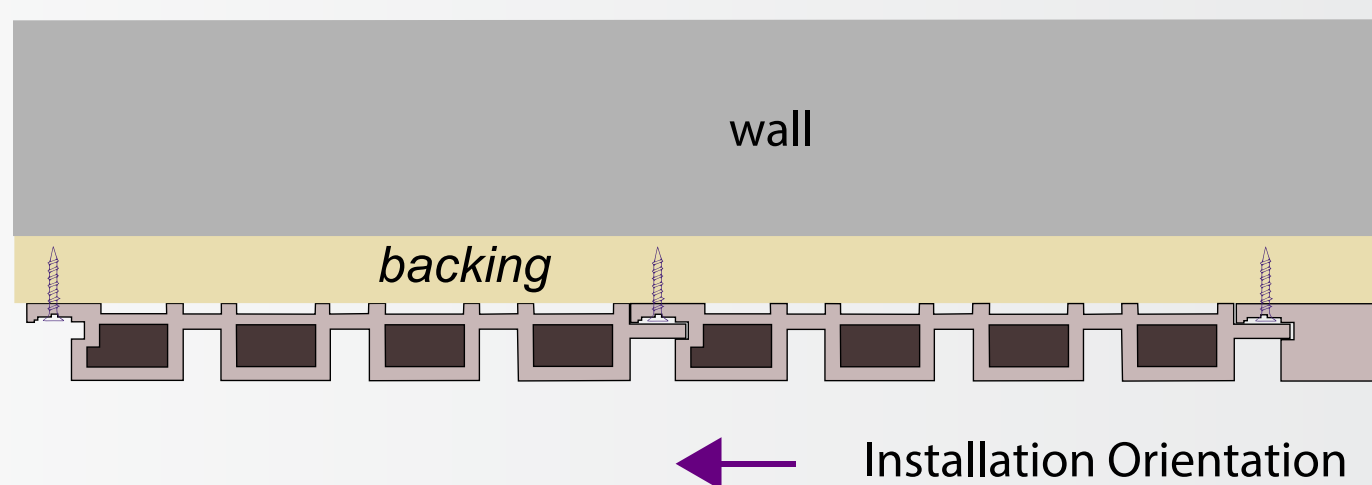


4. Continue the installation by repeating step 3.

IMPORTANT: The butt seam between two adjacent cladding boards should be at least 5 mm wide to promote ventilation and offer room for expansion.

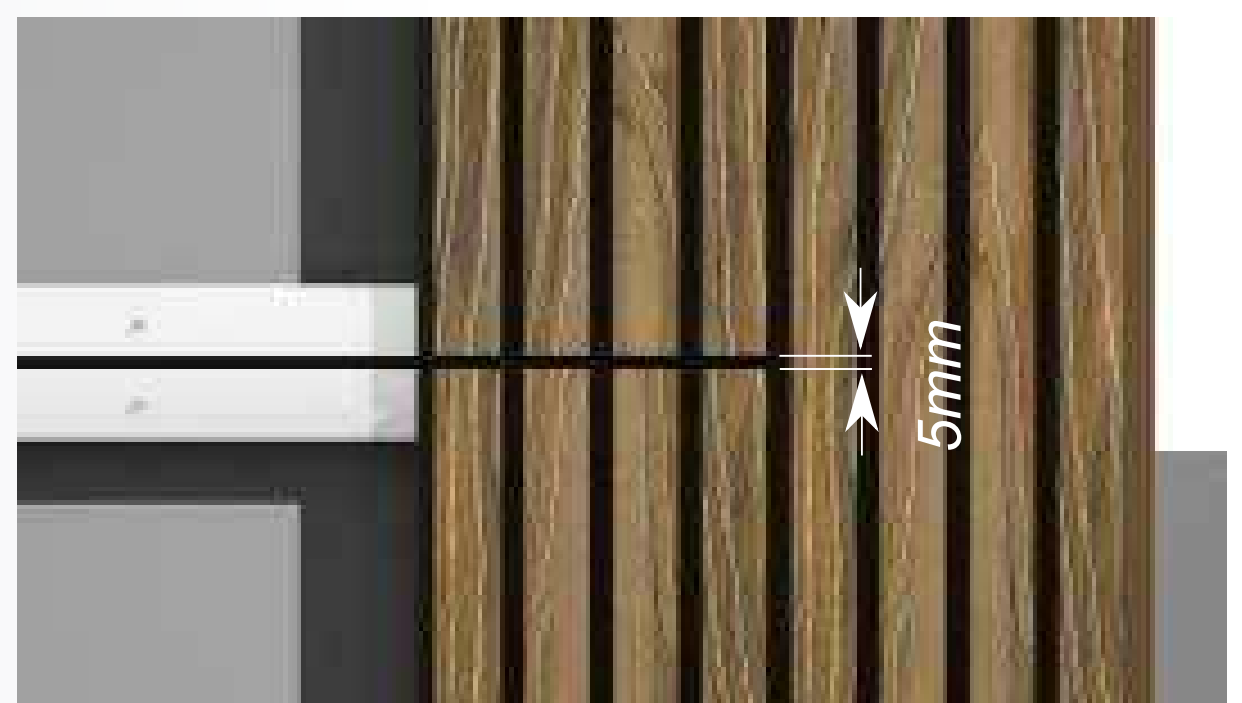

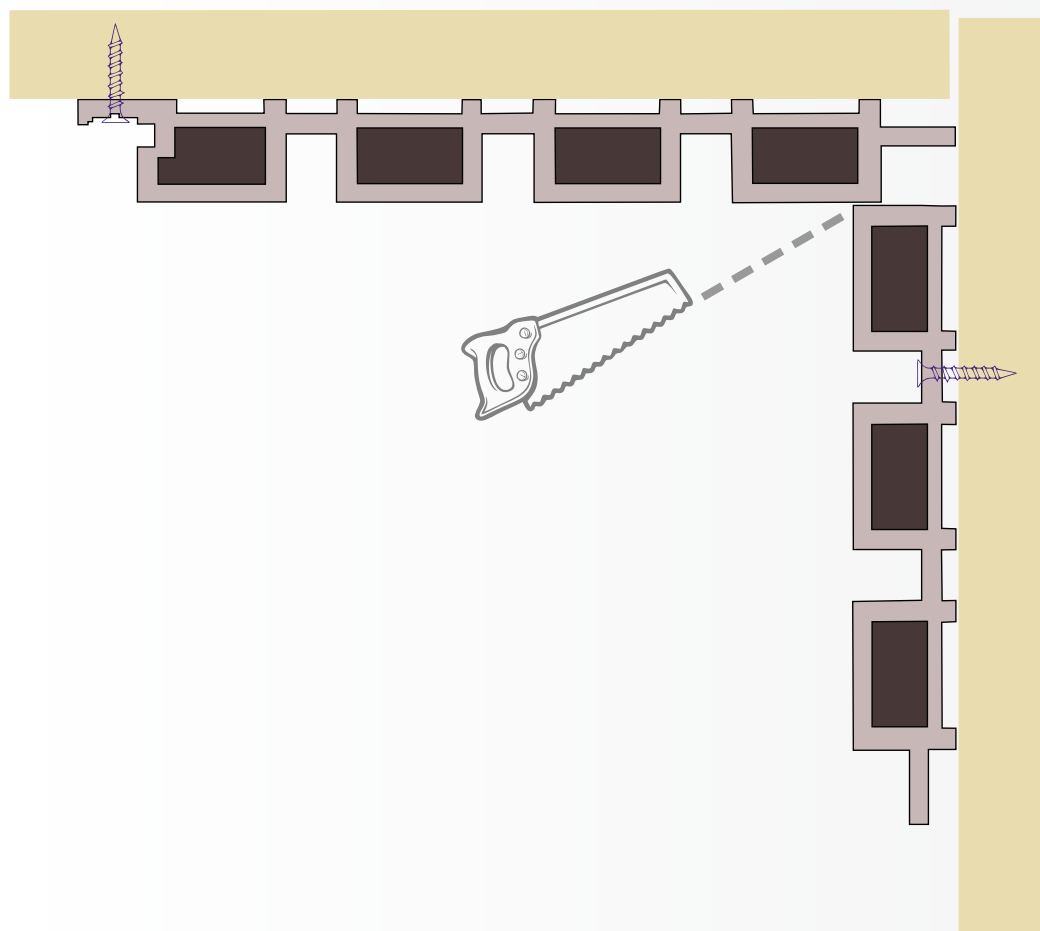


5. When working on the inner corner finish, cut the last cladding board to a suitable width and fix it on the backing with color screws.

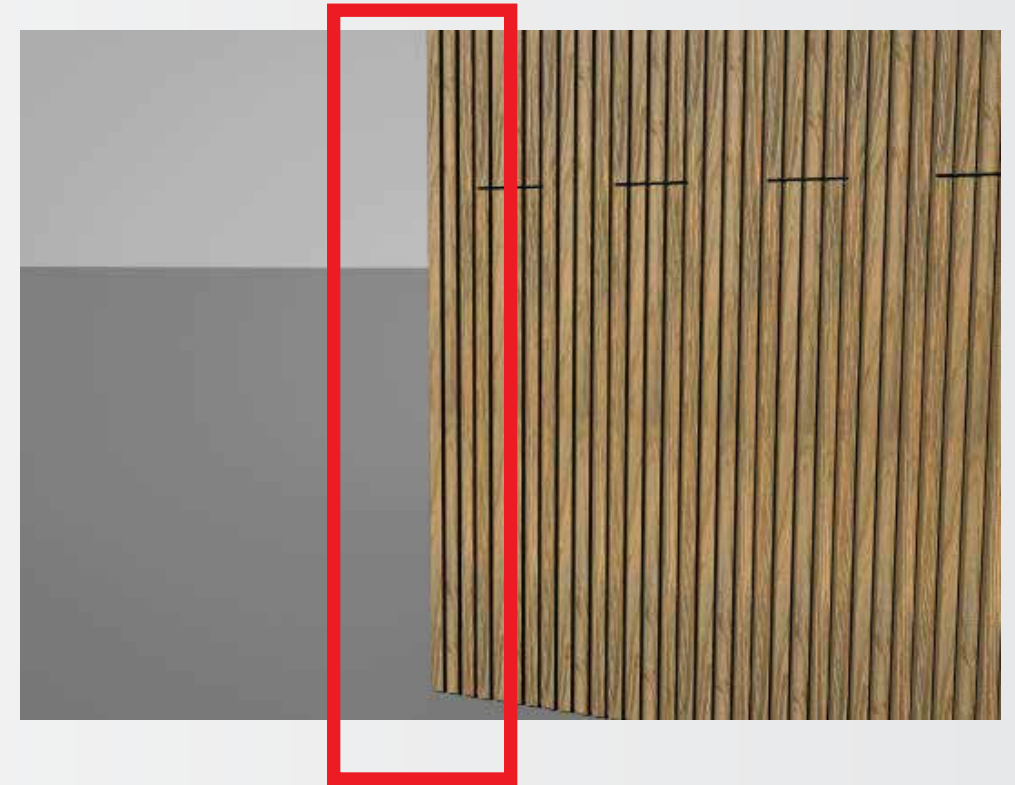


6. Install the cladding boards on the other side. You can use Angle Profile on the outside corner as needed.

Fix the Panel Corner on the backing with screws, then put the second cladding board over the first board, and fix it on the backing with screws again, and so on

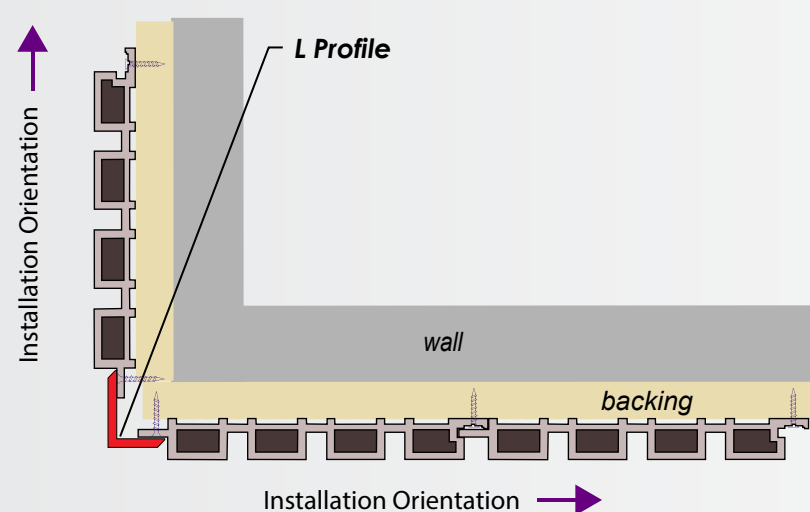


Panel corners universal "L" are installed at vertical corners.

Colour head screws should be used fastened through the cladding boards.

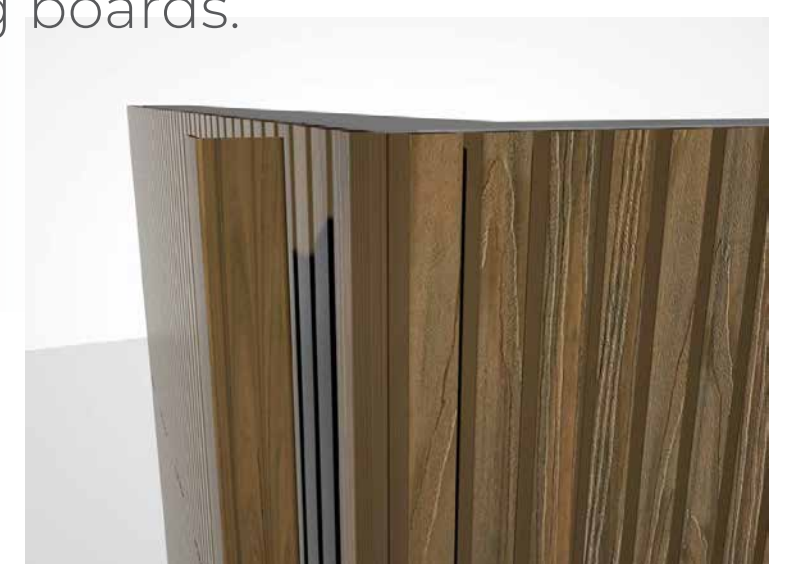



7. If you are installing the last cladding, it ends with the mother groove and needs to be edged, you can use Angle Profile trim the ending of the edged

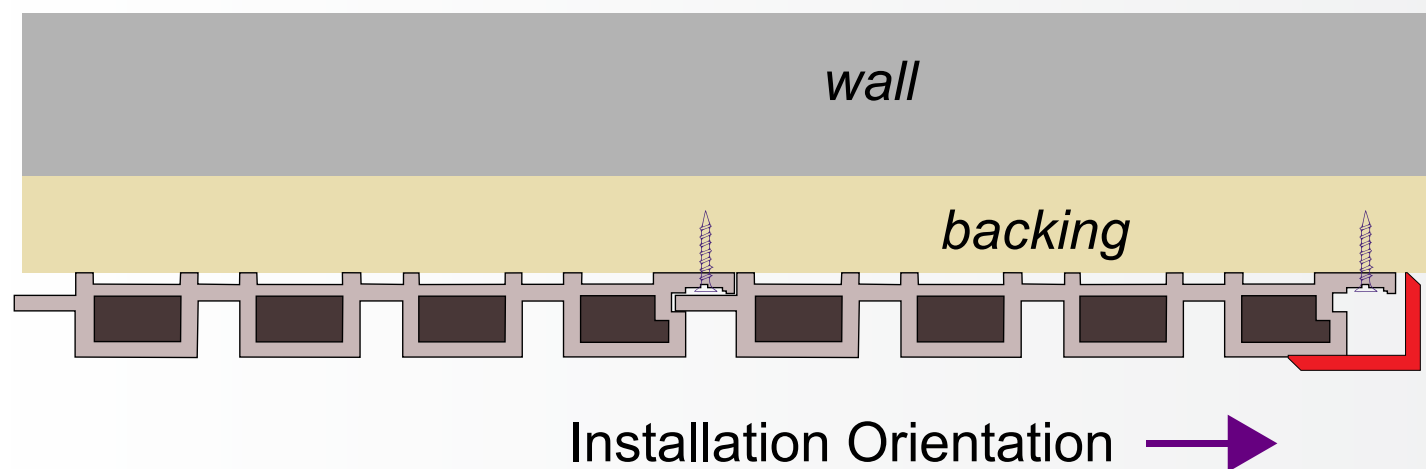

8. Finish the instalation

