Form 20252 HISTORICAL COPY
(448)
Printed in U. S. DO NOT REMOVE

LIST of PARTS



FOR FAMILY SHOPS

MACHINES Nos. 15-210 and 15-211

X A TRADE-MARK OF

THE SINGER MANUFACTURING COMPANY

INDEX

CCESSORIES	_	_	_	_	_		_		PA 	15
TTACHMENT SET		-		_	_	_	_	_	_	15
IAS GAUGE -	_	_			_	_	_	_	_	15
OBBIN WINDER	_	-	_	_	-	_		-	-	16
RAIDER	_	_	_		_	_	_		-	16
ORDER (Bow)	_		-	_	_		_		_	16
ELLER (Foot)		_		_	_		-	_		17
INGER GUARD	_		_	_	_			-		17
IEMMER (Foot)	_			_		_	_	_	_	17
IEMSTITCHER	_	_	_	_	-	_	_		_	17
MACHINE No. 15	-210	_	_	_	_				-	7
AACHINE No. 15	-211	_		-	_		_	_	_	13
NUMERICAL LIST	OF	PAI	RTS			_	_			21
PRESSER FEET	_	_	unite.	_	_	_		_	_	18
PRESSER FOOT W	ITH	GRA	DUA	TED	ADJ	USTA	BLE	GUI	DES	17
QUILTER	_	-	_	_	_	_		_	_	19
RUFFLER SHIRRIN	1G I	PLAT	E	_	-	_) 	-	-	19
SPECIAL ATTACH	IWEN	ITS	_	-	_	· —		-	_	19
UNDER BRAIDER	_		_	_	_	_	_	_	_	19

In ordering from this list, use ONLY the part NUMBER in the FIRST Column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

A-Hardened, Polished, Nickel Plated and Buffed.

A.A-Buffed and Chromium Plated.

A.B-Hardened, Polished, Buffed and Chromium Plated.

A.C-Brown Baking Enamel Finish.

A.D-Gray Baking Enamel Finish.

A.E-Hardened, Bright Rumbled and Nickel Plated.

A.F-Hardened, Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated.

A.G-Alumilite, Plain.

A.H-Alumilite Dyed.

A.J-Polished, Nickel Plated and Chromium Plated.

A.K-Hardened, Polished, Nickel Plated and Chromium Plated.

A.L-Heat Treated for Toughness.

B-Polished, Nickel Plated and Buffed.

C-Hardened only.

C.R-Hardened and Merlized.

D-Polished Only.

E-Soft, Not Polished.

F-Hardened and Polished.

F.J-Hardened, Polished and Nickel Plated.

G-Bright Rumbled and Nickel Plated.

H-Blued.

J-Nickel Plated Only.

K-Hardened and Nickel Plated.

L-Brass Plated.

M-Oxidized.

N-Japanned, Dull.

P-Japanned, Bright.

P.P-Wrinkle Finish.

R-Merlized.

S-Cadmium Plated.

T-Copper Plated.

T.A-Hardened, Polished, Copper and Nickel Plated and Buffed.

T.B-Copper and Nickel Plated and Polished.

T.J-Copper and Nickel Plated Only.

T.K-Hardened, Copper and Nickel Plated.

T.L-Copper and Brass Plated.

T.M-Copper Plated and Oxidized.

U-Zinc Plated.

V-Silver Plated.

W-Polished and Nickel Plated.

X-Black Oxide, for Iron and Steel.

X.C-Hardened and Black Oxide, for Iron and Steel.

Y-Black Nickel Plated Only.

Z-Chromium Plated.

Z.A-Hardened, Polished, Nickel Plated, Buffed and Chromium Plated.

Z.B-Polished, Nickel Plated, Buffed and Chromium Plated.

Z.C-Hardened and Chromium Plated.

Z.D-Polished and Chromium Plated.

Z.G-Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated.

Z.J-Nickel and Chromium Plated.

Z.T-Copper and Chromium Plated.

These letters MUST BE USED when they appear in the list; and AFTER the number as in the list.

In this series:

I to 1500, 50001 to 51500 and 140001 to 142000 are Screw Numbers.

1501 to 1800 and 51501 to 51800 are Nut Numbers.

1801 to 2000 and 51801 to 52000 are Roller Numbers.

2001 to 50000 and 52001 to 140000 and 142001 to 190000 are Sewing Machine Parts, 190001 and upward are numbers

of Electrical Parts.


The figures in the second column refer only to the plates, illustrating the parts, and are NOT TO BE USED in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

SINGER Needles should be used in SINGER Machines.
These Needles and their Containers are marked with the Company's Trade-Mark "SIMANCO.**"

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. 2

LIST OF PARTS COMPLETE FOR

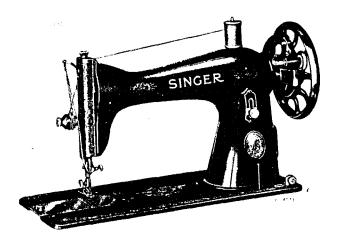

MACHINE No. 15-210

FOR FAMILY USE. C. B. SHUTTLE. DROP FEED. BALANCED MACHINE

No.	Plate	Name
*125106		Arm with 435AL, 448AL, 15404,
		15486, 15498 and two 15405
2002	21481	Arm Dowel Pin (2)
125331	21481	" Oil Pad (felt) for oiling Arm
		Shaft Back Bearing
125333	21481	Arm Oil Pad Spring
125334G	21481	" " Cap
138 E	21481	" Screw (3)
125042	21481	" Shaft
15498	21481	" " Bushing
435AL	21481	" " Set Screw
125425B	21481	" Side Cover
51224B	21481	" " Thumb Screw
2007G	21481	" Spool Pin
8879	21481	" " Washer (cloth)
15282	21481	Balance Wheel, 2 1/4 in. pulley
*125255		Bed
256B	21481	Clamp Stop Motion Clamp Screw

No.	Plate	Name
248A	21481	Clamp Stop Motion Clamp Stop Screw.
2020	21481	wasner
15313	21481	WICH
ACOAT	21481	two 462AL
46241	71401	Clamp Stop Motion Clamp Washer Set Screw (2)
15314	21481	Clamp Stop Motion complete, Nos.
10011	21101	248A, 256B, 2020 and 15313
125021R	21481	Crank Connecting Rod with 125044
		and two 896AL
896AL	21481	Crank Connecting Rod Cap Screw (2).
375C	21481	" " " Hinge Screw
1518R	21481	11 11 11 11 II
		Nut
125044	21481	Crank Connecting Rod Oil Pad (felt)
125431	21483	Face Plate with 857B, 50292B,
300 -	03.108	125317G and 125423
190J 125422G	21483	Face Plate Screw
1254224	21483	" " Thread Guard" " " " 125422G
123423	21400	with 125424G
125424G		Face Plate Thread Guard Rivet
125432	21483	Face Plate complete, Nos. 125315
	-27-0	and 125431
2835C	21482	Feed Bar
315C	21482	" " Screw Center (2)
15445		" " " 3150 with
		1519R (2)
1519R	21482	Feed Bar Screw Center Nut (2)
125386R	21482	Throw-out Lever with 1815.
125349	21482	the cartiful R
1813	21482	Ring Feed Bar Throw-out Lever Roller and
1010	21402	Stud
125387		Feed Bar Throw-out Lever Spring
51289X	21482	" " Thumb
		Screw
125045	21481	Feed Cam and Counterbalance with
		1285AL
1285AL	21481	Feed Cam and Counterbalance Po-
35050		sition Screw
15279	21483	Feed Dog, 12 teeth (14 teeth to the
		inch) three teeth at right of
		needle, square corner, for use
	Note:	with 15280, 15316 and 15317 No. 15279 is regularly furnished with
	More:	this machine.
15304		Feed Dog, 15 teeth (18 teeth to the
10001		inch) three teeth at right of
		needle, square corner, for use
		with 15280, 15316 and 15517
208AL	21483	Feed Dog Screw (2)
125046R	21481	" Forked Connection
125085		" " 125046R with
		125535

PARTS FOR MACHINE No. 15-210

No.	Plate	Name
1381C	21481	Feed Forked Connection Hinge Screw
		(eccentric)
152 OR	21481	Feed Forked Connection Hinge Screw
125047	21481	Feed Forked Connection Slide Block.
125335		и и и и и
		125047 with 1085E
1085 E	21481	Feed Forked Connection Slide Block Screw Stud
125429R	21482	Feed Lifting Rock Shaft
125430		Feed Lifting Rock Shaft complete,
125388R	21482	Nos. 125349, 125389 and 125429R Feed Lifting Rock Shaft Crank with
3500	0.1.100	157R
157R	21482	Feed Lifting Rock Shaft Crank Clamping Screw
125389		Feed Lifting Rock Shaft Crank com- plete, Nos. 51289X and 125386R to 125388R
304C	21482	Feed Lifting Rock Shaft Screw Center (2)
125344	-	Feed Lifting Rock Shaft Screw Center 304C with 1515K (2)
1513R	21482	Feed Lifting Rock Shaft Screw
		Center Nut (2)
125101	21481	Feed Regulator
125102		" 125101 with 51225B
8217	21481	" " Friction Washer
50353 E	21481	" " Hinge Screw
51225B	21481	" Thumb Screw
15297R	21482	" Rock Shaft
304C	21482	" " Screw Center (2)
125344		н н н н н 304С
		with 1513R (2)
1513R	21482	Feed Rock Shaft Screw Center Nut
51045AL	21481	Machine Hinge Connection Set Screw (2)
125079	21481	Needle Bar
125052	21481	" " Bushing
125438	21401	" " 125052 with
123436		125072
125072	21481	Needle Bar Bushing Oil Pad (felt)
1498AL	21481	" " Set Screw
15248	21481	" " Connecting Link with
12640	21401	51002E
15374		Needle Bar Connecting Link with 2052
51002 E	21481	Needle Bar Connecting Link Adjust- ing Screw
570C	21481	Needle Bar Connecting Link Hinge Screw
152 OR	21481	Needle Bar Connecting Link Hinge Screw Nut

No.	Plate	Name
2052	21481	Needle Bar Connecting Stud with
		155C
1550	21481	Needle Bar Connecting Stud Set
	03403	Screw Needle Bar Thread Guard
125095	21481	" " " Screw
251A	21481	" Clamp with 552C
2054G	21481	" Thumb Screw
5520	21481 21482	Oscillating Rock Shaft with 125056.
125055R 125048	21482	" " Center (left)
51246AL	21482	n n n n
31246AL	21402	Set Screw
125049	21482	Oscillating Rock Shaft Center
123043	21402	(right)
51246AL	21482	Oscillating Rock Shaft Center
SILTORI	21400	(right) Set Screw
125056	21482	Oscillating Rock Shaft Oil Wick
120000	2220	(braided cotton)
2510	21482	Oscillating Shaft
125057	21482	" Crank
125059		" " 125057 with
		125330 and two 462AL
125330	21482	Oscillating Shaft Crank Slide Block
		with Stud
462AL	21482	Oscillating Shaft Crank Set Screw
		(2)
125061	21481	Presser Bar
5562 LAE	21481	TIL CEL
15486	21481	" " " Hinge Stud
448AL	21481	Screw
80011	21481	Presser Bar Spring
2068	21481	" " Bracket with
2000	21401	453AL
453AL	21481	Presser Bar Spring Bracket Set
TOOKE	22101	Screw
2070	21481	Presser Bar Spring Washer
45329	21483	" Foot Hinge Pin
*45319	21483	" " Plate
*45320	21483	" " Shank
45321G	21483	Presser Foot (hinged) complete,
		Nos. 45319, 45320 and 45329
51224B	21483	Presser Foot Thumb Screw
51228J	21481	Pressure Regulating Thumb Screw
66773J		11 11 11
		51228J with 66752
66752	21481	Pressure Regulating Thumb Screw
	07.457	Plug (left)
2518	21473	Shuttle Bobbin
15140	21473	" Case Latch"
2973	21473	Toket
2974	21473	Fulcrum Pin
2975	21473	Shuttle Bobbin Case Latch Spring
6313	C 1# 19	budgete Dobbin oggo Impou phi mg

No.	Plate	Name
592 E	21473	Shuttle Bobbin Case Latch Stop
		Screw
15141	21473	Shuttle Bobbin Case Hinge, Nos.
		2973, 2974 and 15140
15277	21473	Shuttle Bobbin Case with 591F,
		592E, 2975, 15141 and 15278
2515	21473	Shuttle Body
591F	21473	" Tension Regulating Screw
15278	21473	" " Spring
125018	21473	Shuttle, 1 11/16 in. diam., Nos. 2515. 2518 and 15277
125064	21482	Shuttle Driver with 125065 and two
120004	L110L	each 462AL and 51229E
125065	21482	Shuttle Driver Cushion Spring
51229E	21482	" " " Screw
		(2)
462AL	21482	Shuttle Driver Set Screw (2)
2531	21473	" Race Back
2532	21473	" " Position Pin (2).
125080	21473	" " Spring
648R	21473	" " Screw
2530	21473	" Body
15420	21473	" " 2530 with 2535
		and two 662R
2535	21473	Shuttle Race Cap
662R	21473	" " Screw (2)
2528	21473	Shuttle Race complete, Nos. 648R,
		2531, 15420, 125080 and two
3.55	03.455	2532
145J	21473	Shuttle Race Screw (2)
125336B 125337	21483 21483	" " Slide
51282ZJ	21483	" " " " Screw (2)
125338	21483	Shuttle Race Slide complete, Nos.
123330	21403	125336B, 125337 and two 51282ZJ
125103B	21481	Stitch Indicator
125104	21481	" " Plate
1402025	21481	" " Screw (2)
2102	21483	Tension Disc (2)
125310	21483	" Indicator
125311	21483	" Flange
51608B	21483	Regargering Lummo Moc
125312	21483	Mercestus proc
125313	21483	f 111,
125314	21483	" Spring
51257W	21483	Stua
50292B	21483	DOC DOLOWILLIAM
125315		Tension (graduated) complete, Nos.
		51257W, 51608B, 125310 to 125314, 125316, 125318 and two
		2102
26075C	21481	Thread Cutter and Holder
15272	21481	" Take-up Cam with 1293AL
*15434		" " 15272 with 5700
10101		and 1520R

No.	Plate	Name
1293AL	21481	Thread Take-up Cam Position Screw
15492	21481	" Lever with 1822 and
1011-		505270
505270	21481	Thread Take-up Lever Hinge Screw
1822	21481	" " Roller and
		Stud
125316	21483	Thread Take-up Spring
125317G	21483	" " Regulator
857B	21483	" " " Set
		Screw
125318	21483	Thread Take-up Spring Thread Guard.
15316A		Throat Plate (large needle hole)
		for use with 15279 and 15304
15280A	21483	Throat Plate (medium needle hole)
		for use with 15279 and 15304
	Note:	No. 15280A is regularly furnished
		with this machine.
15317A		Throat Plate (small needle hole)
		for use with 15279 and 15304
691A	21483	Throat Plate Screw (2)
*15404		Trade Mark
15405		" " Rivet (2)

MACHINE No. 15-211

FOR FAMILY USE. C. B. SHUTTLE. DROP FEED.

BALANCED MACHINE. HAND ATTACHMENT.

THIS MACHINE IS THE No. 15-210 WITH THE $\label{eq:ADDITION} \text{ADDITION OF THE FOLLOWING:}$

HAND ATTACHMENT PARTS

		••
No.	Plate	Name
94 050	21486	Body
94027	21486	bracket
183E	21486	DCLC# (C)
94 02 8	21486	Crank Handle (wood)
94 02 9	21486	Spinate
94030	21486	" LTanke (10030)
94069	21486	" Hinge Pin
94031	21486	" Lever
94032	21486	" Lock Pin
94033	21486	" " " Head
55531	21486	" " " Spring (music
		wire) for 94051
94034		Hand Attachment Crank complete,
		Nos. 94028 to 94031
94046	21486	Driver
94070		" 94046 with 80028 and 94048
94 036	21486	" Finger
94041		" 94036 with SS567E,
		94039 and 94040
94039	21486	Driver Finger Driving Pad (rawhide)
94 04 0	21486	" " Plate
SS567E	21486	" " " and Plate
		Binding Screw
94044	21486	Driver Finger Hinge Pin
94037	21486	" Latch
SS565E	21486	" " Screw Stud
94038	21486	" " Spring
94051	21486	Gear with 55531, 94032 and 94033
94016	21486	" Cover
399A	21486	" " Screw (2)
SS599F	21486	" Screw Stud
94 04 8	21486	Pinion
35600F	21486	" Screw Stud
80028	21486	" Dowel Pin
00000		

No.	Plate	Name
94052	21486	Hand Attachment complete, Nos.
		33565E, 33566C, 33599F, 33600F,
		94016, 94027, 94034, 94037,
		94038, 94041, 94044, 94050,
		94051, 94069, 94070 and two
		each 183E and 399A
SS566C	21486	Hand Attachment Screw

SINGER Needles should be used in SINGER Machines. These Needles and their Containers are marked with the Company's Trade-Mark "SIMANCO.**" 1

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. 2

ACCESSORIES

No. 120862	Plate 21479	Name Oil Can, contents 1 1/3 fl. oz. (filled with household oil)
120329		Machine Cover

ATTACHMENT*SET

No.	Plate	Name
8879	21485	Arm Spool Pin Washer (cloth)
160359	21485	Binder (slotted for various widths
		of bindings) with Pin Tape
		Guide, for unfolded bias bind-
		ing 15/16 in. wide, (commercial
		binding No. 6) and folded bias
		bindings 1/2 in. wide (com-
		mercial binding No. 5) 7/16 in.
		wide (commercial binding No. 4)
		3/8 in. wide (commercial bind-
		ing No. 3) 5/16 in. wide (com-
		mercial binding No. 2) and $1/4$
		in, wide (commercial binding
		No. 1)
36865	21485	Edge Stitcher
35931	21485	Hemmer (adjustable)
120842	21485	" (foot) flat bottom for 5/64
		in. hem
121441	21485	Presser Foot for gathering
25537	21485	Screw Driver (machine)
120378	21485	" (shuttle tension)
2518	21485	Shuttle Bobbin (4)
121894		Attachment Set Nos. 8879, 25537,
		35931, 36865, 120378, 120842,
		121441, 160359 and four 2518
120598	21485	Ruffler for one, six and twelve
		stitch ruffling
121895	21485	Attachment Set complete, Nos.
		120598 and 121894

BIAS GAUGE

No.	Plate	Name
25525	21479	Bias Gauge

FELLER (Foot)

BOBBIN WINDER

			1			
No.	Plate	Name		No.	Plate	Name
15072	21484	Bobbin Position Pin		36835	21478	Feller (foot)
125324	21484	Bracket (belt cover)				
158 E	21484	" Screw (2)				
66670	21484	Frame	i			
125366		" 66670 with 15288 and 125068	1			FINGER GUARD
51319R	21484	" Hinge Screw	!			THOER GOTTED
66601	21484	✓ Spring				
15287	214.84	Friction Ring (rubber)	1			
15288	21484	Pulley	i	No.	Plate	Name
125068	21484	Spindle with 15072		121725	21478	Finger Guard
125376	21484	Stop Latch				
51303R	21484	" " Hinge Screw				
125462	21484	" " Spring				
125395	21484	Tension Bracket				HEMMER (Foot)
45845	21484	" Disc				TIEMWER (1 OOL)
45847	21484	" Spring				
140138ZB	21484	" Screw				
45846	21484	" Washer		No.	Plate	Name
125396	21484	Tension Bracket complete, Nos.		25893	21478	Hemmer (foot) for 1/4 in. hem
		45845 to 45847, 125395 and				
		140138ZB				
193B	21484	Tension Bracket Screw				
7071	21484	" " Washer				HEMSTITCHER
125326	21484	Tripping Arm				TIEMS THE CHER
190R	21484	" "Screw				
125327	21484	Bobbin Winder complete, Nos. 190R,				
		15287, 51303R, 51319R, 66601,		120687	21478	Hemstitcher with Yielding Presser
		125324, 125326, 125366, 125376				Plate
		and 125 4 62				
		BRAIDER		P	RESSER	FOOT WITH GRADUATED
		<u>-</u>				
					ΑI	DJUSTABLE GUIDES
No.	Plate	Name				
25510	21478	Braider				
289B	21478	" Thumb Screw		No.	Plate	Name
2002		Thomas Society Printers		121717	21479	Presser Foot with 337D, 35002,
					22.0	35135, 35206 and 36696
		000000 (0)		35002	21479	Presser Foot Extension
		CORDER (Bow)		35003	21479	Presser Foot Graduated Adjustable
		FOR TOR CORDUIS		00000	C T T 1 J	Guide (long, left)
		FOR TOP CORDING		35004	21479	Presser Foot Graduated Adjustable
				33004	C 1413	Guide (long, right)
No.	Plate	Name		35005	21479	Presser Foot Graduated Adjustable
26399	21479	Corder Bow complete		55555	CT413	Guide (short, right)
190 J	21479	" Screw		35006	21479	Presser Foot Graduated Adjustable
1300	27717	5010#		55000	r T#13	Guide (short, right) flush
						darag (shore, likite) irasii

18 PRESSER FOOT WITH GRADUATED ADJUSTABLE GUIDES

No. 35135	Plate 21479	Name Presser Foot Graduated Adjustable Guide Clamp
35206	21479	Presser Foot Graduated Adjustable
337D	21479	Presser Foot Graduated Adjustable
36696	21479	Presser Foot Graduated Adjustable Guide Clamp Steady Pin
121718	21479	Presser Foot with Extension and Graduated Adjustable Guide com- plete, Nos. 35003 to 35006 and 121717

PRESSER FEET

No.	Plate	Name
15429	21478	Presser Foot (needle hole on right
13423	211.0	hand side) for stitching on
		edge and inserting braid
305075	21478	Program Foot (right toe) for
125035	21410	stitching on edge and inserting
		cord
7.000.0	21478	Presser Foot with 665B and 36059,
36058	21470	for blind stitch cording, to
		turn small curves
36059	21478	Presser Foot Cord Guide
36033	Note:	When ordering No. 36058 or 36059,
	Noce.	send sample of cord for which it is
		to be used.
665B	21478	Presser Foot Cord Guide Screw
2506	21478	Feed Dog for use with 2831 and
2300	21110	36058
2831	21478	Throat Plate, large needle hole,
2001		for use with 2506
36067	21478	Presser Foot, for braiding, for art
0000.		work, for braid 1/16 in. to
		3/16 in. wide
	Note:	When ordering No. 36067, state the
		size or send sample of braid for
		which it is to be used.
25978	21478	Presser Foot (single toe) for gath-
20070		ering
121441	21478	Presser Foot (double toe) for gath-
101441		ering

QUILTER

No.	Plate	Name
35932	21478	Quilter

RUFFLER SHIRRING PLATE

(Universal)

No.	Plate	Name
121170	21479	Ruffler Shirring Plate (universal)
E1305W	21479	with 51395W

UNDER BRAIDER

No.	Plate	Name
121547	21479	Under Braider
25637	21479	" Foot

SPECIAL ATTACHMENTS

FOR COMPONENT PARTS OF THESE ATTACHMENTS, REFER TO FORM 19385, LIST OF PARTS FOR SINGER FASHION AIDS.

No. 121795 121094 26538	Plate	Name Buttonhole Attachment complete Darning Foot (spring) complete Embroidery Attachment complete for
35505		one thread Embroidery Attachment complete for two threads
121387	=	Hemstitching and Picoting Attachment complete Needle Threader and Seam Ripper
121634		complete
121255 121079		Singercraft Guide complete
35985		mubular Trimming Attachment com-
121706		pleteZigzag Attachment (ad justable)

SINGER Needles should be used in SINGER Machines. These Needles and their Containers are marked with the Company's Trade-Mark "SIMANCO.**" 1

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. 2

NUMERICAL LIST OF PARTS

No	Plate	Name
No. 138E	21481	Arm Screw (3)
145J	21473	Shuttle Race Screw (2)
155C	21481	Needle Bar Connecting Stud Set
1550	21401	Serew for 2052
157R	21482	Feed Lifting Rock Shaft Crank
1071	21102	Clamping Screw for 125388R
158 E	21484	Bobbin Winder Bracket Screw (11)
183E	21486	Hand Attachment Body Bracket Screw
1002	222-0	for 94052 (2)
190J	21483	Face Plate Screw
190J	21479	Corder Screw
190R	21484	Bobbin Winder Tripping Arm Screw
		for 125327
193B	21484	Bobbin Winder Tension Bracket Screw
208AL	21483	Feed Dog Screw (2)
248A	21481	Clamp Stop Motion Clamp Stop Screw
		for 15314
251A	21481	Needle Bar Thread Guard Screw
256B	21481	Clamp Stop Motion Clamp Screw for
		15314
28 9B	21478	Braider Thumb Screw
30 4 C	21482	Feed Lifting Rock Shaft Screw
		Center for 125344 (2)
304C	21482	Feed Rock Shaft Screw Center for
		125344 (2)
315C	21482	Feed Bar Screw Center for 15445 (2)
337D	21479	Presser Foot Graduated Adjustable
	03403	Guide Clamp Screw for 121717
375C	21481	Crank Connecting Rod Hinge Screw Hand Attachment Gear Cover Screw
399A	21486	for 94052 (2)
435AL	21481	Arm Shaft Bushing Set Screw for
455AL	21401	125106
448AL	21481	Presser Bar Lifter Hinge Stud Set
440AL	2.1401	Screw for 125106
453AL	21481	Presser Bar Spring Bracket Set
TOORE	21401	Screw for 2068
462AL	21481	Clamp Stop Motion Clamp Washer Set
102112	21101	Screw for 15313 (2)
462AL	21482	Oscillating Shaft Crank Set Screw
		for 125059 (2)
462AL	21482	Shuttle Driver Set Screw for 1.5064
552C	21481	Needle Clamp Thumb Screw for 2054G.
SS565E	21486	Hand Attachment Driver Finger Latch
		Screw Stud for 94052
SS566C	21486	Hand Attachment Screw for 94052
SS567E	21486	" Driver Finger Driv-
		ing Pad and Plate Binding Screw
		for 94041
570C	21481	Needle Bar Connecting Link Hinge
		Screw for 15434

No.	Plate	Name
591F	21473	Shuttle Tension Regulating Screw
		for 15277
592 E	21473	Shuttle Bobbin Case Latch Stop
		Screw for 15277
SS599F	21486	Hand Attachment Gear Screw Stud for
		94 052
SS600F	21486	Hand Attachment Pinion Screw Stud
		for 94052
64 8R	21473	Shuttle Race Back Spring Screw for
2007	03.492	2528
662R	21473	Shuttle Race Cap Screw for 15420
665B	21478	(2) Presser Foot Cord Guide Screw for
6658	21410	36058
691A	21483	Throat Plate Screw (2)
857B	21483	Thread Take-up Spring Regulator Set
0015	21100	Screw for 125431
896AL	21481	Crank Connecting Rod Cap Screw for
		125021 (2)
1085E	21481	Feed Forked Connection Slide Block
		Screw Stud for 125335
1285AL	21481	Feed Cam and Counterbalance Po-
		sition Screw for 125045
1293AL	21481	Thread Take-up Cam Fosition Screw
20020	03403	for 15272
1381C	21481	(eccentric)
1498AL	21481	Needle Bar Bushing Set Screw
1513R	21482	Feed Lifting Rock Shaft Screw Cen-
10101		ter Nut for 125344 (2)
1513R	21482	Feed Rock Shaft Screw Center Nut
		for 125344 (2)
1518R	21481	Crank Connecting Rod Hinge Screw
		Nut
1519R	21482	Feed Bar Screw Center Nut for 15445
3 E O O D	02403	(2)
1520R	21481	Feed Forked Connection Hinge Screw
152 OR	21481	Needle Bar Connecting Link Hinge
136 011	21401	Screw Nut for 15434
1813	21482	Feed Bar Throw-out Lever Roller and
2020		Stud for 125386
1822	21481	Thread Take-up Lever Roller and
		Stud for 15492
2002	21481	Arm Dowel Pin (2)
2007G	21481	" Spool Pin
2020	21481	Clamp Stop Motion Clamp Washer for
0.45	03453	15314
2052	21481	Needle Bar Connecting Stud with
2054G	21481	155C, for 15374 Needle Clamp with 552C
2054G 2068	21481	Presser Bar Spring Bracket with
2000	C T.A.O.T	453AL
2070	21481	Presser Bar Spring Washer
		. 0

		Nomo
No.	Plate	Name Tension Disc for 125315 (2)
2102	21483	Tension Disc for 145515 (4)
2506	21478	Feed Dog for use with 2831 and
	0.7.1.00	36058 Oscillating Shaft
2510	21482	Oscillating Shart
2515	21473	Shuttle Body for 125018
2518	21473	Shuttle Bobbin for 121894 and
		125018
2528	21473	Shuttle Race complete, Nos. 648R, 2531, 15420, 125080 and two
		2551, 15420, 125000 and two
		2532 Shuttle Race Body for 15420
2530	21473	Shuttle Race Body for 154.0
2531	21473	Shuttle Race Back for 2528 " " Position Pin for
2532	21473	2528 (2)
		2528 (Z)
2535	21473	Shuttle Race Cap for 15420
2831	21478	Throat Plate, large needle hole,
		for use with 2506
2835C	21482	Feed Bar
2973	21473	Shuttle Bobbin Case Latch Lever for
		15141
2974	21473	Shuttle Bobbin Case Latch Lever
		Fulcrum Pin for 15141
2975	21473	Shuttle Bobbin Case Latch Spring
		for 15277
7071	21484	Bobbin Winder Tension Bracket Screw
		Washer
8217	21481	Feed Regulator Friction Washer
8879	21481	Arm Spool Pin Washer (Cloth) 101
		121894
15072	21484	Bobbin Winder Bobbin Position Pin
		for 125068
15140	21473	Shuttle Bobbin Case Latch for 15141
15141	21473	Shuttle Bobbin Case Hinge for 15277
		Nos. 2973, 2974 and 15140
15248	21481	Needle Bar Connecting Link with
		51002E
15272	21481	Thread Take-up Cam with 1293AL for
		15434
15277	21473	Shuttle Bobbin Case with 591F,
		592E, 2975, 15141 and 15278,
	_	for 125018
15278	21473	Shuttle Tension Spring for 15277
15279	21483	Feed Dog, 12 teeth (14 teeth to the
		inch) three teeth at right of
		needle, square corner, for use
		with 15280, 15316 and 15317
15280A	21483	Throat Plate (medium needle hole)
		for use with 15279 and 15304
	Note:	No. 15280A is regularly furnished
		uith this machine.
15282	21481	Balance Wheel, 2 1/4 in. pulley
15287	21484	Bobbin Winder Friction King (rub-
		ber) for 125327
15288	21484	Bobbin Winder Pulley for 125366

No.	Plate	Name	No.	Plate	Name
15297R	21482	Feed Rock Shaft	35505	-	Embroidery Attachment complete for
15304		Feed Dog. 15 teeth (18 teeth to the			two threads
		inch) three teeth at right of	35931	21485	Hemmer (adjustable) for 121894
		needle, square corner, for use	35932	21478	Quilter
		with 15280, 15316 and 15317	35985		Tubular Trimming Attachment com-
15313	21481	Clamp Stop Motion Clamp Washer with	i		plete
10010	21101	two 462AL, for 15314	36058	21478	Presser Foot with 665B and 36059,
15314	21481	Clamp Stop Motion complete, Nos.			for blind stitch cording, to
13014	61101	248A, 256B, 2020 and 15313			turn small curves
15316A		Throat Plate (large needle hole)	36059	21478	Presser Foot Cord Guide for 36058
13310A		for use with 15279 and 15304		Note:	When ordering No. 36058 or 36059,
15317A		Throat Plate (small needle hole)			send sample of cord for which it is
100111		for use with 15279 and 15304			to be used.
15374		Needle Bar Connecting Link with	36067	21478	Presser Foot, for braiding, for art
15574		2052			work, for braid $1/16$ in. to $3/16$
*15404		Trade Mark for 125106			in. wide
		" " Rivet for 125106 (2)		Note:	When ordering No. 36067, state the
15405		Shuttle Race Body 2530 with 2535			size or send sample of braid for
15420	21473	and two 662R, for 2528			which it is to be used.
75400	03.470	Presser Foot (needle hole on right	36696	21479	Presser Foot Graduated Adjustable
15429	21478		00000		Guide Clamp Steady Pin for
		hand side) for stitching on			121717
¥35474		edge and inserting braid	36835	21478	Feller (foot)
*15434		Thread Take-up Cam 15272 with 5700	36865	21485	Edge Stitcher for 121894
		and 1520R	*45319	21483	Presser Foot Plate for 45321
15445		Feed Bar Screw Center 315C with		21483	" " Shank for 45321
		1519R (2)		21483	Presser Foot (hinged) complete,
15486	21481	Presser Bar Lifter Hinge Stud	45321G	21400	Nos. 45319. 45320 and 45329
15492	21481	Thread Take-up Lever with 1822 and	4E320	21483	Presser Foot Hinge Pin for 45321
		505270	45329		Bobbin Winder Tension Disc for
15498	21481	Arm Shaft Bushing for 125106	45845	21484	125396
25510	21478	Braider	45040	27104	Bobbin Winder Tension Screw Washer
25525	21479	Bias Gauge	45846	21484	for 125396
25537	21485	Screw Driver (machine) for 121894	45047	27404	Bobbin Winder Tension Disc Spring
25637	21479	Under Braider Foot	45847	21484	for 125396
25893	21478	Hemmer (foot) for 1/4 in. hem	5 00 00 D	01407	Tension Stud Set Screw for 125431
25978	21478	Presser Foot (single toe) for gath-	50292B	21483	
		ering	50353E	21481	Feed Regulator Hinge Screw
26075C	21481	Thread Cutter and Holder	5052 7C	21481	Thread Take-up Lever Hinge Screw for 15492
26399	21479	Corder Bow complete	53.000 B	03403	
26538		Embroidery Attachment complete for	51002 E	21481	Needle Bar Connecting Link Adjust-
		one thread	5701517	03403	ing Screw for 15248
35002	21479	Presser Foot Extension for 121717	51045AL	21481	Machine Hinge Connection Set Screw
35003	21479	Presser Foot Graduated Adjustable			(2)
		Guide (long, left) for 121718	5122 4 B	21481	Arm Side Cover Thumb Screw
35004	21479	Presser Foot Graduated Adjustable	5122 4 B	21483	Presser Foot Thumb Screw
		Guide (long, right) for 121718.	51225B	21481	Feed Regulator Thumb Screw for
35005	21479	Presser Foot Graduated Adjustable			125102
		Guide (short, right) for 121718	51228J	21481	Pressure Regulating Thumb Screw for
35006	21479	Presser Foot Graduated Adjustable			66773J
		Guide (short, right) flush for	51229E	21482	Shuttle Driver Cushion Spring Screw
		121718			for 125064 (2)
35135	21479	Presser Foot Graduated Adjustable	51246AL	21482	Oscillating Rock Shaft Center
		Guide Clamp for 121717			(left) Set Screw
35206	21479	Presser Foot Graduated Adjustable	512 46A L	21482	Oscillating Rock Shaft Center
		Guide Clamp Lever for 121717			(right) Set Screw
		-			

27

No.	Plate	Name
51257W	21483	Tension Stud for 125315
51282ZJ	21483	Shuttle Race Slide Spring Screw for 125338 (2)
51289X	21482	Feed Bar Throw-out Lever Thumb Screw for 125389
51303R	21484	Bobbin Winder Stop Latch Hinge Screw for 125327
51319R	21484	Bobbin Winder Frame Hinge Screw for 125327
51395 W	21479	Ruffler Shirring Plate Thumb Screw for 121170
51608B	21483	Tension Regulating Thumb Nut for 125315
55531	21486	Hand Attachment Crank Lever Lock Pin Spring (music wire) for 94051
55621AE	21481	Presser Bar Lifter
66601	21484	Bobbin Winder Frame Spring for 125327
66670	21484	Bobbin Winder Frame for 125366
66752	21481	Pressure Regulating Thumb Screw
		Plug (left) for 66773
66773 J		Pressure Regulating Thumb Screw 51228J with 66752
80011	21481	Presser Bar Spring
80028	21486	Hand Attachment Pinion Dowel Pin for 94070
94016	21486	Hand Attachment Gear Cover for 94052
94027	21486	Hand Attachment Body Bracket for 94052
94028	21486	Hand Attachment Crank Handle (wood) for 94034
94029	21486	Hand Attachment Crank Handle Spin- dle for 94034
94 03 0	21486	Hand Attachment Crank Handle Spin- dle Flange (loose) for 94034
94031	21486	Hand Attachment Crank Lever for 94034
94032	21486	Hand Attachment Crank Lever Lock Pin for 94051
94 033	21486	Hand Attachment Crank Lever Lock Pin Head for 94051
94 034		Hand Attachment Crank complete, for 94052, Nos. 94028 to 94031
94036	21486	Hand Attachment Driver Finger for 94041
94037	21486	Hand Attachment Driver Finger Latch for 94052
94038	21486	Hand Attachment Driver Finger Latch Spring for 94052
94039	21486	Hand Attachment Driver Finger Driv- ing Pad (rawhide) for 94041
94 04 0	21486	Hand Attachment Driver Finger Driving Pad Plate for 94041

NUMERICAL LIST OF PARTS

No.	Plate	Name
94041		Hand Attachment Driver Finger 94036
01011		with SS567E, 94039 and 94040,
		for 94052
94 04 4	21486	Hand Attachment Driver Finger Hinge
01011		Pin for 94052
94046	21486	Hand Attachment Driver for 94070
94048	21486	" Pinion for 94070
94050	21486	" Body for 94052
94051	21486	" " Gear with 55531,
34031	CIICO	94032 and 94033, for 94052
94 052	21486	Hand Attachment complete, for
34032	21100	15-211 Machine, Nos. SS565E,
		SS566C, SS599F, SS600F, 94016,
		94027 94034 94037 94038.
		94027, 94034, 94037, 94038, 94041, 94044, 94050, 94051,
		94069, 94070 and two each 183E
		and 399A
94069	21486	Hand Attachment Crank Hinge Pin for
94009	21400	94052
94070		Hand Attachment Driver 94046, with
34070		80028 and 94048, for 94052
120329		Machine Cover (accessories)
120378	21485	Screw Driver (shuttle tension) for
120376	21400	121894
120598	21485	Ruffler for one, six and twelve
120590	21403	stitch ruffling, for 121895
190007	21478	Hemstitcher with Yielding Presser
120687	21470	Plate
120842	21485	Hemmer (foot) flat bottom, for 5/64
120042	21400	in. hem, for 121894
120862	21479	Oil Can, contents 1 1/3 fluid oz.
120002	CITIO	(filled with household oil) Ac-
		cessories
121079		Singercraft Guide complete
121094		Darning Foot (spring) complete
121170	21479	Ruffler Shirring Plate (universal)
121110	LITIO	with 51395W
121255		Singercraft Fagoter complete
121387		Hemstitching and Picoting Attach-
121301		ment complete
121441	21485	Presser Foot (double toe) for gath-
10111		ering for 121894
121547	21479	Under Braider
121634		Needle Threader and Seam Ripper
121001		complete
121706		Zigzag Attachment (adjustable) com-
121100		plete
121717	21479	Presser Foot with 337D, 35002,
101.1,	21110	35135, 35206 and 36696, for
		121718
121718	21479	Presser Foot with Extension and
101110	041,0	Graduated Adjustable Guide com-
		plete, Nos. 35003 to 35006 and
		121717

29


NUMERICAL LIST OF PARTS


					<u></u>
No.	Plate	Name	No.	Plate	Name
121725	21478	Finger Guard	125310	21483	Tension Indicator for 125315
121725	2.1410	Buttonhole Attachment complete	125311	21483	" Flange for 125315
		Attachment Set, for 121895, Nos.	125312	21483	" Releasing Disc for 125315
121894			125313	21483	" Pin for 125315
		8879, 25537, 35931, 36865,	125314	21483	" Spring for 125315
		120378, 120842, 121441, 160359	125315		Tension (graduated) complete, for
		and four 2518			125432 Nos. 51257W, 51608B,
121895	21485	Attachment Set complete, Nos.			125310 to 125314, 125316,
		120598 and 121894			125318 and two 2102
125018	21473	Shuttle, 1 11/16 in. diam., Nos.	125316	21483	Thread Take-up Spring for 125315
		2515, 2518 and 15277	125317G	21483	" " Regulator for
125021R	21481	Crank Connecting Rod with 125044	1233110	21400	125431
		and two 896AL	305730	27407	
125035	21478	Presser Foot (right toe) for	125318	21483	Thread Take-up Spring Thread Guard
		stitching on edge and inserting	705704	03404	for 125315
		cord	125324	21484	Bobbin Winder Bracket (belt cover)
125042	21481	Arm Shaft			for 125327
125044	21481	Crank Connecting Rod Oil Pad (felt)	125326	21484	Bobbin Winder Tripping Arm for
120011	21101	for 125021			125327
125045	21481	Feed Cam and Counterbalance with	125327	21484	Bobbin Winder complete, Nos. 190R,
123043	51401	1285AL			15287, 51303R, 51319R, 66601,
10504CD	03403	Feed Forked Connection for 125085			125324, 125326, 125366, 125376
125046R	21481				and 125462
125047	21481	Bild block	125330	21482	Oscillating Shaft Crank Slide Block
		for 125335	220722		with Stud for 125059
125048	21482	Oscillating Rock Shaft Center	125331	21481	Arm Oil Pad (felt) for oiling Arm
		(left)	120001		Shaft Back Bearing
125049	21482	Oscillating Rock Shaft Center	125333	21481	Arm Oil Pad Spring
		(right)	125334G	21481	" " Cap
125052	21481	Needle Bar Bushing for 125438			Feed Forked Connection Slide Block
125055R	21482	Oscillating Rock Shaft with 125056.	125335		
125056	21482	Oscillating Rock Shaft Oil Wick	1057700	97407	125047 with 1085E, for 125085
		(braided cotton)	125336B	21483	Shuttle Race Slide for 125338
125057	21482	Oscillating Shaft Crank for 125059.	125337	21483	ppr mg roi
125059		" " 125057 with	305770	07.00	125338
		125330 and two 462AL	125338	21483	Shuttle Race Slide complete, Nos.
125061	21481	Presser Bar			125336B, 125337 and two 51282ZJ
125064	21482	Shuttle Driver with 125065 and two	125344		Feed Lifting Rock Shaft Screw
		each 462AL and 51229E			Center 304C with 1513R (2)
125065	21482	Shuttle Driver Cushion Spring for	125344		Feed Rock Shaft Screw Center 304C
		125064			with 1513R (2)
125068	21484	Bobbin Winder Spindle with 15072,	125349	21482	Feed Bar Throw-out Lever Retaining
		for 125366			Ring for 125430
125072	21481	Needle Bar Bushing Oil Pad (felt)	125366		Bobbin Winder Frame 66670 with
100010	22701	for 125438			15288 and 125068 for 125327
125079	21481	Needle Bar	125376	21484	Bobbin Winder Stop Latch for 125327
125080	21473		125386R	21482	Feed Bar Throw-out Lever with 1813,
125085	41413	Shuttle Race Back Spring for 2528			for 125389
123065		Feed Forked Connection 125046R with	125387		Feed Bar Throw-out Lever Spring for
105005	03403	125335			125389
125095	21481	Needle Bar Thread Guard	125388	21482	Feed Lifting Rock Shaft Crank with
125101	21481	Feed Regulator for 125102	12,5500	21402	157R, for 125389
125102		" " 125101 with 51225B	125390		
125103B	21481	Stitch Indicator	125389		Feed Lifting Rock Shaft Crank com-
125104	21481	" " Plate			plete, Nos. 51289X and 125386R
*125106		Arm with 435AL, 448AL, 15404, 15486,	105705	23404	to 125388R, for 125430
		15498 and two 15405	125395	21484	Bobbin Winder Tension Bracket for
*125255		Bed			125396


No.	Plate	Name
125396	21484	Bobbin Winder Tension Bracket com-
		plete, Nos. 45845 to 45847,
		125395 and 140138ZB
125422G		Face Plate Thread Guard for 125423.
125423	21483	Face Plate Thread Guard 125422G
		with 125424G, for 125431
125424G		Face Plate Thread Guard Rivet for
		125423
125 4 25B	21481	Arm Side Cover
125429R	21482	Feed Lifting Rock Shaft for 125430.
125430		Feed Lifting Rock Shaft complete,
		Nos. 125349, 125589 and 125429R
125431	21483	Face Plate with 857B, 50292B,
		125317 and 125425, for 125432
125432	21483	Face Plate complete, Nos. 125515
		and 125431
125438		Needle Bar Bushing 125052 with
		125072
125462	21484	Bobbin Winder Stop Latch Spring for
		125327
140138ZB	21484	Bobbin Winder Tension Screw for
		125396
140202S		Stitch Indicator Plate Screw (2)
160359	21485	Binder (slotted for various widths
		of bindings) with Pin Tape
		Guide, for unfolded bias bind-
		ing 15/16 in. wide, (commercial
		binding No. 6) and folded bias
		bindings 1/2 in. wide (commer-
		cial binding No. 5) 7/16 in.
		wide (commercial binding No. 4) 3/8 in. wide (commercial bind-
		ing No. 3) 5/16 in. wide (commercial binding No. 2) and 1/4
		in. wide (commercial binding
		No. 1) for 121894
		HO. 1) 10P 141034





From the library of: Superior Sewing Machine & Supply LLC

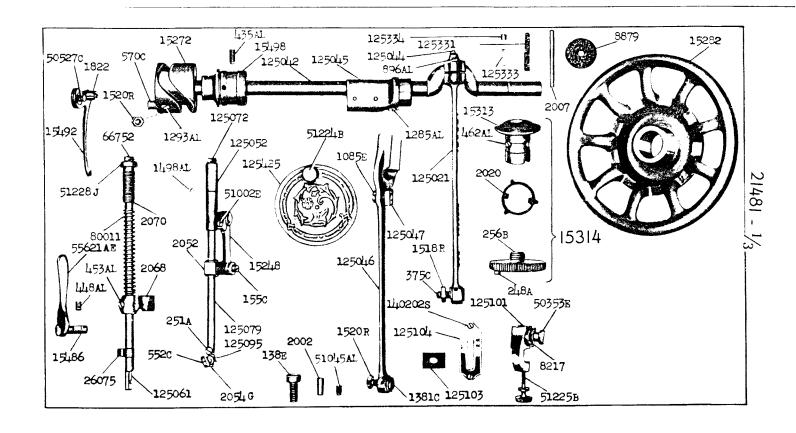

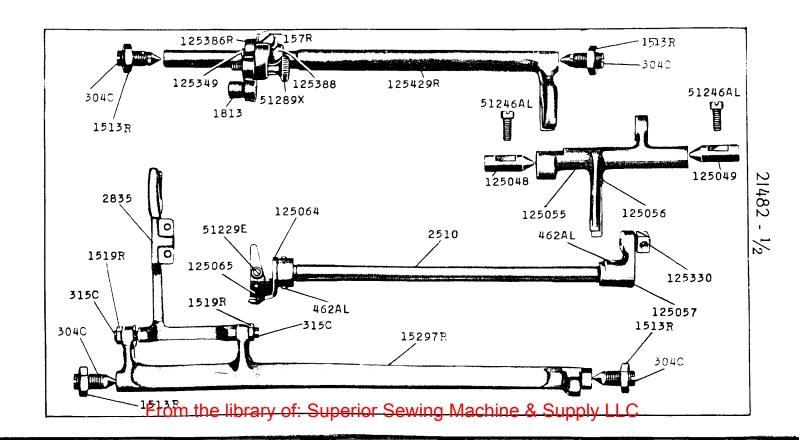

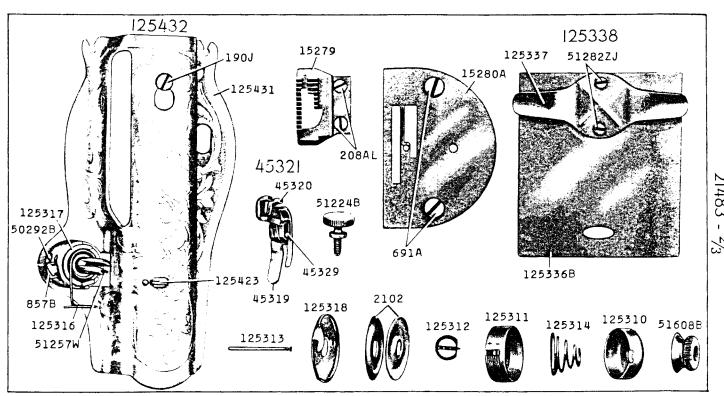

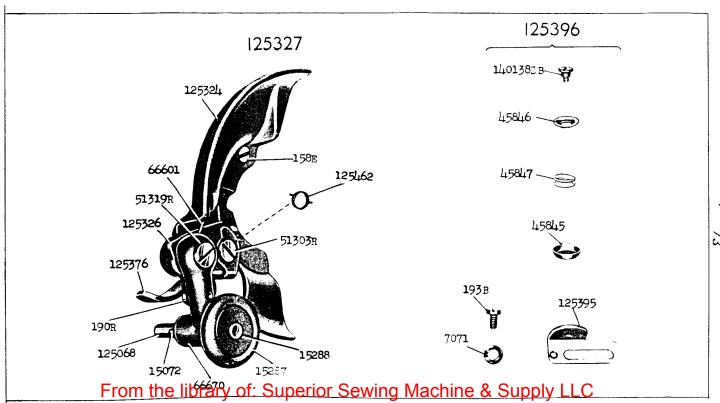

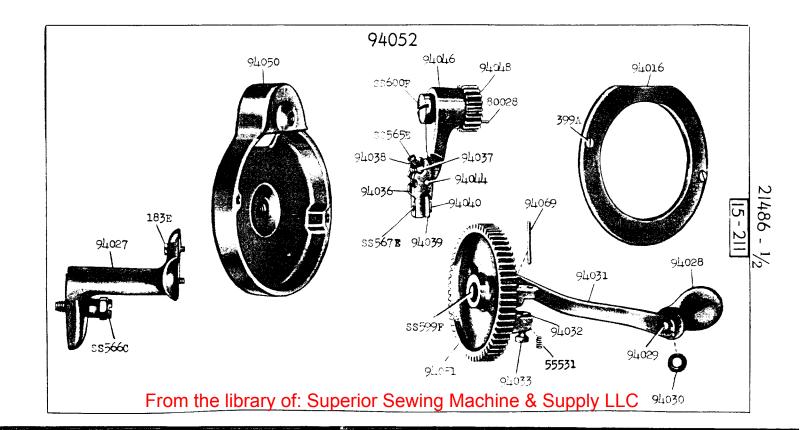

SINGER Needles should be used in SINGER Machines. These Needles and their Containers are marked with the Company's Trade-Mark "SIMANCO.**" I

Needles in Containers marked "FOR SINGER MACHINES" are NOT **SINGER** made needles. 2

