

JESTER HAT PATTERN


Tiled for US Letter: 5 pattern pages after this cover and the instructions.

3 horns · head 57 cm · depth 17.1 cm · band 5 cm · seam allowance 1 cm included

Print at 100% / "Actual size". Measure these squares before cutting:

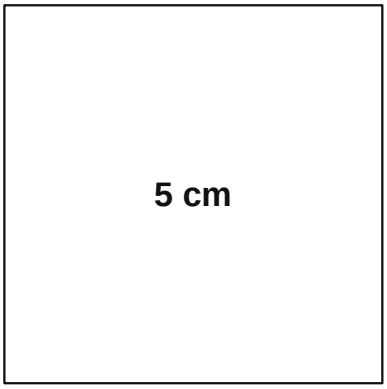


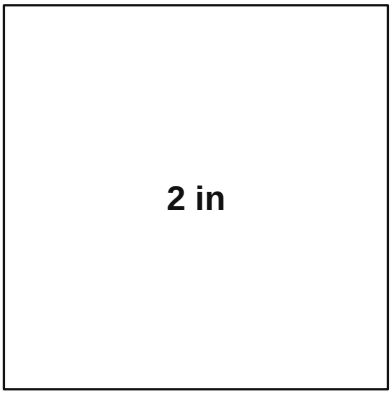

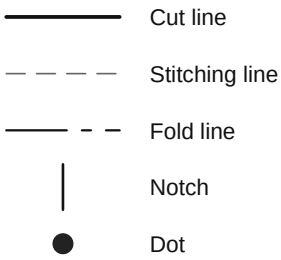

PAGE MAP

Grey squares are blank and are not printed. Pages are labelled row letter + column number.

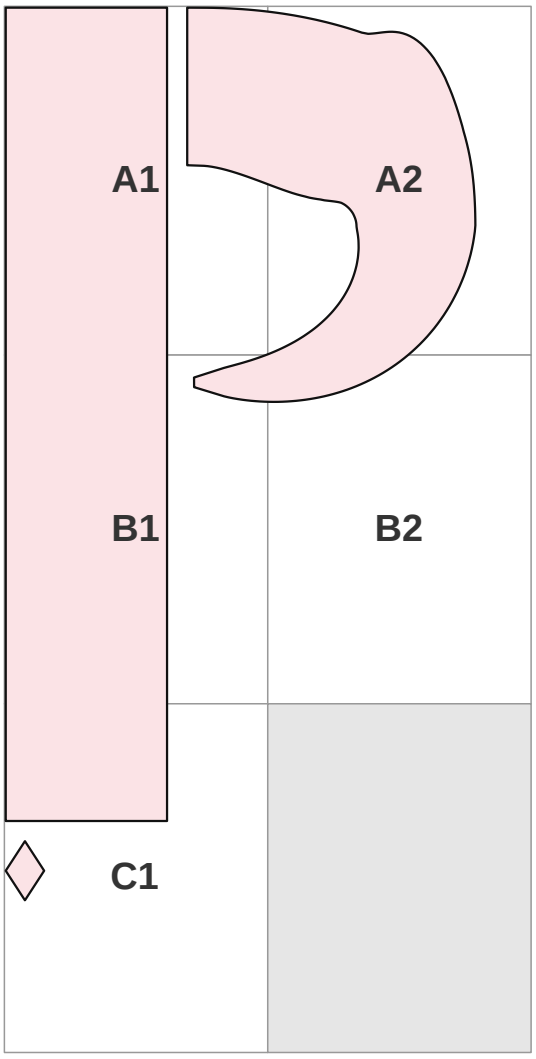

YOU NEED

- Red fabric: about 40 cm (1/2 yd) of 110 cm / 44 in wide. White fabric: about 50 cm (5/8 yd). Medium-weight woven fabric is easiest: cotton twill, canvas, or wool felt. Velvet looks great but slips around.
- Medium fusible interfacing, 60.5 cm x 6 cm, to stiffen the band.
- Paper-backed fusible web (such as HeatnBond Lite or Wonder-Under), about 60.5 cm x 4.9 cm, for the diamonds.
- 3 jingle bells, thread to match, a washable marking pen, a chopstick for turning points. Optional: fibrefill, or fusible fleece, if you want the horns to stand up stiffly.

PRINT AND CUT THE PAPER

1. Print at 100% ("Actual size"). Turn off "Fit to page". Measure the 5 cm and 2 in squares before you cut anything.
2. Trim each page along the frame line on its right and bottom sides. Overlap it onto the next page so the frame lines meet and the half circles make whole circles, then tape. The page map shows where each page goes.
3. Cut the paper pieces out on the solid line. The dashed line is where you stitch.

CUT THE FABRIC

1. Horn panels (piece 1): lay the Red and White fabrics right sides together, pin the pattern on top, and cut 3 times. Every cut gives you one Red panel and one White panel that are mirror images, which is what you need.
2. Snip each notch 3 mm into the seam allowance, and mark the dot at the crown point on the wrong side.
3. Band (piece 2): cut 1 from White. Cut interfacing for the outer half only: from the top edge down to the fold line. Snip the V and H notches.
4. Diamonds (piece 3): iron fusible web onto the back of a scrap of Red, trace 18 diamonds on the paper side, and cut them out.

MAKE THE DIAMOND BAND

1. Fuse the interfacing to the wrong side of the band's outer half.
2. Tape the paper band piece to a window, lay the fabric over it right side up, and trace where the diamonds go. (Or measure: points every 3.3 cm along the middle of the outer half, the first one on the stitching line.)
3. Peel the backing paper off the diamonds and iron them in place.
4. Stitch around each diamond about 2 mm in from its edge: straight stitch on felt, a narrow zigzag on woven fabric.


SEW THE HORNS


1. Take a White panel and a Red panel from different pairs. Put them right sides together along their VALLEY edges (the short edge from the band up to the dot). Sew from the band edge to the dot, backstitching at the dot. Make 3 of these two-colour units and press the seams open.
2. Lay two units right sides together, matching a Red panel of one to the White panel of the other along their UNDER and TOP edges. Sew from the band edge along the under edge to the tip, pivot, and come back along the long top edge to the dot. Stop exactly at the dot and backstitch. Use the notches to line the edges up.
3. Add the remaining units the same way, then close the ring with the last horn seam. The hat is now a tube with 3 horns.
4. Clip into the seam allowance along the inward curve of each under edge every 1.5 cm (stop 2 mm from the stitching). Trim the allowance at each tip to 3 mm. Turn right side out and push the tips out with a chopstick.
5. Optional: stuff the tips lightly with fibrefill, or fuse fleece to the panels before sewing, so the horns hold their arch.

ATTACH THE BAND AND FINISH

1. Sew the short ends of the band right sides together to make a loop, then press the seam open. This seam is centre back (CB).
2. With the hat right side out, slide the band loop over it, right sides together, upside down: the diamond half lies against the hat and its notched edge lines up with the hat's bottom edge. Match CB to a valley seam, each V notch to a valley seam and each H notch to a horn seam. This puts a horn at centre front. Sew all the way around.

3. Fold the band down and press the seam allowance up into the band. Fold the lining half inside along the fold line, turn its raw edge under, and pin it so it just covers the seam. Slipstitch it by hand, or stitch in the ditch from the outside.
4. Sew a bell to each tip.

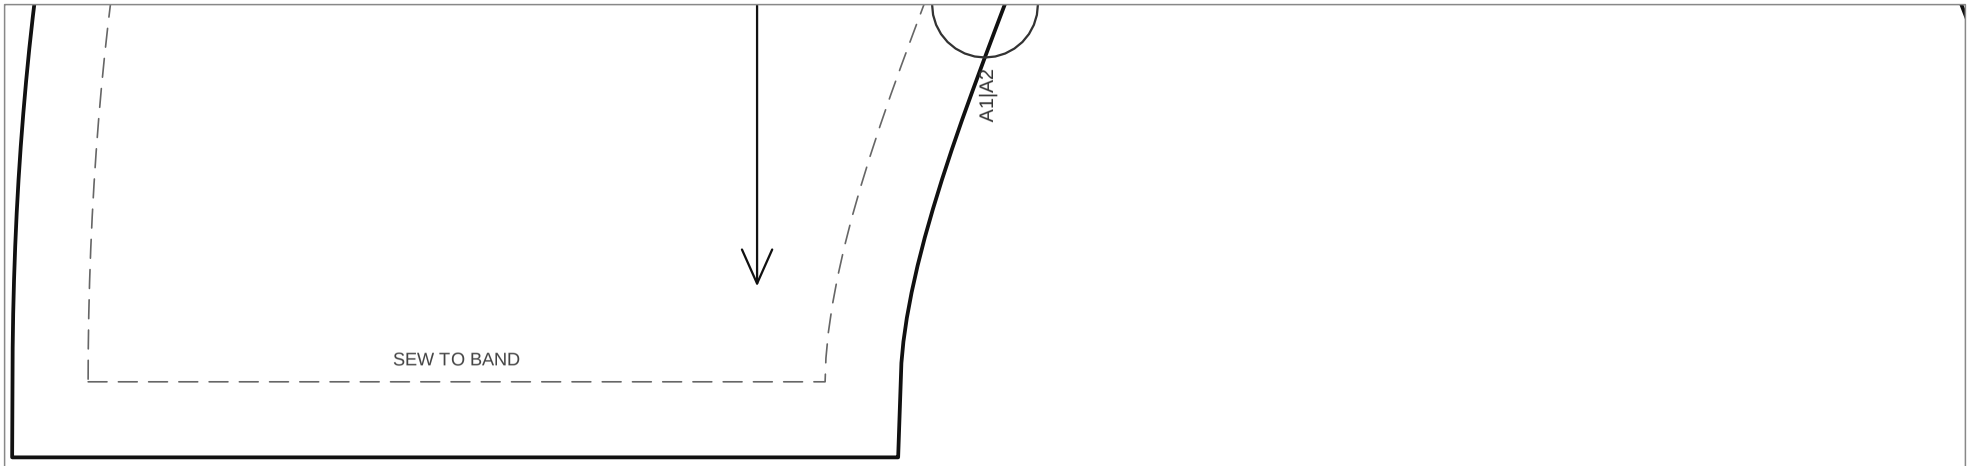


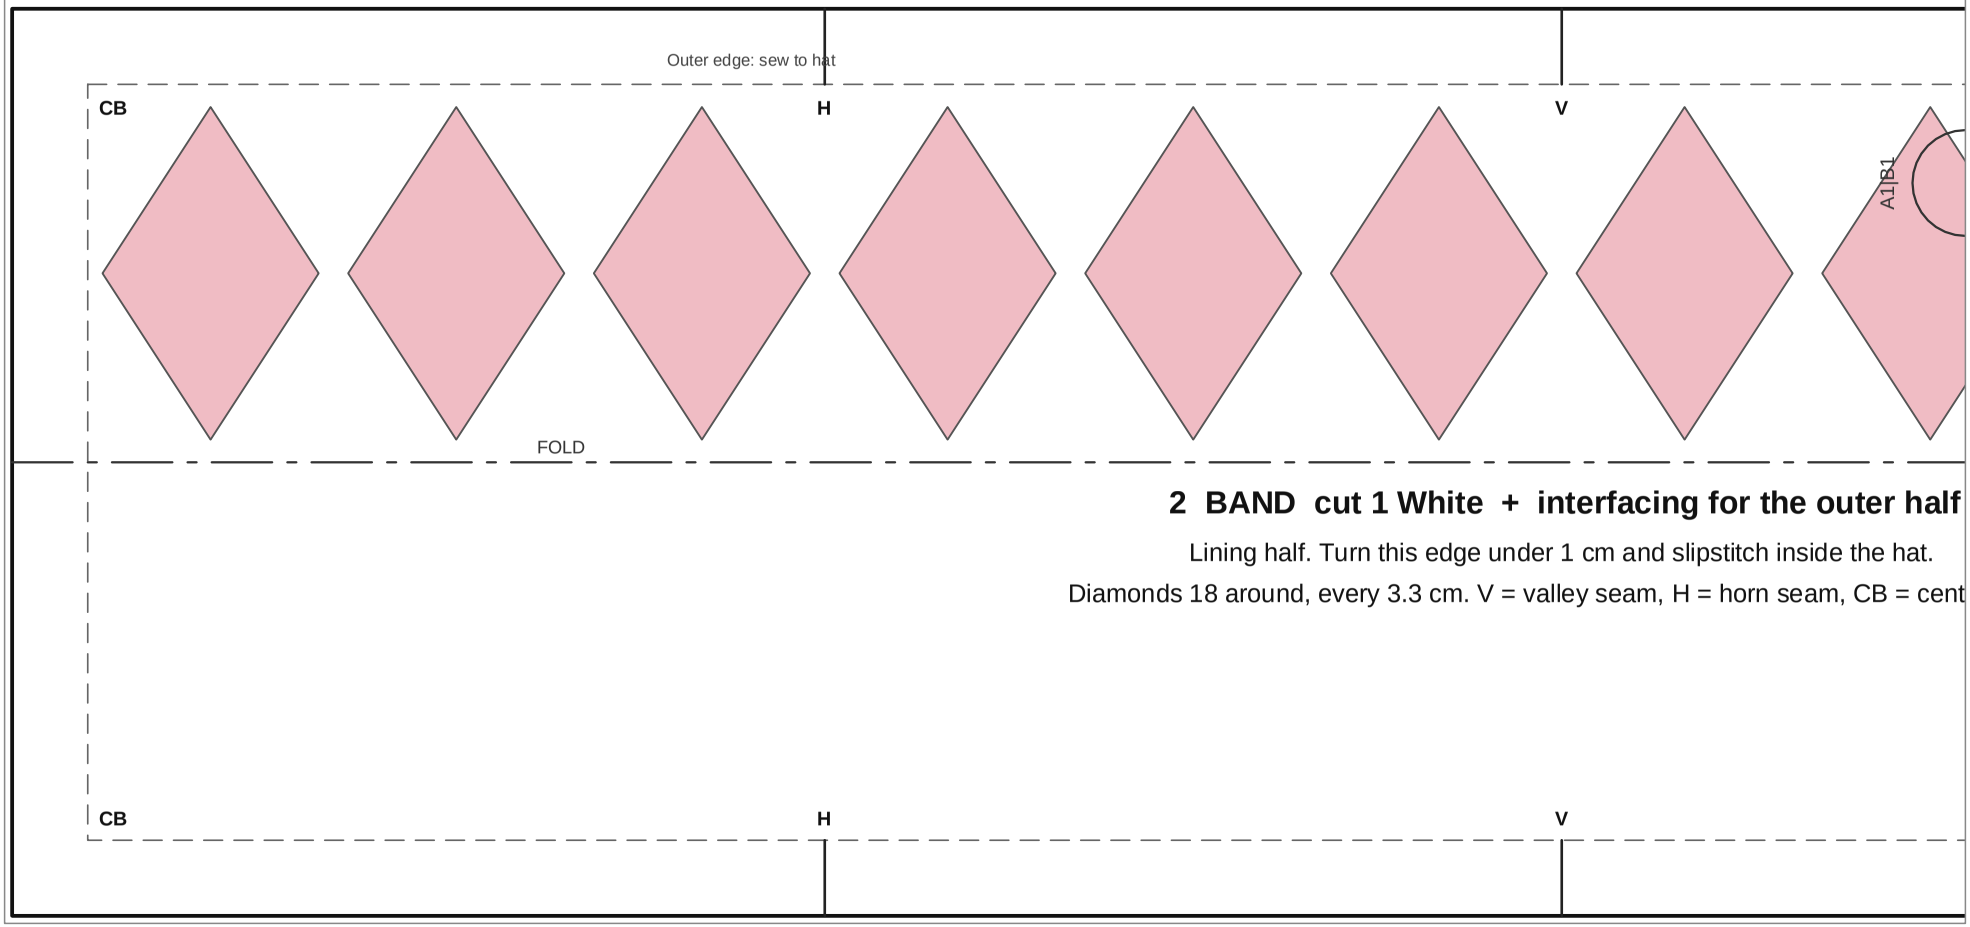

2 BAND cut 1 White + interfacing for the outer half

Lining half. Turn this edge under 1 cm and slipstitch inside the hat.

Diamonds 18 around, every 3.3 cm. V = valley seam, H = horn seam, CB = cent

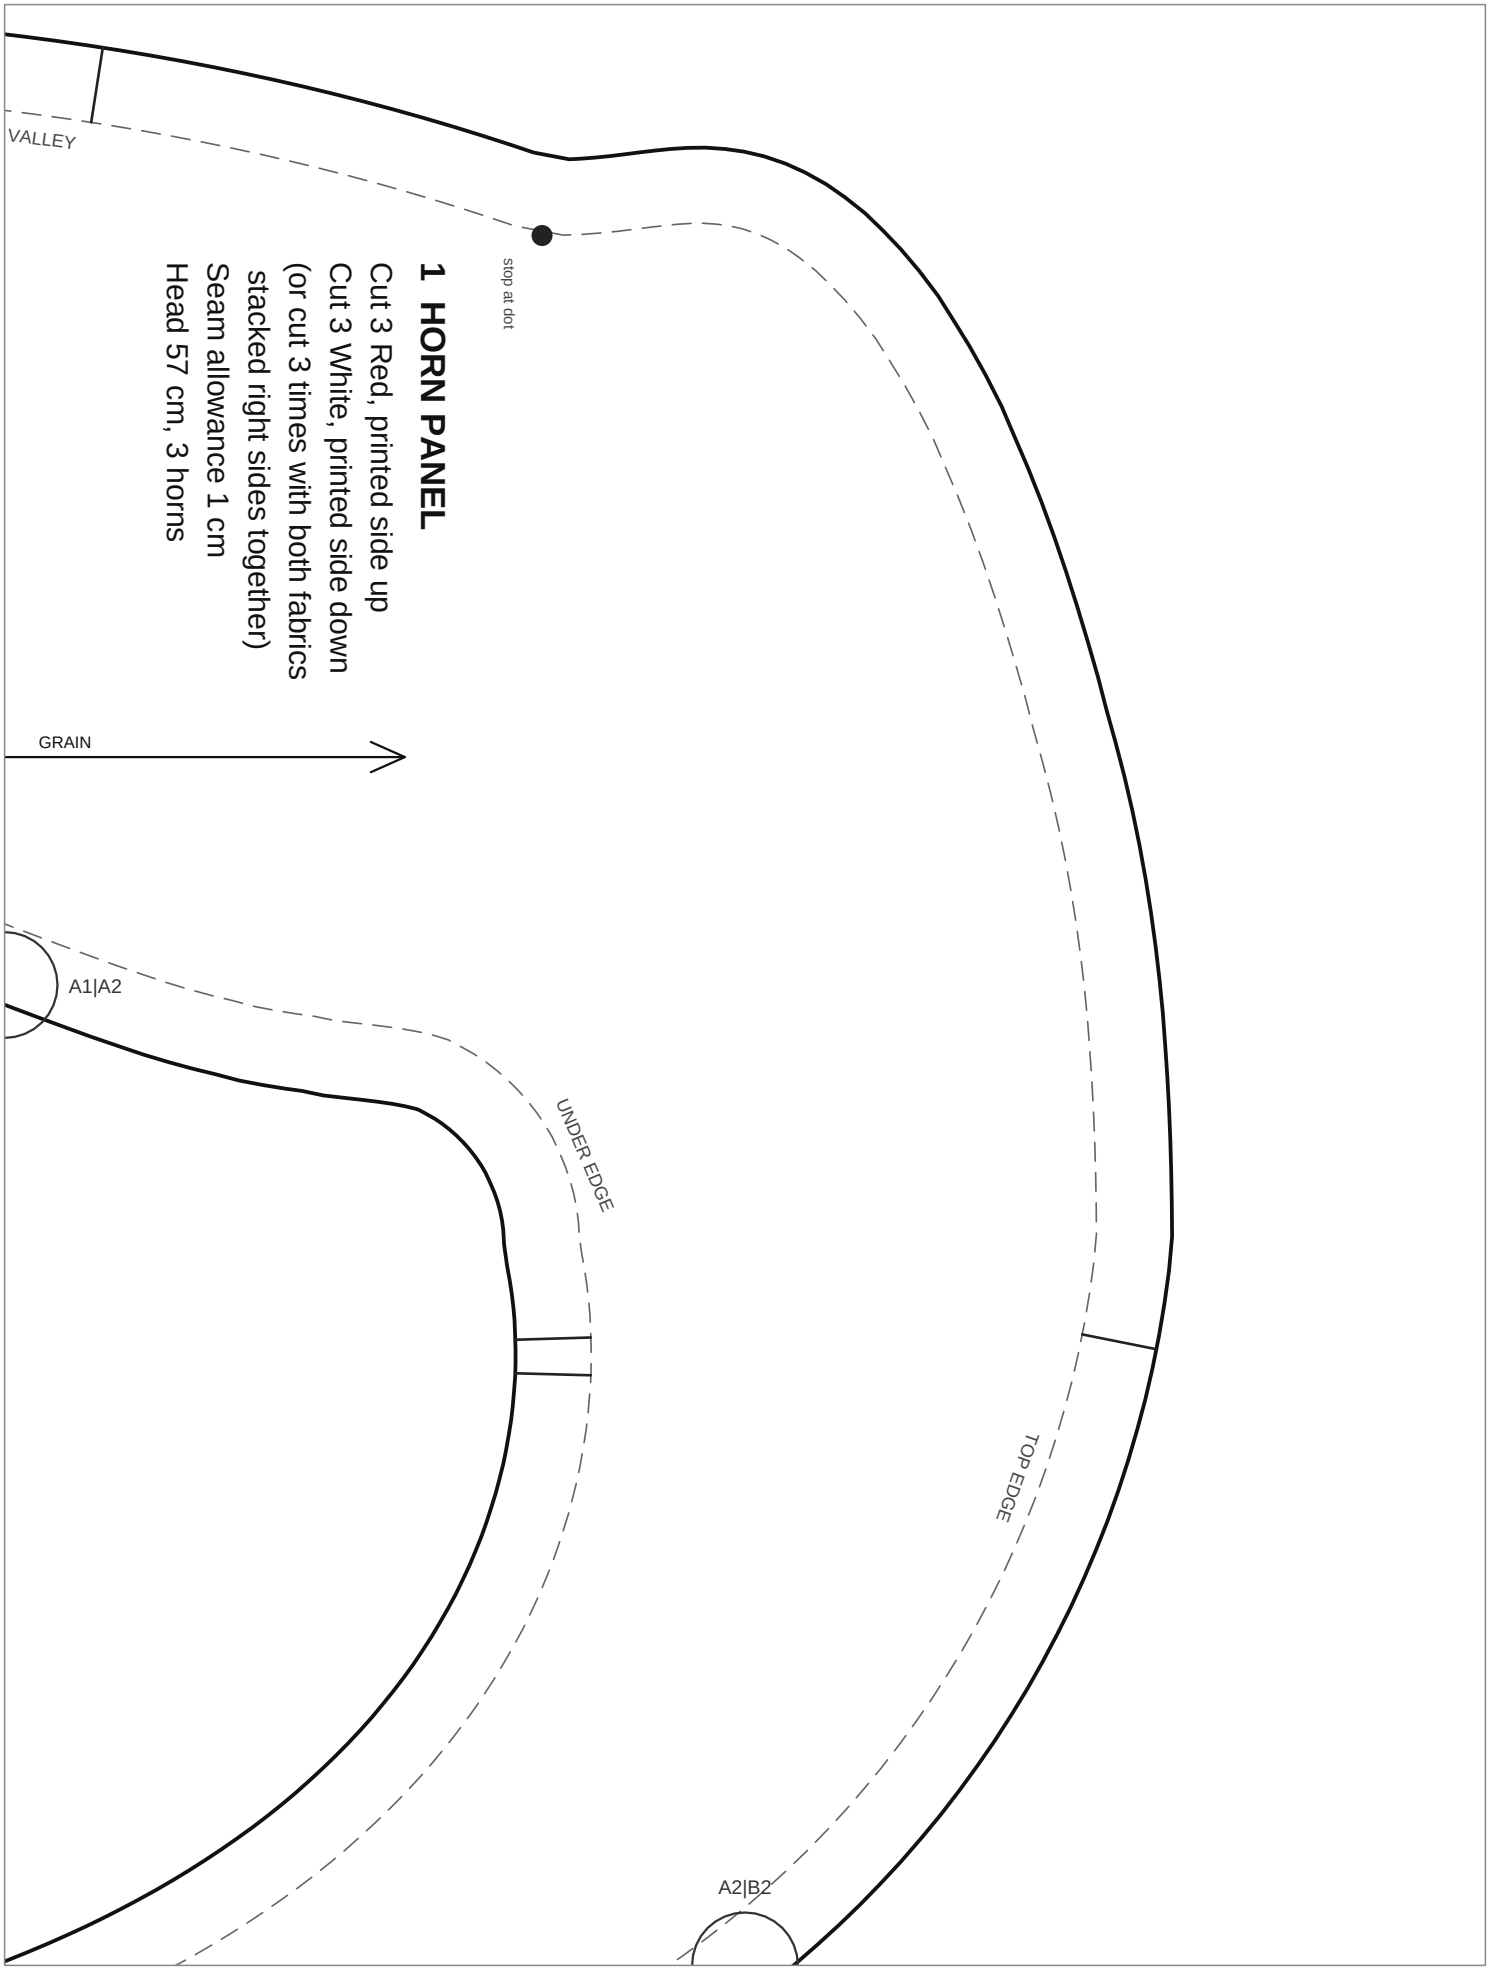
VALLEY
stop at dot
1 HORN PANEL
Cut 3 Red, printed side up
Cut 3 White, printed side down
(or cut 3 times with both fabrics
stacked right sides together)
Seam allowance 1 cm
Head 57 cm, 3 horns
GRAIN
A1|A2
UNDER EDGE
TOP EDGE
A2|B2

re back.

A1|B1

H CF

H CF

V


V


H


H


B1|C1

B1|B2

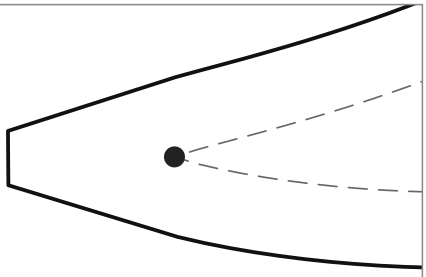

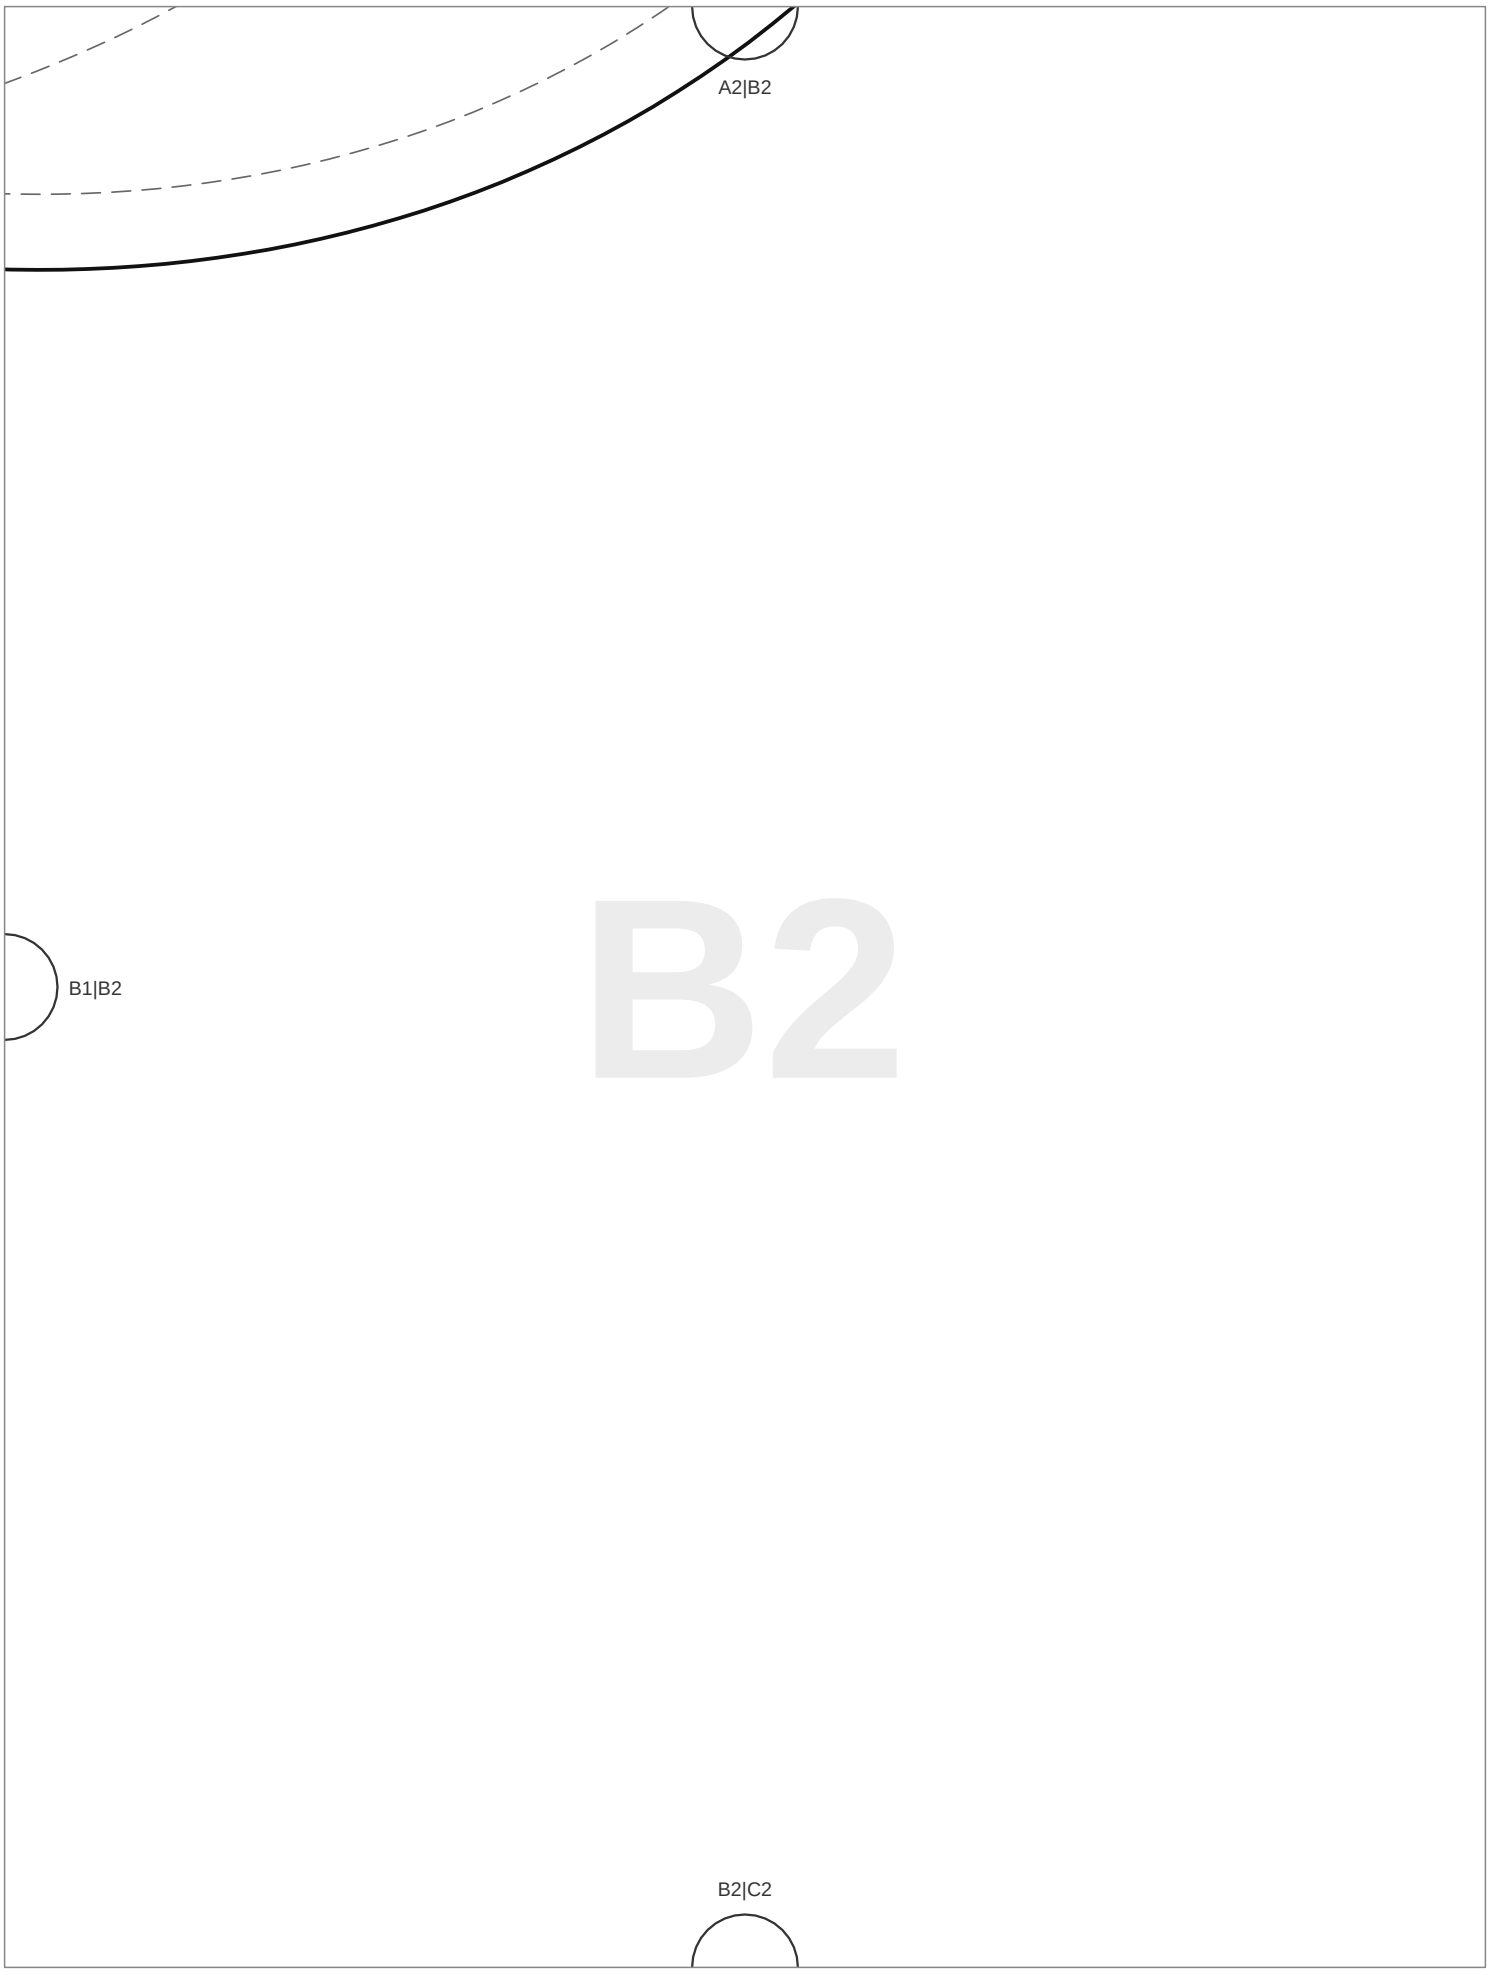
A2|B2
B1|B2
B2
B2|C2

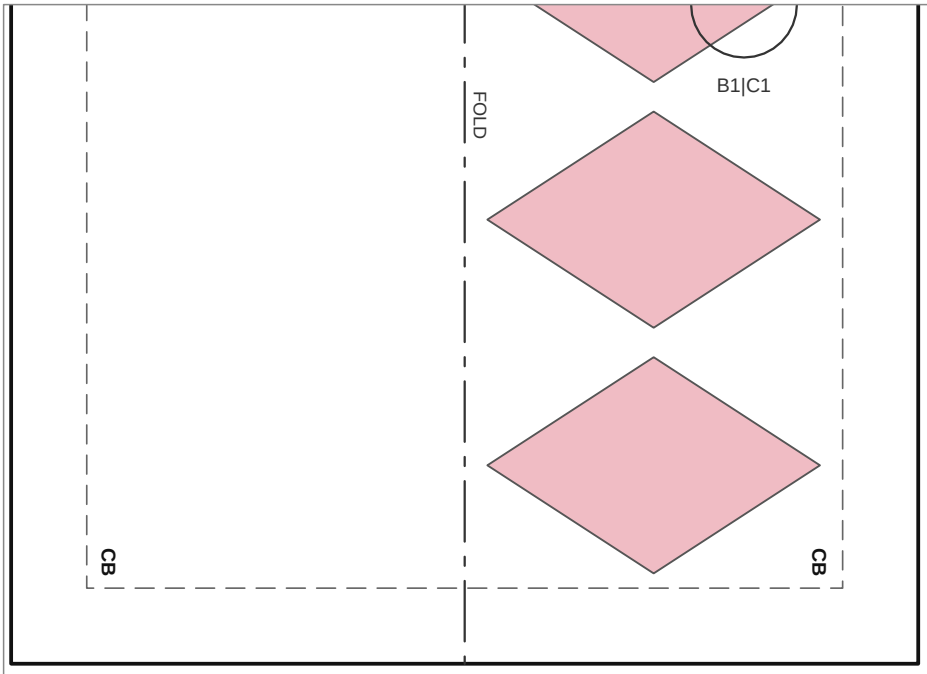

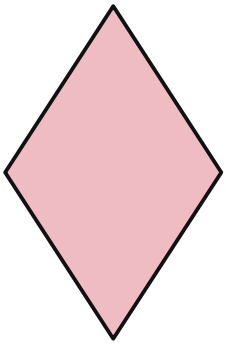

3 DIAMOND

Cut 18 Red, backed with fusible web

No seam allowance. 2.9 cm x 4.4 cm

C1

C1|C2