
SIGMIDI FOOT CONTROLLER

v0.1 / KiCad electrical schematic / external board pins only

DFRobot and display pins retain physical order. Dots join wires; crossings without dots do not join.
Module boxes show external terminals only. Layout is schematic; physical footprints are not assigned.

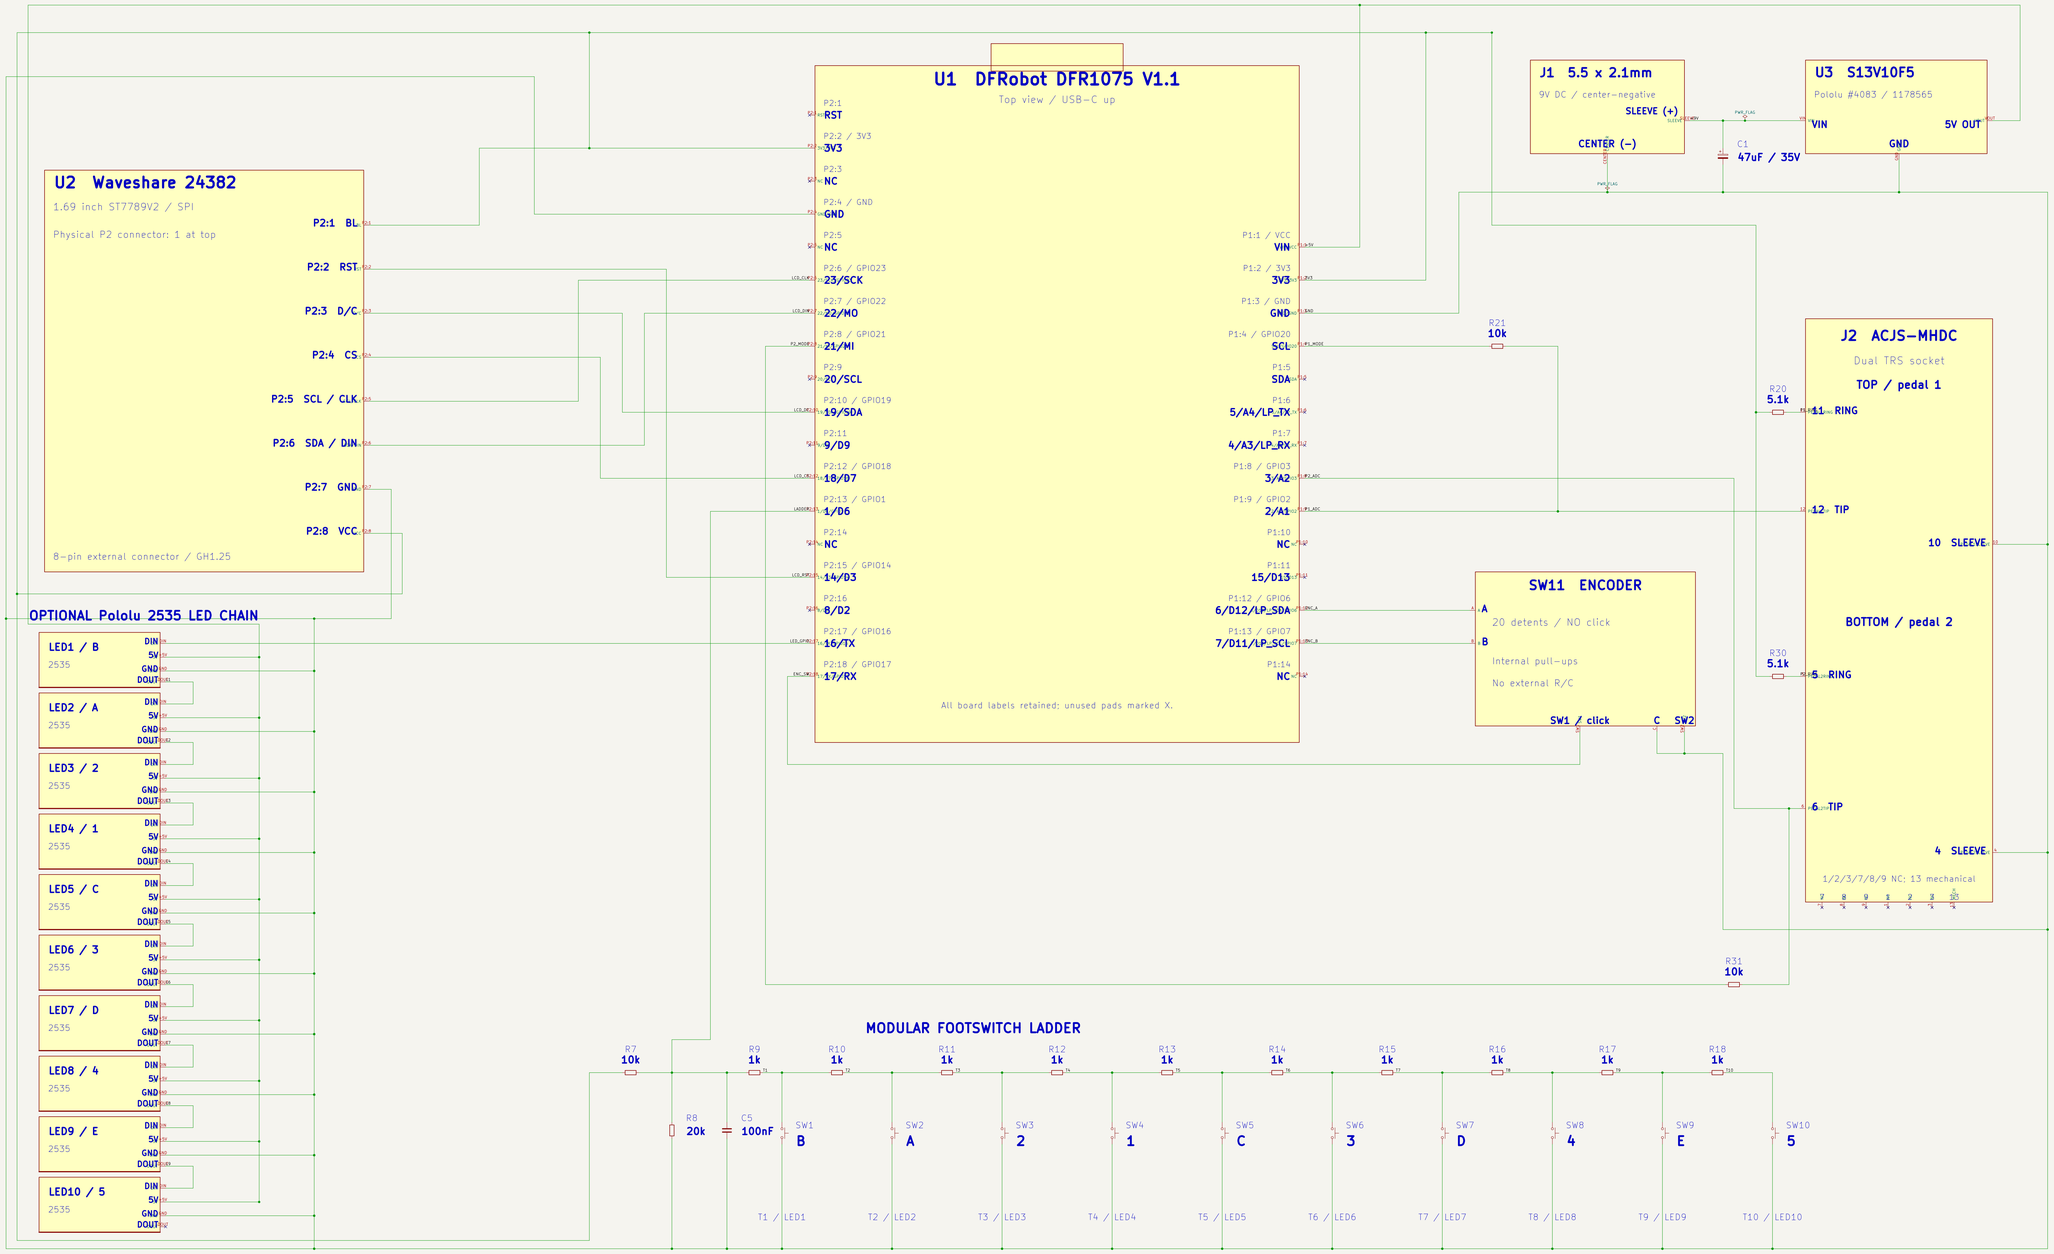

PASSIVE PEDALS

Pot: outer legs RING / SLEEVE; wiper TIP. Variable resistor: TIP to SLEEVE; RING unused.
0–10k per input. Bias HIGH in resistor mode; high impedance in pot / disabled / boot.

ASSEMBLY

Select 4 / 6 / 8 / 10 switches and calibrate fitted taps. SW11 uses functional pin names; verify chosen encoder terminal order.

LED PACKAGE

Lens left / flat down / leads right: DIN, 5V, GND, DOUT.
Direct GPIO16 data; check 3.3V acceptance on the actual LED batch.
USB-only supply does not power the external LED rail.

Sheet: /
File: sigmidi-foot-controller.kicad_sch
Title:
Size: A0 Date: Rev:
KiCad E.D.A. 10.0.7 Id: 1/1