

ARDUINO ILE C#

ARDUINO ILE C#

✓ Arduino ve C# ile Rfid login sayfa


KAZANIMLAR

✓ Seri haberleşme ile birden fazla veriyi nasıl alabileceğini öğrenir.



Örnek: Arduino ve C# haberleşmesi serisinin bu haftaki dersimizde,C# düzenlediğimiz arayüz login sayfası ile sayfalar arası geçişi göreceğiz. Rfıd Sensörünü kullanarak karıtımız okututup kullanıcı adı ve şifresini girmeden yeni bir arayüz sayfasına geçebildiğimiz bir proje yapacağız.

C# Arayüz Tasarımı

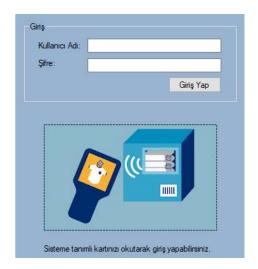



C# Kod Blokları

```
Form1 Kod Blokları
namespace LoginForm
{
    public partial class Form1 : Form
        public Form1()
            InitializeComponent();
        public static string message = "Hosgeldiniz";
        public static string verik="";
        public static string veris = "";
        SerialPort sb = new SerialPort();
        Form mainForm = new MainForm();
        private void Form1_Load(object sender, EventArgs e)
            Control.CheckForIllegalCrossThreadCalls = false;
            sb.PortName = "COM3";
            sb.BaudRate = 9600;
            sb.Open();
            sb.DataReceived += Sb_DataReceived;
            mainForm.FormClosed += MainForm_FormClosed;
        }
        private void MainForm_FormClosed(object sender, FormClosedEventArgs e)
            this.Close();
        }
```



```
private void Sb_DataReceived(object sender, SerialDataReceivedEventArgs e)
            string cardId = sb.ReadLine();
            verik = "Beyza";
            sb.Close();
            this.Hide();
            mainForm.ShowDialog();
        }
        private void button1_Click(object sender, EventArgs e)
            verik = textBox2.Text;
            veris = textBox1.Text;
            mainForm.Show();
        }
Form2 Kod Blokları
namespace LoginForm
    public partial class MainForm : Form
        public MainForm()
            InitializeComponent();
        private void MainForm_Load(object sender, EventArgs e)
            label1.Text = Form1.message;
            label2.Text = Form1.verik;
        }
Arduino Kod Blokları
#include <MFRC522.h>
#include <SPI.h>
#define ssPin 10
#define rstPin 9
MFRC522 rfid(ssPin, rstPin);
void setup() {
Serial.begin(9600);
SPI.begin();
rfid.PCD_Init();
}
```



```
void loop() {
  if (!rfid.PICC_IsNewCardPresent() | | !rfid.PICC_ReadCardSerial()) {
    return;
}
for (int i = 0; i < 4; i++) {
    Serial.print(rfid.uid.uidByte[i]);
}
Serial.println();
rfid.PICC_HaltA();
}</pre>
```