



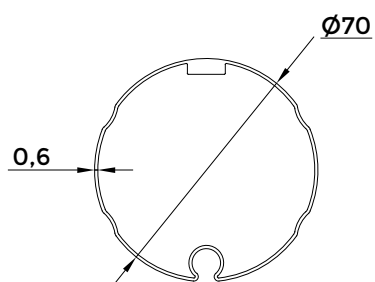


SUNSHINE

TECHNICAL INFORMATION


BOOKLET V1/301019

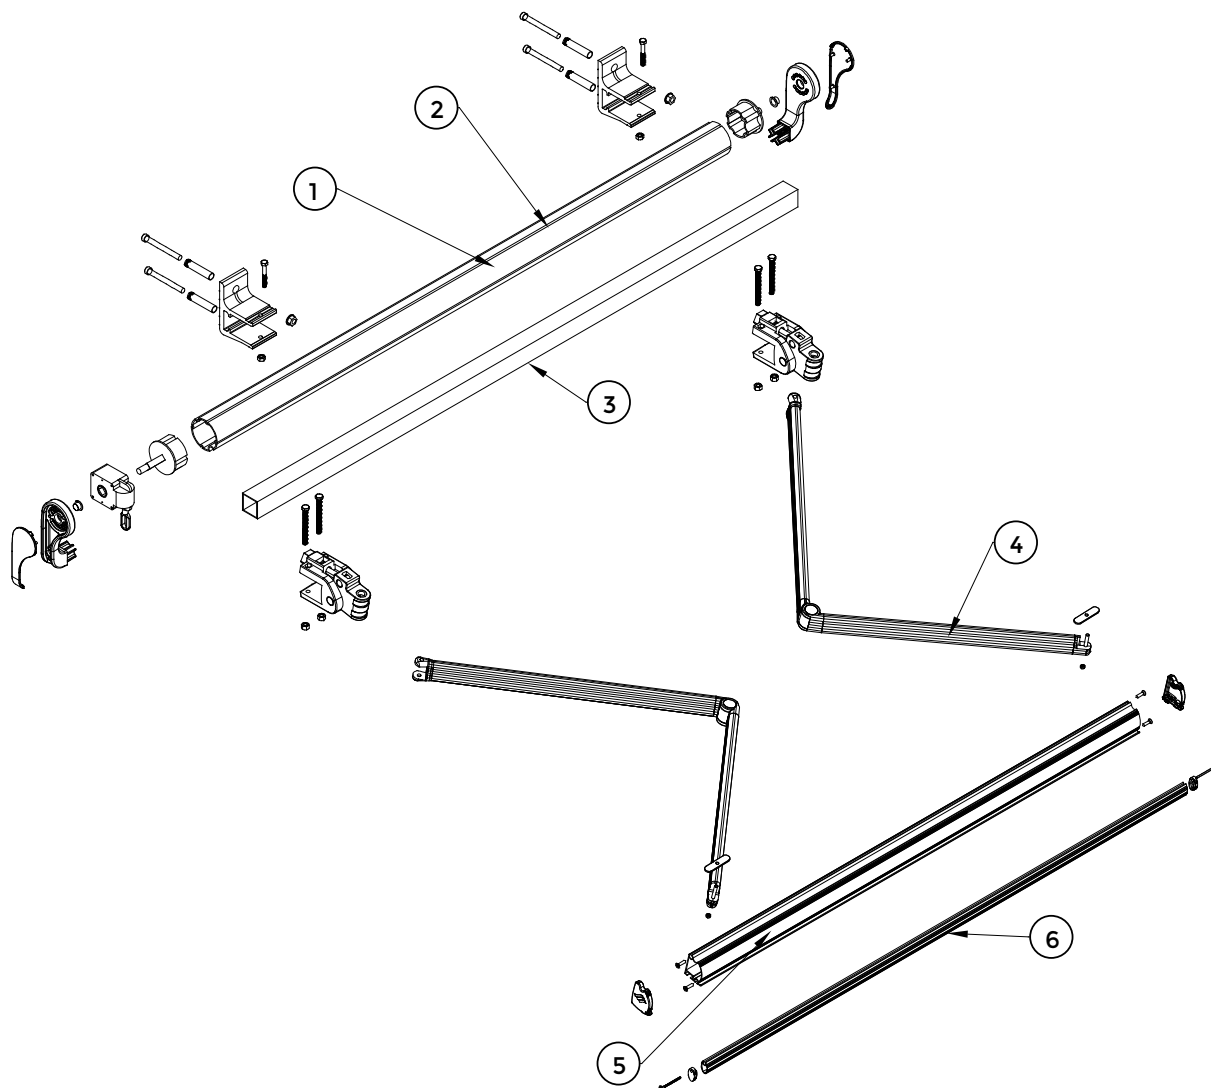


1- ROLLER TUBE
 $\varnothing 70$

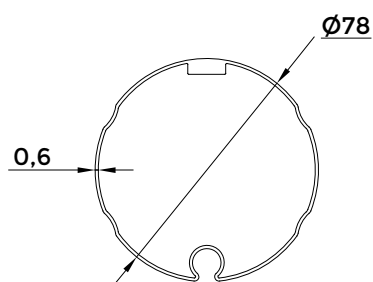


2- ROLLER TUBE
 $\varnothing 78$

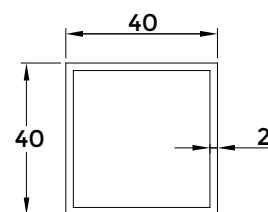


3- 40X40 PROFILE

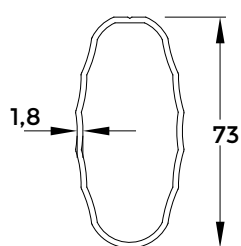



4- ARM PROFILE

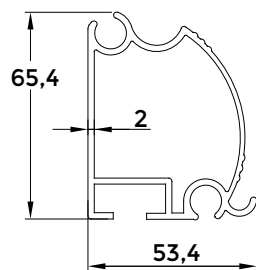

5- FRONT PROFILE

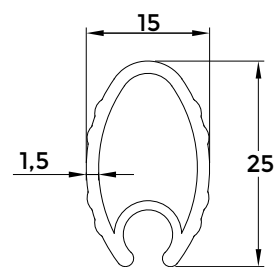

6- VALANCE
WEIGHT BAR

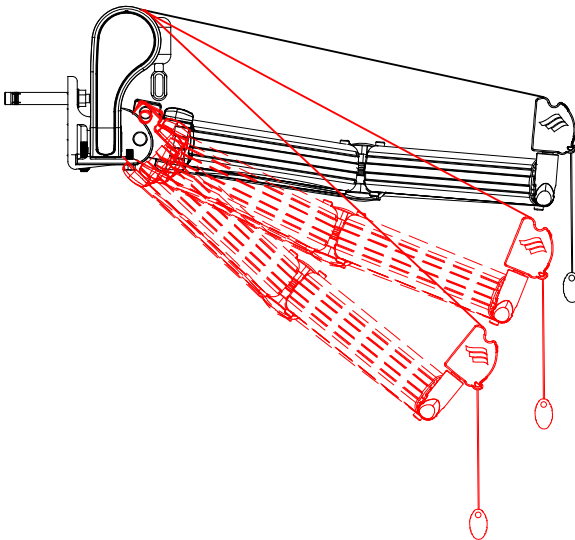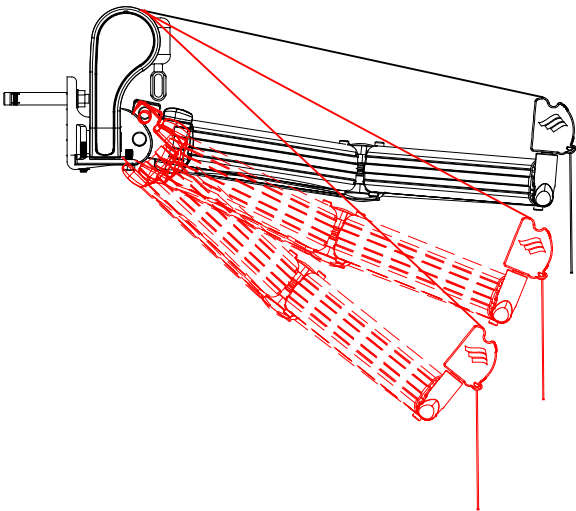

1 French





2 Victorian





Minimum Degree	5°	French Fringe Standart	250mm
Maximum Degree	45°	French Fringe max.	500mm

Minimum Degree	5°	Victorian Fringe Standart	250mm
Maximum Degree	45°	Victorian Fringe max.	500mm

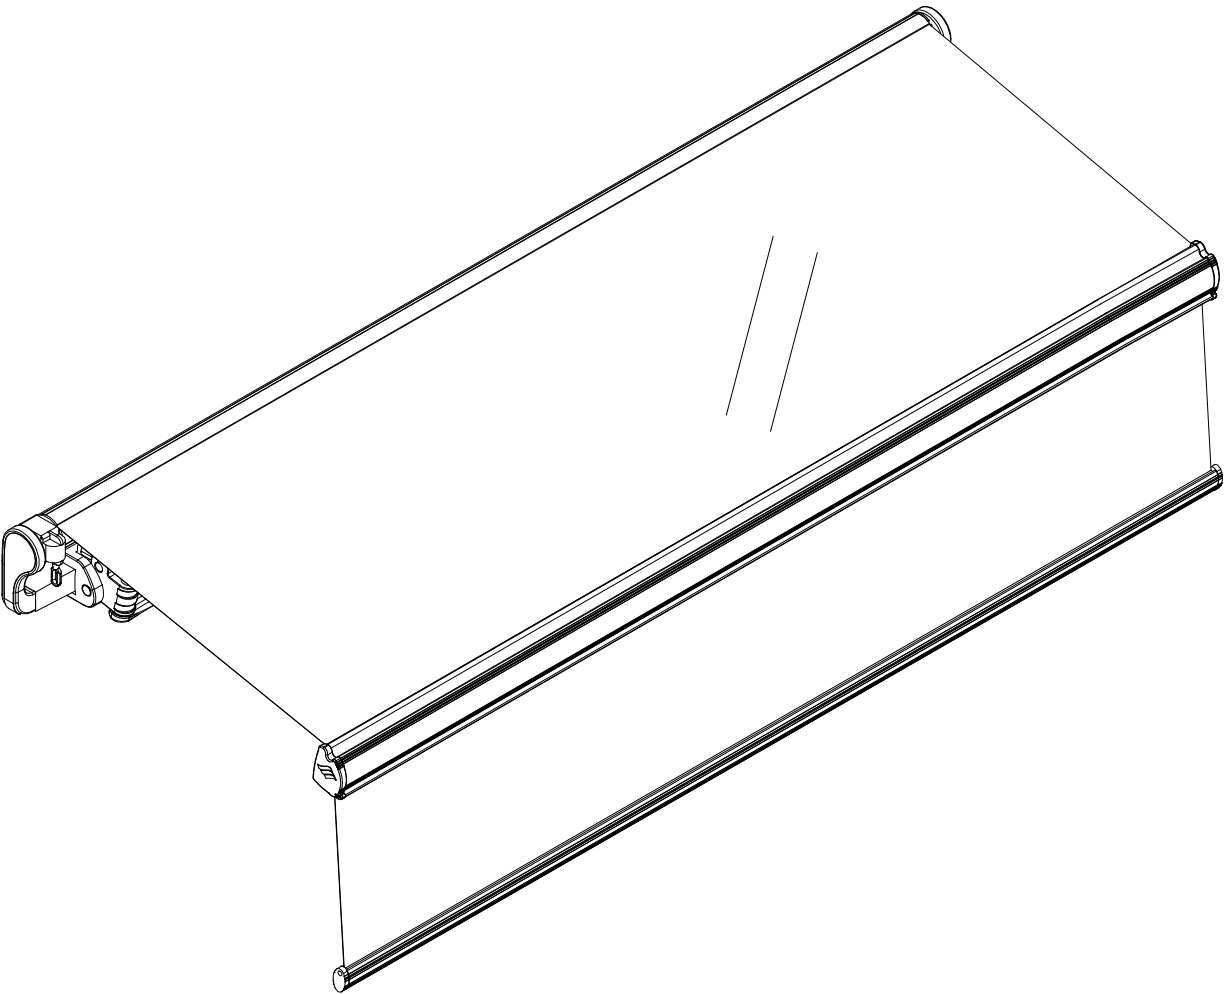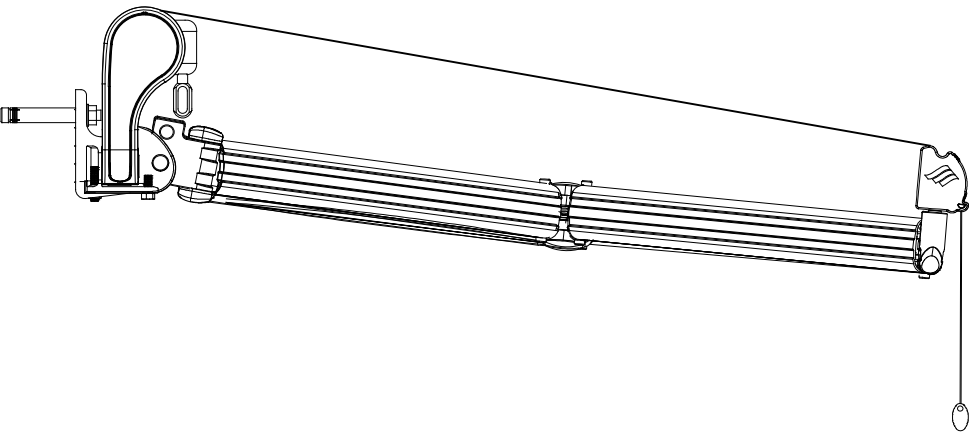

WALL MOUNTING DETAIL

CEILING MOUNTING DETAIL

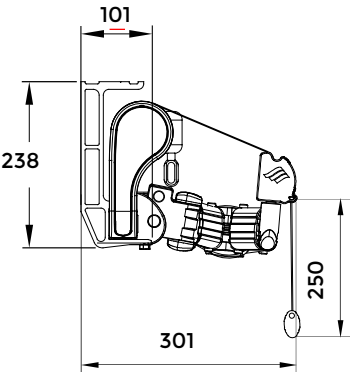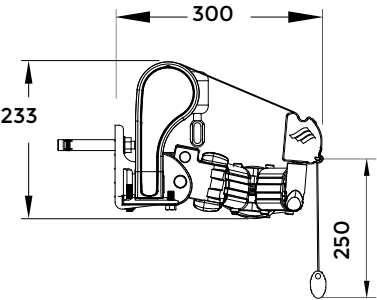



Osmangazi Mh. 2626 Sk. No:9/2
Esenyurt 34522 İstanbul / Türkiye

risingoutdoor.com |    risingoutdoor | 90 212 444 1 886