Gate is Poly

Metal → Drain
          Source
          Body

*Source ✗   Detached
              Body Connected together

V_{DD}
to
Source to Body

PMOS

Poly ↓

Metal

Vin

V_{in} To Gate

V_{out}

Source

NMOS

Drain to →

Body

V_{SS}
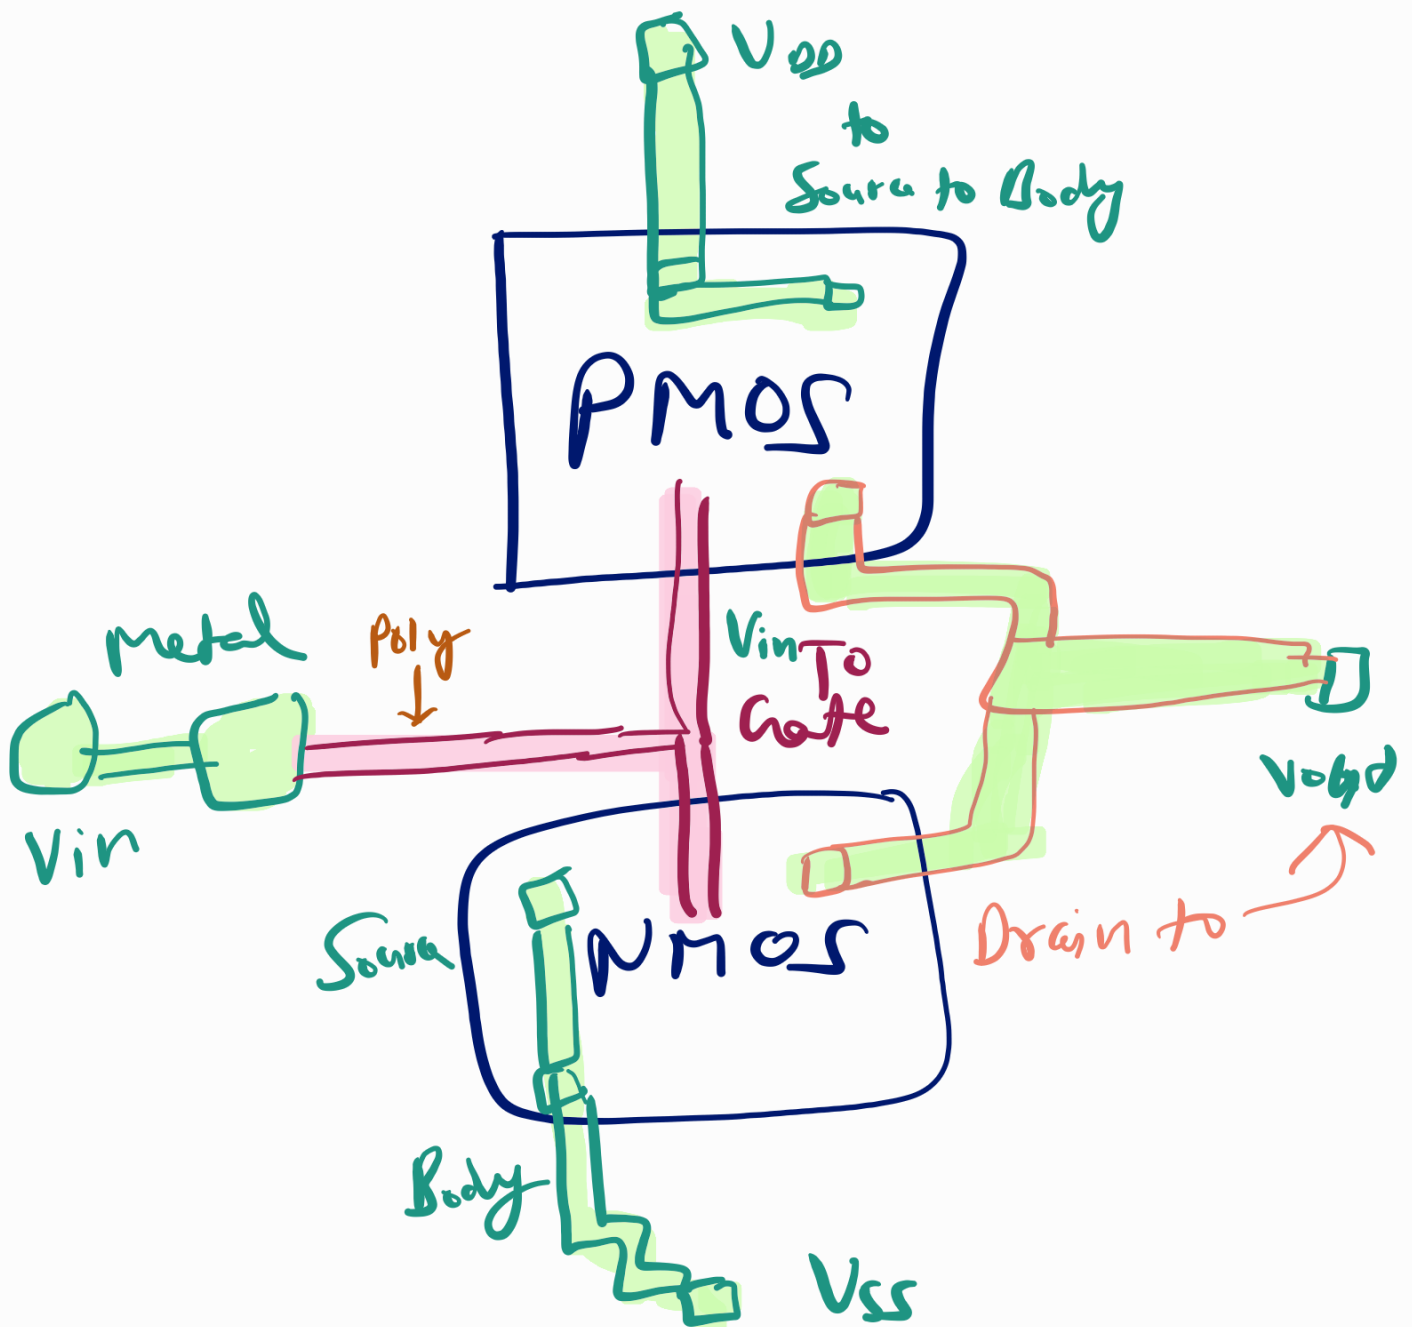
for **Parasitic extraction**

Goto   Quantus
           $\downarrow$
       Run Pegasus - Quantus
           $\downarrow$
   ensure whether Path is
              Correct
           $\downarrow$
   Click ok in dialog
              Box
           $\downarrow$
   Wait for Completion.

Now from Library under
       Inverter cellview
           $\downarrow$
   open av- extracted.