
GENESIS COUPE(BK) >2010 > G 2.0 DOHC > Body Electrical System > Rear Glass Defogger > Components and Components Location

Component Location

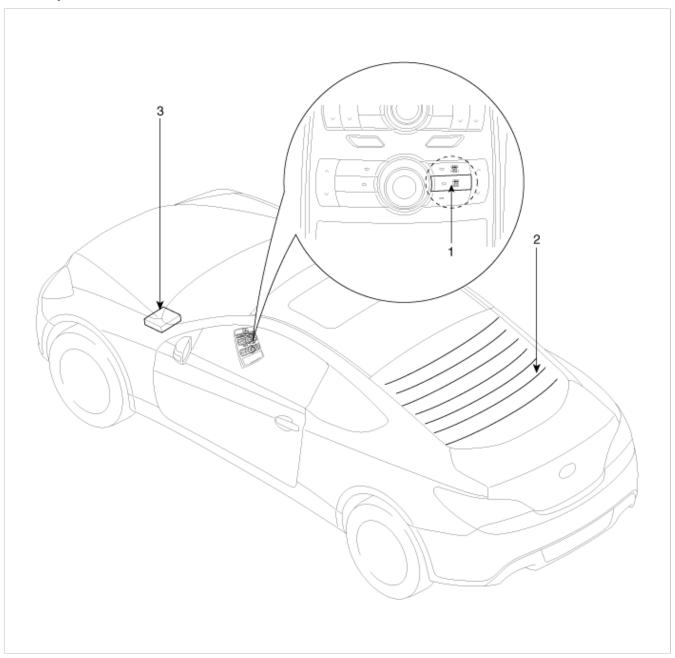

- 1. Rear window defogger switch (A/C controller)
- 2. Rear window defogger


3. Body control module (Rear window defogger relay)

GENESIS COUPE(BK) >2010 > G 2.0 DOHC > Body Electrical System > Rear Glass Defogger > Rear Glass Defogger Printed Heater > Repair procedures


Inspection

CAUTION


Wrap tin foil around the end of the voltmeter test lead to prevent damaging the heater line. Apply finger pressure on the tin foil, moving the tin foil along the grid line to check for open circuits.

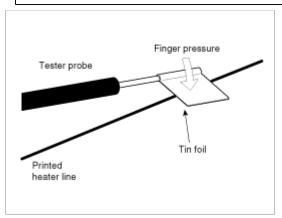


1. Turn on the defogger switch and use a voltmeter to measure the voltage of each heater line at the glass center point. If a voltage of approximately 6V is indicated by the voltmeter, the heater line of the rear window is considered satisfactory.

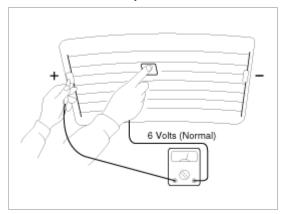


2. If a heater line is burned out between the center point and (+) terminal, the voltmeter will indicate 12V.

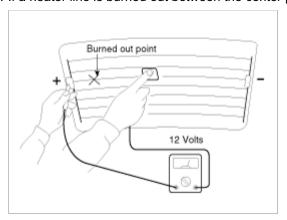


3. If a heater line is burned out between the center point and (-) terminal, the voltmeter will indicate 0V.

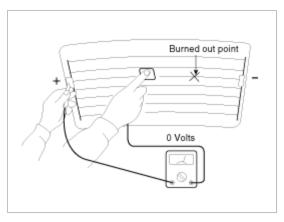

4. To check for open circuits, slowly move the test lead in the direction that the open circuit seems to exist. Try to find a point where a voltage is generated or changes to 0V. The point where the voltage has changed is the open-circuit point.

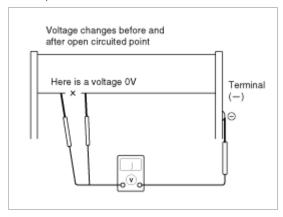

5. Use an ohmmeter to measure the resistance of each heater line between a terminal and the center of a grid line, and between the same terminal and the center of one adjacent heater line. The section with a broken heater line will have a resistance twice as that in other sections. In the affected section, move the test lead to a position where the resistance sharply changes.

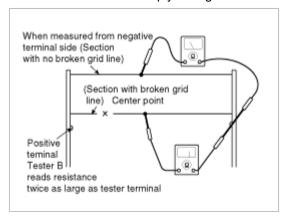


Repair Of Broken Heater Line

Prepare the following items:

- 1. Conductive paint.
- 2. Paint thinner.
- 3. Masking tape.
- 4. Silicone remover.
- 5. Using a thin brush:

Wipe the glass adjacent to the broken heater line, clean with silicone remover and attach the masking tape as shown. Shake the conductive paint container well, and apply three coats with a brush at intervals of about 15

minutes apart. Remove the tape and allow sufficient time for drying before applying power. For a better finish, scrape away excess deposits with a knife after the paint has completely dried. (Allow 24 hours).

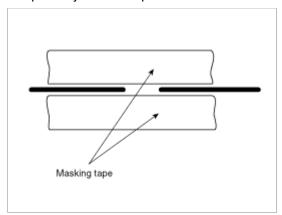


GENESIS COUPE(BK) >2010 > G 2.0 DOHC > Body Electrical System > Rear Glass Defogger > Rear Glass Defogger Switch > Repair procedures

Inspection


- 1. The rear window defogger switch inputs can be checked using the GDS.
- 2. To check the input value of rear window defogger switch, select option "BODY CONTROL MODULE".



3. Select option "CURRENT DATA".

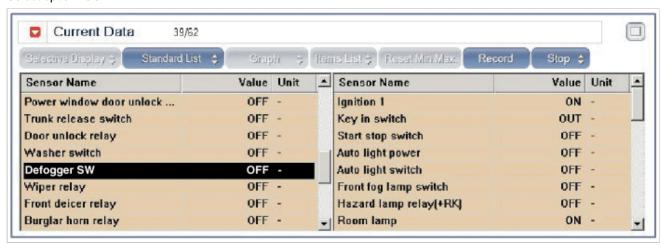


4. To check the input value of rear window defogger switch in force mode, select option "ACTUATION TEST".

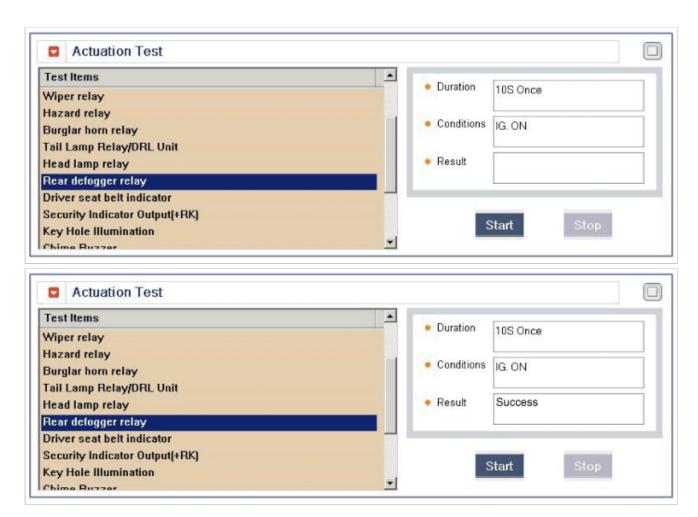


Removal


- 1. Disconnect the negative(-) battery terminal.
- 2. Remove the console upper cover(A).

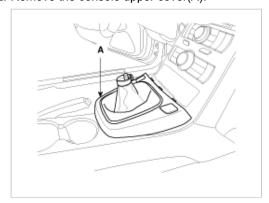

3. Remove the center fascia lower panel(A).

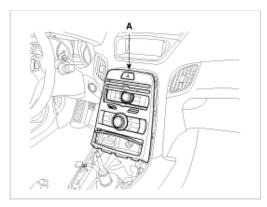

4. Disconnect the heater control unit connector(A).

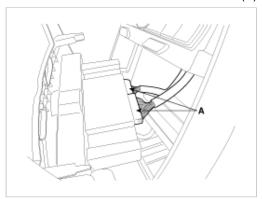

5. Remove the heater control unit contained the rear window defogger switch from the center fascia panel.

Installation

- 1. Install the heater control unit.
- 2. Install the center fascia panel.
- 3. Install the console upper cover.