



MALT IDE - PCB V1.1 PATCH

The patch prevents a reboot of the MSX machine if the ROM enable/disable switch is toggled while the machine is on.

1. Cut the trace between the switch pin 1 and the LED +5V pin at the front side of the PCB
2. Solder a 10K resistor between switch pin 1 and the LED +5V pin at the back side of the PCB

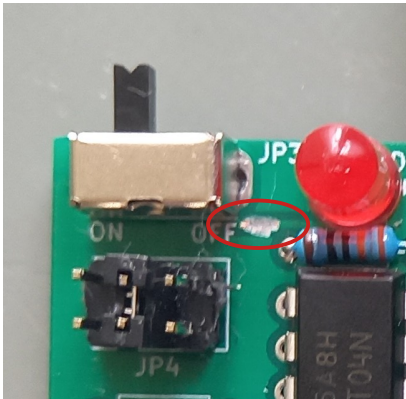

Front

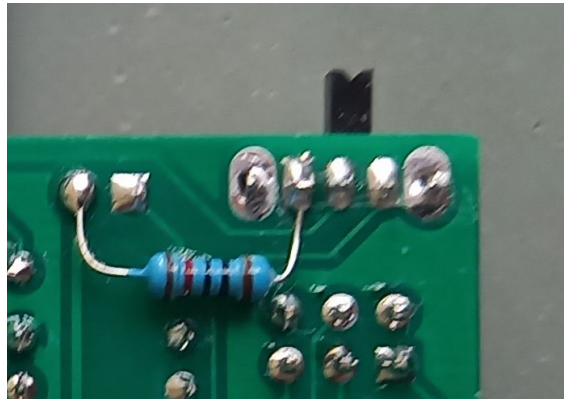

Back