


MALT IDE - PCB V1.1 PATCH


Patch 1

The patch prevents a reboot of the MSX machine if the ROM enable/disable switch is toggled while the machine is on.

1. Cut the trace between the switch pin 1 and the LED +5V pin at the front side of the PCB
2. Solder a 10K resistor between switch pin 1 and the LED +5V pin at the back side of the PCB

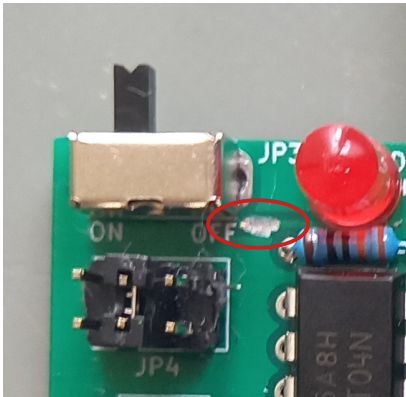

Front

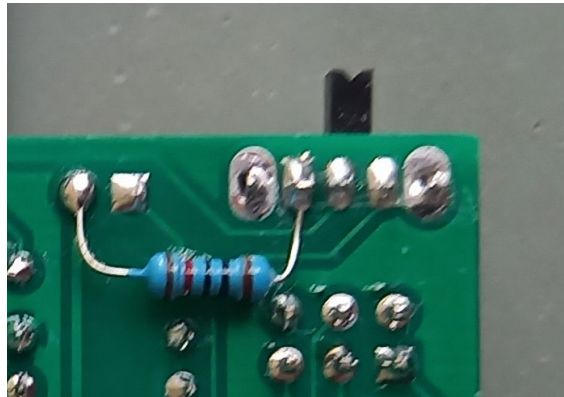

Back

Patch 2

Solder a bodge wire between U4 pin 6 and the IDE connector pin 38 to correct an error in the PCB design. This is the /HCS1 line in the schematics.