

QC of scRNAseq data



Åsa Björklund

asa.bjorklund@scilifelab.se

Outline

- Background on transcriptional bursting
- Experimental setup – what could go wrong?
- Spike-in RNAs
- Quality control metrics
- PCA for quality control

Transcriptional bursting

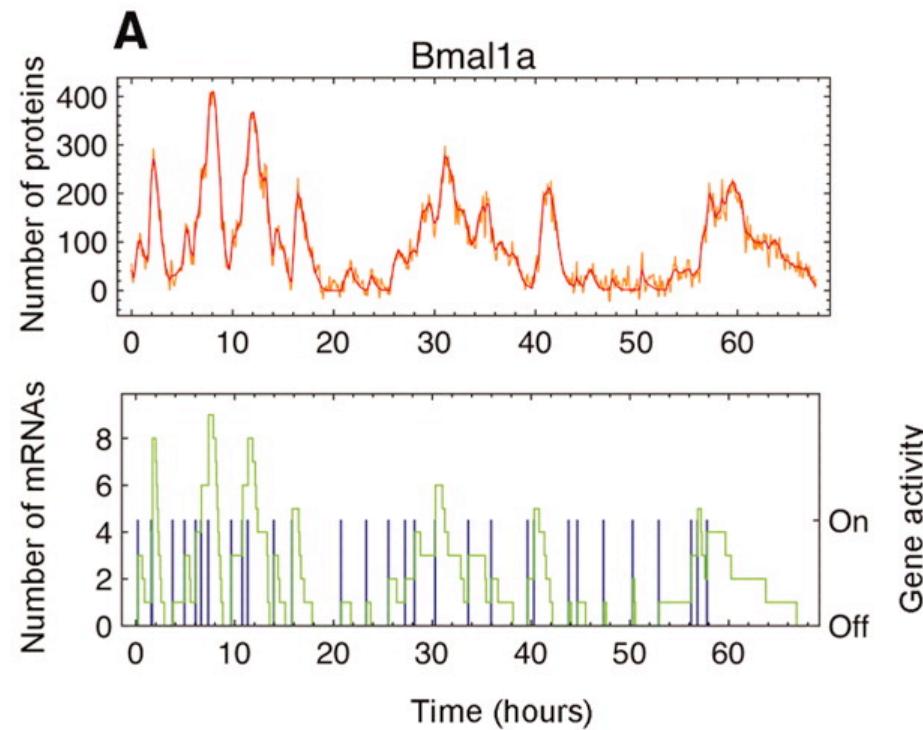
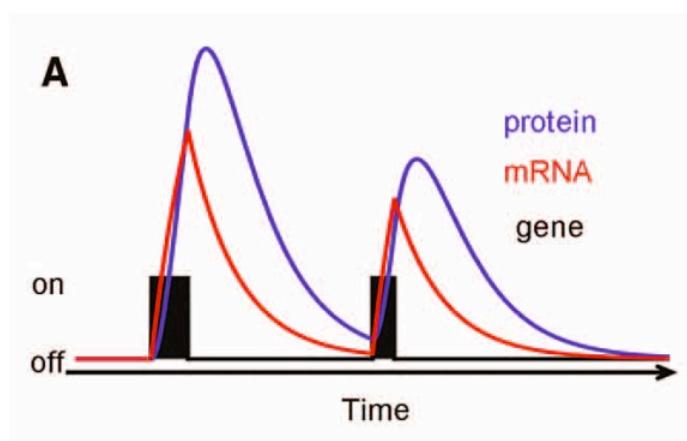


- Burst frequency and size is correlated with mRNA abundance
- Many TFs have low mean expression (and low burst frequency) and will only be detected in a fraction of the cells

Transcript drop-out vs bursting

- When a transcript is present in the cell but is not converted to a cDNA and not detected – Drop-out
- When a transcript is expressed in most cells of the celltype, but not in every cell – Transcriptional bursting.
- Lowly expressed transcripts will have a lower chance of detection and most likely low burst frequency – hard to distinguish drop-out from bursting.

Experimental setup

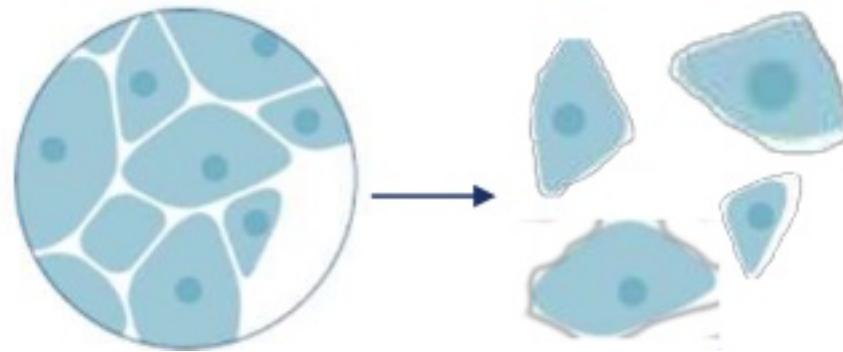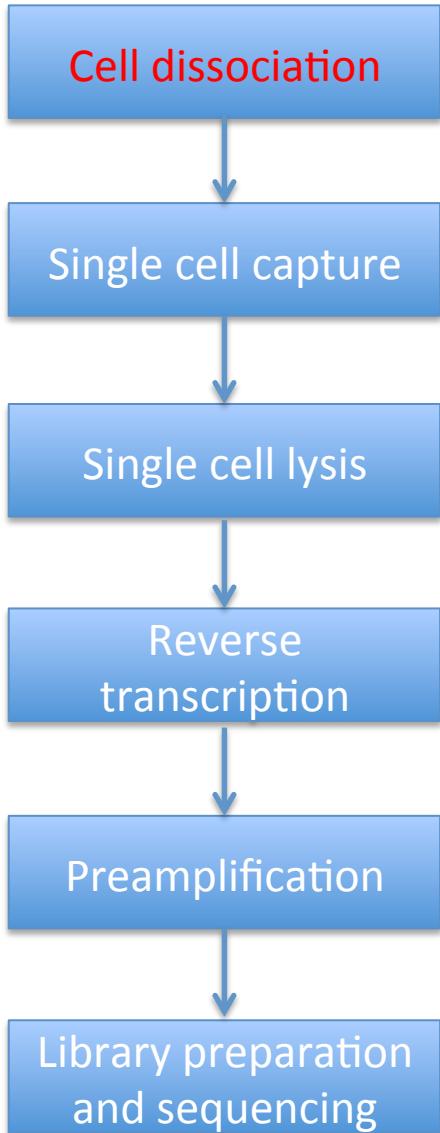

It is critical to have healthy whole cells with no RNA leakage. Tissues can be dissolved with mechanical methods, detergents or enzymatic digestion. Short time from dissociation to cell capture to reduce effect on transcriptional state.

PROBLEMS:

- Incomplete dissociation can give multiple cells sticking together.
- Too harsh lysis may damage the cells -> RNA degradation and RNA leakage
- Different lysis conditions may/may not give nuclear lysis.

Experimental setup

Cell dissociation

Single cell capture

Single cell lysis

Reverse transcription

Preamplification

Library preparation and sequencing






MICROPIPETTING
MICROMANIPULATION

LASER CAPTURE
MICRODISSECTION

FACS

MICRODROPLETS

MICROFLUIDICS
e.g. FLUIDIGM C1

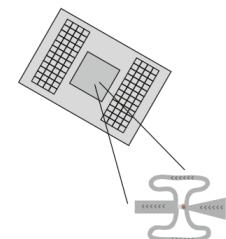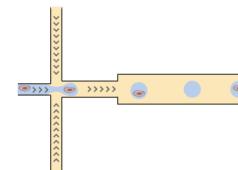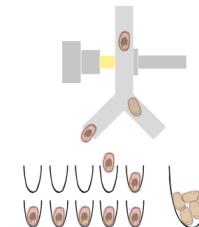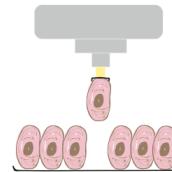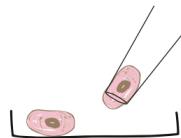

low number of cells

any tissue

enables selection of cells based on morphology or fluorescent markers

visualisation of cells

time consuming

reaction in microliter volumes

low number of cells

any tissue

enables selection of cells based on morphology or fluorescent markers

visualisation of cells

time consuming

reaction in microliter volumes

hundreds of cells

dissociated cells

enables selection of cells based on size or fluorescent markers

fluorescence and light scattering measurements

fast

reaction in microliter volumes

large number of cells

dissociated cells

no selection of cells (can presort with FACS)

fluorescence detection

fast

reaction in nanoliter volumes

hundreds of cells

dissociated cells

no selection of cells (can presort with FACS)

visualisation of cells

fast

reaction in nanoliter volumes

Tissues that are hard to dissociate:
Laser capture microscopy (LCM)
Nuclei sorting

PROBLEMS:

- All these methods may give rise to empty wells/droplets, and also duplicates or multiples of cells.
- Long time for sorting may damage the cells

Experimental setup

Cell dissociation

Single cell capture


Single cell lysis

Reverse transcription

Preamplification


Library preparation and sequencing

polyA tailing + second strand synthesis

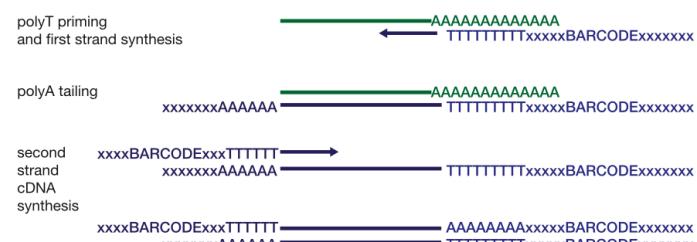

Tang protocol (Tang et al 2009)
CELseq/MARSseq (Hashimy et al. 2013, Jaitin et al. 2014)
QuartzSeq (Sasagawa et al. 2013)

template switching

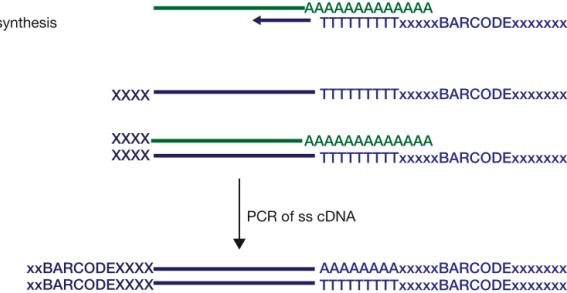


SmartSeq/SmartSeq2 (Ramskold et al. 2012, Deng et al. 2014)
STRT (Islam et al. 2011)

Efficiency of reverse transcription is the key to high sensitivity.
Drop-out rate is around 90-60% depending on the method used.

Two libraries with the same method using the same cell type may have very different drop-out rates.


Experimental setup

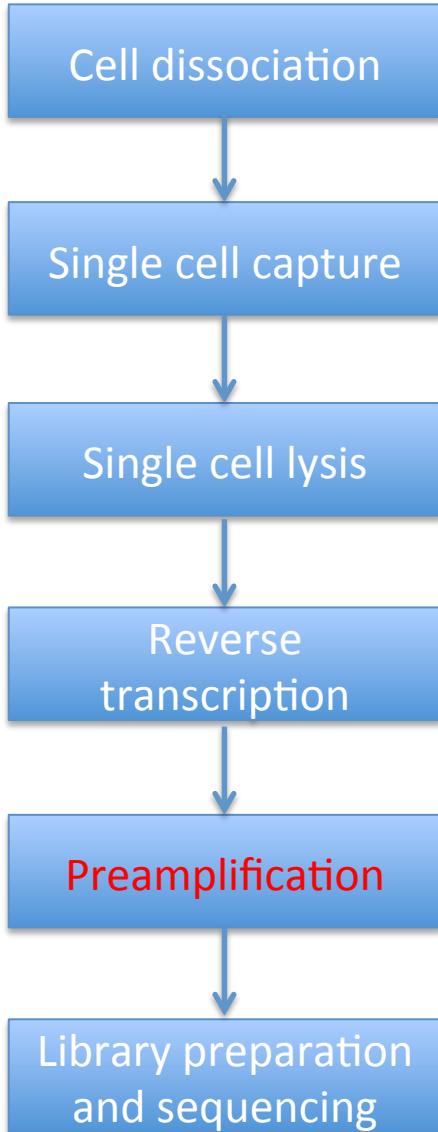

- exponential amplification
- PCR base specific biases

Tang protocol (Tang et al. 2009)
STRT (Islam et al. 2011)
SmartSeq/SmartSeq2 (Ramskold et al. 2012, Deng et al. 2014)


PCR

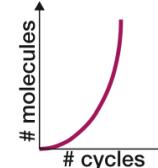

- linear amplification
- 3' bias due to two rounds of reverse transcription

CELseq/MARSseq (Hashimony et al. 2013, Jaitin et al. 2014)

IVT

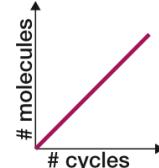


Any amplification step will introduce a bias in the data.

Methods that uses UMIs will control for this to a large extent, but the chance of detecting a transcript that is amplified more is higher.

Full length methods like SmartSeq2 has no UMIs, so we cannot control for amplification bias.

Experimental setup

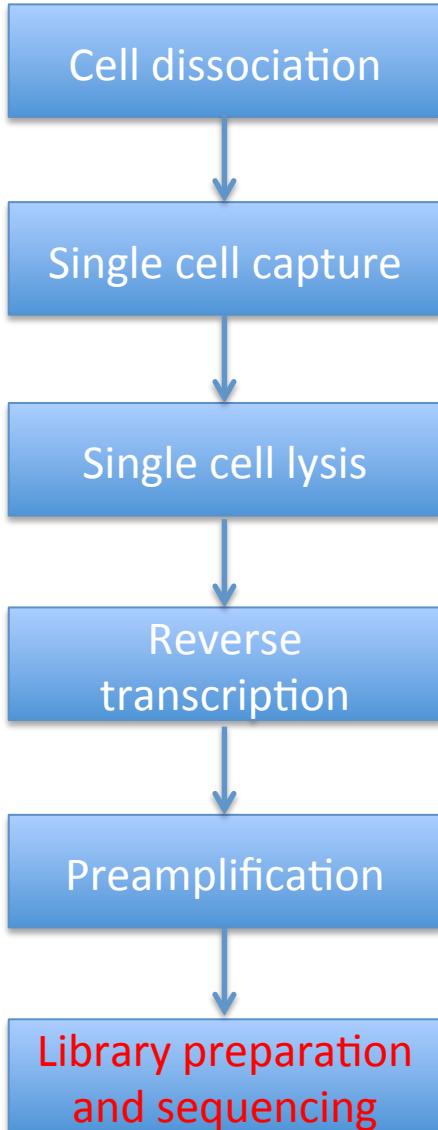


Multiplexing of samples will not always be perfect, so the number of reads per cell may vary quite a lot.

Base calls in the sequencing may be effected by a number of factors:

- Low complexity of library – may be an issue whey there are many primer dimers
- Base call quality scores may be effected if there are contaminations in the flow cell


Problems compared to bulk RNA-seq

- Amplification bias
- Drop-out rates
- Transcriptional bursting
- Background noise
- Bias due to cell-cycle, cell size and other factors

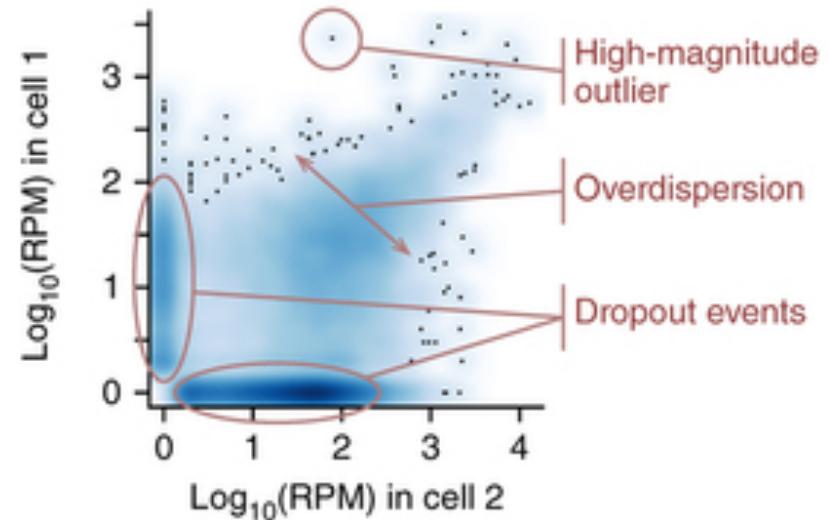

Spike-in RNAs

- Addition of external controls
- ERCC spike-in most widely used, consists of 48 or 96 mRNAs at 17 different concentrations.
- Important to add equal amounts to each cell, preferably in the lysis buffer.


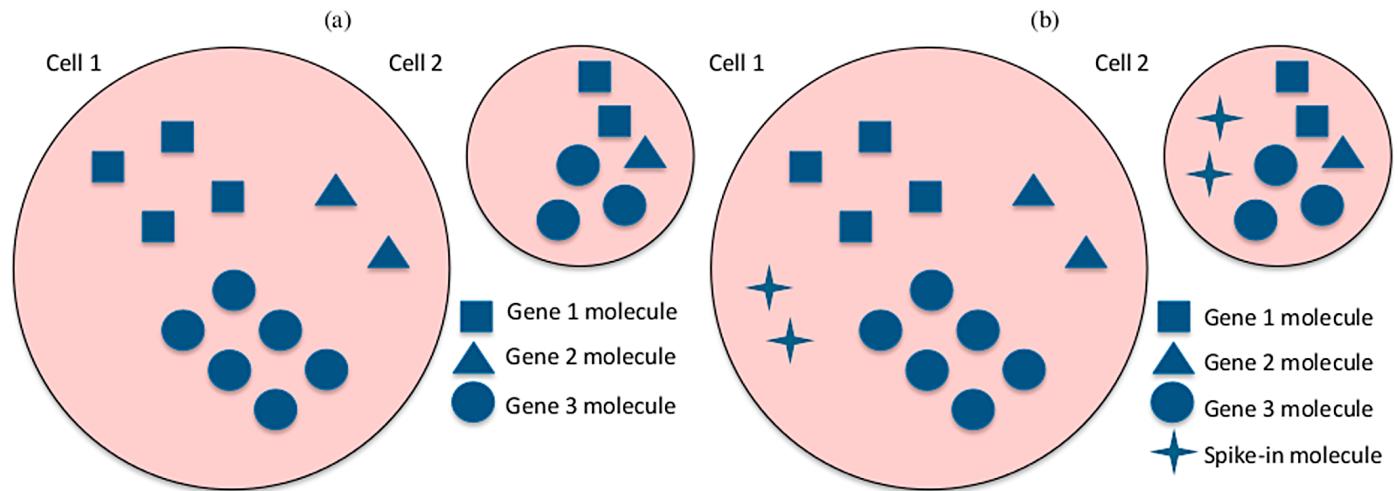


Spike-in RNAs

Spike-ins can be used to model:


- Technical noise & drop-out rates
- Starting amount of RNA in the cell
- Data normalization

Spike-in RNAs

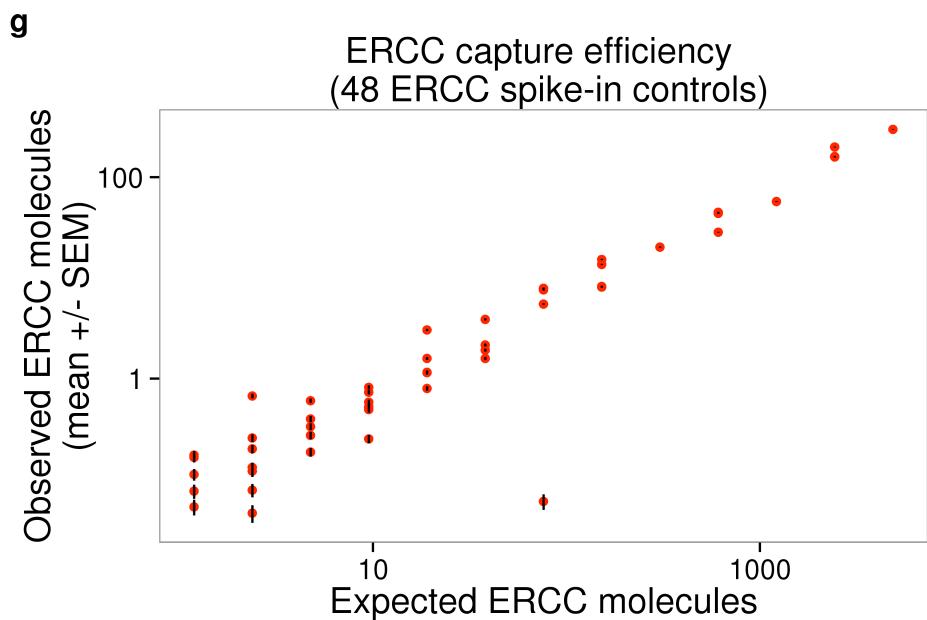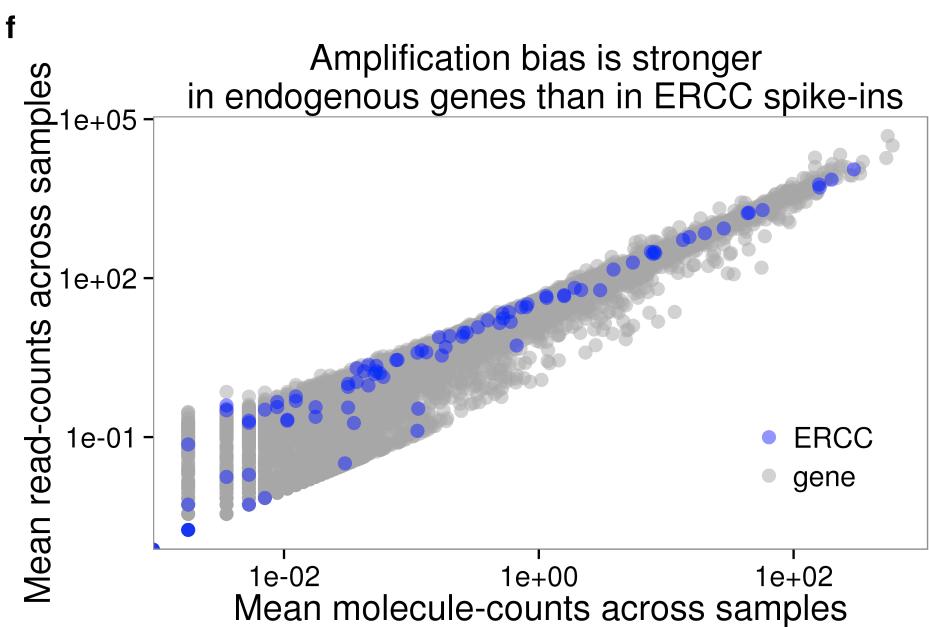

Spike-in RNAs

Finding biologically variable genes

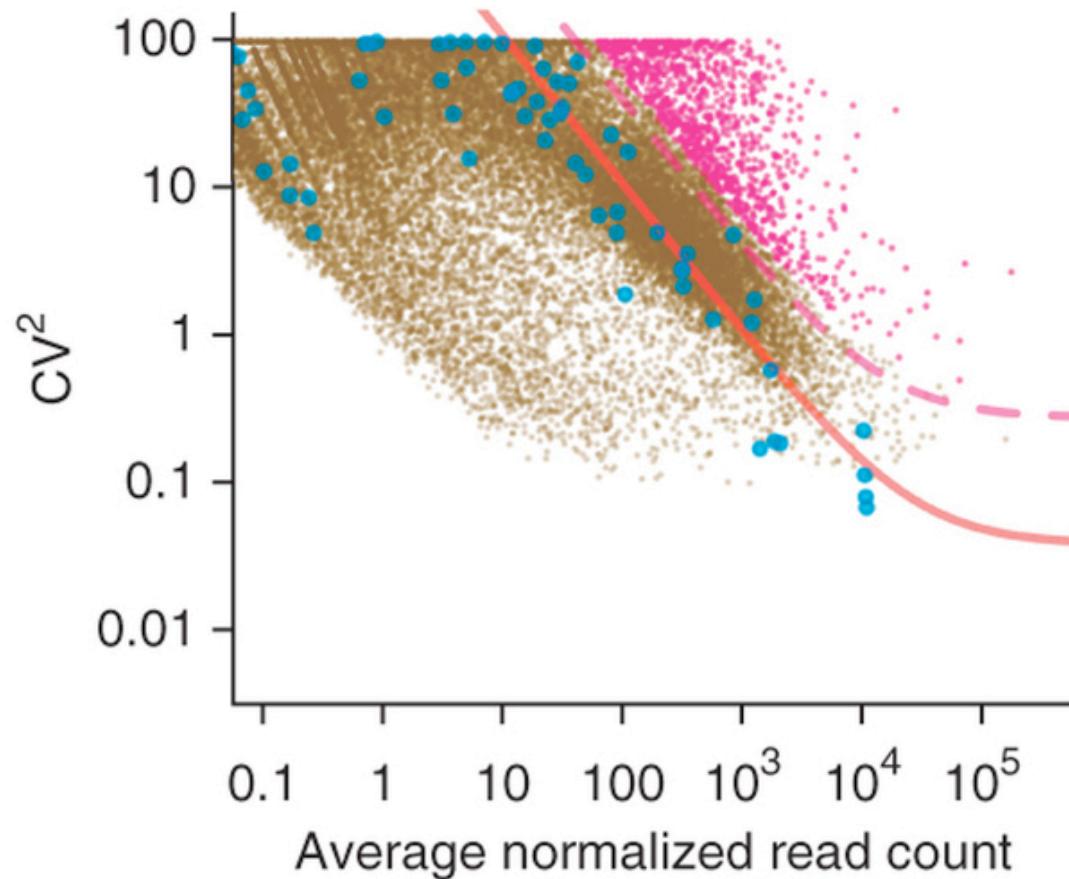

Coefficient of variation²:

$CV^2 = \text{standard deviation} / \text{mean} ^2$

QC-metrics

- Mapping statistics (**% uniquely mapping**)
- Fraction of exon mapping reads
- 3' bias – for full length methods like SS2
- mRNA-mapping reads
- Number of detected genes
- Spike-in detection
- Mitochondrial read fraction
- rRNA read fraction
- Pairwise correlation to other cells

QC-metrics

- Number of reads
- Mapping statistics (% uniquely mapping)
- Fraction of exon mapping reads
- mRNA-mapping reads (vs other types of genes like rRNA, sRNA, non coding, pseudogenes etc.)


Low number of reads – may not have enough information for that cell.

Bad mapping may be an indication of a failed library prep. Low content of mRNAs will lead to more primer dimers and more spurious mapping and fewer mapping reads.


QC-metrics

- 3' bias (degraded RNA) – for full length methods like SS2

Not degraded

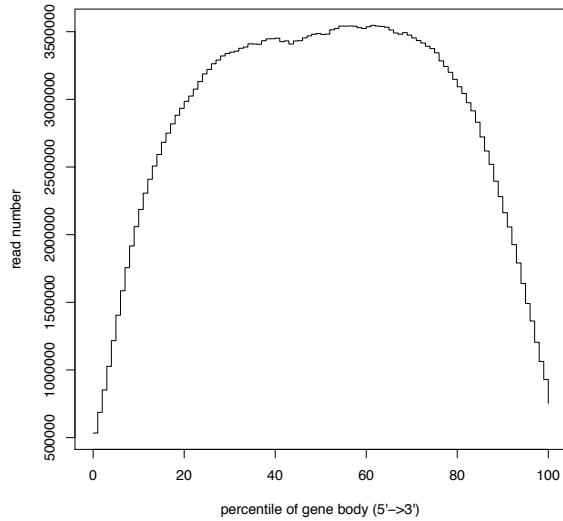

Degraded

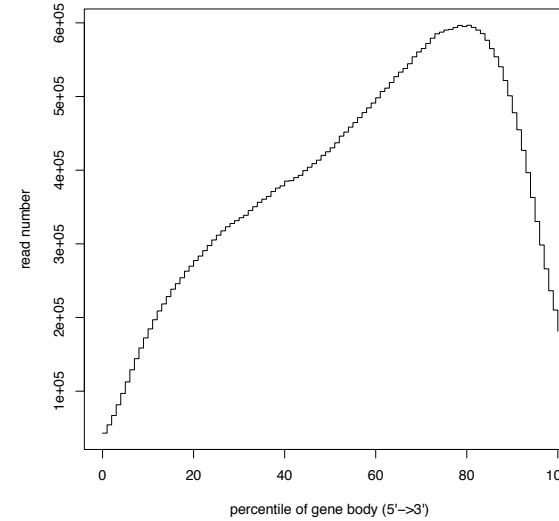

Look at proportion of reads that maps to the 10-20% most 3' end of the transcript

QC-metrics

- Spike-in detection
- Spike-in ratio

If the number of spike-in molecules that are detected is low, this is a clearly failed library.


Proportion of cell to spike-in reads is an indication of the starting amount of RNA from the cell. Low amount of cell RNA can indicate breakage or just a smaller cell.

QC-metrics

- Number of detected genes



Number of detected genes clearly correlates to the size of the cells, so be careful if you are working with cells with very varying sizes.

High number of detected genes may be an indication of duplicate/multiple cells.

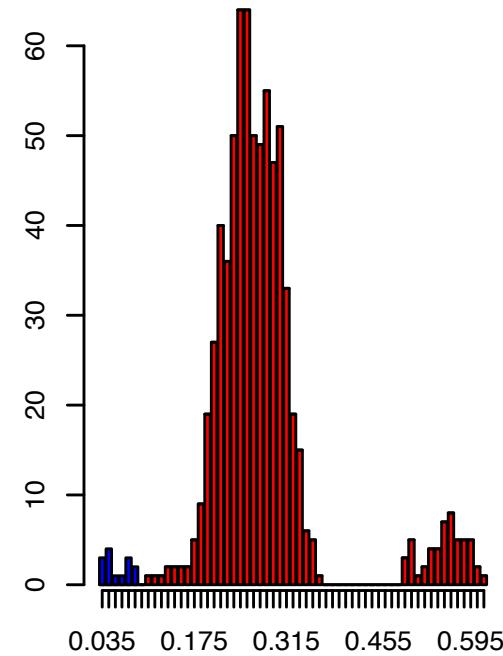

QC-metrics

- Cell size, spike-in ratio and number of detected genes are clearly correlated

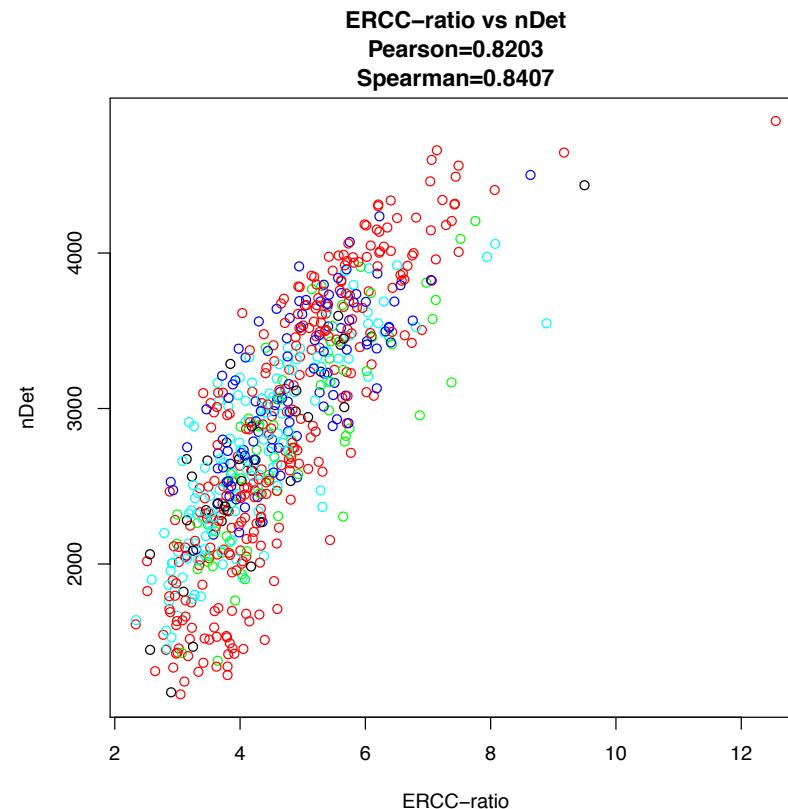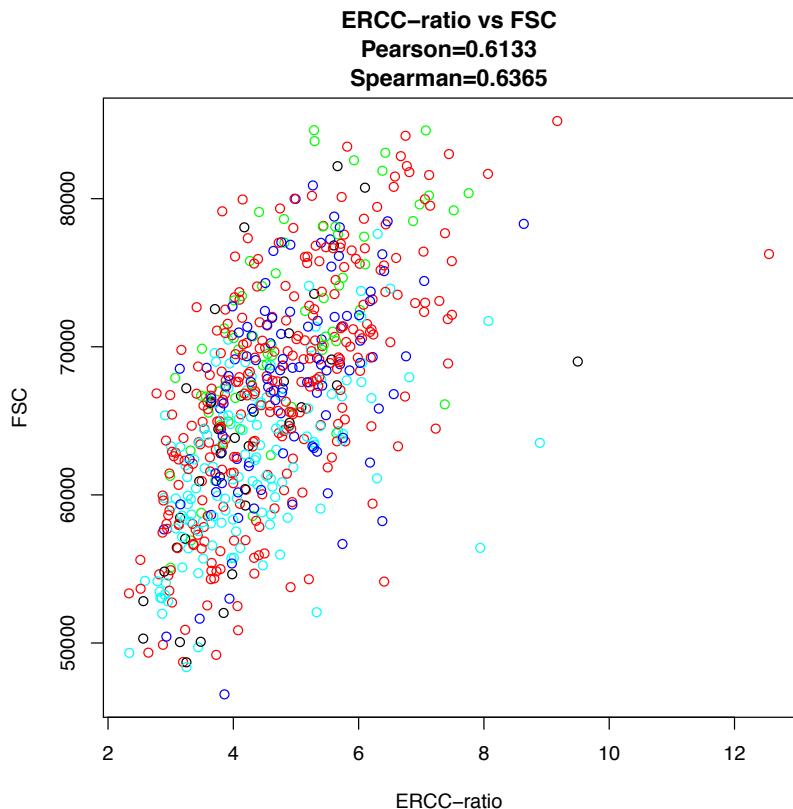

QC-metrics

- Mitochondrial read fraction
- rRNA read fraction


Suggested that when the cell membrane is broken, cytoplasmic RNA will be lost, but not RNAs enclosed in the mitochondria.

Possible that degradation of RNA leads to more templating of rRNA-fragments.

QC-metrics

- Pairwise correlation to other cells

Cells with low correlation to all other cells is most likely a failed library, however, can also be a small cell with less RNA.

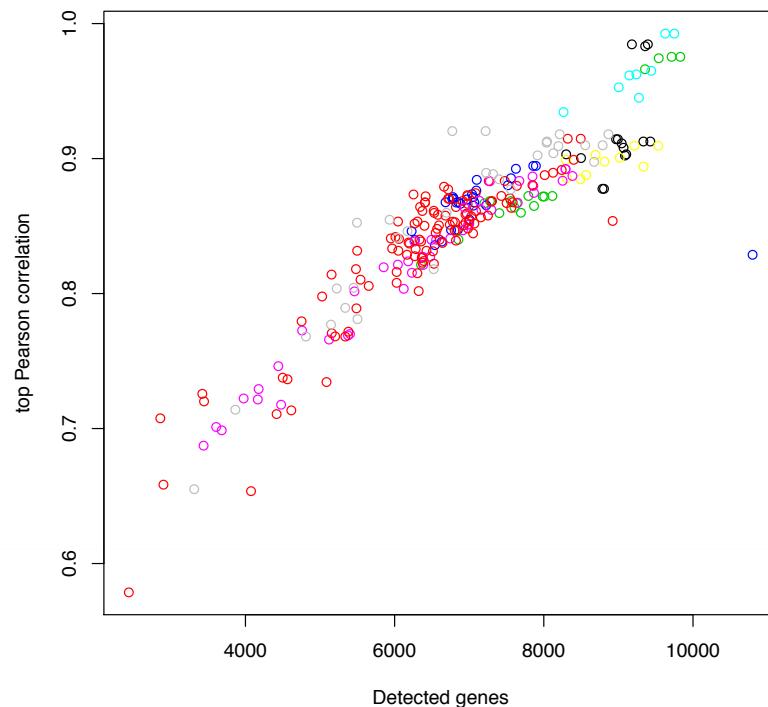


QC-metrics

- Number of reads
- Mapping statistics (**% uniquely mapping**)
- Fraction of exon mapping reads
- mRNA-mapping reads
- 3' bias – for full length methods like SS2
- mRNA-mapping reads
- Number of detected genes
- Spike-in detection
- Mitochondrial read fraction
- rRNA read fraction
- Pairwise correlation to other cells


How to filter cells

- Normally, most of these qc-metrics will show the same trends, so it could be sensible to use a combination of measures.
- Look at the distributions before deciding on cutoffs.

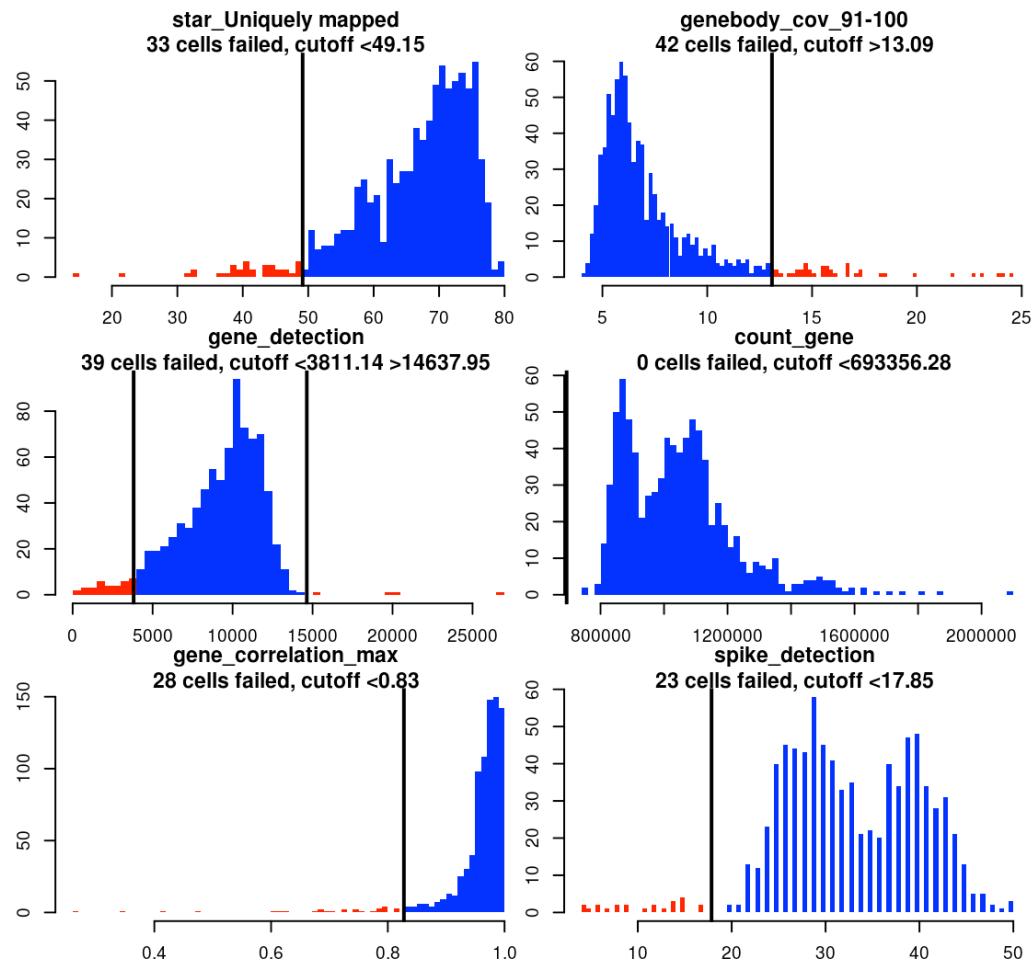

How to filter cells



- Can use PCA based on QC-metrics to identify outlier cells.
(Scater package)

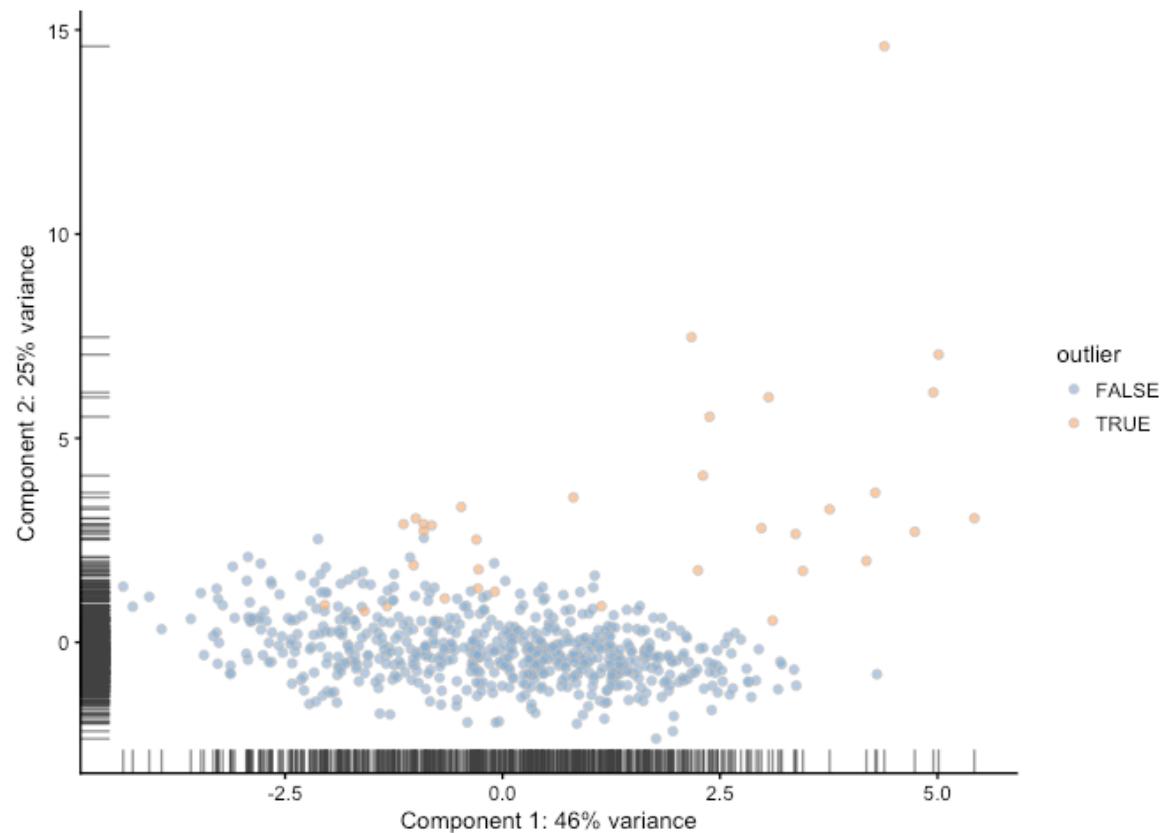

Batch effects

- Can be batch effects per
 - Experiment
 - Animal/Patient/Batch of cells
 - Sort plate
 - Sequencing lane
- Check if QC-measures deviates for any of those measures
- Check in PCA if any PC correlates to batches – Scater tutorial






Also check if your different qc-measures are different between batches.

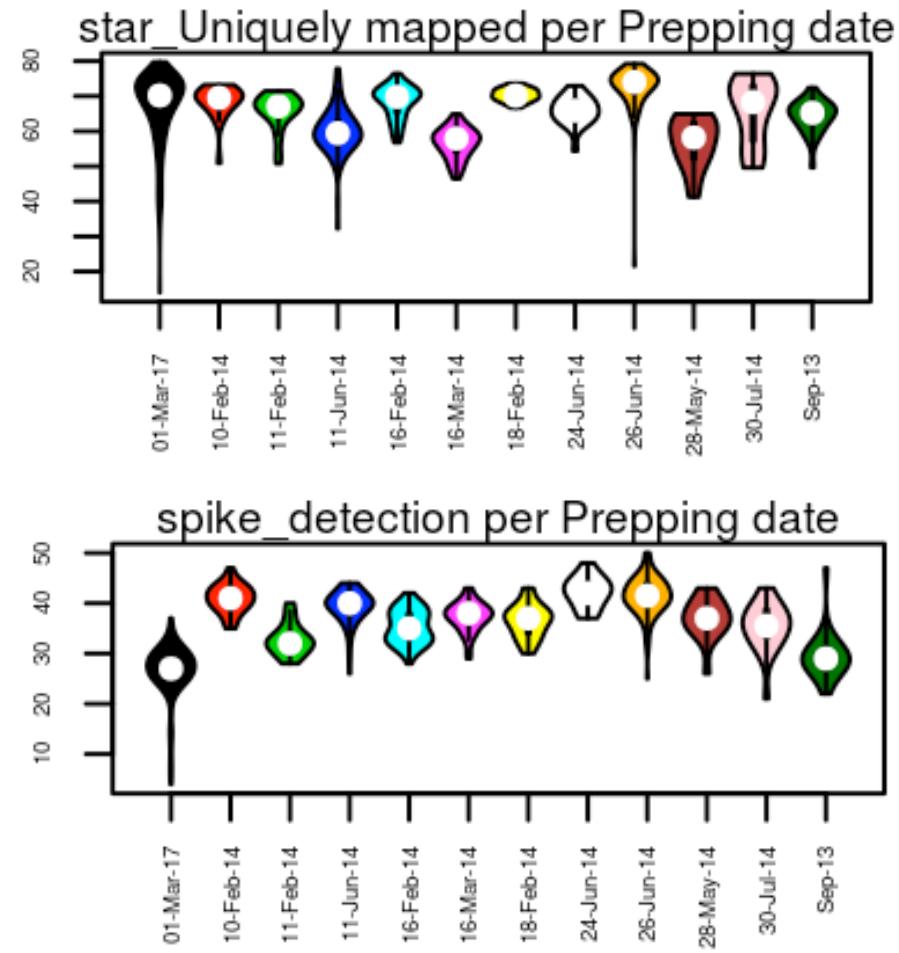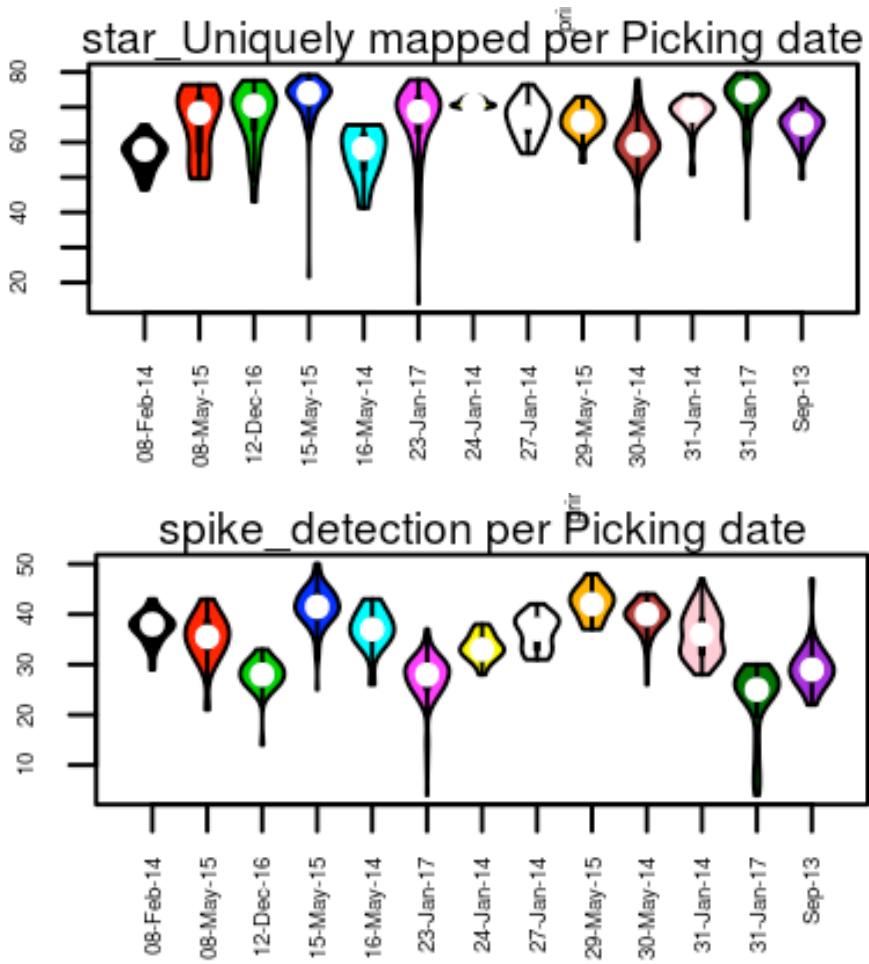

How to filter genes

- In most cases, all genes are not used in dimensionality reduction and clustering.
- Gene set selection based on:
 - Genes expressed in X cells over cutoff Y.
 - Variable genes – using spike-ins or whole distribution.
 - Filter out genes with correlation to few other genes
 - Prior knowledge / annotation
 - DE genes from bulk experiments
 - Top PCA loadings

Defining cutoffs for gene expression – bimodal gene expression or background expression?

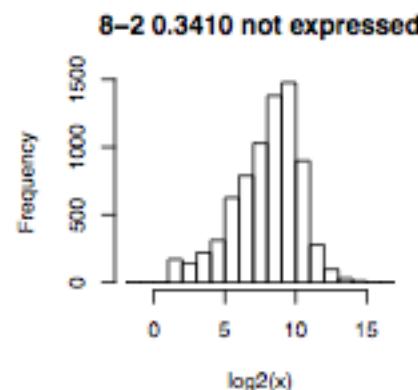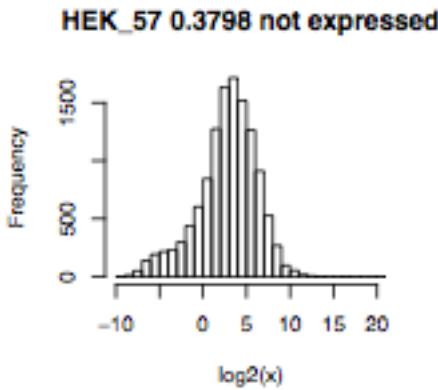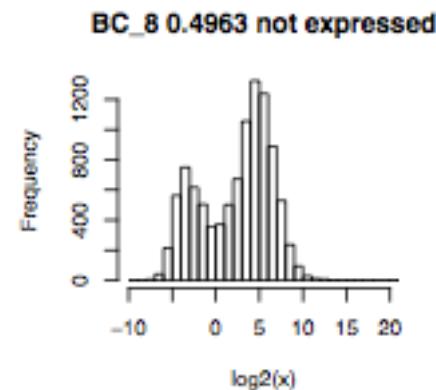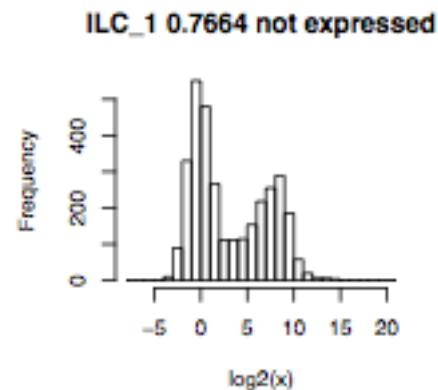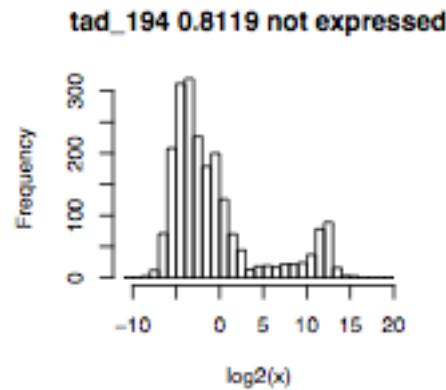


Cells ordered by size (approximate)

- tad – *Trixoplas adhesens* cell
- ILC – Human innate lymphoid cell
- BC – B-cell
- HEK – human embryonic kidney cell
- 8-2 – Mouse embryonic cell (8-cell stage)


Small cells tend to have fewer detected genes and more background expression

PCA for QC

- One of the first PCs will (always) correlate with number of detected genes

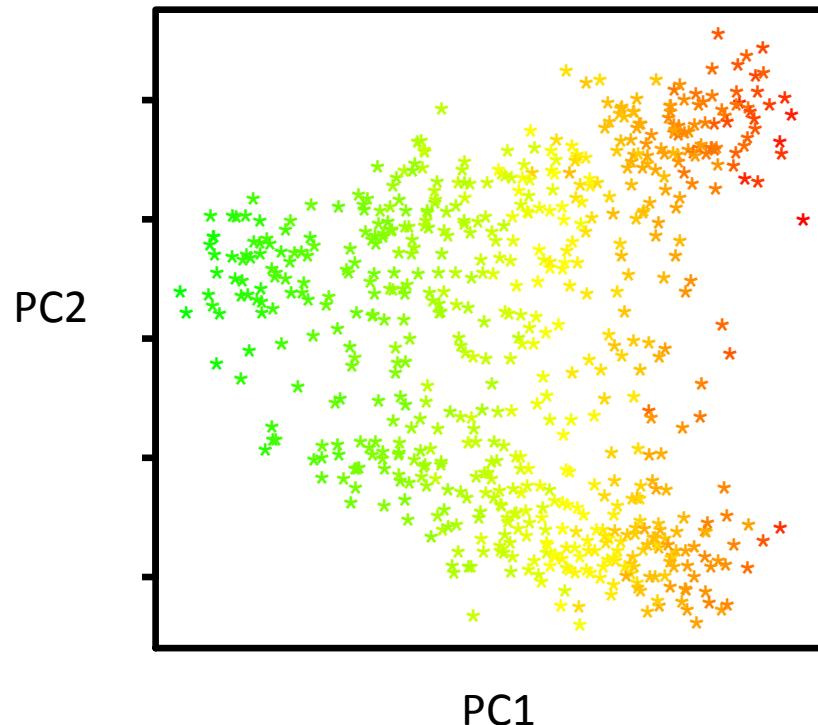


Check for batch effects in PCA

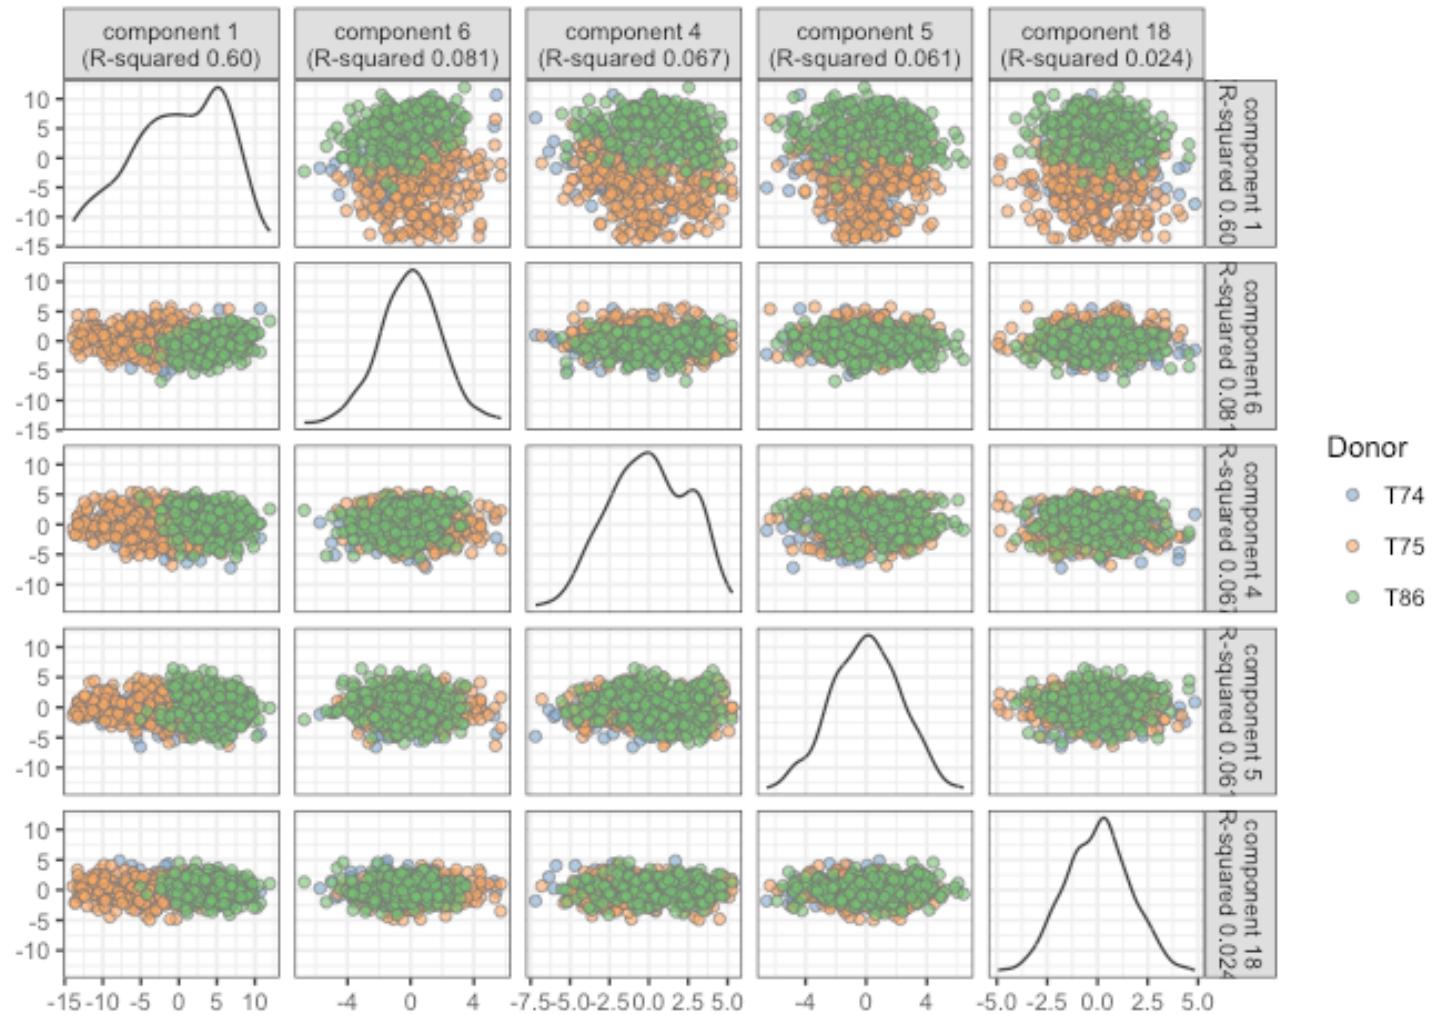

PCA for QC

- PCA can be used to identify contaminant cells when you are sorting for a specific cell type.

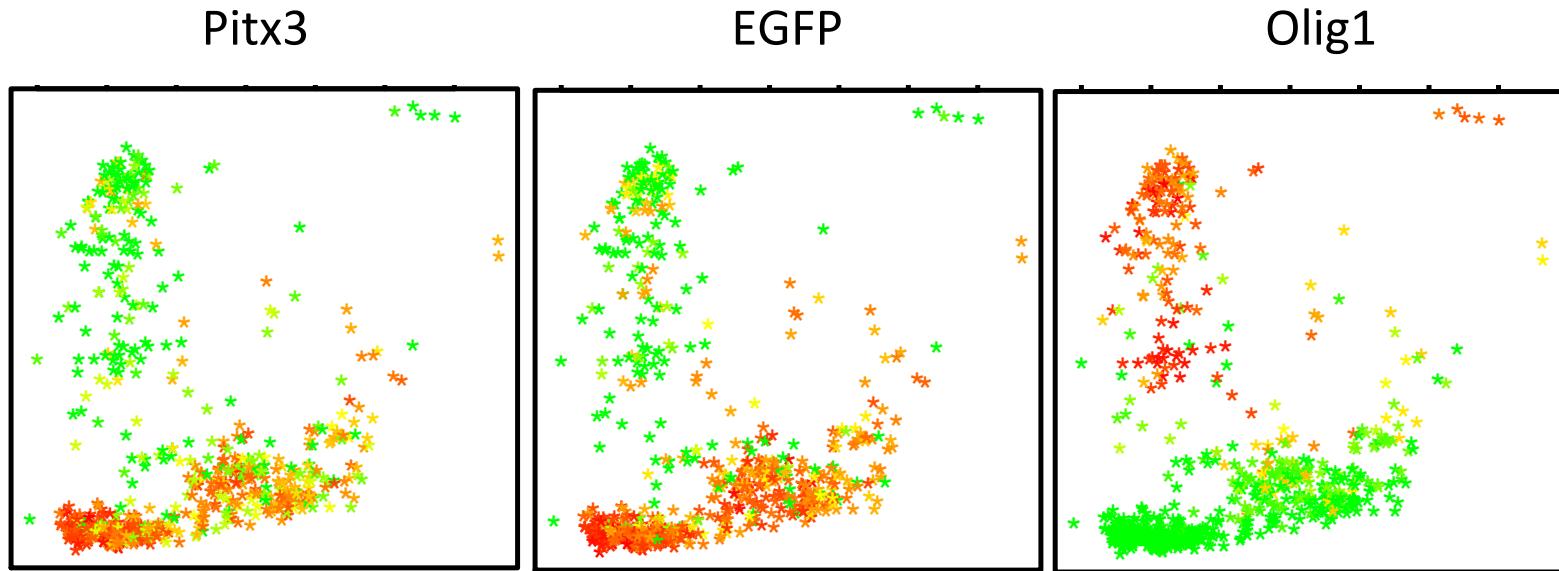

Detecting duplicate/multiple cells

- High number of detected genes – can be a sign of multiples
 - But, beware so that you do not remove all cells from a larger celltype.
- After clustering – check if you have cells with signatures from multiple clusters.
- A combination of those 2 features would indicate duplicates.

Conclusions

- Try to plan your experiment in a way so that the biological signal you are looking for is not confounded by batch effects
- Think about what distribution of cells you are expecting in your dataset when looking at the qc-measures. When you have homogeneous cells – deviant cells will be failed library. Otherwise be careful what you remove.
- Distinguishing duplicate cells is very hard, sometimes it will take some clustering

QC-summary for scRNAseq data

- Scripts for creating a QC-summary report from 2 or 3 files:
 - A file with all QC-stats
 - A metadata table with batch info etc
 - A file with all expression values (rpkms,counts or similar) – optional, only needed if you also want PCA plots.
- There are also some scripts for converting all SS2 data delivered from the ESCG to the correct format for making the qc-report.

https://bitbucket.org/asbj/qc-summary_scrnaseq