


Naassan Com GmbH
Johanniskirchstr. 90
45329 Essen

Bei Fragen erreichen Sie uns unter
E-Mail: kundenservice@pv-insel.de

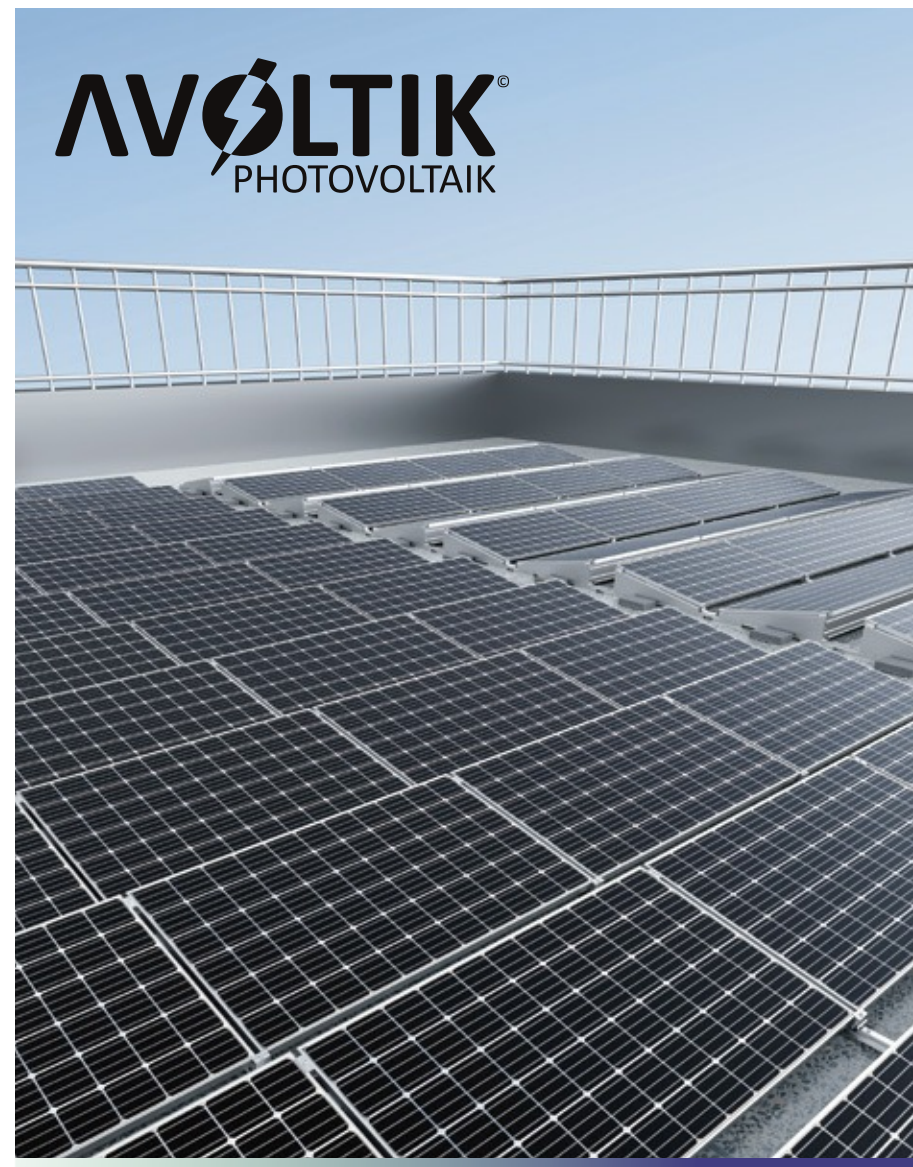


INSTALLATION MANUAL

Ballast system in east and west direction


1. Locate rail position

1.1 Install EPDM rubber onto the rail

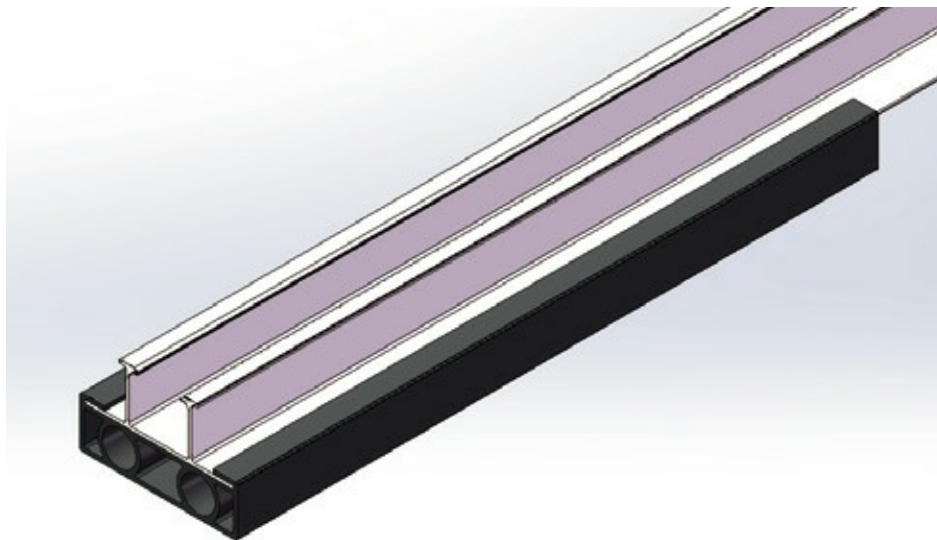

1.2 Locate the rail position as the drawing shows, and mark the rail position after placing it

1.3 Connect the remaining rails through rail connector and place them according to the location in the drawing, then tighten the bolts

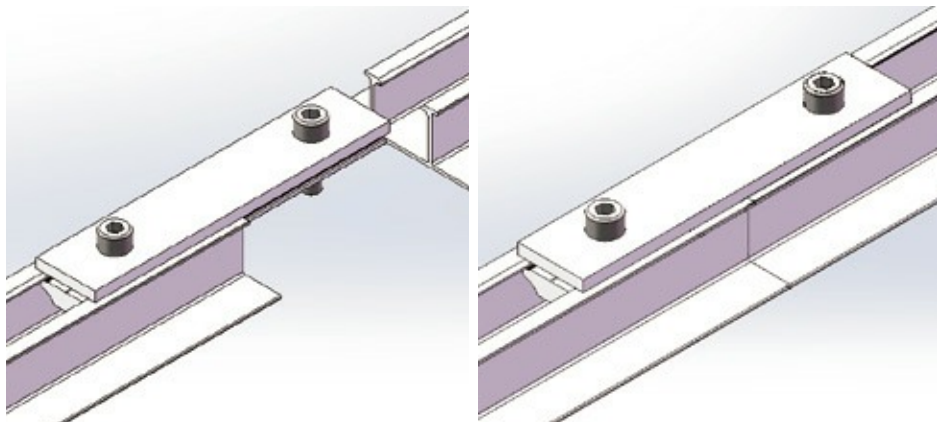


1.4 As shown in the picture after installation




2. Install front/rear leg

2.1 Place the front leg as the drawing shows, fix the front leg with M8*25 bolts and clamps, then adjust and lock the corresponding bolts

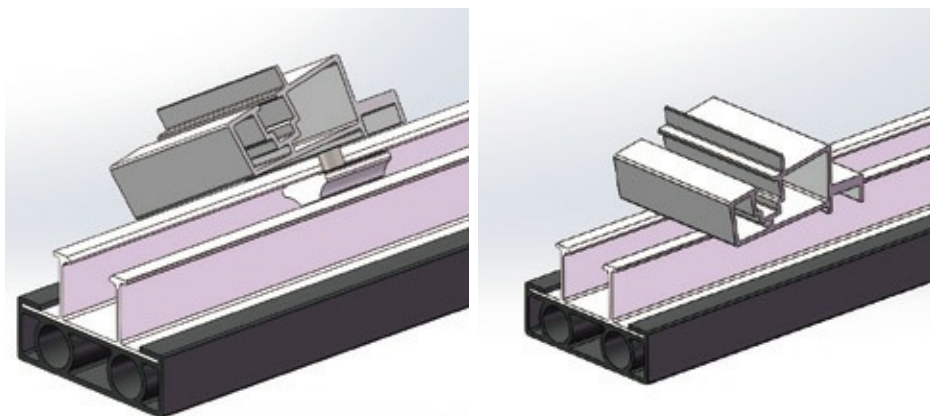

2.2 Place the rear leg as the drawing shows, fix the rear leg with M8*25 bolts and clamps, then adjust and lock the corresponding bolts

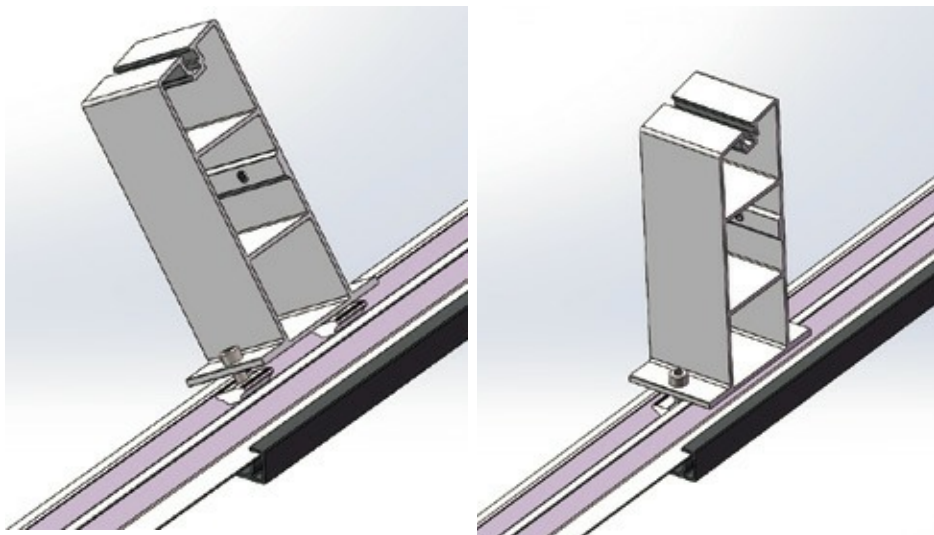


2.3 Repeat the above steps to install all front and rear legs making sure that the top surface of the front/rear legs in the same row are at the same height to ensure the normal installation of panels




3. Install ballast



3.1 Place the ballast plate on the rail as the drawing shows

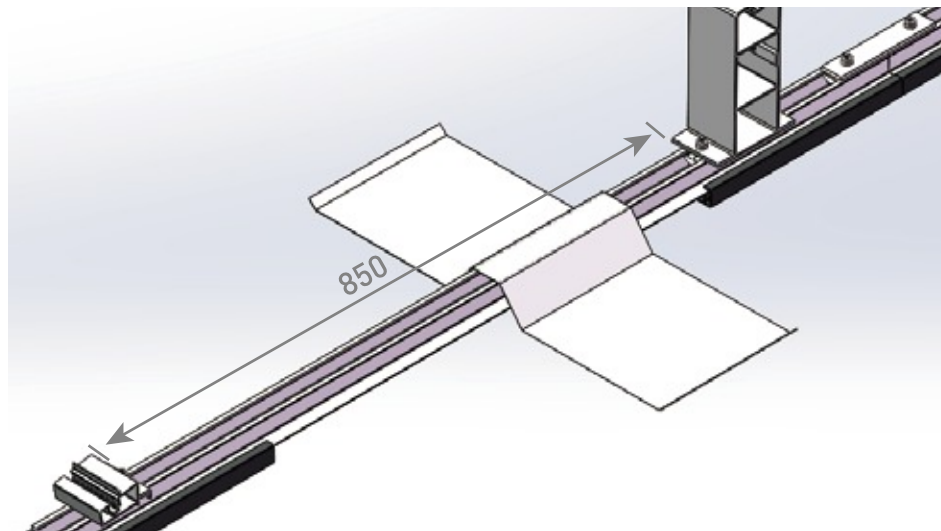

3.2 Place the ballast on the ballast plate


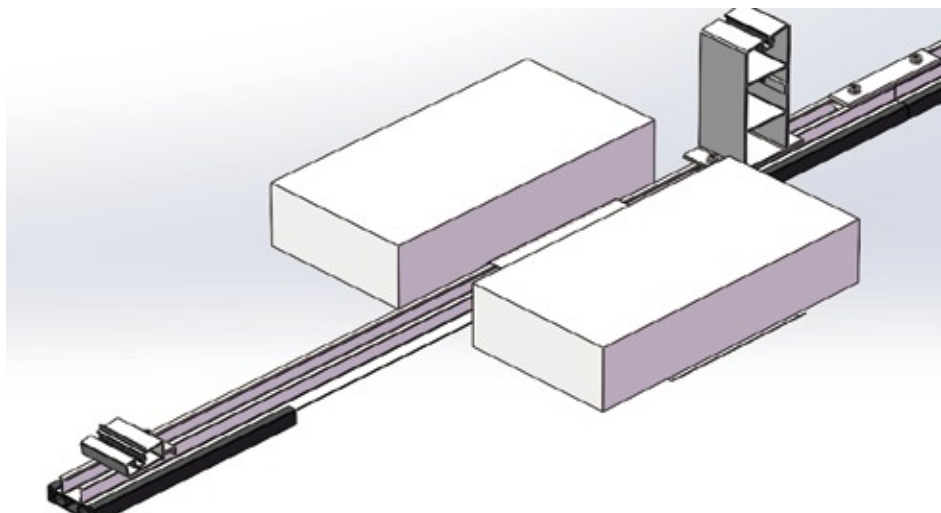


3.3 Repeat the above steps to complete the ballast placement



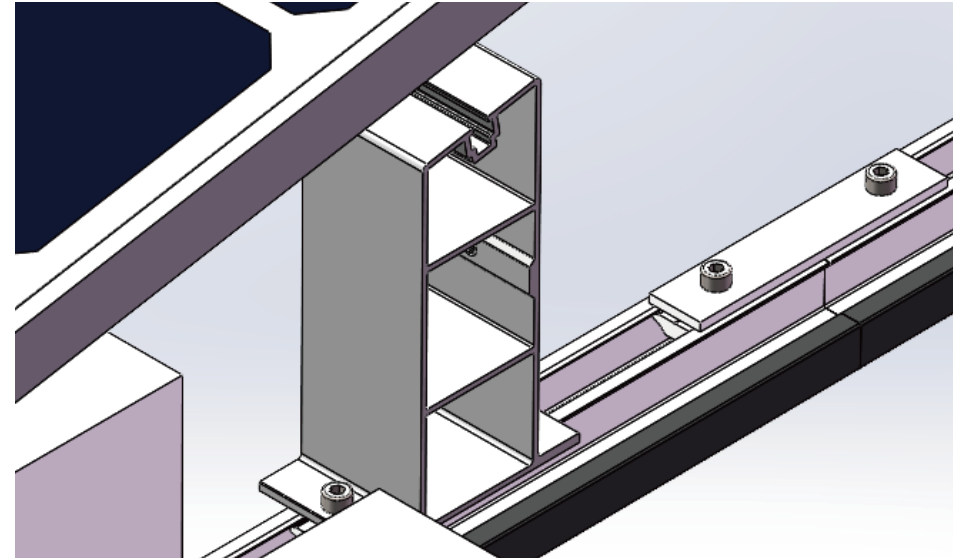
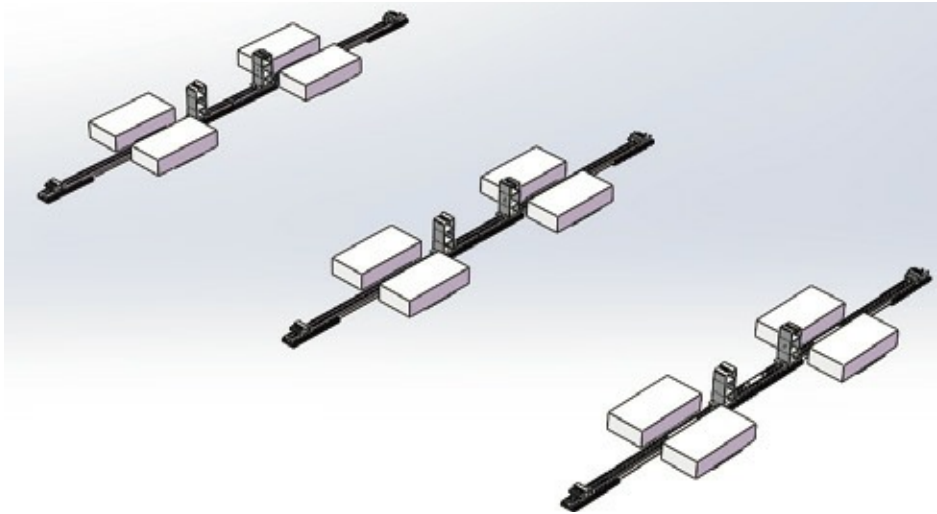


4. Install panel


4.1 Place the panel on the front leg slot and the slope of the rear leg

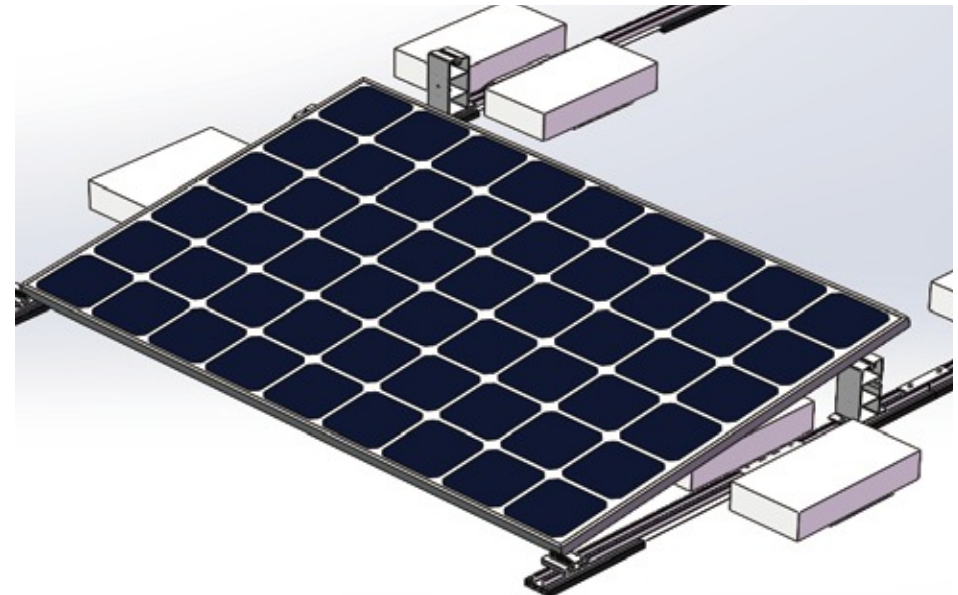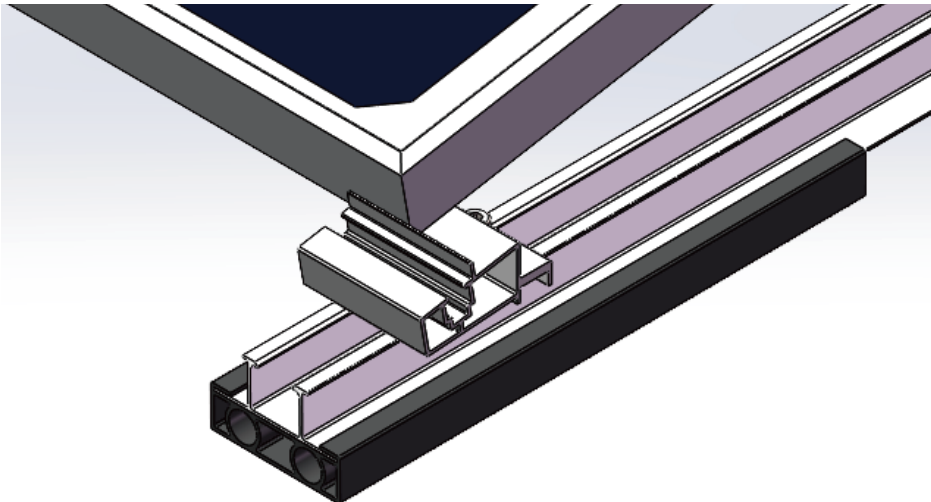


4.2 Bottom clamp installation: press the bottom clamp into the card slot as the picture shows, lock the bolt, and press the panel tightly

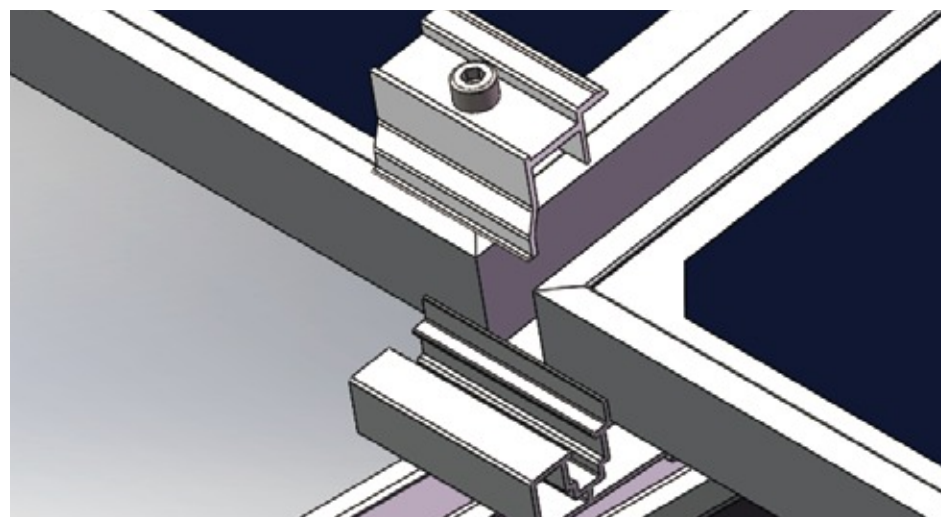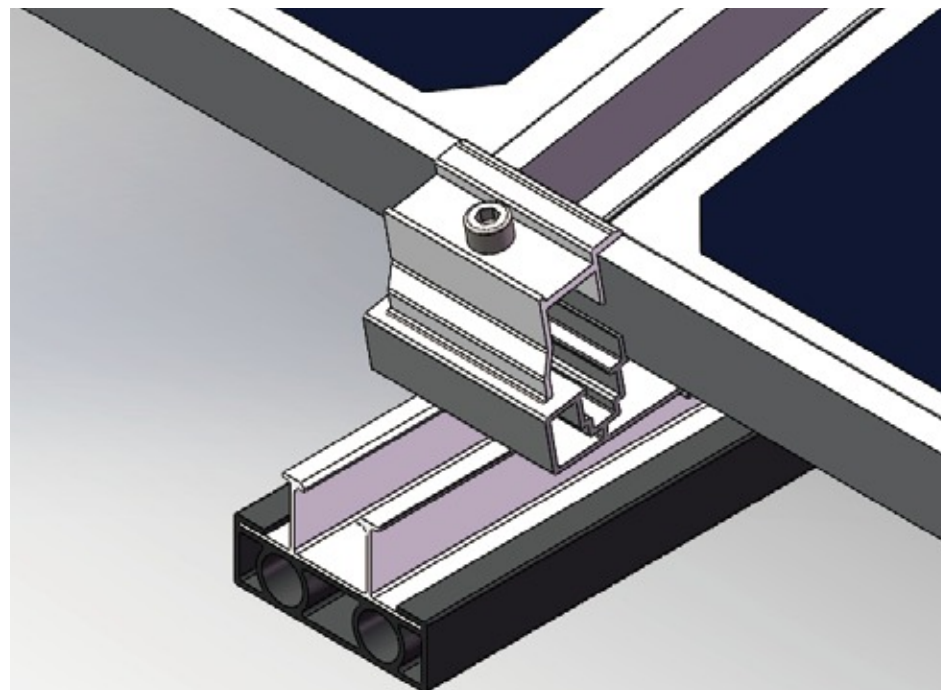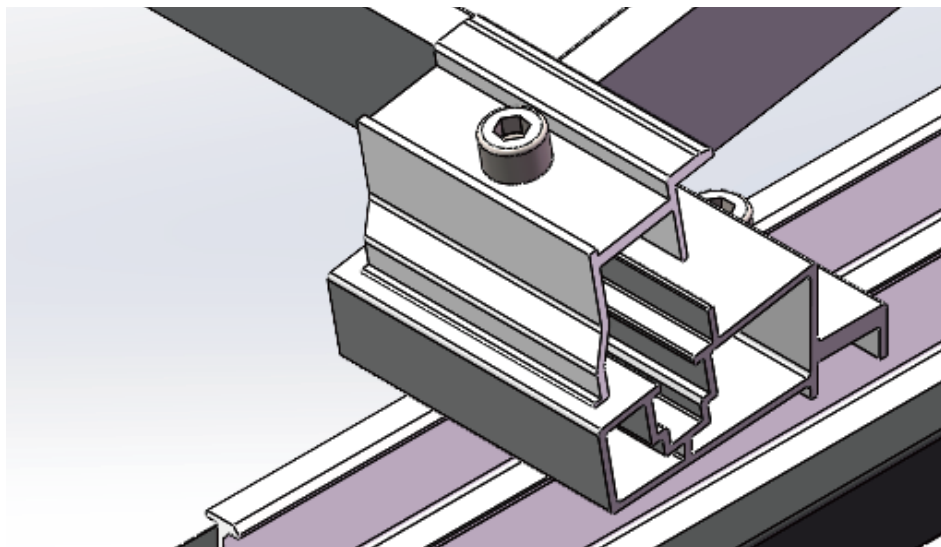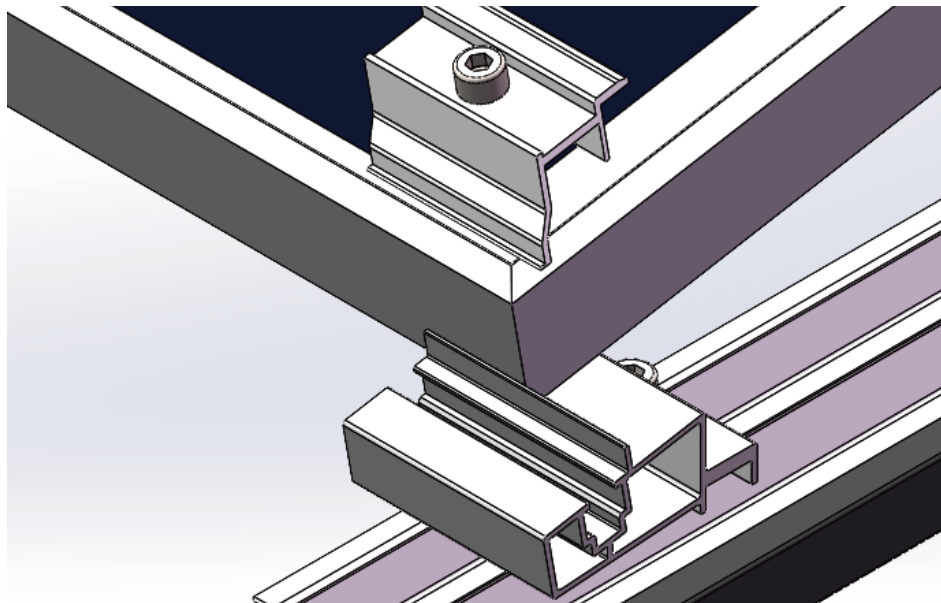


4.3 End clamp installation: press the end clamp into the card slot as the picture shows, lock the bolt, and press the panel tightly

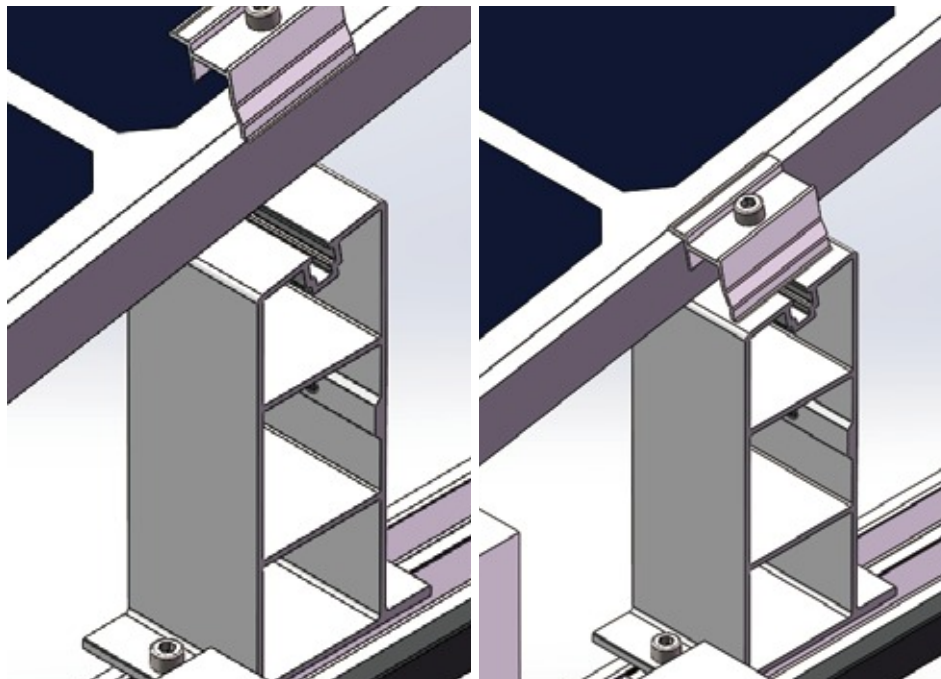

4.4 Inter clamp installation: place the panels in sequence according to the drawing as the picture shows, and place an inter clamp between two panels, then tighten the bolts

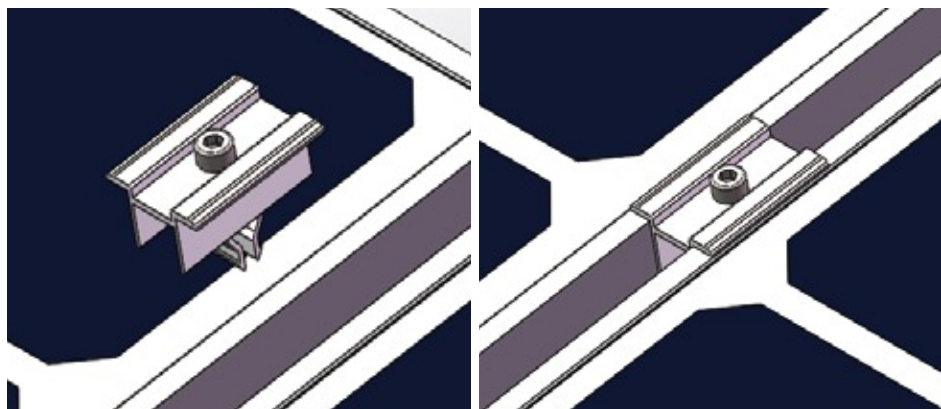

4.5 The remaining end clamp installation: place the panels in sequence according to the drawing as the picture shows, on the other side of the same row of panels, repeat steps 4.2/4.3

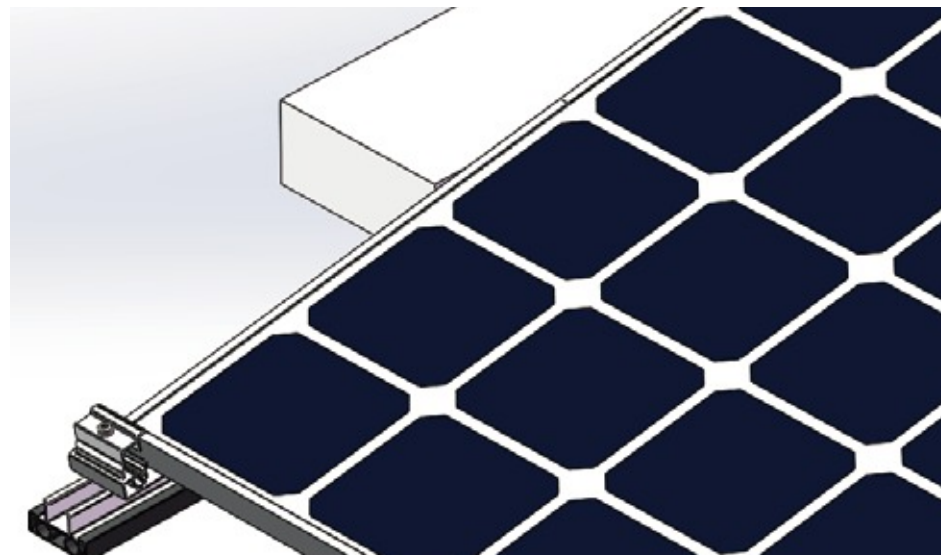

5. Complete installation

