

OpenSG-2.0

Mechanics of Structure Genome homogenization in JAX
User Tutorial

Akshat Bagla
Purdue University

Abstract

OpenSG-2.0 computes the macroscopic constitutive law of a heterogeneous structure – a beam 6×6 , a plate ABD, or an equivalent 3-D solid 6×6 – from a structure gene (SG): the smallest piece of the structure that carries its heterogeneity. It also runs the calculation backwards, recovering pointwise 3-D stress inside that SG from macroscopic loads. Two engines share the theory and the file conventions: `msg-shell` works on shell structure genes (a composite cross-section contour, a thin sheet meshed as a surface, a tapered blade segment), and `msg-solid` works on solid structure genes in one, two or three dimensions. Every run has the same shape: a YAML (or SwiftComp `.sc`) file goes in, and a timed output file in the SwiftComp `.K` layout comes back.

This tutorial covers the architecture of both engines, the input file formats and sign conventions, the constitutive relations each capability produces, a worked tutorial for every example shipped with the code, and the full wind turbine blade pipeline from a windIO file to BeamDyn and back to recovered wall stress.

Contents

1	Overview and Architecture	2
1.1	What OpenSG-2.0 is	2
1.1.1	The universal contract	2
1.1.2	The cores hold no paths	3
1.2	The theory in one page	4
1.2.1	The structure gene and the strain split	4
1.2.2	The quadratic form	4
1.2.3	The zeroth-order solve	4
1.2.4	The first-order step: transverse shear	5
1.2.5	One factorization for two solves	5
1.2.6	Dehomogenization: running the chain backwards	6
1.3	Module map	6
1.4	The pipelines	6
1.4.1	msg-shell: 1-D ring $\rightarrow$ Timoshenko 6×6	6
1.4.2	msg-shell: 3-D segment $\rightarrow$ aperiodic Timoshenko 6×6	9
1.4.3	msg-shell: 3-D shell SG $\rightarrow$ equivalent solid C_{3D}	10
1.4.4	msg-solid: one driver, three macro models	12
1.5	GPU readiness	13
2	Input Formats and Conventions	15
2.1	The 1-D shell SG YAML	15
2.1.1	nodes	16
2.1.2	elements	16
2.1.3	sets and sections	17
2.1.4	elementOrientations	18
2.1.5	materials	18
2.1.6	reference	18
2.1.7	Running it	19
2.2	The 3-D shell SG YAML	20
2.3	The solid SG YAML	21
2.4	The SwiftComp .sc input and the converter	24
2.5	The through-thickness layup_db.yaml	25
2.6	Finite elements used by each route	27
2.6.1	Shell route	27
2.6.2	Solid route	28
2.7	Sign and order conventions	29
2.7.1	Solid (3-D) Voigt order	29

2.7.2	Beam order	29
2.7.3	Plate order	29
2.7.4	Changing the reference surface	30
2.8	Material orientation	30
2.8.1	Where the ply angle lives	31
3	Constitutive Relations Recovered by OpenSG	33
3.1	The .out contract	33
3.2	Beam: the Timoshenko 6×6	34
3.2.1	Running it on a shell cross-section	34
3.2.2	Running it on a solid cross-section	35
3.2.3	The classical 4×4 that rides along	36
3.2.4	Which routes produce the beam law	36
3.3	Plate: classical ABD 6×6 and Reissner–Mindlin ABDG 8×8	37
3.3.1	Classical (Kirchhoff–Love) plate law	37
3.3.2	Reissner–Mindlin plate law	37
3.4	Solid: the equivalent 3-D law	40
3.4.1	The engineering-constants block	40
3.4.2	Which entry points produce it	41
3.4.3	Periodicity, and the aperiodic alternative	41
3.4.4	A worked solid law: the TPMS Sample 1 cell	44
3.5	The wall law: per-section 8×8 ABDG	44
3.6	Where each law is produced and written	46
3.7	Running the laws backwards: two-step recovery	46
3.7.1	The shell chain: beam force to plate resultants to 3-D stress	47
3.7.2	What the shell chain gets right, and where it does not	47
3.7.3	The solid chain	48
4	Tutorials: the Shell Engine (msg-shell)	51
4.1	Beam properties from a shell cross-section	51
4.1.1	What this capability computes	51
4.1.2	What a 1-D shell SG is	51
4.1.3	The input file the user edits	52
4.1.4	Orientation frames	53
4.1.5	The element and the wall law	53
4.1.6	Run it	54
4.1.7	The one call	55
4.1.8	What comes out	55
4.1.9	The numbers	56
4.2	Two-step recovery to 3-D wall stress	56
4.2.1	What this capability computes	56
4.2.2	The input the user edits	57
4.2.3	Run it	57
4.2.4	The two-step chain	57
4.2.5	What comes out	58
4.2.6	Reading the result	58
4.2.7	What this route recovers, and what it does not	60
4.3	Equivalent 3-D solid from a cross-section SG	60

4.3.1	What this capability computes	60
4.3.2	The driver	61
4.3.3	Validation: Deo & Yu (2023)	61
4.3.4	Why C_{23} vanishes on axis-aligned lattices	64
4.4	Equivalent 3-D solid from a 3-D shell SG	64
4.4.1	What this capability computes	64
4.4.2	The input the user edits	64
4.4.3	Run it	66
4.4.4	What comes out	66
4.4.5	Boundary treatment: periodic default versus aperiodic	67
4.5	Tapered and aperiodic segments	67
4.5.1	What this capability computes	67
4.5.2	Seeing the capability	68
4.5.3	The input the user edits	68
4.5.4	Run it	71
4.5.5	What comes out	71
4.5.6	Acceptance test: the prismatic identity	72
4.5.7	Tapered demonstration: BAR-URC segment 12	72
4.5.8	Shear-scheme rule for segments	73
5	Tutorials: the Solid Engine (msg-solid)	74
5.1	Plate properties from a through-thickness 1-D SG	75
5.1.1	What it computes	75
5.1.2	The input you edit	75
5.1.3	Run it	76
5.1.4	What comes out	76
5.1.5	What the numbers mean	77
5.1.6	What it is validated against	77
5.2	Through-thickness stress recovery	78
5.2.1	What it computes	78
5.2.2	Driver A: one station, resultants typed into the script	79
5.2.3	Driver B: a whole field from a <code>.ff</code> station table	79
5.2.4	What comes out	80
5.2.5	What it is validated against	81
5.3	Plate properties from a 2-D cell SG	81
5.3.1	What it computes	81
5.3.2	The example SG and the input you edit	82
5.3.3	Run it	82
5.3.4	What comes out	82
5.3.5	What the numbers mean	83
5.3.6	The Reissner-Mindlin option	83
5.3.7	The 1-D gene in the same folder, and a naming trap	83
5.4	Plate recovery from a 2-D SG	85
5.4.1	What it computes	85
5.4.2	The input you edit	85
5.4.3	Run it	85
5.4.4	What comes out	85
5.4.5	Reading the result	86

5.5	Equivalent 3-D solid from a 2-D SG	86
5.5.1	What it computes	87
5.5.2	The example SG	87
5.5.3	Step 1: build the SG yaml from the gmsh mesh	88
5.5.4	Step 2: homogenize	88
5.5.5	What comes out	88
5.5.6	What the numbers mean, and what they were validated against	88
5.6	Equivalent 3-D solid from a 3-D SG	89
5.6.1	What it computes	89
5.6.2	The samples and the runners	89
5.6.3	Normalization: per unit material volume, or per unit cell	90
5.6.4	The SwiftComp digit-parity benchmark	90
5.6.5	Periodic versus aperiodic	91
5.7	Beam properties from a 2-D SG	92
5.7.1	What it computes	92
5.7.2	The example SG and the input you edit	92
5.7.3	Run it	93
5.7.4	What comes out	93
5.7.5	What the numbers mean	93
5.7.6	The built-in cross-check: Euler-Bernoulli against Timoshenko	93
5.8	Beam recovery	94
5.8.1	What it computes	94
5.8.2	The input you edit	94
5.8.3	Run it	95
5.8.4	What comes out	95
5.8.5	What the numbers mean	95
5.9	Files at a glance	97
6	Full Blade Pipeline: windIO to BeamDyn and Back	98
6.1	The worked example	98
6.2	Stage 1: windIO blade to per-station 1-D shell SG YAMLS	99
6.3	Stage 2: each station to a Timoshenko 6×6	101
6.4	Stage 3: handing the table to BeamDyn	105
6.5	Stage 4: the loads come back as the FF table	106
6.6	Stage 5: dehomogenization back to 3-D wall stress	107
6.7	Where each tool ends	111

Chapter 1

Overview and Architecture

1.1 What OpenSG-2.0 is

OpenSG-2.0 is an implementation of Mechanics of Structure Genome (MSG) homogenization written in JAX. You give it a *structure gene* (SG) — the smallest piece of a structure that carries its heterogeneity — and it returns the macroscopic constitutive law of the structure that SG builds: a Timoshenko beam 6×6 , a plate ABD (or the shear-refined 8×8), or an equivalent 3-D solid 6×6 . It also runs the same calculation backwards (*dehomogenization*), rebuilding the pointwise 3-D stress and strain inside the SG from macroscopic beam or plate loads.

The repository is organised in four layers. Only the top layer knows where files live on disk.

Table 1.1: The four layers of OpenSG-2.0. Paths and `main` blocks exist only in the top row.

Layer	Package	Role
user	<code>examples/</code>	YAML in $\rightarrow$ <code>.out</code> out; owns all paths
msg-shell	<code>src/opensg_shell</code>	Reissner–Mindlin shell SGs: ring (cross-section), aperiodic segment, 3-D shell cell
msg-solid	<code>src/opensg_solid</code>	solid SGs: plate ABD, beam KKT, 3-D solid law
FE core	<code>src/fe_jax</code>	JAX FE architecture: basis/quadrature, periodic assembly map, jitted element kernels, element-by-element (EBE) Chebyshev-CG, sparse direct

1.1.1 The universal contract

Every capability in both engines obeys the same contract: **a YAML file (or a SwiftComp .sc file) goes in, and a timed .out file in the SwiftComp .K layout comes back.** There is exactly one writer for that file, `opensg_solid.sg_homo.write_sc_K`, and it is called from inside the solver source, not from the example scripts, so no run can forget it. A minimal session looks like this:

```
\texttt{.out} file is written as a side effect of the call.}]
from opensg_shell import build_rm_bundle

B = build_rm_bundle("iea_s10_shell.yaml")    # writes iea_s10_shell_Timo.out
B["Timo"]                                   # the Timoshenko 6x6 as a numpy array
```

Listing 1.1: The whole contract in four lines.

The file that comes back always has the same shape: an `OpenSG` banner naming the model and the SG measure ω on the first line, the effective stiffness matrix, its inverse (the compliance), an engineering-constants block for 3-D laws only, and `Time taken` on the last line. Numbers are printed in a 19-character right-justified Fortran field (`%.7E` mantissa, signed three-digit exponent) so the file drops straight into existing SwiftComp comparison tooling:

```
OpenSG msg-shell beam model [ext sh2 sh3 twist bend2 bend3]

The Effective Timoshenko Stiffness Matrix
-----
      <6 numbers per row>
...
The Effective Timoshenko Compliance Matrix
-----
...
Time taken: 12.34 sec
```

The suffix on the output file names the model, so two different routes run on the same input YAML do not silently overwrite each other (Table 1.2).

Table 1.2: Output file names. There is one file per model; the `_Timo` vs `_C3D` suffix disambiguates when two routes can read the same YAML.

Model	Entry function	Output file
msg-solid beam / plate / 3-D	<code>plate_homo_2d</code>	<code><base>.out</code>
msg-shell beam (Timoshenko)	<code>build_rm_bundle</code>	<code><yaml>_Timo.out,</code> <code>ABDG.out</code> <code><yaml>_C3D.out</code>
msg-shell aperiodic segment	<code>segment_timo_from_3dyaml</code>	<code><yaml>_Timo.out</code>
msg-shell solid props, cross-section SG	<code>build_solid_bundle</code>	<code><yaml>_C3D.out</code>
msg-shell 3-D shell SG	<code>shell_sg3d</code>	<code><yaml>_C3D.out</code>

1.1.2 The cores hold no paths

Neither `opensg_shell` nor `opensg_solid` contains a `main` block, a hard-coded directory, or an assumption about where you run from. Every path decision lives in the example script, which names its input file and calls exactly one entry function on it. That is why the tutorials in the later chapters can be reduced to two lines of user input and one call: to run a different cross-section you change the string, not the library.

Two pieces of process-level setup do live in the package `__init__` files, and both matter to you:

- **Double precision is load-bearing.** Both packages execute `jax.config.update("jax_enable_x64", True)` at import. Without it JAX silently degrades to float32 and the digits of the 6×6 are wrong. Import the package (`import opensg_shell`) before you import anything else that touches JAX.
- **A persistent compile cache.** `opensg_solid/__init__.py` points JAX's compilation cache at `$JAX_COMPILATION_CACHE_DIR`, defaulting to `~/.cache/opensg-jax`, with `jax_`

`persistent_cache_min_compile_time_secs` set to 0. A cold run pays each XLA compile once; warm runs load the binaries back. The cache is wrapped in a `try/except` — it is an optimisation, and the engine must run without it. The same file honours `$FE_JAX_CORE`, which prepends an external `fe_jax` checkout to `sys.path` to override the bundled copy at `src/fe_jax`.

1.2 The theory in one page

Every pipeline in this manual is the same variational statement, specialised. It is worth reading this section once, because the symbols used here are the variable names used in the source: `Dee`, `Dhe`, `Dhh`, `V0`, `V1`, `omega`.

1.2.1 The structure gene and the strain split

A structure gene is the smallest piece of the structure that carries the heterogeneity: a laminate stacking sequence through the thickness (a 1-D SG), a cross-section contour or a 2-D unit cell (a 2-D SG), a lattice or TPMS unit cell (a 3-D SG). The displacement field inside the SG is split into a macroscopic part driven by the macro strains $\bar{\varepsilon}$ and a fluctuation (warping) field w . In strain form,

$$\varepsilon = \Gamma_e \bar{\varepsilon} + \Gamma_h w, \quad (1.1)$$

where Γ_e is the operator that embeds the macro strains into the SG and Γ_h is the SG's own strain operator acting on the warping. The two are not independent: Γ_e is Γ_h evaluated on the macro embedding, a consistency requirement written down in `Rules/gamma_e_gamma_h_consistency.md` and enforced by building both from the same element kernel.

1.2.2 The quadratic form

Substituting (1.1) into the strain energy gives the quadratic form the code assembles, in exactly the block names used throughout the source:

$$2U = \bar{\varepsilon}^T \mathbf{D}_{ee} \bar{\varepsilon} + 2w^T \mathbf{D}_{he} \bar{\varepsilon} + w^T \mathbf{D}_{hh} w. \quad (1.2)$$

Read it as three integrals over the SG: $\mathbf{D}_{ee}$ is the macro-macro block (what you would get with no warping at all, the rule-of-mixtures answer), $\mathbf{D}_{hh}$ is the SG stiffness seen by the warping alone, and $\mathbf{D}_{he}$ couples them.

1.2.3 The zeroth-order solve

Minimising (1.2) over w , subject to the SG's boundary treatment (periodicity, Dirichlet boundary data, or a rigid-body constraint that removes the null space) gives one linear system with as many right-hand sides as there are macro strains,

$$\mathbf{D}_{hh} \mathbf{V}_0 = -\mathbf{D}_{he}, \quad (1.3)$$

and the effective law follows by substituting the minimiser back:

$$\mathbf{D}_{\text{eff}} = \mathbf{D}_{ee} + \mathbf{V}_0^T \mathbf{D}_{he}, \quad \mathbf{C} = \mathbf{D}_{\text{eff}} / \omega. \quad (1.4)$$

Here ω is the SG measure that stays in the model — the thickness of a 1-D laminate SG, the area of a cross-section SG, the volume of a 3-D solid cell, the perimeter (or, in three dimensions, the midsurface area) of a shell SG. The banner of every `.out` states ω because a bare matrix is ambiguous: a whole-matrix ratio that is uniform across all entries (exactly 0.5000, say) is a normalisation difference, not a physics discrepancy.

$\mathbf{V}_0$ is stored, not discarded. Its columns are the warping fields per unit macro strain, and they are what the dehomogenization reads back.

Equation (1.4) is the **zeroth-order** answer: the plate ABD, the Euler–Bernoulli 4×4 , the equivalent 3-D solid law. It contains no transverse shear, because the classical macro models it corresponds to have none.

1.2.4 The first-order step: transverse shear

Recovering transverse shear — the Reissner–Mindlin G block of a plate, the GA_{12} and GA_{13} entries of a Timoshenko 6×6 — takes a **first-order** step: a second solve for $\mathbf{V}_1$ against a right-hand side built from $\mathbf{V}_0$, followed by an energy transformation. Two functions do this, and they are shared by every beam route in the repository:

- `prepare_v1_rhs(V0, Dh1, D11, D1e_dense, Psi, Dc)` forms the first-order right-hand side and the auxiliary blocks $\mathbf{V}_0^T \mathbf{D}_{11} \mathbf{V}_0$, $\mathbf{D}_{hl} \mathbf{V}_0$ and $\mathbf{D}_{hl}^T \mathbf{V}_0 + \mathbf{D}_{le}$, projecting the right-hand side onto the range of $\mathbf{D}_{hh}$ so the singular system stays consistent.
- `finalize_v1_and_compute_deff(V1s_raw, V0, D_eff, V0D11V0, Dh1V0, Dh1TV0D1e, Psi, Dc)` projects $\mathbf{V}_1$, symmetrises $\mathbf{D}_{\text{eff}}$, and performs the generalized-Timoshenko transformation of the energy blocks (A, B, C, D) into the sorted 6×6 .

Both live in `opensg_shell/fe_jax/msg_solver.py` and are `@jax.jit`-decorated. The output ordering of the 6×6 is `[EA, GA12, GA13, GJ, EI2, EI3]`, i.e. the strain measures `[ $\varepsilon_{11}$   $\gamma_{12}$   $\gamma_{13}$   $\kappa_1$   $\kappa_2$   $\kappa_3$ ]`, which is the VABS diagonal order.

The symmetrisation inside `finalize_v1_and_compute_deff` is not cosmetic. $\mathbf{D}_{\text{eff}}$ is a Hessian and therefore symmetric by construction, but a Dirichlet-constrained tapered-segment solve produces a small (2 to 6 percent) antisymmetric artifact, because with $\mathbf{V}_0$ pinned at the end rings $\mathbf{D}_{ee} + \mathbf{V}_0^T \mathbf{D}_{he}$ is no longer the exact symmetric Schur complement. Left alone, that artifact propagates through the inverse into the antisymmetric shear–bending coupling (C_{26} , C_{35}) and inflates it by up to 78 percent on anisotropic tapers while leaving the symmetric terms untouched. Enforcing the invariant is a no-op for a prismatic SG.

1.2.5 One factorization for two solves

Equations (1.3) and the $\mathbf{V}_1$ system share the same operator. Every beam route therefore factorizes once and back-substitutes twice. In `sg_homo.ring_indep` the augmented KKT matrix

$$\begin{bmatrix} \mathbf{D}_{hh} & \mathbf{D}_c \\ \mathbf{D}_c^T & \mathbf{0} \end{bmatrix} \begin{Bmatrix} \mathbf{V} \\ \lambda \end{Bmatrix} = \begin{Bmatrix} \mathbf{R} \\ \mathbf{0} \end{Bmatrix}$$

is built once, passed to `scipy.linalg.lu_factor`, and then `lu_solve` is called with $\mathbf{R} = -\mathbf{D}_{he}$ for $\mathbf{V}_0$ and with the `prepare_v1_rhs` output for $\mathbf{V}_1$. In the tapered-segment route the same idea appears as `sg_assembly.dirichlet_factor` followed by two `dirichlet_solve_fac` calls; the second call falls back to a fresh factorization only if the $\mathbf{V}_1$ Dirichlet set differs from the $\mathbf{V}_0$

one. In the msg-solid beam engine the equivalent is `solve_fluctuation_field`, which returns the assembled KKT matrix alongside $\mathbf{V}_0$ precisely so the caller can reuse it; there the constraint rows are scaled by 10^8 before assembly to keep the saddle-point system well conditioned, and empty rows are given a unit diagonal with a zeroed right-hand side.

1.2.6 Dehomogenization: running the chain backwards

Given macro strains (or macro forces, converted through $\bar{\varepsilon} = \mathbf{C}^{-1}\mathbf{F}$), the warping is rebuilt from the stored $\mathbf{V}_0$ and $\mathbf{V}_1$, equation (1.1) is evaluated pointwise, and the material law of each element turns that strain into 3-D stress. Nothing is re-solved: homogenize once, recover as often as you like. For the shell engine this is a *two-step* recovery — step 1 rebuilds the six shell strains plus the two wall transverse shears $[\varepsilon_{11} \ \varepsilon_{22} \ 2\varepsilon_{12} \ \kappa_{11} \ \kappa_{22} \ 2\kappa_{12}]$ and $[2\gamma_{13} \ 2\gamma_{23}]$ on the ring, and step 2 pushes them through the through-thickness plate SG to get ply-level 3-D stress. The entry points are `opensg_shell.stress_at_points` and `opensg_shell.disp_at_points` for the shell engine, and `opensg_solid.sg_dehom.dehom_fields / plate_dehom_2d` for the solid engine.

1.3 Module map

Both packages are split file-per-concern with the same naming, so a routine you know in one engine is in the same-named file in the other.

The shared FE core `src/fe_jax` is not an OpenSG concern but a general JAX finite-element architecture. The pieces the two engines actually import are `basis_quadrature` (`FiniteElementType`, `get_quadrature`, `eval_basis_and_derivatives`, all backed by `basix`), `setup.mesh_to_jax` and `setup.mesh_to_periodic_sparse_assembly_map`, `solve_cg` (a conjugate-gradient solver that returns convergence information), `linear_elasticity`, and `profiling`.

1.4 The pipelines

Four routes are described here in the order a new user meets them. Each is a sequence of calls that the entry function makes on your behalf; you only ever call the entry function.

1.4.1 msg-shell: 1-D ring $\rightarrow$ Timoshenko 6×6

This is the composite blade cross-section route. The input is a 1-D shell SG YAML: nodes and two-node elements tracing the wall contour, `elementOrientations`, `sections` carrying a layup per element set, and `materials`. The entry function is `build_rm_bundle(shell_yaml, ref=None, shear="mitc4_g23", g_source="msg")`, and it proceeds as follows.

1. `sg_mesh.load_ring_ref` reads the YAML and returns the contour arrays — nodal coordinates `rx`, connectivity `cells`, the per-element section index `rsub`, the element normals `re3`, the axial index `ax` and the two cross-section indices `cross`. The laminate reference surface comes from the YAML's own `reference` field (absent $\rightarrow$ `center`, the mid-surface), so homogenization and recovery cannot disagree; pass `ref` explicitly only to override. The reference is converted once into a thickness fraction `frac` (`center` $\rightarrow$ 0.5, `oml` $\rightarrow$ 0.0, `oml_flip` and `iml` $\rightarrow$ 1.0) and that single number then drives the ring laminate reference, the plate-SG z reference, the emitted ABD and the recovery depth conversion.

Table 1.3: `src/opensg_shell` — the MSG shell engine.

File	Concern
<code>sg_mesh.py</code>	SG input loaders and mesh utilities: 1-D ring YAML loaders (<code>load_ring</code> , <code>load_ring_ref</code>) with explicit laminate-reference conventions; 3-D segment loading and topological boundary extraction (<code>extract</code>) into solver <code>.npz</code> bundles; orientation-frame numeric reports and PNG prechecks.
<code>sg_materials.py</code>	Section laws: the per-section wall plate ABD 6×6 plus the 2×2 transverse-shear G (<code>_material_by_section</code>), and the per-station wall-law emitter <code>emit_station_abd</code> / <code>load_station_abd</code> that writes one windIO-style YAML of 8×8 Reissner–Mindlin plate laws per cross-section.
<code>sg_assembly.py</code>	Shell element operators and assembly: the production 6-DOF drilling element, the 5-DOF general taper element, the prismatic MITC4 element, MITC assumed-strain tying, the <code>compute_k22</code> / <code>compute_kg</code> initial-curvature corrections, the Dirichlet factorizations (<code>dirichlet_factor</code> , <code>dirichlet_solve_fac</code>), and the six-block MSG energy assembly (<code>assemble_segment_indep</code> , <code>assemble_constraint</code>).
<code>sg_periodicity.py</code>	Periodic local-to-global sparse assembly map for a shell mesh, 6 DOF per node ($w_1, w_2, w_3, \omega_1, \omega_2, \omega_3$) instead of the solid engine’s three translations. The tie is a plain index map; no transformation matrix is formed.
<code>sg_homo.py</code>	Homogenization drivers: <code>ring_indep</code> (ring $\rightarrow$ Timoshenko 6×6), <code>build_rm_bundle</code> (the packaged bundle the dehom consumes), <code>ring_solid</code> / <code>build_solid_bundle</code> (cross-section $\rightarrow$ equivalent 3-D solid), <code>shell_sg3d</code> (3-D shell SG $\rightarrow$ C3D), <code>segment_timo_from_3dyaml</code> (aperiodic / tapered segment), <code>elastic_constants</code> .
<code>sg_dehom.py</code>	Reissner–Mindlin two-step dehomogenization and recovery: <code>stress_at_points</code> , <code>disp_at_points</code> , built on the same element operators as the homogenization so it is the energy-consistent adjoint.
<code>sg_junction.py</code>	Level-2 junction law: local corner and micro-cell solves (<code>corner_micro_law</code> for L/T/X topologies, <code>microcell_law</code> for a periodic mini-lattice) that correct the shell lattice for sub-shell junction physics.
<code>fe_jax/</code>	The OpenSG-authored <code>msg_*</code> kernels: <code>msg_materials</code> (ABD and 6×6 tables, reference shifts), <code>msg_transverse_shear</code> (wall G , the 8×8 plate law), <code>msg_mesh</code> , <code>msg_rm/msg_rm_timo</code> (RM operators and the 5-DOF Timoshenko assembly), <code>msg_solver</code> (KKT solve, $\mathbf{V}_1$ RHS, Timoshenko finalization), <code>msg_hermite</code> (the Hermite C^1 Kirchhoff–Love thin-walled pipeline), <code>msg_dehom</code> , <code>orient_plot</code> .
<code>helper/</code>	Format converters (<code>ff_to_yaml.py</code>).

Table 1.4: `src/opensg_solid` — the general structure-gene engine.

File	Concern
<code>sg_materials.py</code>	The 6×6 stiffness tables, per material and per element: <code>build_material_C</code> and <code>get_heterogeneous_C_matrix</code> , plus the in-plane rotation. Voigt order everywhere is SwiftComp (xx, yy, zz, yz, xz, xy) .
<code>sg_mesh.py</code>	SG input parsing and mesh utilities: <code>load_sg_input</code> (a SwiftComp <code>.sc</code> or the helper’s YAML), <code>_cell_basis</code> (SG dimension plus nodes-per-element $\rightarrow$ basix cell type and basis degree), and <code>plot_sg_mesh</code> , which draws the actual mesh coloured by material.
<code>sg_assembly.py</code>	Element kernels, periodic assembly, preconditioners and linear solvers: <code>calculate_RHS_and_Ke_batch_periodic</code> , <code>compress_periodic_cells_jax</code> , <code>compute_block_inv_diag</code> , <code>apply_block_precond</code> , <code>apply_chebyshev_precond</code> , <code>ebe_jacobian_product_periodic</code> , <code>estimate_max_eigenvalue</code> , <code>_sparse_direct_solve</code> , <code>solve_fluctuation_field</code> , <code>plate_ladder_element_blocks</code> .
<code>sg_homo.py</code>	Homogenization drivers and the one public entry <code>plate_homo_2d</code> : the periodic CG pipeline (<code>full_homogenization_pipeline</code> , <code>_homo_direct</code>) for <code>n_model</code> 2 and 3, the beam KKT path (<code>_beam_homo_kkt</code>) for <code>n_model</code> 1, the Reissner–Mindlin first-order plate ladder (<code>plate_shear_ladder</code>), and the single output writer <code>write_sc_K</code> .
<code>sg_dehom.py</code>	Dehomogenization: the Gauss-point recovery kernel for <code>n_model</code> 2 and 3, the generalized-Timoshenko beam recovery chain for <code>n_model</code> 1, the public <code>dehom_fields</code> and <code>plate_dehom_2d</code> , and the Gauss exports (<code>export_gauss</code>). The batched recovery is wrapped in a module-level <code>jit</code> so repeated calls in one process do not re-trace.
<code>rm_plate_1D/</code>	The 1-D through-thickness plate stack used by both engines: <code>segment_plate.plate_sg_yaml</code> (build the through-thickness SG from a stacking sequence), <code>msg_rm_plate.rm_plate_msg</code> (the 8×8 ABDG and the warping ladders), <code>rm_dehom</code> (ply-level recovery), <code>rm_homo</code> , <code>cli_rm_plate</code> .

2. `sg_materials._material_by_section` builds, per section, the wall plate ABD 6×6 at the chosen reference and the 2×2 transverse-shear G .
3. With the default `g_source="msg"`, the wall G of every section is replaced by `rm_plate_msg`, the MSG (Yu-2002 least-squares) through-thickness solve in `opensg_solid.rm_plate_1D`, run at the same `fraction=frac`. The alternative is `g_source="whitney"`, the complementary-energy shear-flow value. The per-section laws are written to `<yaml>_ABDG.out`.
4. `sg_assembly.compute_k22` computes the hoop curvature per edge, the initial-curvature correction that makes a curved wall stiffer than a faceted approximation of it.
5. `sg_homo.ring_indep` assembles the ring as a one-element-deep strip of quads: the 6-DOF drilling element $(w_1, w_2, w_3, \theta_1, \theta_2, \omega_3)$ with an element-wise Lagrange multiplier enforcing the drilling constraint, and MITC tying of γ_{23} only. (Under span invariance γ_{13} is algebraic in the directors and carries no fluctuation gradient, so only γ_{23} pairs a differentiated displacement with a rotation.) The six energy blocks `Dhh`, `Dhe`, `Dee`, `Dhl`, `Dll`, `Dle` come out of `assemble_segment_indep` and the drilling rows `Gc`, `Gl`, `Ge` out of `assemble_constraint`; all are divided by the artificial strip depth h .
6. The KKT matrix is factorized once; $\mathbf{V}_0$ and $\mathbf{V}_1$ are obtained by two back-substitutions, and `finalize_v1_and_compute_deff` returns the generalized-Timoshenko 6×6 , symmetrised.
7. `write_sc_K` writes `<yaml>_Timo.out`, and the returned bundle carries `Timo`, `V0`, `V1`, the contour geometry, the strip, the per-element layup names and the layup and material databases — everything the two-step dehomogenization needs.

The shipped example is `examples/OpenSG_shell/1_get_beam_props_from_shell_cross_section`, whose input is `iea_s10_shell.yaml` (the IEA-22 blade at $r/R = 0.2$):

```
cd examples/OpenSG_shell/1_get_beam_props_from_shell_cross_section
python beam_homo_shell.py
```

It writes `iea_s10_shell_Timo.out` (the Timoshenko stiffness and compliance), `iea_s10_shell_ABDG.out` (the per-section wall laws), `iea_s10_mesh.png` (the contour coloured by layup) and `iea_s10_orient.png` (the compulsory $e_1/e_2/e_3$ orientation figure, emitted by `auto_emit`). The printed diagonal is $[EA, GA_2, GA_3, GJ, EI_2, EI_3]$.

1.4.2 msg-shell: 3-D segment $\rightarrow$ aperiodic Timoshenko 6×6

The ring pipeline assumes the beam is prismatic: periodic along the axis, so one cross-section suffices. A tapered segment is not periodic, so the periodicity condition has to be replaced. The entry function is `segment_timo_from_3dyaml(seg_yaml, workdir=None, lam_space="elem", shear="full")` and the input is a 3-D shell segment YAML (nodes, quads, sections, materials).

1. `sg_mesh.extract` finds the two end cross-sections *topologically*: a mesh edge used by exactly one quad is a free edge, and the connected components of the free-edge graph are the end rings. Each is written out as a standalone 1-D SG YAML (so you can inspect or re-run it on its own) together with an orientation PNG, and the whole bundle — segment coordinates, cells, subdomains, the three element frame vectors, and the node-to-segment map — is saved to `<base>_boundaries.npz`.

2. Each end ring is solved as a ring in its own right by `ring_indep`, giving C6, V0 and V1 per side.
3. The full 3-D quad mesh is assembled with the same `assemble_segment_indep` and `assemble_constraint`, with the element hoop curvature `k22_e` and geometric curvature `kg_e` computed from the element centroids and frames. The drilling multipliers are appended as extra rows and columns by `_augment_drilling`, giving a saddle-point system with zero penalty.
4. `_boundary_dirichlet` maps the ring warping fields onto the segment's end nodes. This is the boundary condition that replaces periodicity: $\mathbf{V}_0 = \mathbf{V}_{0,\text{ring}}$ and $\mathbf{V}_1 = \mathbf{V}_{1,\text{ring}}$ on both end sections.
5. `dirichlet_factor` factorizes the constrained interior once; $\mathbf{V}_0$ and then $\mathbf{V}_1$ are solved against it. The Euler–Bernoulli block is $A_{EB} = (\mathbf{D}_{ee} + \mathbf{V}_0^T \mathbf{D}_{he})/L$ with L the axial extent of the nodes, and every energy block handed to `finalize_v1_and_compute_deff` is likewise divided by L , so the result is a per-unit-length stiffness.
6. `<yaml>_Timo.out` is written with the segment length in its banner; the returned dict carries S6, C6L, C6R, L and `solve_time`.

Two acceptance checks come with this route. On a *prismatic* segment the segment 6×6 must reproduce its own boundary ring 6×6 ; measured on an isotropic and a ± 45 tube this identity holds to $\leq 5 \times 10^{-5}$ relative. On a genuinely tapered segment no identity holds, and the check is instead that each diagonal term of the segment lies between the two ring values — the ratio $(S_{ii} - R_{ii})/(L_{ii} - R_{ii})$ printed by the example must fall in $[0, 1]$. The shipped case is a BAR-URC 100 m blade segment:

```
cd examples/OpenSG_shell/5_taper_segment_aperiodic_boundaries
python run_bar_urc_segment.py
```

which reads `BAR_URC_numEl_52_segment_12.yaml` and writes `BAR_URC_numEl_52_segment_12_Timo.out`, `BAR_URC_numEl_52_segment_12_boundaries.npz`, the two boundary YAMLS `boundary..._L.yaml` and `boundary..._R.yaml`, three orientation PNGs, and the comparison table `bar_urc_segment12.dat`.

1.4.3 msg-shell: 3-D shell SG $\rightarrow$ equivalent solid C_{3D}

Here the SG is a surface in three dimensions — a triply periodic minimal surface, a lattice of sheets — and the answer wanted is the 6×6 of the equivalent homogeneous 3-D solid. The entry function is `shell_sg3d(yaml_path, omega=None, drill_pen=1.0e-3, g_source="msg", boundary="periodic")`.

1. The YAML's nodes, elements and `elementOrientations` are read; the element normal e_3 is columns 7 through 9 of the orientation rows. Triangles are accepted by repeating the last node.
2. The single wall law (ABD at the mid-surface reference plus the 2×2 G , again from `rm_plate_msg` when `g_source="msg"`) is built once and applied to every element.
3. Junction lines are counted: any shell edge shared by more than two elements. The count appears in the `.out` banner, because it tells you how much of the cell's stiffness comes from junction physics the plain shell lattice does not resolve.

4. The boundary treatment. With the default `boundary="periodic"` the periodic map ties opposite faces, edges and corners through the sparse assembly map, and the three rigid translations are removed by three area-weighted Lagrange rows. With `boundary="aperiodic"` the macro (affine) field is mapped onto the boundary instead, prescribing zero *translational* fluctuation $w_1 = w_2 = w_3 = 0$ on every node of the bounding-box faces while the rotational DOFs stay free. Clamping the rotations as well over-stiffens the cut edges; freeing them was measured to move C_{11} from +12 to +7 percent. The aperiodic result is a kinematic upper bound on a single cell and converges to the periodic one as the SG grows.
5. The batched Γ_h and Γ_e operators are evaluated at the Gauss points, contracted into the sparse $\mathbf{K}$, $\mathbf{D}_{he}$ and $\mathbf{D}_{ee}$, with a drilling stabilisation of `drill_pen` $\times A_{11}$ on the ω_3 DOF. One `scipy.sparse.linalg.splu` factorization then serves all six macro strain columns.
6. $\mathbf{D}_{\text{eff}} = \mathbf{D}_{ee} + \mathbf{V}_0^T \mathbf{D}_{he}$ is symmetrised and divided by ω . The default ω is the integrated midsurface *surface area* — the 3-D analogue of the plane-section $\omega = \text{perimeter}$ — and that is the normalisation of the returned C3D. The `<yaml>_C3D.out` file is instead written per unit-cell *volume*, so its moduli compare directly with a solid `.K` file.

Because the wall law is a Reissner–Mindlin plate law, the sheet thickness is a parameter of the material model rather than of the mesh: the same surface mesh serves any thickness, which is what makes a thickness sweep cheap. Figure 3.3 shows the Schwarz-P unit cell that the shipped example uses.

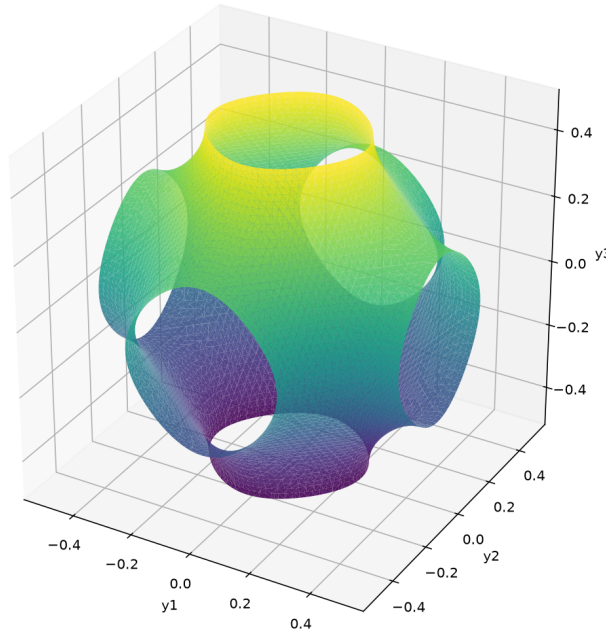


Figure 1.1: The Schwarz-P triply periodic minimal surface meshed as a 3-D shell structure gene. The surface carries a Reissner–Mindlin wall law, so sheet thickness is a material parameter and one mesh serves an entire thickness sweep. Produced by `schwarz_solid_props.py` in `examples/OpenSG_shell/4_get_solid_props_from_shell_3D_SG`.

```
cd examples/OpenSG_shell/4_get_solid_props_from_shell_3D_SG
```

```
python make_schwarz_yaml.py
python schwarz_solid_props.py
```

The run prints the junction-edge count, the number of DOF and the solve time, then the 6×6 ; it writes `schwarz_p_3Dshell_C3D.out` and `schwarz_p_mesh.png`. The companion script `compare_boundary_modes.py` runs the same cell under both boundary treatments and tabulates them in `boundary_compare.dat`. This route is validated against its own solid counterpart: for the Schwarz-P cell the shell SG sits within -3 percent on the normal moduli, -6 percent on the shears and $+0.3$ percent on Poisson's ratio relative to the SwiftComp-exact msg-solid answer.

1.4.4 msg-solid: one driver, three macro models

The msg-solid engine has a single public entry,

```
\texttt{n\_model} selects which macro strain set is built.}]
from opensg_solid.sg_homo import plate_homo_2d

r = plate_homo_2d(sc_path,          # a .sc or .yaml SG file
                  material_param=None, # (n_mat, 9) engineering override
                  angles=None,        # deg per material
                  n_model=2,          # 1 beam, 2 plate, 3 3-D solid
                  workdir=None,
                  elem_rotation=None, # (E, 9) per-element direction cosines
                  solver="direct",    # "direct" | "cg"
                  shear_refined=False, # + the RM G 2x2 (plate only)
                  plot=True,          # writes <base>_mesh.png
                  boundary=None)      # "periodic" (default) | "aperiodic"
```

Listing 1.2: The msg-solid driver signature.

and the argument that selects the physics is `n_model`: it decides which macro strain set Γ_e is built. The steps shared by all three are:

1. `sg_mesh.load_sg_input` parses the `.sc` or `YAML` into a dict carrying `dim` (the SG dimension, 1, 2 or 3), `nodes`, `cells`, `mat_id` and the materials. With `plot=True` it also writes `<base>_mesh.png` of the actual mesh, elements coloured by material. Mixed element types in one SG are rejected — the solver runs one homogeneous batch.
2. `sg_mesh._cell_basis` maps (SG dimension, nodes per element) to a basix cell type and basis degree; `fe_jax.basis_quadrature` then supplies the quadrature points `xi_qp`, weights `W_q`, basis values `phi_qn` and parametric gradients `dphi_dxi_qnp`. The quadrature degree is 6 for higher-order elements and 2 for linear ones.
3. `fe_jax.setup.mesh_to_jax` produces the element-node coordinate array `x_end` of shape (E, N, d) , and `mesh_to_periodic_sparse_assembly_map` produces the master connectivity and the DOF map that carries periodicity. Periodicity rides entirely in the assembly map; no transformation matrix is formed. With `boundary="aperiodic"` the map is the identity and instead every bounding-box-face node gets $w = 0$ Dirichlet; that option is available for the plate and solid models with `solver="direct"` only.
4. `sg_materials.get_heterogeneous_C_matrix` builds the per-element 6×6 table `C_ess` of shape $(E, 6, 6)$, applying `angles` and `elem_rotation` (per-element frames are honoured by all three models, not only the beam).

From there the routes diverge:

n_model=1, beam. Control goes to `_beam_homo_kkt`: the four Euler–Bernoulli macro modes $[\varepsilon_{11} \ \kappa_1 \ \kappa_2 \ \kappa_3]$ are solved under four rigid-body Lagrange constraints, then the first-order chain runs and the generalized-Timoshenko reduction produces the 6×6 . The result dict carries `C_eff` (the Timoshenko 6×6) and `C_eff_EB` (the classical 4×4 from the same run). The output is `<base>.out`, named *Timoshenko*, with ω in the banner. This path needs an SG of dimension ≥ 2 .

n_model=2, plate. The macro strain set is $\bar{\varepsilon} = [\varepsilon_{11} \ \varepsilon_{22} \ 2\varepsilon_{12} \ \kappa_{11} \ \kappa_{22} \ \kappa_{12}]$ and the answer is the plate ABD, written as *Classical Plate*. With `shear_refined=True` the first-order warping ladder `plate_shear_ladder` runs as well and the result gains `G_msg` (2×2), `ABDG` (the 8×8 with the shear block on the diagonal) and `A6_ladder`.

n_model=3, solid. The macro strain set is the six 3-D strains and the answer is the equivalent solid 6×6 , written with the orthotropic-approximated engineering constants appended ($E_1, E_2, E_3, G_{12}, G_{13}, G_{23}, \nu_{12}, \nu_{13}, \nu_{23}$).

Models 2 and 3 share the assembly and solve code (`_homo_direct`), so switching between a plate law and a solid law on the same mesh is a one-character change. The shipped examples are numbered by capability under `examples/OpenSG-solid/`: `1_get_plate_props_from_1DSG` (a stacking sequence in `layup_db.yaml` $\rightarrow$ `layup_db_plate_homo.out`, run with `python 1d_sg.py layup_db.yaml`), `3_get_plate_props_from_2D_SG`, `6_get_solid_props_from_3D_SG`, and `7_get_beam_props_from_SG`, whose script is:

```
cd examples/OpenSG-solid/7_get_beam_props_from_SG
python beam_homo_sg.py
```

That one reads `RHC_SW_2UC_45.yaml` (a two-unit-cell honeycomb cross-section) with `n_model = 1` and three materials overridden through `material_param` and `angles`, and writes `RHC_SW_2UC_45.out` plus `RHC_SW_2UC_45_mesh.png`.

1.5 GPU readiness

The `msg-solid` engine has two interchangeable linear solvers, and the choice is the `solver` argument of `plate_homo_2d`.

`solver="direct"` is the default. The jitted element kernels build the sparse matrix, which is handed as a CSR to `_sparse_direct_solve` — `pypardiso` (Intel MKL PARDISO) when it is importable, SciPy’s `SuperLU` otherwise. One factorization serves all macro strain columns. This is the fastest route on a workstation, and it is the only stage of the calculation that leaves the accelerator.

`solver="cg"` is the GPU route. The element kernels (`calculate_RHS_and_Ke_batch_periodic` and the jitted `jacfwd` stiffness), the element-by-element operator (`ebe_jacobian_product_periodic`), the block and Chebyshev preconditioners (`compute_block_inv_diag`, `apply_block_precond`, `apply_chebyshev_precond`, `estimate_max_eigenvalue`) and the CG solver itself (`fe_jax.solve_cg`) are pure JAX and run device-resident: no global matrix is ever formed, so memory scales with the element batch rather than with the bandwidth of an assembled operator. On a GPU host, `plate_homo_2d(..., solver="cg")` therefore keeps the entire solve on the device.

Switching solvers is digit-safe. The effective law $\mathbf{C}_{\text{eff}}$ is *stationary* in $\mathbf{V}_0$ — equation (1.4) evaluates the energy at its own minimiser — so an error δ in the fluctuation field enters the answer

at $O(\delta^2)$. A solver tolerance loose enough to be visible in $\mathbf{V}_0$ is still invisible in the printed matrix. Both routes are documented to produce the same digits.

The msg-shell routes are one step behind. Their operators are assembled as batched einsum contractions in the two-step form $\mathbf{CB}$ then $\mathbf{B}^T(\mathbf{CB})$, and those batches are written against the NumPy/jnp API and are portable to the device; the sparse factorization (SuperLU for the ring and the 3-D shell SG, pypardiso for the KKT solve in `msg_solver`) is the remaining CPU stage. For the SG sizes these routes handle — a cross-section contour is a few thousand DOF — that factorization is not the bottleneck.

Chapter 2

Input Formats and Conventions

OpenSG-2.0 reads three kinds of structure-gene (SG) description, plus one laminate shorthand and one legacy converter. Which dialect you write is decided by the geometry you have, not by the answer you want: a thin-walled cross-section contour is a 1-D shell SG, a sheet meshed as a surface in space is a 3-D shell SG, and anything meshed as a filled domain (a laminate through its thickness, a honeycomb unit cell, a lattice block) is a solid SG. The five dialects are listed in Table 2.1.

Table 2.1: The five input dialects, the package that reads each, and the example file shipped with the code.

dialect	read by	example file
1-D shell SG (cross-section contour)	<code>opensg_shell</code>	<code>iea_s10_shell.yaml</code>
3-D shell SG (surface in space)	<code>opensg_shell</code>	<code>schwarz_p_3Dshell.yaml</code>
solid SG (1-D / 2-D / 3-D mesh)	<code>opensg_solid</code>	<code>RHC_SW_2UC_45.yaml</code>
SwiftComp <code>.sc</code>	converted to the solid SG YAML	<code>RHC_SW_2UC_45.sc</code>
through-thickness layup database	<code>opensg_solid.rm_plate_1D</code>	<code>layup_db.yaml</code>

The two shell dialects share one schema — the same six top-level keys, differing only in element dimension — while the solid dialect is a separate, deliberately minimal schema whose material blocks mirror SwiftComp’s.

Every run, in every dialect, writes a timed `.out` in the SwiftComp `.K` layout. The writer is `opensg_solid.sg_homo.write_sc_K` and it always emits, in order: an `OpenSG` banner line naming the model, `The Effective <Name> Stiffness Matrix`, `The Effective <Name> Compliance Matrix`, and a `Time taken: <s> sec` footer. The `<Name>` infix is `Timoshenko` for a beam 6×6 , `Classical Plate` for a 6×6 ABD, `Reissner-Mindlin Plate` for an 8×8 ABDG, and empty for the equivalent 3-D solid law — which alone is written with `constants=True` and therefore also prints `The Engineering Constants (Approximated as Orthotropic)`. The full contract is `Rules/output_format_and_timing.md` at the repository root.

2.1 The 1-D shell SG YAML

This is the cross-section of a thin-walled beam: the wall midline (or mold line) meshed with 2-node line segments, each segment carrying a laminate. It is the input to `opensg_shell.build_rm_bundle`, which returns the Timoshenko 6×6 .

The example `iea_s10_shell.yaml` in `examples/OpenSG_shell/1_get_beam_props_from_shell_cross_section/` is station $r/R = 0.2$ of the IEA-22 blade: 307 nodes, 310 line elements, 6

layups, 6 materials. Its top-level keys, in the order OpenSG’s own writers emit them, are listed in Table 2.2.

Table 2.2: Top-level keys of the 1-D shell SG YAML.

key	content
nodes	one bracketed, space-separated triple per node: the two cross-section coordinates then the beam-axis coordinate
elements	one bracketed, space-separated pair per line element, 1-based node ids
sets	element: a list of { name , labels } groups; labels are 1-based element indices
sections	one entry per layup, tied to a set through elementSet , carrying the layup ply table
elementOrientations	one row of nine direction cosines per element, a genuine YAML list of floats
materials	named orthotropic materials with density and an elastic block of E , G , nu triples
reference	one scalar naming the surface the wall laws are referenced to: center , oml , oml_flip or iml

2.1.1 nodes

One row per node, three coordinates. In the shell dialect the row is written as a bracketed, *space-separated* triple — a single YAML scalar inside a flow sequence — and not as a comma list:

```
nodes:
- [4.70852238 0.09722431 0.00000000]
- [4.64563825 0.11238283 0.00000000]
```

Listing 2.1: The first two node rows of `iea’s10’shell.yaml`.

The space-separated form is required, not merely conventional: the orientation plotter `fe_jax/orient_plot.py` parses each row with `str(row[0]).split()`, so a comma-separated list of floats will not plot. The loader `sg_mesh.load_ring_ref` is more forgiving — its `_row` helper replaces commas by spaces before splitting — but writing the space form keeps every consumer happy at once.

The component order is fixed and is the source of most first-run confusion. The loader sets `ax = 2` and `cross = [0, 1]`, meaning the **third column is the beam axis** and the first two columns are the in-plane cross-section pair (y_2, y_3). For a plane cross-section the beam-axis column is identically zero, exactly as in the excerpt above. If you are writing a cross-section by hand and your third column is not all zeros, you have written a segment, not a cross-section.

2.1.2 elements

One row per element, the node ids of a 2-node line segment, 1-based, again space-separated inside brackets:

```
elements:
- [1 2]
- [2 3]
```

Listing 2.2: The first two element rows; element k here is element label k everywhere else in the file.

The loader detects the base with `if cells.min() == 1: cells = cells - 1`, so a 0-based mesh is also accepted, but every generator in the repository writes 1-based. Element k in this list is element label k in `sets`, and row k of `elementOrientations` belongs to it. The contour need not be a single loop: the last element of the IEA station is - [307 65], which closes a shear web back onto a skin node.

2.1.3 sets and sections

`sets` groups element labels by name; `sections` gives each named group its laminate. The tie between them is the `elementSet` field, which must equal a set `name`:

```
sets:
  element:
    - name: layup_0
      labels:
        - 1
        - 2
        - 3
  sections:
    - type: shell
      elementSet: layup_0
      layup:
        - - gelcoat
          - 0.0005
          - 0.0
        - - glass_triax
          - 0.00300294
          - 0.0
        - - glass_uniax
          - 0.02609467
          - 0.0
        - - glass_triax
          - 0.00300294
          - 0.0
```

Listing 2.3: Abridged sets and sections blocks. In the real file `layup_0` lists 25 labels (elements 1-12 and 209-221) and there are six sets and six sections.

Labels are 1-based element indices into `elements`. `sg_materials._material_by_section` builds one ABD per entry of `sections` and keys it by the section's *position in the list*; the loader then maps every element through `rsub[label - 1] = section_index`. An element that appears in no set silently falls to section 0, so every element should appear in exactly one set. `type: shell` is descriptive metadata — the shell readers key only off `elementSet` and `layup`.

Each `layup` row is [`material`, `thickness`, `angle_deg`]: a material name that must exist in `materials`, a ply thickness in metres, and a ply angle in degrees. The list is ordered **outer face first** and stacks inward along e_3 : `compute_ABD_matrix` documents its input as layer thicknesses bottom to top with the reference surface at that bottom (outer) face, and `emit_station_abd` records the same order in its `convention` string as `plies` OML→IML. The sum of the row thicknesses is the wall thickness used for the reference shift; for `layup_0` above that is $0.0005 + 0.00300294 + 0.02609467 + 0.00300294 = 0.03260055$ m, which is the `thickness` the cached ABD file reports for that layup.

2.1.4 elementOrientations

One row of nine direction cosines per element, $[e_1(3) \ e_2(3) \ e_3(3)]$, in the same component order as the node rows. Unlike **nodes** and **elements**, these rows are true YAML lists of floats:

```
elementOrientations:
- [0.0, 0.0, 1.0, -0.9721541292349604, 0.2343423756204075, 0.0, -0.2343423756204075,
  -0.9721541292349604, 0.0]
```

Listing 2.4: out of plane, then the in-plane e2 and e3.] One orientation row: e1 = [0,0,1] out of plane, then the in-plane e2 and e3.

The meaning of the triad is covered in Section 2.8.

2.1.5 materials

A list of named materials, each with a **density** and an **elastic** block holding three-component E, G and nu:

```
materials:
- name: glass_triax
  density: 1940.0
  elastic:
    E:
      - 28211400000.0
      - 16238800000.0
      - 15835500000.0
    G:
      - 8248220000.0
      - 3491240000.0
      - 3491240000.0
    nu:
      - 0.497511
      - 0.18091
      - 0.27481
```

Listing 2.5: One material block from iea's10'shell.yaml.

The triples are $[E_1, E_2, E_3]$, $[G_{12}, G_{13}, G_{23}]$ and $[\nu_{12}, \nu_{13}, \nu_{23}]$ — the argument order of `fe_jax.msg_materials.build_stiffness_6x6`, which fills the orthotropic compliance

$$S_{11} = 1/E_1, \quad S_{12} = -\nu_{12}/E_1, \quad S_{13} = -\nu_{13}/E_1, \quad S_{23} = -\nu_{23}/E_2,$$

$$S_{44} = 1/G_{23}, \quad S_{55} = 1/G_{13}, \quad S_{66} = 1/G_{12},$$

and inverts it to the 6×6 stiffness. Units follow the input; the examples are SI, so moduli are in Pa, thicknesses in m and **density** in kg/m^3 . **density** feeds the section mass per unit area that `emit_station_abd` reports as `mass_per_area` ($62.892567 \text{ kg}/\text{m}^2$ for `layup_0` of this station); it is not needed for the stiffness.

2.1.6 reference

```
reference: center
```

Listing 2.6: The whole reference block – one scalar, the last line of the file.

This single scalar names the surface the wall ABD — and therefore the whole cross-section model — is referenced to, and it is the single source of truth. `build_rm_bundle(shell_yaml)` reads it when its `ref` argument is left `None` via `ref = d.get("reference", "center")`, and the value is immediately turned into a thickness fraction `frac = {"center": 0.5, "oml": 0.0, "oml_flip": 1.0, "iml": 1.0}` that then drives the ring laminate reference, the plate-SG `z_ref`, the emitted ABD file, and the depth conversion used in stress recovery. Absent, it defaults to `center`. The four accepted values and the fraction each maps to are listed in Table 2.3.

Table 2.3: Values of `reference` and the thickness fraction each maps to.

value	meaning	fraction from the outer face
<code>center</code>	contour is the laminate mid-surface; ABD shifted by $t/2$	0.5
<code>oml</code>	contour is the outer mold line; laminate stacks inward, no shift	0.0
<code>oml_flip</code>	diagnostic: reference moved the full thickness the other way	1.0
<code>iml</code>	contour is the inner mold line; laminate stacks outward	1.0

Mid-surface meshes (tubes, ellipses, generated cross-sections) use `center`; airfoil YAMLS written on the OML use `oml`. Getting this wrong shifts **B** and **D** by a parallel-axis term of the wall thickness and moves every bending and torsion entry of the beam 6×6 , which is why it is recorded in the file rather than passed at the call site.

2.1.7 Running it

```
cd examples/OpenSG_shell/1_get_beam_props_from_shell_cross_section
python beam_homo_shell.py
```

The driver sets `name = "iea_s10"`, calls `build_rm_bundle(name + "_shell.yaml")`, and prints the 6×6 with the diagonal labelled EA GA2 GA3 GJ EI2 EI3:

```
from opensg_shell import build_rm_bundle, auto_emit

name = "iea_s10"
B = build_rm_bundle(name + "_shell.yaml")
C6 = np.asarray(B["Timo"])
LBL = ["EA", "GA2", "GA3", "GJ", "EI2", "EI3"]
print("diagonal: " + " ".join("%s=%.5g" % (LBL[i], C6[i, i]) for i in range(6)))

auto_emit(name + "_shell.yaml", out_png=name + "_orient.png")
```

Listing 2.7: The whole compute part of `beam_homo_shell.py`.

Four files come back. `iea_s10_shell_Timo.out` holds the Timoshenko 6×6 and its compliance under the banner `OpenSG msg-shell beam model [ext sh2 sh3 twist bend2 bend3]`; for this station the diagonal reads $EA = 2.766 \times 10^{10}$ N, $GA_2 = 7.186 \times 10^8$ N, $GA_3 = 4.217 \times 10^8$ N, $GJ = 2.438 \times 10^9$ N m², $EI_2 = 3.514 \times 10^{10}$ N m², $EI_3 = 6.813 \times 10^{10}$ N m², and the footer records `Time taken: 8.02 sec.` `iea_s10_shell_ABDG.out` holds one 8×8 RM wall law per section, written by `sg_homo.write_abdg_out` with the header rows `[eps11 eps22 2eps12 | K11 K22 K12+K21 | 2g13 2g23]`, so you can read off, for instance, the $A_{11} = 1.370 \times 10^9$ N/m and the transverse-shear $G_{11} = 8.283 \times 10^7$ N/m of `layup_0` directly. `iea_s10_mesh.png` is the contour coloured by layup and `iea_s10_orient.png` is the orientation check discussed in Section 2.8. On the first run `build_rm_bundle` additionally caches the per-station wall laws as `abd/iea_s10_`

`shell_abd.yaml` at the same reference the YAML declared (here written out as `reference: mid`); the write is guarded by an existence test on that path, so later runs reuse the cached file rather than recompute it.

2.2 The 3-D shell SG YAML

Same six keys, but the mesh is a surface embedded in 3-D: `nodes` are genuine three-dimensional points and `elements` are 3-noded triangles or 4-noded quads. There is no `reference` key — `shell_sg3d` calls `_material_by_section` with `center_ref=True` unconditionally, so every wall law is referenced to its mid-surface. This is the input to `opensg_shell.sg_homo.shell_sg3d`, which returns the equivalent 3-D solid 6×6 .

`schwarz_p_3dshell.yaml` is a Schwarz-P triply-periodic minimal-surface cell: 13536 nodes and 26360 triangles, one aluminium layup at $T = 0.036457$ m with $E = 69$ GPa and $\nu = 0.3$. Triangles are read and padded to the quad connectivity by repeating the last node, `el = np.array([e + [e[-1]]*(4 - len(e)) for e in el], int) - 1`, so tri and quad meshes go through one element path; ids are 1-based as in the 1-D dialect. The mesh itself is shown in Figure 2.1.

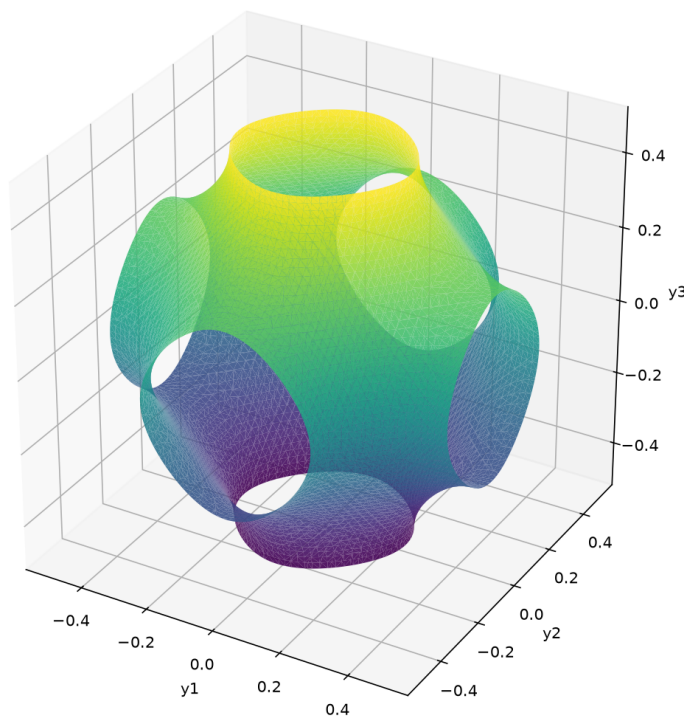


Figure 2.1: The Schwarz-P TPMS 3-D shell SG: 13536 nodes, 26360 triangles, one aluminium layup. The mesh figure is drawn by the driver from the same YAML the solver reads.

`make_schwarz_yaml.py` in the same folder is the canonical way to write one, and its emission loop shows every row format at once. The frame is built per triangle from the geometry: e_3 is the unit facet normal, e_2 is the unit $p_1 \rightarrow p_2$ edge, and $e_1 = e_2 \times e_3$.

```
o = ["nodes:"]
o += ["- [% .12f %.12f %.12f]" % tuple(p) for p in nd]
o.append("elements:")
```

```

o += ["- [%d %d %d]" % tuple(e) for e in e1]
o.append("elementOrientations:")
for k in range(ne):
    e1 = np.cross(e2[k], e3[k])
    o.append("- [%.6f, %.6f, %.6f, %.6f, %.6f, %.6f, %.6f, %.6f, %.6f]"
              % (*e1, *e2[k], *e3[k]))
o += ["sections:", "- type: shell", " elementSet: layup_0", " layup:",
      " - - alu", " - - %.6e" % T, " - 0.0",
      "materials:", "- name: alu", " density: 2700.0", " elastic:",
      " E: [%.6e, %.6e, %.6e]" % (E, E, E),
      " G: [%.6e, %.6e, %.6e]" % (G, G, G),
      " nu: [%.6f, %.6f, %.6f]" % (nu, nu, nu),
      "sets:", " element:", " - name: layup_0", " labels:"]
o += [" - %d" % (e+1) for e in range(ne)]
open("schwarz_p_3Dshell.yaml", "w").write("\n".join(o) + "\n")

```

Listing 2.8: The emission loop of `make_schwarz_yaml.py`.

Note the asymmetry the loop makes explicit and that trips up hand-written files: `nodes` and `elements` rows are space-separated inside brackets, `elementOrientations` rows are comma-separated, and the `sets` labels are 1-based. The generator prints the surface area and the relative density area $\times T$ so the shell idealisation can be checked against the solid cell it replaces.

```

cd examples/OpenSG_shell/4_get_solid_props_from_shell_3D_SG
python make_schwarz_yaml.py
python schwarz_solid_props.py

```

The second command writes `schwarz_p_3Dshell_C3D.out`, whose banner records the mesh size, the junction-edge count, the boundary treatment and the bounding-box volume the law is normalized by. For this cell it reads `OpenSG msg-shell equivalent 3D solid (3-D shell SG, 13536 nodes, 26360 elems, 0 junction edges, periodic in 3 dirs, per unit cell 1)`. Because the 3-D solid law is written with `constants=True`, the file ends with the orthotropic-approximated engineering constants — here $E_1 = 9.3296 \times 10^8$, $E_2 = 9.3314 \times 10^8$, $E_3 = 9.3285 \times 10^8$ Pa and $G_{12} = 1.0409 \times 10^9$ Pa — followed by `Time taken: 66.43 sec`. The near-equality of the three Young's moduli is the physical check: a Schwarz-P cell is cubic-symmetric, so any appreciable spread means the mesh or the frames are wrong.

2.3 The solid SG YAML

The solid dialect describes a meshed *domain* rather than a laminated *surface*, so it carries no layups and no orientations by default — the material blocks are already 6×6 stiffnesses or engineering constants. `RHC_SW_2UC_45.yaml` is a two-unit-cell honeycomb plate SG with 4251 nodes, 6640 triangles and 3 materials (Figure 2.2). The excerpt below keeps two rows per list and two of the three material blocks; its keys are collected in Table 2.4 and its material types in Table 2.5.

```

dim: 2
scale: 35.248
nodes:
- [17.6240005, 23.3500004, 0.0]
- [-17.6240005, 23.3500004, 0.0]
cells:
- [0, 66, 345]

```

```

- [345, 3, 0]
mat_id: [1, 1, 1, 1, 1]
materials:
  1:
    type: 2
    aux: [0.0, 0.0]
    C:
      - [35696.6, 27696.6, 3251.1, 0.0, 0.0, -25368.7]
      - [27696.6, 35696.6, 3251.1, 0.0, 0.0, -25368.7]
      - [3251.1, 3251.1, 8917.8, 0.0, 0.0, -487.1]
      - [0.0, 0.0, 0.0, 3500.0, -500.0, 0.0]
      - [0.0, 0.0, 0.0, -500.0, 3500.0, 0.0]
      - [-25368.7, -25368.7, -487.1, 0.0, 0.0, 27958.5]
  3:
    type: 0
    aux: [0.0, 0.0]
    E: 69000.0
    nu: 0.3

```

Listing 2.9: Abridged RHC'SW'2UC'45.yaml.

Table 2.4: Keys of the solid SG YAML, as consumed by `opensg_solid.sg_mesh.load_sg_input`.

key	meaning
<code>dim</code>	SG spatial dimension, 1, 2 or 3. Only the first <code>dim</code> node coordinates are used (<code>points = nodes[:, 0:n_sg]</code>), so the trailing zeros above are padding.
<code>scale</code>	the normalization value carried over from the <code>.sc</code> trailing line. It is parsed and preserved on the input dict, but the homogenizer computes its own SG measure ω from the mesh and prints that in the banner.
<code>nodes</code>	comma-separated coordinate rows, always three components.
<code>cells</code>	element connectivity, 0-based in this dialect (note the 0 in the first row). All elements in one SG must have the same node count; a mixed batch raises mixed element types in one SG are unsupported .
<code>mat_id</code>	one material id per cell, 1-based (the reader forms <code>mat_id - 1</code> internally).
<code>materials</code>	a mapping from that id to a material block.

Each material block carries a **type** that selects how the 6×6 is built, matching the SwiftComp material types.

`aux` is the auxiliary line of the material block, carried through verbatim from the `.sc`; the elastic path does not consume it.

The driver overrides the pre-rotated **type: 2** blocks with engineering constants plus explicit per-material angles, which is the recommended pattern when you want the ply angle to appear in exactly one place:

```

import jax.numpy as jnp
from opensg_solid.sg_homo import plate_homo_2d

n_model = 2                                # 1: Beam; 2: Plate; 3: 3D elastic

```

Table 2.5: Material types in the solid SG YAML and the `.sc` it mirrors.

type	fields	interpretation
0	<code>E, nu</code>	isotropic; $G = E/[2(1 + \nu)]$
1	<code>engineering</code>	the nine constants $E_1 E_2 E_3 G_{12} G_{13} G_{23} \nu_{12} \nu_{13} \nu_{23}$
2	<code>C</code>	the 6×6 stiffness stored directly — typically an already-rotated ply, so no <code>angles</code> should be supplied with it

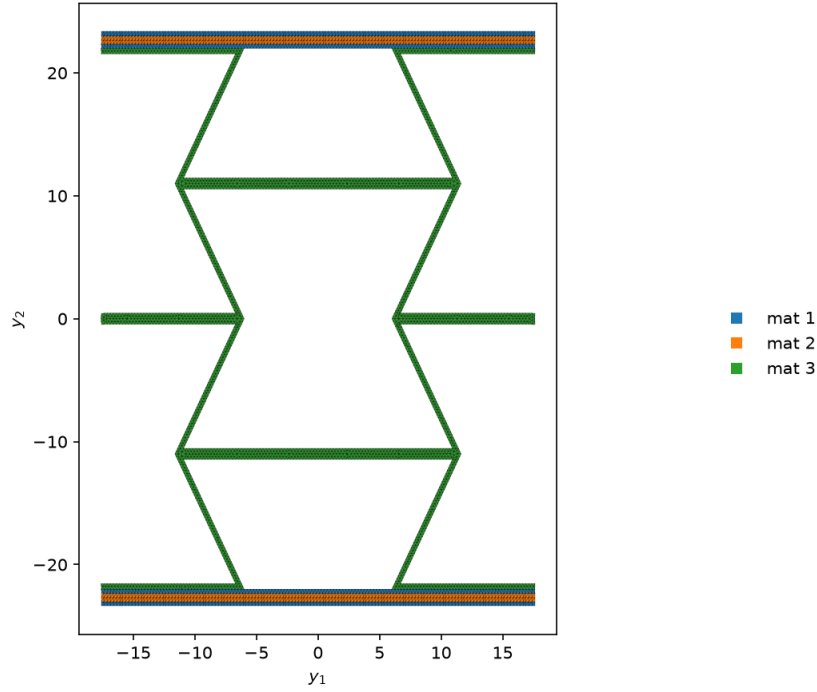


Figure 2.2: The RHC honeycomb 2-D solid SG, elements coloured by material id. This figure is written automatically as `RHC_SW_2UC_45_mesh.png` by `plot_sg_mesh` on every run with `plot=True` (the default), and is drawn from the actual parsed mesh.

```

name = "RHC_SW_2UC_45"          # reads <name>.yaml

material_param = jnp.array([
    (108e3, 8e3, 8e3, 4e3, 4e3, 3e3, 0.32, 0.32, 0.30),      # ply +45
    (108e3, 8e3, 8e3, 4e3, 4e3, 3e3, 0.32, 0.32, 0.30),      # ply -45
    (69e3, 69e3, 69e3, 26.54e3, 26.54e3, 26.54e3, 0.30, 0.30, 0.30)])
angles = jnp.array([45.0, -45.0, 0.0]) # deg per material; 0.0 = none

r = plate_homo_2d(name + ".yaml", material_param=material_param,
                  angles=angles, n_model=n_model)
print(r["C_eff"])

```

Listing 2.10: plate_homo_2dsg.py, the whole user input and the one call.

```

cd examples/OpenSG-solid/3_get_plate_props_from_2D_SG
python plate_homo_2dsg.py

```

`n_model` selects the macro model: 1 beam (Timoshenko), 2 plate, 3 equivalent 3-D solid. The run writes `RHC_SW_2UC_45.out` — The Effective Classical Plate Stiffness Matrix, rows [N11 N22 N12 M11 M22 M12], under the banner `OpenSG msg-solid plate model, omega 35.248001, periodic` — plus `RHC_SW_2UC_45_mesh.png`. The printed $\omega = 35.248001$ is the in-plane span measured from the mesh; it agrees with the file’s `scale`: 35.248 to six digits, and that agreement is the check that the mesh and the `.sc` header describe the same cell. For this run $A_{11} = 3.3586 \times 10^5$, $D_{11} = 9.0368 \times 10^7$ in the file’s own units, and the footer reads `Time taken: 7.83 sec`.

2.4 The SwiftComp .sc input and the converter

A `.sc` file can be used directly — `load_sg_input` dispatches on the extension and converts — or converted once and kept as YAML. The anatomy the reader expects is documented in the `opensg_solid.rm_plate_1D.helper.sc_to_yaml` module docstring, implemented in its `read_sc`, and summarized in Table 2.6.

Table 2.6: Blocks of a SwiftComp `.sc` file, in file order.

block	content
model header	1 to 3 short lines (submodel flags and similar)
META line	<code>dim n_nodes n_elems n_mats</code> followed by further integers; located as the first line holding at least five integers
node records	<code>n_nodes</code> lines of <code>id x [y [z]]</code>
element records	<code>n_elems</code> lines of <code>id mat_id conn</code> , the connectivity zero-padded to a fixed slot count; the padding zeros are not nodes
material blocks	per material: a header <code>mat_id mat_type n</code> , an auxiliary line such as <code>0 0</code> , then the properties — type 0 is <code>E nu</code> , type 1 is <code>E1 E2 E3 / G12 G13 G23 / v12 v13 v23</code> , type 2 is the 21 upper-triangular constants of the 6×6 over six lines
trailing line	the <code>scale</code> (volume or thickness normalization)

In `RHC_SW_2UC_45.sc` the META line is `2 4251 6640 3 0 0` — a 2-D SG with 4251 nodes, 6640 elements and 3 materials — and the file ends with the lone line `35.248`. The file’s last triangle, element 6640 of material 3 on nodes 4251/2988/3079, shows the zero padding in full:

```
6640 3 4251 2988 3079 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
```

The documented way to run the conversion is the module's own `convert`:

```
from opensg_solid.rm_plate_1D.helper.sc_to_yaml import convert

sc = convert("RHC_SW_2UC_45.sc")
print(sc["dim"], len(sc["nodes"]), len(sc["cells"]), sc["scale"])
```

Listing 2.11: Converting a .sc by hand.

`convert` writes **two** files next to the input — `<base>.yaml`, the solid SG YAML documented above, and `<base>.msh`, a gmsh v2.2 mesh carrying the material id as both physical and elementary tag — and returns the parsed dict. The module defines no `__main__` block, so import `convert` rather than invoking the module with `python -m`. Because `plate_homo_2d` performs the same conversion automatically when handed a .sc path, converting by hand is only needed when you want to inspect or edit the YAML before homogenizing.

Two failure modes are worth knowing. The tet10 slot convention is remapped explicitly (four corners, then the six midsides from slots 7–12), and any 3-D record whose nonzero slot count is not 4, 8 or 10 is refused loudly rather than converted into phantom nodes.

2.5 The through-thickness layup_db.yaml

For a plain laminate there is no mesh to write: the 1-D SG is one element stack through the thickness, and `layup_db.yaml` is the whole user input. The driver `1d_sg.py` reads it, generates the SG mesh (`1dsg.yaml` plus `1dsg.png`) through `opensg_solid.rm_plate_1D.segment_plate.plate_sg_yaml`, homogenizes with `msg_rm_plate.rm_plate_msg`, and writes `layup_db_plate_homo.out`. The generated mesh is shown in Figure 2.3 and the file's keys in Table 2.7.

The Nayak sandwich in the example is a nine-ply (0/90/0/90/core)_s stack of graphite/epoxy faces on a HEREX C70.130 PVC foam core:

```
mesh:
  n_per_layer: 1
  elem_order: 4
fraction: 0.5
layup:
  - {material: ge,    thickness: 0.0009525, angle: 0.0}
  - {material: ge,    thickness: 0.0009525, angle: 90.0}
  - {material: ge,    thickness: 0.0009525, angle: 0.0}
  - {material: ge,    thickness: 0.0009525, angle: 90.0}
  - {material: herex, thickness: 0.1447800, angle: 0.0, divisions: 8}
  - {material: ge,    thickness: 0.0009525, angle: 90.0}
  - {material: ge,    thickness: 0.0009525, angle: 0.0}
  - {material: ge,    thickness: 0.0009525, angle: 90.0}
  - {material: ge,    thickness: 0.0009525, angle: 0.0}
```

Listing 2.12: The mesh, reference and stacking blocks of `layup_db.yaml`.

```
cd examples/OpenSG-solid/1_get_plate_props_from_1DSG
python 1d_sg.py
```

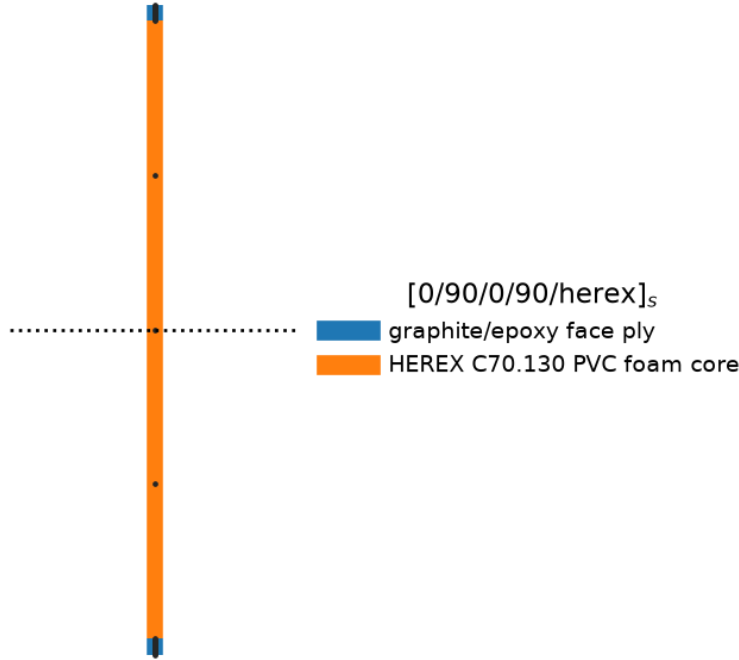


Figure 2.3: The generated through-thickness 1-D plate SG, elements coloured by material: eight thin graphite/epoxy plies bracketing the thick PVC foam core. The abscissa is y_3 , running from $-h/2$ to $+h/2$ because `fraction: 0.5` put the origin at mid-thickness.

Table 2.7: Keys of `layup_db.yaml` read by `1d_sg.py`.

key	meaning
<code>model</code>	0 prints the classical 6×6 ABD, 1 the shear-refined 8×8 ABDG. This also names the matrix in the <code>.out</code> : Classical Plate or Reissner-Mindlin Plate .
<code>fraction</code>	the reference surface as a fraction of the total thickness: 0 = bottom/OML face, 0.5 = mid-surface, 1 = top. This is the solid-side analogue of the shell YAML's reference .
<code>mesh.n_per_layer</code>	SG elements per physical ply.
<code>mesh.elem_order</code>	element polynomial order p ; nodes per element are $p + 1$, and the engine supports 1 to 4. 4 — the five-noded quartic — is the default in the example and represents the whole warping ladder exactly (V_0 quadratic, V_1 cubic, V_2 quartic).
<code>materials</code>	a mapping from short name to E (3), G (3), nu (3) and rho , with an optional full_name . Every number must parse as a float; the example's comment about 128.0e9 is a real PyYAML trap, which is why <code>1d_sg.py</code> coerces with <code>float(v)</code> on read.
<code>layup</code>	the stacking sequence, bottom ply first , each entry { material , thickness , angle }. An optional divisions key is read only by the Abaqus 3-D deck generator and ignored by the homogenizer.

`1d_sg.py` accepts an alternative database as its one positional argument, and the output file is named after that database rather than after the mesh. The `.out` banner echoes back every number that mattered, which is the fastest way to confirm the file was read as intended: `OpenSG msg-solid plate model from 1dsg.yaml: 9 plies, h = 0.152400 m, fraction = 0.5, rho*h = 30.251400 kg/m^2, rows [e11 e22 g12 k11 k22 k12 2g13 2g23]`. With `model: 1` the matrix printed is the 8×8 , whose transverse-shear block for this sandwich is $G_{11} = 7.7010 \times 10^6$ and $G_{22} = 7.5424 \times 10^6$ N/m, and whose B block is numerically zero (entries of order 10^{-6} against a 10^8 membrane term) as a symmetric stack requires.

The generated `1dsg.yaml` records the same decisions in its own header,

```
sg: {type: plate_1d, elem_order: 4, n_per_layer: 1, reference_fraction: 0.5,
    thickness: 0.15239999999999998, n_ply: 9}
nodes:
- [-0.07619999999999999]
elements:
- [1, 2, 3, 4, 5]
- [5, 6, 7, 8, 9]
```

Listing 2.13: Header, first node and first elements of the generated `1dsg.yaml` (37 node rows and 9 element rows in full).

and `read_plate_sg_yaml` cross-checks the stored ply thicknesses and `reference_fraction` against the mesh itself, rejecting a hand-edited file whose header and coordinates disagree instead of silently trusting it.

Note the element rows carefully, because this is the one place where the two solid routes genuinely differ. `segment_plate.plate_sg_yaml` numbers each element's nodes *sequentially*, `np.arange(p*e, p*e + p + 1)`, which is why the rows read `[1, 2, 3, 4, 5]` and `[5, 6, 7, 8, 9]` — consecutive integers, adjacent elements sharing their end node. `rm_plate_msg` then homogenizes that mesh with its own equispaced Lagrange basis (`nodes_xi = np.linspace(-1.0, 1.0, p + 1)`, `max(3, p + 1)`-point Gauss-Legendre), so the `layup_db.yaml` route never touches the general SG engine's element table at all. The ends-first `gmsh/basix` line ordering — `[seq[0], seq[-1]] + seq[1:-1]` — belongs instead to `opensg_solid.sg_mesh.laminate_to_sg`, the parity route that feeds the general engine, and it is that engine's `plate_homo_2d` which consults `_cell_basis` (Section 2.6).

2.6 Finite elements used by each route

The two packages discretize differently, and knowing which element you are getting explains both the DOF count and the failure modes.

2.6.1 Shell route

The shell SG never assembles a line element directly. The contour is extruded one quad deep along the beam axis by `sg_homo._strip`, with extrusion length h equal to the mean contour element length, giving quads `[a, b, m+b, m+a]`; the top node row is then DOF-mapped onto the bottom row (`dof_map = np.concatenate([np.arange(m), np.arange(m)])`) so the field is exactly span-invariant. That is the operator's own prismatic reduction. The element is therefore a 4-node bilinear quad integrated at 2×2 Gauss points ($\pm 1/\sqrt{3}$ in each direction), and the 1-D cross-section problem is recovered as its span-invariant limit. Two element families are built on that quad, and they differ only in what they do with the drilling rotation (Table 2.8).

Table 2.8: The two shell element families and how each handles the drilling rotation.

entry point	DOF/node	DOF/elem	drilling
<code>sg_homo.ring_indep</code> (production)	6: [w1, w2, w3, om1, om2, om3]	24	independent nodal ω_3 , tied back to a finite drilling residual (NDOF6 = 6)
<code>sg_assembly.ring_general</code>	5: [w1, w2, w3, om1, om2]	20	eliminated algebraically through $\omega_3 = S/(2C_{33}) - (C_{3b}/C_{33}) \omega_b$ (NDOF = 5)

The independent-drilling element exists because the elimination divides by $C_{33} = n \cdot b_3$, which vanishes on a flat wall. In the 6-DOF element ω_3 is a genuine nodal DOF and the in-plane symmetry that defined it is re-imposed in its finite, undivided form as the drilling residual

$$DR = C_{33} \omega_3 + C_{3b} \omega_b - S/2,$$

which equals $C_{33}(\omega_3 - \omega_3^{\text{eliminated}})$ and stays finite even at $C_{33} = 0$. It is enforced by an element-wise Lagrange multiplier (`lam_space="elem"`, the production setting) or by a penalty. Transverse shear uses MITC assumed-strain tying in the Dvorkin–Bathe sense: the production ring scheme is `shear="mitc4_g23"`, which ties only γ_{23} , because under span invariance γ_{13} is algebraic in the directors and carries no fluctuation gradient.

The 3-D shell SG uses the same quad element, with triangles entering as quads whose last node is repeated.

2.6.2 Solid route

`opensg_solid.sg_mesh._cell_basis` maps the SG dimension and the node count per element onto a basix cell type and Lagrange degree. This table is the list of supported elements, and it is consulted by exactly one function: `sg_homo.plate_homo_2d`, the general SG engine entry point (and therefore also by anything that reaches it, including a `.sc` handed to it directly and the `laminates_to_sg` parity route). The supported combinations are given in Table 2.9.

Table 2.9: The `_cell_basis` table: every element the general solid SG engine supports.

dim	nodes/elem	basix cell	degree
1	2	interval	1
1	3	interval	2
1	4	interval	3
1	5	interval	4
2	3	triangle	1
2	4	quadrilateral	1
3	4	tetrahedron	1
3	8	hexahedron	1
3	10	tetrahedron	2

Anything else raises `unsupported <dim>D element with <n> nodes`. Basis functions are equispaced Lagrange (`LagrangeVariant.equispaced`) with quadrature degree 6 for degree > 1 and 2 otherwise. Two connectivity conventions are applied on the way in: `_to_basix_order` permutes quad4 to [0, 1, 3, 2] and hex8 to [0, 1, 3, 2, 4, 5, 7, 6], while triangles, tetrahedra and intervals pass through unchanged.

The through-thickness laminate of Section 2.5 does *not* go through this table. Its route — `plate_sg_yaml` to `rm_plate_msg` — carries its own equispaced Lagrange basis and its own sequential node numbering, as described there. Only `laminate_to_sg`, the alternative route that packages a laminate as a generic 1-D SG dict for `plate_homo_2d`, writes the ends-first gmsh/basix line ordering that the `_cell_basis` elements expect.

2.7 Sign and order conventions

Three orderings appear across the codebase. Every one of them is stated in a module docstring rather than inferred, and every one of them is a common source of a plausible-looking but wrong answer.

2.7.1 Solid (3-D) Voigt order

The solid order is the SwiftComp order

$$[11 \ 22 \ 33 \ 23 \ 13 \ 12]$$

with **engineering shears**. The compliance therefore carries $S_{44} = 1/G_{23}$, $S_{55} = 1/G_{13}$, $S_{66} = 1/G_{12}$, and the shear rows of a recovered strain are 2γ , not γ . This is the order of `write_sc_K`'s output, of `build_stiffness_6x6`, and of every `type: 2` material `C` block in a solid SG YAML.

2.7.2 Beam order

The beam order is

$$[\varepsilon_{11} \ \gamma_{12} \ \gamma_{13} \ \kappa_1 \ \kappa_2 \ \kappa_3],$$

whose diagonal is the familiar VABS ordering

$$[EA \ GA_2 \ GA_3 \ GJ \ EI_2 \ EI_3],$$

the LBL list used by the shell drivers. **Axis 1 is the beam axis**; axes 2 and 3 are the cross-section axes.

The solver indexes global axes as $(1, 2, 3) = (\text{axial}, y_2, y_3)$ while an SG YAML writes each 3-vector as (y_2, y_3, axial) . That is why `opensg_solid.sg_materials.elem_rotation_from_yaml` cycles

$$[a, b, c] \longrightarrow [c, a, b]$$

(implemented as `o[:, :, [2, 0, 1]]`) before a YAML orientation can be used as a direction-cosine matrix in the solid beam path. Skipping that cycle points e_1 along y_3 : the run still completes and still looks plausible, but it destroys the section's symmetry, and a square tube comes out with $EI_2 \neq EI_3$.

2.7.3 Plate order

The plate order is $[N_{11} \ N_{22} \ N_{12} \ M_{11} \ M_{22} \ M_{12}]$ for the classical 6×6 , conjugate to the strain vector $[\varepsilon_{11} \ \varepsilon_{22} \ 2\varepsilon_{12} \ \kappa_{11} \ \kappa_{22} \ \kappa_{12}]$. The Reissner–Mindlin 8×8 appends the two transverse shears, giving the rows `[e11 e22 g12 k11 k22 k12 2g13 2g23]` that both `write_abdg_out` and `1d_sg.py` print in their banners, and the block structure

$$\mathbf{ABDG} = \begin{bmatrix} \mathbf{A} & \mathbf{B} & \mathbf{0} \\ \mathbf{B} & \mathbf{D} & \mathbf{0} \\ \mathbf{0} & \mathbf{0} & \mathbf{G} \end{bmatrix}.$$

For a plate SG the **last SG coordinate is the thickness direction** — the y_3 of the solid Voigt order above. With `dim: 2` that is node coordinate index 1, since only the first `dim` coordinates are read; for a through-thickness 1-D SG it is the single coordinate. This is why the RHC cell reports $\omega = 35.248$, the span of coordinate 0 (the in-plane periodic direction), and not its larger extent in coordinate 1.

2.7.4 Changing the reference surface

Moving the reference surface by z_0 maps the membrane strain ε to $\varepsilon + z_0 \kappa$, so with $\mathbf{T} = \begin{bmatrix} \mathbf{I} & z_0 \mathbf{I} \\ \mathbf{0} & \mathbf{I} \end{bmatrix}$ the plate law transforms as

$$\mathbf{ABD}_{\text{new}} = \mathbf{T}^{-\top} \mathbf{ABD} \mathbf{T}^{-1},$$

which is exactly what `fe_jax.msg_materials.shift_abd_reference(ABD, z0)` computes. Use it rather than reversing the layup: reversal flips e_3 and breaks agreement with the material orientation. The transverse-shear block $\mathbf{G}$ is reference-independent, which is why `compute_ABD_matrix` can shift the 6×6 and leave the 8×8 's $\mathbf{G}$ untouched.

2.8 Material orientation

Each row of `elementOrientations` is nine direction cosines forming three stacked unit vectors,

```
[ e1x e1y e1z | e2x e2y e2z | e3x e3y e3z ]
```

with the roles fixed across both shell dialects:

- e_1 is the **beam axis** — the prismatic direction, which for a plane cross-section meshed in (y_2, y_3) is out of plane, so `e1 = [0, 0, 1]`.
- e_2 is the **in-plane ply-flow direction**, the wall tangent along the contour.
- $e_3 = e_1 \times e_2$ is the **wall normal**, in plane for a cross-section SG, and the direction the layup stacks along from the reference surface.

The triad must be orthonormal and right-handed. `opensg_shell.sg_mesh.frame_report(nodes, cells, e1, e2, e3)` checks this numerically. It **returns** the pair (`ok`, `txt`) and prints nothing — callers such as `sg_mesh.extract` do the printing — and its one-line summary ends in `OK` or `CHECK`. Its pass/fail gate is

$$\begin{aligned} |\overline{|e_i|} - 1| &< 10^{-6} \quad (i = 1, 2, 3), & \max_{i \neq j} |e_i \cdot e_j| &< 10^{-6}, \\ \min(e_1 \times e_2 \cdot e_3) &> 0.99, & \min(e_1 \cdot \hat{x}) &> 0.999. \end{aligned}$$

The first three are universal; the fourth — e_1 axial — is cylinder-specific, as the docstring says. The report also prints a fifth number, the mean of $e_3 \cdot (-\hat{r})$, i.e. how nearly e_3 is the inward radial normal, but that value is **reported and not gated**: it appears in the text so you can read it, and a poor value alone will not turn an `OK` into a `CHECK`.

Because any mesh handling can renumber nodes and cells, an orientation PNG is a compulsory deliverable of every OpenSG run. It is emitted by the *example driver* calling `opensg_shell.auto_emit` — see the last line of `beam_homo_shell.py` — and not by any homogenization entry point: `build_rm_bundle`, `shell_sg3d` and `plate_homo_2d` never call it. `auto_emit` is cached once per

(`shell`, `solid`) path per process and swallows any exception with a `[orient_plot]` skipped message, so it never raises and is safe to call from inside a compute path; a new driver of your own should call it explicitly.

The colour convention of `fe_jax/orient_plot.py` is e_2 **blue**, e_3 **green**, drawn at element centroids over a light mesh; e_1 is out of the page and so not drawn. (The separate 3-D plotters in `sg_mesh.py` use red/blue/black for $e_1/e_2/e_3$, since there e_1 is visible.) The canonical example is the IEA-22 $r/R = 0.2$ station of Figure 2.4.

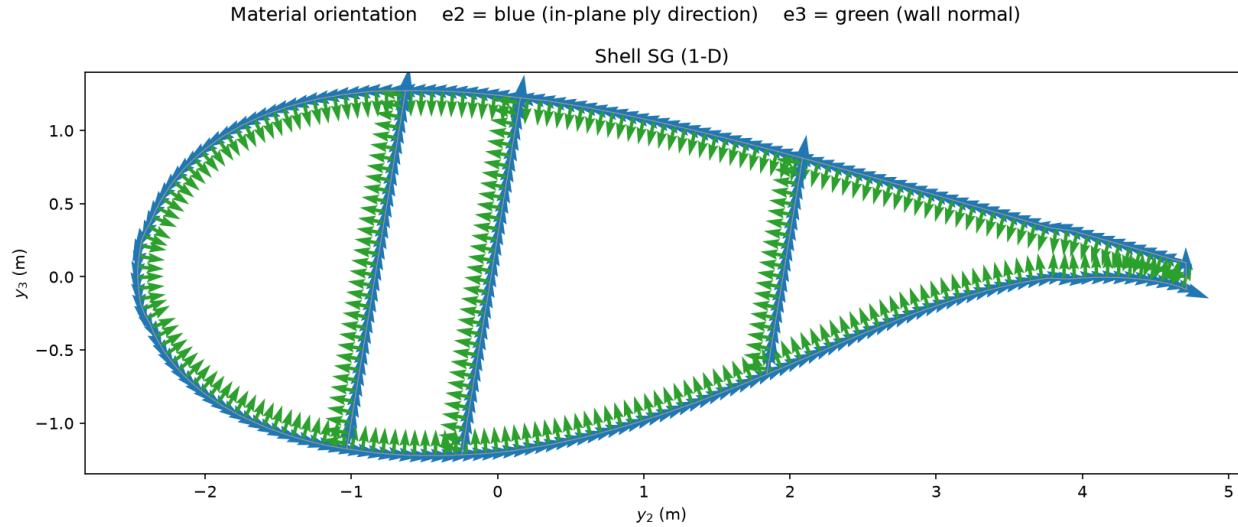


Figure 2.4: Material orientation of the IEA-22 $r/R = 0.2$ shell cross-section: e_2 in blue (in-plane ply direction), e_3 in green (wall normal). This is `iea_s10_orient.png`, written by the `auto_emit` call at the end of `beam_homo_shell.py`.

Read it as a physical check, not decoration. On this station the green e_3 arrows point inward everywhere on the skin, which is what an outward-first layup stacked from the mid-surface requires, and the blue e_2 arrows are tangent to every wall — running consistently around the closed skin loop and along each of the three shear webs. An e_3 that flips between neighbouring skin elements, or a web whose e_2 opposes its neighbours, means the layup is being stacked in two directions at once: visible here in seconds, and invisible in the resulting 6×6 .

2.8.1 Where the ply angle lives

The ply angle is **not** baked into e_1 . It lives in the third column of each `layup` row (shell dialect) or in the `angles` argument (solid dialect), and it rotates the material about e_3 , away from e_1 . The rotation `rotation_6x6(theta)` leaves the Voigt-33 row untouched and mixes the 11/22/12 rows, and the reduced in-plane stiffness built by `msg_transverse_shear._ply_Q_and_G` is the textbook

$$\bar{Q}_{11} = Q_{11} \cos^4 \theta + 2(Q_{12} + 2Q_{66}) \sin^2 \theta \cos^2 \theta + Q_{22} \sin^4 \theta,$$

so `angle: 0.0` places the fibre along e_1 — the beam axis. A wind-blade unidirectional spar cap therefore carries `angle: 0.0`, and a ± 45 ply carries `45.0` and `-45.0`.

The governing repository rule is `Rules/orientation_e1_out_of_plane.md`, which also records the failure mode: a YAML whose e_1 already contains the fibre rotation (so $|e_{1z}| < 1$) is a *fibre* frame, and combining it with a non-zero `angle` applies the rotation twice. The rule supplies a two-line check worth running on any YAML you did not write yourself:

```
ori = np.array(d["elementOrientations"], float)
e1, e3 = ori[:, 0:3], ori[:, 6:9]
assert np.allclose(np.abs(e1[:, 2]), 1.0)    # e1 out of plane
assert np.allclose(e3[:, 2], 0.0)          # e3 in plane
```

Listing 2.14: The orientation precheck from Rules/orientation'e1'out'of'plane.md.

If the first assertion fails, the file carries a fibre frame; either switch to the frame variant built with the axial rotation only, or set the fibre angle to zero downstream so the rotation is applied exactly once.

Chapter 3

Constitutive Relations Recovered by OpenSG

Every OpenSG run answers the same question. Given a structure gene (SG) — a one-dimensional through-thickness stack, a two-dimensional cross-section or cell, or a three-dimensional unit cell — what is the constitutive law of the macroscopic model that replaces it? The SG problem is solved once, and its output is a small dense stiffness matrix relating *generalized forces* to *generalized strains*. This chapter lists every such law the code produces, the exact ordering of the strain and force components in each, the function that computes it, the input file you edit, the command you type, and the file the answer is written to.

Two conventions hold throughout and are worth internalising before reading any matrix.

- **Units follow the input.** The single writer `write_sc_K` performs no unit conversion, so an SG given in metres with moduli in pascals returns N, N·m and Pa, while an SG given in millimetres with moduli in MPa returns the corresponding mixed units (N/mm, N·mm).
- **Shears are engineering shears.** Every off-diagonal strain component carries the factor of two ($2\varepsilon_{12}$, $2\bar{\Gamma}_{23}$, $2\gamma_{13}$), which is why each shear stiffness appears once, not four times, in the quadratic strain energy.

3.1 The .out contract

Every homogenization in OpenSG-2.0 writes a timed text file in the SwiftComp .K layout through one function, `opensg_solid.sg_homo.write_sc_K`:

```
write_sc_K(path, C, solve_time=None, model="", constants=True, name="")
```

Listing 3.1: The single output writer. Every law in this chapter is printed by this call.

The file opens with an `OpenSG <model>` banner, prints the effective stiffness **C**, then its exact inverse **S** = **C**^{−1} (the effective compliance), and closes with `Time taken: <t> sec`. Numbers are written by the helper `_knum`, a 19-character right-justified `%.7E` mantissa with a signed three-digit exponent, which is exactly the SwiftComp .K column format.

The `name` argument is the only thing that changes the matrix title, and it identifies which macro law you are looking at (Table 3.1).

Only the last of these also prints `The Engineering Constants (Approximated as Orthotropic)`. That is the `constants=True` branch, and it is meaningful only for a three-dimensional elasticity law; the beam and plate calls pass `constants=False`.

Table 3.1: The `name` argument of `write_sc_K` and the title it prints. The title is the fastest way to tell which law an `.out` file holds.

name passed to <code>write_sc_K</code>	title printed in the <code>.out</code>	macro law
"Timoshenko"	The Effective Timoshenko Stiffness Matrix	beam 6×6
"Classical Plate"	The Effective Classical Plate Stiffness Matrix	plate ABD 6×6
"Reissner-Mindlin Plate"	The Effective Reissner-Mindlin Plate Stiffness Matrix	plate ABDG 8×8
" (omitted)	The Effective Stiffness Matrix	3-D solid 6×6

3.2 Beam: the Timoshenko 6×6

The beam macro model carries six generalized strains: one axial extension, two transverse shears, one twist and two bending curvatures. In code order — the order stated in the module header of `src/opensg_solid/sg_homo.py` — these are

$$\bar{\epsilon} = \{ \bar{\epsilon}_{11} \ \gamma_{12} \ \gamma_{13} \ \kappa_1 \ \kappa_2 \ \kappa_3 \}^T, \quad (3.1)$$

and the conjugate generalized forces are the axial force, the two transverse shear forces, the torque and the two bending moments — the VABS ordering $\{F_1 \ F_2 \ F_3 \ M_1 \ M_2 \ M_3\}$ in which the shipped blade load table `ff51_rmc_reform.dat` is written (its header reads `# eta F1 F2 F3 M1 M2 M3 (RM CENTER-ref BeamDyn, VABS order)`). The law is

$$\begin{Bmatrix} F_1 \\ F_2 \\ F_3 \\ M_1 \\ M_2 \\ M_3 \end{Bmatrix} = \begin{bmatrix} S_{11} & S_{12} & S_{13} & S_{14} & S_{15} & S_{16} \\ S_{12} & S_{22} & S_{23} & S_{24} & S_{25} & S_{26} \\ S_{13} & S_{23} & S_{33} & S_{34} & S_{35} & S_{36} \\ S_{14} & S_{24} & S_{34} & S_{44} & S_{45} & S_{46} \\ S_{15} & S_{25} & S_{35} & S_{45} & S_{55} & S_{56} \\ S_{16} & S_{26} & S_{36} & S_{46} & S_{56} & S_{66} \end{bmatrix} \begin{Bmatrix} \bar{\epsilon}_{11} \\ \gamma_{12} \\ \gamma_{13} \\ \kappa_1 \\ \kappa_2 \\ \kappa_3 \end{Bmatrix}. \quad (3.2)$$

The matrix is fully populated in general — a composite blade section couples extension to bending and twist — but its diagonal carries the familiar engineering meaning

$$\text{diag}(\mathbf{S}) = [EA \ GA_2 \ GA_3 \ GJ \ EI_2 \ EI_3], \quad (3.3)$$

which is how the drivers label their printout: the list `LBL = ["EA", "GA2", "GA3", "GJ", "EI2", "EI3"]` appears verbatim in `examples/OpenSG_shell/IEA_blade_beam/1_homo_beam_props.py`. Read Eq. (3.3) as a naming convention, not as a claim of decoupling. S_{44} is the torsional stiffness only to the extent that the twist channel is uncoupled; when S_{45} or S_{46} is large, GJ as conventionally understood is not S_{44} .

3.2.1 Running it on a shell cross-section

The `msg-shell` ring route homogenizes a cross-section contour with the constrained six-DOF shell element (independent drilling ω_3 enforced by element-constant Lagrange multipliers, γ_{23} tied by MITC) and takes its wall transverse shear from the MSG least-squares plate solution. The user edits one file, the one-dimensional shell SG YAML, which carries the contour nodes, the line elements, the per-element orientations, the layup sections, the materials and the `reference:` field. From `examples/OpenSG_shell/IEA_blade_beam`:

```
python 1_homo_beam_props.py
```

The driver's user block is three lines long; only the station name changes:

```
name = "iea_s10" # IEA-22 station at r/R = 0.20
B = build_rm_bundle(name + "_shell.yaml")
C6 = np.asarray(B["Timo"])
```

Listing 3.2: The complete user input of the shell beam driver. `build_rm_bundle` reads `iea's10'shell.yaml`.

`build_rm_bundle` writes two files by itself: the SwiftComp-layout `<yaml base>_Timo.out` (here `iea_s10_shell_Timo.out`) with banner OpenSG msg-shell beam model [ext sh2 sh3 twist bend2 bend3] and title The Effective Timoshenko Stiffness Matrix, and the per-section wall law `<yaml base>_ABDG.out` described in Section 3.5. The driver additionally saves the bare 6×6 as `iea_s10_beam_Timo.out` and the ring mesh figure `iea_s10_ring_mesh.png`.

For the IEA-22 blade station at $r/R = 0.20$ that 6×6 has the diagonal

$$\text{diag}(\mathbf{S}) = [2.7661 \times 10^{10}, 7.1861 \times 10^8, 4.2174 \times 10^8, 2.4376 \times 10^9, 3.5144 \times 10^{10}, 6.8130 \times 10^{10}] \quad (3.4)$$

in SI units, so $EA = 27.7 \text{ GN}$, $EI_3 = 68.1 \text{ GN}\cdot\text{m}^2$ edgewise against $EI_2 = 35.1 \text{ GN}\cdot\text{m}^2$ flapwise, and $GJ = 2.44 \text{ GN}\cdot\text{m}^2$. The largest off-diagonal terms in that file are $S_{15} = 1.66864 \times 10^9$ and $S_{16} = -2.07730 \times 10^9$ (extension–bending, i.e. the section reference axis is not the tension centre) and $S_{56} = -5.55712 \times 10^9$ (the two bending channels are not principal). Terms that should vanish by symmetry sit at 10^{-5} against diagonals of 10^{10} , which is the numerical zero of this solve.

3.2.2 Running it on a solid cross-section

The `msg-solid` route runs the KKT beam driver: a zeroth-order V_0 solve under four rigid-body Lagrange constraints, then a first-order V_{1s} solve reusing the same factorization, then the 6×6 reduction in `finalize_v1_and_compute_deff`. The entry point is `plate_homo_2d(..., n_model=1)`, which requires `n_sg >= 2` (a two- or three-dimensional solid SG). From `examples/OpenSG-solid/7_get_beam_props_from_SG`:

```
python beam_homo_sg.py
```

```
n_model = 1 # 1: Beam; 2: Plate; 3: 3D elastic
name = "RHC_SW_2UC_45" # reads <name>.yaml

material_param = jnp.array([
    (108e3, 8e3, 8e3, 4e3, 4e3, 3e3, 0.32, 0.32, 0.30), # ply +45
    (108e3, 8e3, 8e3, 4e3, 4e3, 3e3, 0.32, 0.32, 0.30), # ply -45
    (69e3, 69e3, 69e3, 26.54e3, 26.54e3, 26.54e3, 0.30, 0.30, 0.30)])
angles = jnp.array([45.0, -45.0, 0.0])

r = plate_homo_2d(name + ".yaml", material_param=material_param,
                  angles=angles, n_model=n_model)
```

Listing 3.3: The user block of `beam_homo_sg.py`. The material rows are (E1,E2,E3,G12,G13,G23,nu12,nu13,nu23) in MPa; angles rotates each material about the SG normal.

This writes `RHC_SW_2UC_45.out` with banner OpenSG msg-solid beam model, omega 1 and the mesh figure `RHC_SW_2UC_45_mesh.png` (Figure 3.1). Its diagonal is $[9.8993 \times 10^6, 1.9075 \times$

10^6 , 9.3619×10^5 , 2.9775×10^8 , 2.1896×10^9 , 9.2899×10^8] in the input units (N and N·mm², since the SG is in millimetres and the moduli in MPa).

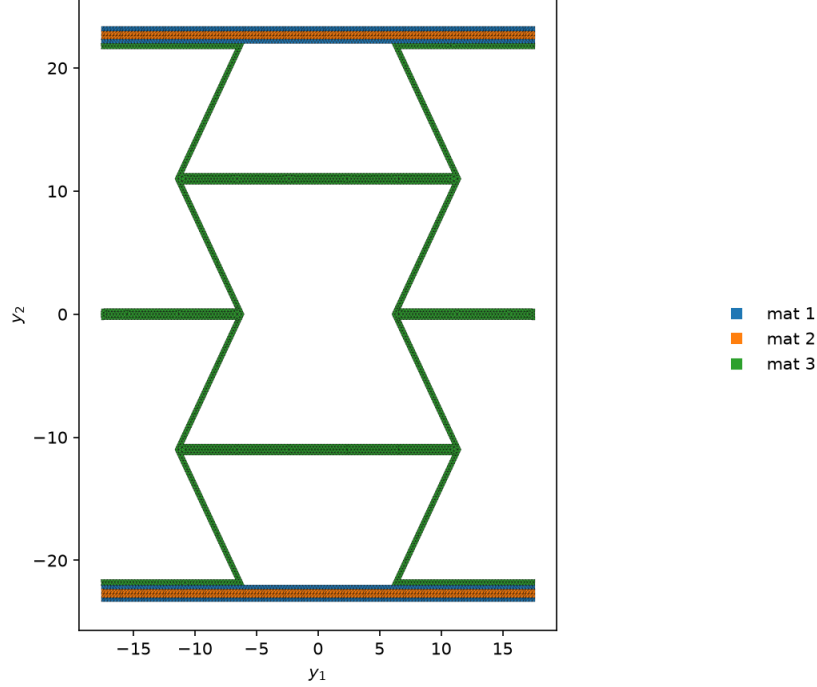


Figure 3.1: The two-dimensional honeycomb SG RHC_SW_2UC_45, the same mesh used by the beam ($n_{\text{model}} = 1$), plate (2) and solid (3) examples. Colours are the three material sets of the `.yaml`: the +45 and −45 composite plies of the cell walls and the isotropic face sheets.

3.2.3 The classical 4×4 that rides along

The Timoshenko reduction is built on top of a zeroth-order (Euler–Bernoulli) solve, and that intermediate law is a genuine classical beam stiffness in its own right. It drops the two transverse shears:

$$\begin{Bmatrix} F_1 \\ M_1 \\ M_2 \\ M_3 \end{Bmatrix} = \mathbf{A}_{\text{EB}} \begin{Bmatrix} \bar{\epsilon}_{11} \\ \kappa_1 \\ \kappa_2 \\ \kappa_3 \end{Bmatrix}, \quad \mathbf{A}_{\text{EB}} \in \mathbb{R}^{4 \times 4}. \quad (3.5)$$

On the solid route it is returned as `r["C_eff_EB"]` alongside the Timoshenko `r["C_eff"]`. In `_beam_homo_kkt` it is formed as $\mathbf{C}_{\text{eb}} = (D_{ee} + D_1^{V_0})/\omega$ immediately after the V_0 solve, before the first-order ladder runs, and it is then passed straight into `finalize_v1_and_compute_deff` as the **A** block of the Timoshenko transformation. It is not written to the `.out` — the `.out` always carries the 6×6 — so a driver that wants it must print it, as `beam_homo_sg.py` does.

3.2.4 Which routes produce the beam law

The segment route replaces axial periodicity by Dirichlet data. Each end cross-section is extracted topologically by `sg_mesh.extract`, solved on its own with `ring_`

Table 3.2: The three entry points that return a Timoshenko 6×6 . The msg-solid entry point lives in `opensg_solid.sg_homo`, the two msg-shell ones in `opensg_shell`.

route	entry point	SG input
msg-solid beam	<code>plate_homo_2d(..., n_model=1)</code>	2-D or 3-D solid SG (<code>n_sg >= 2</code>)
msg-shell ring	<code>build_rm_bundle</code> (calls <code>ring_indep</code>)	1-D shell SG (cross-section contour)
msg-shell segment	<code>segment_timo_from_3dyaml</code>	3-D shell segment YAML (tapered or prismatic)

`indep` to give that ring's C_6 , V_0 and V_1 , and those warping fields are then imposed on the segment's boundary nodes; the segment energy is divided by the segment length L_z . It writes `<yaml base>_Timo.out` with the same Timoshenko title and the banner `msg-shell tapered/aperiodic segment` (boundary V_0/V_1 Dirichlet, $L=<L_z>$). For a prismatic segment the result must reproduce the boundary ring's own 6×6 ; that identity is the standing verification of the route.

3.3 Plate: classical ABD 6×6 and Reissner–Mindlin ABDG 8×8

3.3.1 Classical (Kirchhoff–Love) plate law

The classical plate model pairs three membrane stress resultants and three moment resultants with three membrane strains and three curvatures:

$$\begin{Bmatrix} N_{11} \\ N_{22} \\ N_{12} \\ M_{11} \\ M_{22} \\ M_{12} \end{Bmatrix} = \begin{bmatrix} \mathbf{A} & \mathbf{B} \\ \mathbf{B}^T & \mathbf{D} \end{bmatrix} \begin{Bmatrix} \varepsilon_{11} \\ \varepsilon_{22} \\ 2\varepsilon_{12} \\ \kappa_{11} \\ \kappa_{22} \\ \kappa_{12} \end{Bmatrix}, \quad \mathbf{A}, \mathbf{B}, \mathbf{D} \in \mathbb{R}^{3 \times 3}. \quad (3.6)$$

The row order `[N11 N22 N12 M11 M22 M12]` is stated in the module header of `src/opensg_solid/sg_homo.py` and echoed by the driver in `examples/OpenSG-solid/3_get_plate_props_from_2D_SG`. The $\mathbf{B}$ block is the extension–bending coupling; it vanishes only for a laminate that is symmetric about the chosen reference surface, so it is a property of the SG *and* of where you put the reference. Run it with

```
python plate_homo_2dsg.py
```

which calls `plate_homo_2d(name + ".yaml", material_param=..., angles=..., n_model=2)` and writes `RHC_SW_2UC_45.out` with banner `OpenSG msg-solid plate model, omega 35.248001, periodic and title The Effective Classical Plate Stiffness Matrix`. Here $\omega = 35.248001$ is the in-plane SG measure (the cell width), and the leading entries are $A_{11} = 3.3586 \times 10^5$, $A_{22} = 1.1291 \times 10^5$, $A_{66} = 1.0552 \times 10^5$ N/mm and $D_{11} = 9.0368 \times 10^7$, $D_{22} = 5.7011 \times 10^7$, $D_{66} = 4.6026 \times 10^7$ N·mm. The $\mathbf{B}$ block is at the 10^0 level against an $\mathbf{A}$ of 10^5 , i.e. the cell is symmetric about its own mid-surface to solver precision.

3.3.2 Reissner–Mindlin plate law

The shear-refined model adds the transverse-shear pair. The strain vector grows to eight components and the resultant vector gains the two transverse shear forces Q_1 and Q_2 :

$$\begin{Bmatrix} \mathbf{N} \\ \mathbf{M} \\ \mathbf{Q} \end{Bmatrix} = \begin{bmatrix} \mathbf{A} & \mathbf{B} & \mathbf{0} \\ \mathbf{B}^\top & \mathbf{D} & \mathbf{0} \\ \mathbf{0} & \mathbf{0} & \mathbf{G} \end{bmatrix} \begin{Bmatrix} \boldsymbol{\varepsilon} \\ \boldsymbol{\kappa} \\ \boldsymbol{\gamma} \end{Bmatrix}, \quad \boldsymbol{\gamma} = \{2\gamma_{13} \ 2\gamma_{23}\}^\top, \quad \mathbf{Q} = \{Q_1 \ Q_2\}^\top, \quad (3.7)$$

with $\boldsymbol{\varepsilon}$ and $\boldsymbol{\kappa}$ exactly the first and second triples of Eq. (3.6).

The zero off-diagonal blocks are structural, not an approximation of convenience. The code assembles the 8×8 as `ABDG[:6,:6] = A6` and `ABDG[6:,6:] = G_msg`, so the in-plane law and the transverse-shear law come from two separate variational problems and are then stacked. The 2×2 block $\mathbf{G}$ is obtained as $\mathbf{G} = \mathbf{X}^{-1}$ from the $\mathbf{U}^*$ least-squares reduction of the first-order warping ladder (function `_rm_ls_reduction`), a 78-equation, 27-unknown system solved by a column-equilibrated truncated-SVD minimum-norm solve with cutoff `_LS_RCOND = 1e-12`. Two diagnostics come out with it: the relative residual of the fit, reported as `r["Ustar_rel"]`, and the smallest eigenvalue of $\mathbf{X}$. If that eigenvalue is not positive the SPD gate fails and the block is returned as `None` — in which case no 8×8 exists and the code falls back to printing the classical 6×6 . Always check that you got an 8×8 before trusting a transverse-shear number.

3.3.2.1 The 1-D SG route

`opensg_solid.rm_plate_1D.msg_rm_plate.rm_plate_msg` solves the through-thickness SG of a single laminate and returns `A6` (the 6×6 ABD), `G_msg` and `ABDG`, with rows `e11 e22 g12 k11 k22 k12 2g13 2g23`. Which of the two matrices is printed is selected by `model`: in the user's `layup_db.yaml`: `model: 0` prints the classical 6×6 , `model: 1` prints the full 8×8 . From `examples/OpenSG-solid/1_get_plate_props_from_1DSG`:

```
python 1d_sg.py
```

The input the user edits is `layup_db.yaml` alone. It carries the reference surface (`fraction: 0.5` is the mid-surface, `0` the bottom or OML face, `1` the top), the materials with their densities, the stacking sequence bottom-ply-first, and the SG discretisation (`n_per_layer: 1` element per physical ply, `elem_order: 4` for the five-noded quartic element that represents the warping ladder exactly). The script writes the SG mesh `1dsg.yaml` plus `1dsg.png` (Figure 3.2) and the law in `layup_db_plate_homo.out`.

The shipped case is the Nayak Example-5 sandwich, $(0/90/0/90/\text{core})_s$, nine plies, total thickness $h = 0.1524$ m, graphite/epoxy faces ($E_1 = 128$ GPa) over a HEREX C70.130 PVC foam core, each face ply 0.9525 mm and the core 144.78 mm. Its `.out` banner records 9 plies, $h = 0.152400$ m, `fraction = 0.5`, $\rho \cdot h = 30.251400$ kg/m² and the leading entries are

$$A_{11} = A_{22} = 5.49165 \times 10^8 \text{ N/m}, \quad D_{11} = 3.00055 \times 10^6, \quad D_{22} = 2.93711 \times 10^6 \text{ N}\cdot\text{m}, \quad (3.8)$$

$$G_{11} = 7.70098 \times 10^6 \text{ N/m}, \quad G_{22} = 7.54237 \times 10^6 \text{ N/m}. \quad (3.9)$$

Read them physically: the thin stiff faces carry the membrane and bending channels, while the thick compliant core sets the transverse shear. The $\mathbf{B}$ block prints at 10^{-6} against an $\mathbf{A}$ of 10^8 , because the stack is symmetric about `fraction: 0.5`; change that to `fraction: 0.0` and $\mathbf{B}$ becomes a leading-order term.

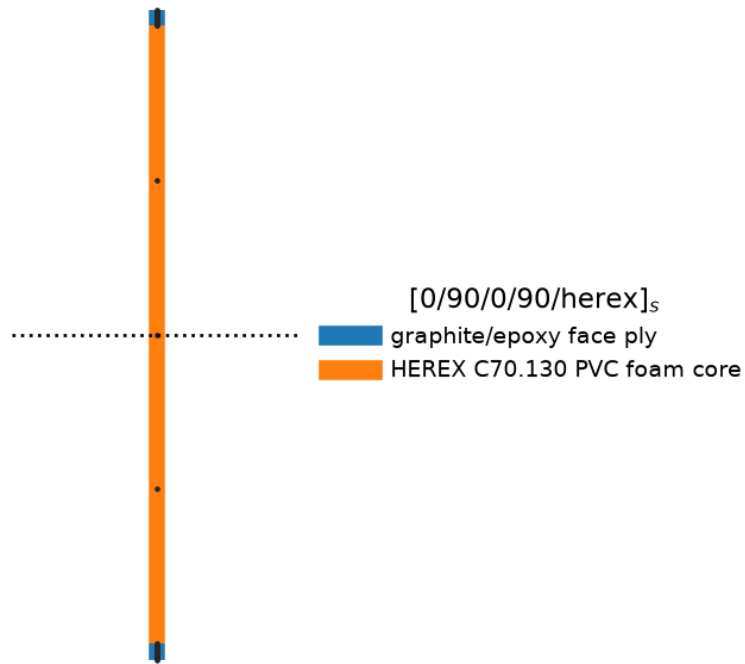


Figure 3.2: The through-thickness one-dimensional structure gene of the Nayak Example-5 sandwich written by `1d_sg.py`: eight graphite/epoxy face plies over a HEREX C70.130 foam core, with the mid-surface reference (`fraction: 0.5`) marked. This mesh is the SG whose solution is the 8×8 of Eq. (3.7).

3.3.2.2 The 2-D / 3-D SG route

`plate_homo_2d(..., n_model=2, shear_refined=True)` runs `plate_shear_ladder` on the general SG assembly after the classical solve, re-integrating the value-product ladder blocks on a quadrature exact to degree $2p + 2$. It adds `r["G_msg"]` (2×2), `r["A6_ladder"]`, `r["X_shear"]`, `r["Ustar_rel"]` and `r["ABDG"]` to the result dict, and the `.out` switches its title to **Reissner-Mindlin Plate** and its matrix to the 8×8 . Passing `shear_refined=True` with any `n_model` other than 2 raises a `ValueError`.

Note the derivation status recorded in the docstring of `plate_shear_ladder`, because it decides how much to trust the **G** block. For `n_sg = 1` this is the Yu (2005) one-dimensional formulation, gated against the closed-form anchors (an isotropic layer with $\nu = 0$ returns $\frac{5}{6}Gh$). For `n_sg = 2` or 3 it is the SwiftComp-style extension — the same energy functional with Γ_h carrying the resolved-dimension derivatives, periodic master-slave coupling, and the $\langle w \rangle = 0$ average constraint replacing the one-dimensional node constraint. That extension is gated on the laminate-as-strip equivalence (a laminate meshed as a 2-D or 3-D SG must reproduce its 1-D **G** under refinement) but is **not** yet validated against an external reference for SGs that are heterogeneous *in plane*. The shear-refined *recovery* is likewise not ported: plate dehomogenization stays the classical Kirchhoff-mode recovery.

3.4 Solid: the equivalent 3-D law

When the macro model is ordinary three-dimensional elasticity, the SG returns a 6×6 anisotropic stiffness in the Voigt order `[11 22 33 23 13 12]` with engineering shear strains:

$$\begin{Bmatrix} \sigma_{11} \\ \sigma_{22} \\ \sigma_{33} \\ \sigma_{23} \\ \sigma_{13} \\ \sigma_{12} \end{Bmatrix} = \mathbf{C}^{3D} \begin{Bmatrix} \bar{\Gamma}_{11} \\ \bar{\Gamma}_{22} \\ \bar{\Gamma}_{33} \\ 2\bar{\Gamma}_{23} \\ 2\bar{\Gamma}_{13} \\ 2\bar{\Gamma}_{12} \end{Bmatrix}, \quad \mathbf{C}^{3D} \in \mathbb{R}^{6 \times 6}. \quad (3.10)$$

Internally the solid engine stores strain and stress in the SwiftComp order (xx, yy, zz, yz, xz, xy) , which is the same list. On the `msg-shell` routes axis 1 is the prismatic (beam) direction and axes 2 and 3 span the cross-section, as recorded in the module constant `opensg_shell.sg_homo.GBAR_ORDER`:

```
strains [e11 e22 e33 2e23 2e13 2e12] -> stiffness C11..C66
```

(1=beam axis, 2/3=cross-section axes).

3.4.1 The engineering-constants block

This is the only law for which the `.out` also prints an engineering-constants block. It is computed from the compliance $\mathbf{S} = (\mathbf{C}^{3D})^{-1}$ by the orthotropic-approximation formulas coded in `write_sc_K` (and mirrored on the shell side by `opensg_shell.sg_homo.elastic_constants`, which also returns `cond(C)`):

$$E_1 = \frac{1}{S_{11}}, \quad E_2 = \frac{1}{S_{22}}, \quad E_3 = \frac{1}{S_{33}}, \quad G_{12} = \frac{1}{S_{66}}, \quad G_{13} = \frac{1}{S_{55}}, \quad G_{23} = \frac{1}{S_{44}}, \quad (3.11)$$

$$\nu_{12} = -\frac{S_{12}}{S_{11}}, \quad \nu_{13} = -\frac{S_{13}}{S_{11}}, \quad \nu_{23} = -\frac{S_{23}}{S_{22}}. \quad (3.12)$$

The word *approximated* in the printed heading is load-bearing. These nine numbers reproduce $\mathbf{C}^{3D}$ exactly only if that matrix is genuinely orthotropic in the SG axes. A cell with normal–shear coupling still prints them, and they will not rebuild the full matrix. The matrix, not the constants block, is the result.

3.4.2 Which entry points produce it

Table 3.3: The three entry points that return an equivalent 3-D solid law, and the measure each divides the assembled energy by.

entry point	SG	normalisation
<code>plate_homo_2d(..., n_model=3)</code>	1-D/2-D/3-D solid SG	$\mathbf{C}_{\text{eff}} = (\bar{\mathbf{D}} + \mathbf{D}_1)/\omega$
<code>opensg_shell.build_solid_bundle</code>	1-D shell SG (cross-section contour)	$\mathbf{C}^{3D} = \mathbf{D}_{\text{eff}}/A_{\text{cell}}$
<code>opensg_shell.sg_homo.shell_sg3d</code>	3-D shell SG (surface mesh)	$\mathbf{D}_{\text{eff}}/\omega$, ω = midsurface area

For `build_solid_bundle` the normalising area defaults to the convex hull of the contour (`area_source = "hull"`); pass `cell_area` explicitly to use a different measure, and the banner records which was used. The isotropic square-tube example in the folder `examples/OpenSG_shell/3_get_solid_props_from_shell_cross_section/ square_section_isotropic` sets `CELL_AREA = 4*a*t_w`, the wall material area, so that the shell route and the solid route are normalised identically and can be compared term by term. Its `square_tube_1Dshell_C3D.out` returns $E_1 = 7.0000000 \times 10^{10}$ Pa and $\nu_{12} = 0.30000$, recovering the wall material’s own E and ν along the beam axis exactly, which is the sanity check that fixes the normalisation.

The last row of Table 3.3 carries a subtlety worth stating plainly. `shell_sg3d` returns $\mathbf{C}^{3D}$ divided by the SG measure (the midsurface surface area, the three-dimensional analogue of the plane-section perimeter), but *writes* the `.out` divided by the bounding-box cell volume V_{cell} , so the printed moduli compare directly against a solid SwiftComp `.K` file. If you read the numbers out of the return dict and out of the `.out` and they differ by a constant factor, that factor is ω/V_{cell} and nothing is wrong.

3.4.3 Periodicity, and the aperiodic alternative

A free SG driven by six macro strains is rank one by construction: every mode except $\bar{\Gamma}_{11}$ can be cancelled at zero energy by an affine fluctuation. Something must forbid those fields. All three routes *default* to periodicity, and periodicity is the SwiftComp-parity mode:

- `build_solid_bundle(..., periodic=True)` is the default; it ties opposite bounding-box faces through the shell periodic assembly map, and the repeated `dof_map[dof_map]` resolves the edge and corner chains, so faces, edges and corners are all tied. The tie rides in the assembly map, so no constraint rows are added and the rigid kernel drops from four rows to the three translations.
- `shell_sg3d(..., boundary="periodic")` is the default; the same map is applied on the full three-dimensional coordinates, and the three rigid translations are removed by area-weighted Lagrange rows.
- `plate_homo_2d(..., boundary=None)` resolves to "periodic".

Two of these also accept an aperiodic treatment, and it is a genuine alternative, not a diagnostic. It is the *boundary-solution* treatment: for a unit cell the boundary solution is the macro (affine) field itself, and mapping it onto the boundary prescribes zero fluctuation there.

- `shell_sg3d(..., boundary="aperiodic")` clamps $w_1 = w_2 = w_3 = 0$ on every node of the bounding-box faces and leaves the three rotational DOFs **natural**. Translations are what the macro solid strain prescribes; clamping the rotations as well over-stiffens the cut edges, and the in-code note records the measured effect of freeing them (+12 % down to +7 % on C_{11}). No Lagrange border is needed, because the Dirichlet data also fixes the rigid modes.
- `plate_homo_2d(..., boundary="aperiodic")` pins all three fluctuation DOFs of every bounding-box-face node — the solid engine carries no rotational DOFs, so those three are the whole node — instead of the usual first-node pin, and assembles on the raw mesh rather than the periodic map. It is supported for the plate and solid models with `solver="direct"`; requesting it with `n_model=1` or `solver="cg"` raises a `ValueError`.

Kinematic (Dirichlet) homogenization is an *upper bound* on a single cell, and it converges to the periodic answer as the SG grows, because the boundary layer scales like $1/N$. That convergence is the acceptance check.

The head-to-head is shipped. On the shell side, the script `compare_boundary_modes.py` in `examples/OpenSG_shell/4_get_solid_props_from_shell_3D_SG` runs `shell_sg3d` on the same Schwarz-P TPMS cell (Figure 3.3) in both modes and appends a per-unit-cell block to `boundary_compare.dat`:

```
python compare_boundary_modes.py
```

Table 3.4: Schwarz-P shell cell, per-unit-cell stiffness in MPa, from `boundary_compare.dat`. The aperiodic run clamps 720 free-face nodes (81216 DOF, 42.3 s) against 79056 DOF and 66.5 s for periodic.

term	$t = 0.036457$			$t = 0.129330$		
	aperiodic	periodic	diff %	aperiodic	periodic	diff %
C_{11}	2375.89	2225.31	+6.77	9881.00	8916.81	+10.81
C_{22}	2375.92	2225.28	+6.77	9881.00	8916.85	+10.81
C_{33}	2376.22	2225.03	+6.80	9873.34	8916.17	+10.74
C_{12}	1537.47	1564.87	-1.75	4921.09	5352.21	-8.06
C_{44}	1078.28	1040.98	+3.58	4150.25	3961.63	+4.76
C_{66}	1078.61	1040.93	+3.62	4151.27	3961.51	+4.79

Table 3.4 is exactly the expected signature: the direct terms come out stiffer (a kinematic upper bound), the Poisson terms softer, and the gap widens with wall thickness because the clamped boundary layer occupies more of the cell. The solid-side twin, the identically named script in `examples/OpenSG-solid/6_get_solid_props_from_3D_SG`, does the same for the tetrahedral TPMS SGs with `plate_homo_2d(n_model=3)` and shows a larger boundary layer on the denser cell: for Sample 1, C_{11} is 12977.0 MPa aperiodic against 10190.2 MPa periodic (+27.3 %) with 17610 boundary nodes, while C_{12} falls 3.94 %. Both runs take about 150 s, so the aperiodic mode costs nothing extra — the choice is physical, not computational.

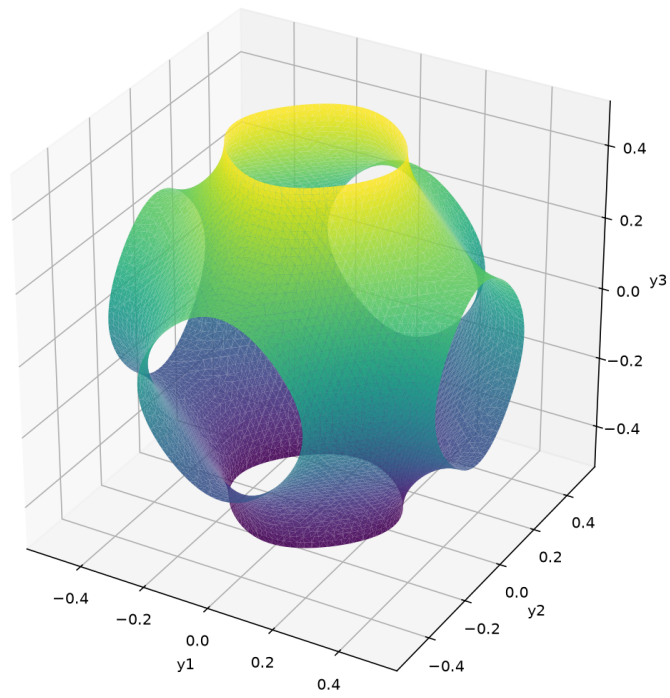


Figure 3.3: The Schwarz-P TPMS three-dimensional shell SG solved by `shell_sg3d`: 13536 nodes, 26360 shell elements, and zero junction edges (a smooth TPMS has every edge interior, so the junction treatment never fires). The banner of the `.out` reports all three counts.

3.4.4 A worked solid law: the TPMS Sample_1 cell

The reference case for Eq. (3.10) on the solid engine is `examples/OpenSG-solid/6_get_solid_props_from_3D_SG/sample_1`:

```
python run_sample_1.py
```

```
E, nu = 69.0e9, 0.30
G = E/(2*(1+nu))
r = plate_homo_2d(SC, material_param=jnp.array([(E, E, E, G, G, G,
                                                nu, nu, nu)]),
                  angles=jnp.array([0.0]), n_model=3, workdir=".", plot=True,
                  boundary="periodic") # SwiftComp .K digit-parity mode
```

Listing 3.4: `run_sample_1.py`: a 546k-tet TPMS cell of aluminium, periodic in all three directions. The single material row is isotropic $E = 69$ GPa, $\nu = 0.3$, matched to the SwiftComp .K it is checked against.

This writes `Sample_1.out` (banner `OpenSG msg-solid 3D elastic model, omega 0.3`, where $\omega = 0.3$ is the relative density of the cell), the mesh figure `Sample_1_mesh.png`, the per-unit-cell matrix `Sample_1_msg_solid.out`, and the comparison table `Sample_1_compare.dat`. The engineering-constants block of `Sample_1.out` reads

Table 3.5: The engineering constants printed by `Sample_1.out` for the TPMS Sample_1 cell (aluminium, $E = 69$ GPa, $\nu = 0.3$, $\omega = 0.3$).

constant	value (Pa)	constant	value (Pa)	constant	value
E_1	2.0547093×10^{10}	G_{12}	1.5065850×10^{10}	ν_{12}	0.35652386
E_2	2.0547272×10^{10}	G_{13}	1.5065455×10^{10}	ν_{13}	0.35654253
E_3	2.0546693×10^{10}	G_{23}	1.5065467×10^{10}	ν_{23}	0.35653028

Three things to read out of Table 3.5. First, the three Young’s moduli agree to five significant figures although they come from three independent unit-strain solves on the same cell — that is the cubic symmetry of the geometry reappearing in the answer, and it is the cheapest available verification that the periodic tie caught all faces, edges and corners. Second, the aluminium is isotropic but the cell is not: $E_1/E = 0.298$ while $G_{12}/G = 0.568$, so a TPMS at 30% relative density retains far more shear stiffness than axial stiffness. Third, the off-diagonal terms of the printed stiffness sit at 10^5 against diagonals of 10^{10} , so the orthotropic approximation behind the constants block is legitimate here. The per-unit-cell comparison in `Sample_1_compare.dat` agrees with the SwiftComp .K to $\pm 0.000\%$ on all nine reported terms ($C_{11} = 10190.158$ MPa for both).

A second, independent validation of the same law is `examples/OpenSG-solid/5_get_solid_props_from_SG` (Figure 3.4), a UD fibre/matrix square cell meshed with 801 nodes and 1536 triangles. It ships a self-contained constant-strain-triangle driver that solves Eq. (3.10) under generalized plane strain with periodic faces and writes `UDcomp_2D_DeFF.out` plus `UDcomp_2D_constants_vs_paper.dat`. Its nine constants reproduce the ASC-23 Table II Model-3 values ($E_1 = 167.2553$ GPa, $E_2 = E_3 = 11.4136$ GPa, $G_{12} = G_{13} = 6.8017$ GPa, $G_{23} = 3.0955$ GPa, $\nu_{12} = \nu_{13} = 0.31178$, $\nu_{23} = 0.57574$) to within 0.002% on every entry.

3.5 The wall law: per-section 8×8 ABDG

The msg-shell routes need a plate law for **each wall of the cross-section** before they can solve the shell SG at all, and that intermediate is exported so it can be inspected independently. `opensg_`

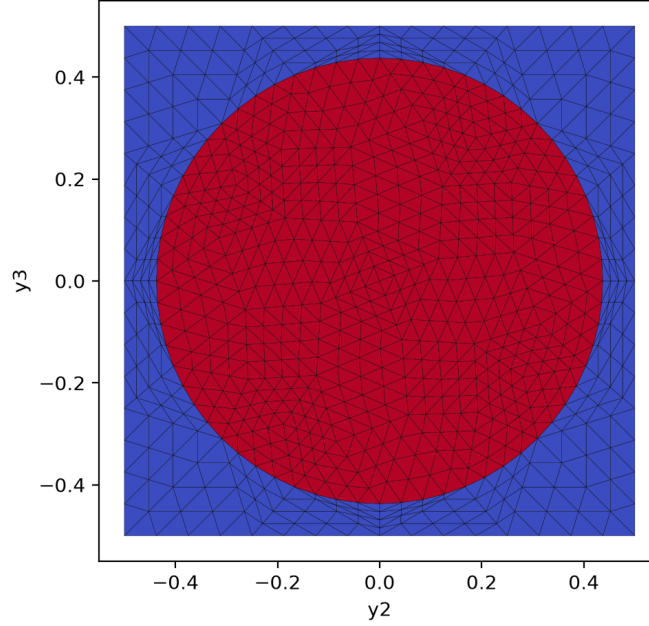


Figure 3.4: The UD fibre/matrix two-dimensional SG of `examples/OpenSG-solid/5_get_solid_props_from_SG`, whose equivalent 3-D law reproduces the published nine constants to 0.002%.

`shell.sg_homo.write_abdg_out` writes one 8×8 stiffness and its compliance per layup section to `<yaml base>_ABDG.out`. Both `build_rm_bundle` and `build_solid_bundle` call it, so this file appears next to every shell `.out` without your having to ask for it.

The file header states the row convention verbatim:

```
OpenSG msg-shell wall plate laws, one block per section
rows [eps11 eps22 2eps12 | K11 K22 K12+K21 | 2g13 2g23]
```

so the block structure is the same $[[\mathbf{A}, \mathbf{B}, \mathbf{0}], [\mathbf{B}^\top, \mathbf{D}, \mathbf{0}], [\mathbf{0}, \mathbf{0}, \mathbf{G}]]$ as Eq. (3.7), with the shell operators' twisting measure $K_{12} + K_{21}$ in the sixth slot rather than κ_{12} . Each block is preceded by its section identity and full layup, for example the first block of `iea_s10_shell_ABDG.out`:

```
section 0: layup_0 layup [['gelcoat', 0.0005, 0.0], ['glass_triax', 0.00300294, 0.0],
                           ['glass_uniax', 0.02609467, 0.0], ['glass_triax', 0.00300294, 0.0]]
```

Each layup entry is `[material name, thickness (m), angle (deg)]`, bottom ply first. That section returns $A_{11} = 1.3701540 \times 10^9$ N/m, $A_{22} = 5.5764061 \times 10^8$ N/m, $A_{66} = 1.3539842 \times 10^8$ N/m, $D_{11} = 1.0897268 \times 10^5$ N·m, $G_{11} = 8.2828865 \times 10^7$ N/m and $G_{22} = 9.8804474 \times 10^7$ N/m, with a non-zero coupling block ($B_{11} = 3.1172920 \times 10^5$ N) because the stack — gelcoat, triax, uniax, triax — is not symmetric about the mid-surface.

Two facts about how these blocks are built matter when comparing them against hand calculations.

1. The ABD is shifted by the parallel-axis rule to the reference surface the YAML declares.
reference: `center` gives the laminate mid-surface and sets `fraction = 0.5`; `oml` gives 0.0,

`iml` and `oml_flip` give 1.0. The **B** block depends on that choice, and so therefore does every extension–bending coupling downstream of it.

2. With the default `g_source="msg"` the transverse-shear block **G** is **replaced** by the MSG least-squares result from `rm_plate_msg`, evaluated at the same `fraction`. It is not a shear-correction-factor estimate. The alternative `g_source="whitney"` selects the complementary-energy shear-flow value instead.

3.6 Where each law is produced and written

Table 3.6 is the index for everything above: given a macro model, it names the function that computes the law, the file the law lands in, and the title printed inside that file.

Table 3.6: Macro model, producing function, output file, and the matrix title printed in the `.out`. Function names are given without their module prefix: `plate_homo_2d`, `_beam_homo_kkt`, `plate_shear_ladder` and `write_sc_K` live in `opensg_solid.sg_homo`, `rm_plate_msg` in `opensg_solid.rm_plate_1d.msg_rm_plate`, and the rest in `opensg_shell`. `<sg>` is the basename of the `.sc/.yaml` input, `<yaml>` the basename of the shell YAML, and `<db>` the basename of the `layup_db.yaml`.

macro law	producing function	output file	title in the <code>.out</code>
Timoshenko beam 6×6	<code>plate_homo_2d(n_model=1)</code> → <code>_beam_homo_kkt</code>	<code><sg>.out</code>	The Effective Timoshenko Stiffness Matrix
Timoshenko beam 6×6	<code>build_rm_bundle</code> → <code>ring_indep</code>	<code><yaml>_Timo.out</code>	The Effective Timoshenko Stiffness Matrix
Timoshenko beam 6×6	<code>segment_timo_from_3dyaml</code>	<code><yaml>_Timo.out</code>	The Effective Timoshenko Stiffness Matrix
Euler–Bernoulli beam 4×4	<code>_beam_homo_kkt</code> → <code>r["C_eff_EB"]</code>	in-memory only	—
Classical plate ABD 6×6	<code>plate_homo_2d(n_model=2)</code>	<code><sg>.out</code>	The Effective Classical Plate Stiffness Matrix
RM plate ABDG 8×8	<code>plate_homo_2d(n_model=2, shear_refined=True)</code> → <code>plate_shear_ladder</code>	<code><sg>.out</code>	The Effective Reissner-Mindlin Plate Stiffness Matrix
RM plate ABDG 8×8	<code>rm_plate_msg</code> → <code>r["ABDG"]</code>	<code><db>_plate_homo.out</code>	The Effective Reissner-Mindlin Plate Stiffness Matrix
3-D solid 6×6	<code>plate_homo_2d(n_model=3)</code>	<code><sg>.out</code>	The Effective Stiffness Matrix + engineering constants
3-D solid 6×6	<code>build_solid_bundle</code> → <code>ring_solid</code>	<code><yaml>_C3D.out</code>	The Effective Stiffness Matrix + engineering constants
3-D solid 6×6	<code>sg_homo.shell_sg3d</code>	<code><yaml>_C3D.out</code>	The Effective Stiffness Matrix + engineering constants
Wall plate law 8×8 , per section	<code>sg_homo.write_abdg_out</code>	<code><yaml>_ABDG.out</code>	The Effective Reissner-Mindlin Plate Stiffness Matrix, one block per section

3.7 Running the laws backwards: two-step recovery

Homogenization is only half of MSG. Each law above was obtained together with the fluctuation (warping) fields that produced it, and those fields let the macro answer be pushed back down to

pointwise 3-D stress and strain inside the SG. The rule is *homogenize once, recover as often as needed*: every field the recovery needs rides along in the result dict, so no second homogenization is ever required.

3.7.1 The shell chain: beam force to plate resultants to 3-D stress

The shell chain has two interfaces, and naming them is the clearest way to see why it works. It is verified end to end in `examples/OpenSG_shell/IEA_blade_beam/2_dehom_v2_vabs.py`:

```
python 2_dehom_v2_vabs.py
```

Step 2a — beam to wall (opensg_shell). The macro beam strain follows from inverting the Timoshenko law of Eq. (3.2), $\mathbf{st} = \mathbf{C}_6^{-1} \mathbf{FF}$, with $\mathbf{FF}$ the six beam force and moment components in VABS order read from the load table `ff51_rmc_reform.dat`. For the IEA-22 station at $r/R = 0.20$ that row is $\mathbf{FF} = [4.1927 \times 10^4, 8.2674 \times 10^3, 1.4673 \times 10^6, 1.2191 \times 10^6, -6.0185 \times 10^7, 3.0426 \times 10^5]$ in N and N·m, i.e. a flapwise-moment-dominated state. `_macro_fields` recombines the ring warping modes V_0 and V_1 into the nodal fields $w = V_0 \mathbf{st}_m + V_1 \mathbf{st}_{c1}$ and $w' = V_0 \mathbf{st}_{c1} + V_1 \mathbf{st}_{c2}$, and `_rm_shell_strain` then evaluates, per ring element, the six shell strains $\mathbf{s}_6 = [\varepsilon_{11} \ \varepsilon_{22} \ 2\varepsilon_{12} \ \kappa_{11} \ \kappa_{22} \ 2\kappa_{12}]$ together with the transverse pair $[2\gamma_{13} \ 2\gamma_{23}]$. Multiplying by that wall's own MSG ABD gives the interface quantity handed to the plate SG:

$$\mathbf{F}_6 = \mathbf{A}_6 \mathbf{s}_6 = [N_{11} \ N_{22} \ N_{12} \ M_{11} \ M_{22} \ M_{12}]^T. \quad (3.13)$$

These are exactly the resultants of Eq. (3.6): the beam model has handed each wall a plate problem. They are written to `<name>_elem_plate_forces.dat`, one row per ring element, with columns

elem	y2(m)	y3(m)	e11	e22	2e12	k11	k22	2k12	N11	N22	N12(N/m)	M11	M22	M12(N)
------	-------	-------	-----	-----	------	-----	-----	------	-----	-----	----------	-----	-----	--------

The first row of `iea_s10_elem_plate_forces.dat` reads element 0 at $(y_2, y_3) = (4.677, 0.105)$ m with $\varepsilon_{11} = 5.427 \times 10^{-4}$ and $N_{11} = 7.149 \times 10^5$ N/m — a trailing-edge panel in tension under the flapwise moment.

Step 2b — wall to 3-D (opensg_solid.rm_plate_1D). For each distinct layup, `rm_plate_msg` builds the through-thickness SG once. Then `msgrm_strain_at_depth` — or its vectorized twin `msgrm_strain_at_depth_batch`, which is the same algebra evaluated with batched einsums and is what makes a 10^5 -point section sweep tractable — returns the 3-D Voigt strain, the 3-D Voigt stress and the ply angle at any depth z . Passing only the first strain gradients `dE1/dE2` selects the first-order recovery (Yu Eq. 63); adding `dE11/dE12/dE22` selects the second-order recovery (Eq. 66), which is what can carry the transverse pair σ_{33} and σ_{13} that first order cannot produce. Output is in the ply material frame by default (`frame="material"`), since failure criteria live there; pass `frame="plate"` for anything that integrates or differentiates across plies.

3.7.2 What the shell chain gets right, and where it does not

The IEA-22 station at $r/R = 0.20$ is validated against a VABS two-dimensional solid solution of the same section, sampled at every VABS Gauss point. The RMS differences, in MPa, web / skin, are recorded in `iea_s10_report.txt` and reproduced in Table 3.7.

Table 3.7: RMS difference against VABS, in MPa, web / skin, for the IEA-22 station at $r/R = 0.20$. The last column is the RMS of the VABS field itself, so a difference equal to it means the chain returns essentially zero for that component.

component	first order	second order (V2)	VABS RMS
σ_{11}	43.073 / 9.529	43.073 / 9.529	44.440 / 96.676
σ_{22}	0.612 / 0.482	0.612 / 0.482	0.704 / 0.998
σ_{12}	6.799 / 1.255	6.798 / 1.255	22.026 / 6.009
σ_{33}	0.081 / 0.049	0.081 / 0.049	0.081 / 0.049
σ_{13}	0.394 / 0.192	0.394 / 0.192	0.394 / 0.193
σ_{23}	0.035 / 0.028	0.035 / 0.028	0.035 / 0.028

Read the last column together with the others. The dominant σ_{11} is recovered to roughly 10 % of its own RMS in the skin, and the same holds along a through-thickness path in the spar cap (38.355 MPa difference against a VABS path RMS of 285.457 MPa). But the transverse components σ_{33} , σ_{13} and σ_{23} show differences *equal to* the VABS RMS itself, which means the shell chain returns essentially zero there. That gap in the transverse pair is the honest open item on this route. It is also why the second-order drivers exist even though their payload at this near-constant load state is small: V2 changes σ_{11} by 1.95×10^{-4} MPa RMS against a first-order RMS of 8.851×10^1 MPa, and its visible effect is on σ_{33} , where the first-order field is 3.6×10^{-13} MPa (machine zero) and V2 produces 5.19×10^{-5} MPa against a VABS RMS of 5.58×10^{-2} MPa.

The recovered in-plane stress over the full section is shown in Figure 3.5: the spar caps in compression above and tension below under the flapwise moment, with the shear flow visible in σ_{12} around the leading edge and the trailing-edge panels.

3.7.3 The solid chain

For an SG homogenized through `plate_homo_2d`, recovery is a single call in `opensg_solid.sg_dehom`. From `examples/OpenSG-solid/4_get_plate_dehom_from_2DSG`:

```
from opensg_solid.sg_homo import plate_homo_2d
from opensg_solid.sg_dehom import dehom_fields, export_gauss

r = plate_homo_2d("RHC_SW_2UC_45.yaml", material_param=material_param,
                  angles=angles, n_model=2)
# the MACRO plate strain [e11, e22, 2e12, k11, k22, 2k12]
epsilon_bar = jnp.array([0.0, 0.1, 0.0, 0.1, 0.0, 0.0])
Gam, Sig, U = dehom_fields(r, epsilon_bar)
export_gauss(r, Gam, Sig, "RHC_SW_2UC_45_dehom", U_eqd=U)
```

Listing 3.5: The plate recovery driver `plate_dehom_2dsg.py`, reduced to its essentials. `epsilon_bar` is the user's macro state at the point of interest.

`epsilon_bar` is whichever macro state matches the model that was homogenized: the six plate strains $[\varepsilon_{11} \ \varepsilon_{22} \ 2\varepsilon_{12} \ \kappa_{11} \ \kappa_{22} \ 2\kappa_{12}]$ for `n_model=2`, the six macro strains of Eq. (3.10) for `n_model=3`, or the six Timoshenko beam strains of Eq. (3.2) for `n_model=1`. The beam case is run by `examples/OpenSG-solid/8_get_beam_dehom_from_SG/beam_dehom_sg.py`, whose shipped state is `epsilon_bar = jnp.array([0.001, 0.0, 0.0, 0.0, 0.01, 0.0])`, i.e. a unit axial extension of 10^{-3} combined with a κ_2 curvature of 10^{-2} . For `n_model=1` the valid recovery drivers are the classical-channel states (extension, twist, bending and their combinations); the shear channels do not drive the recovery chain.

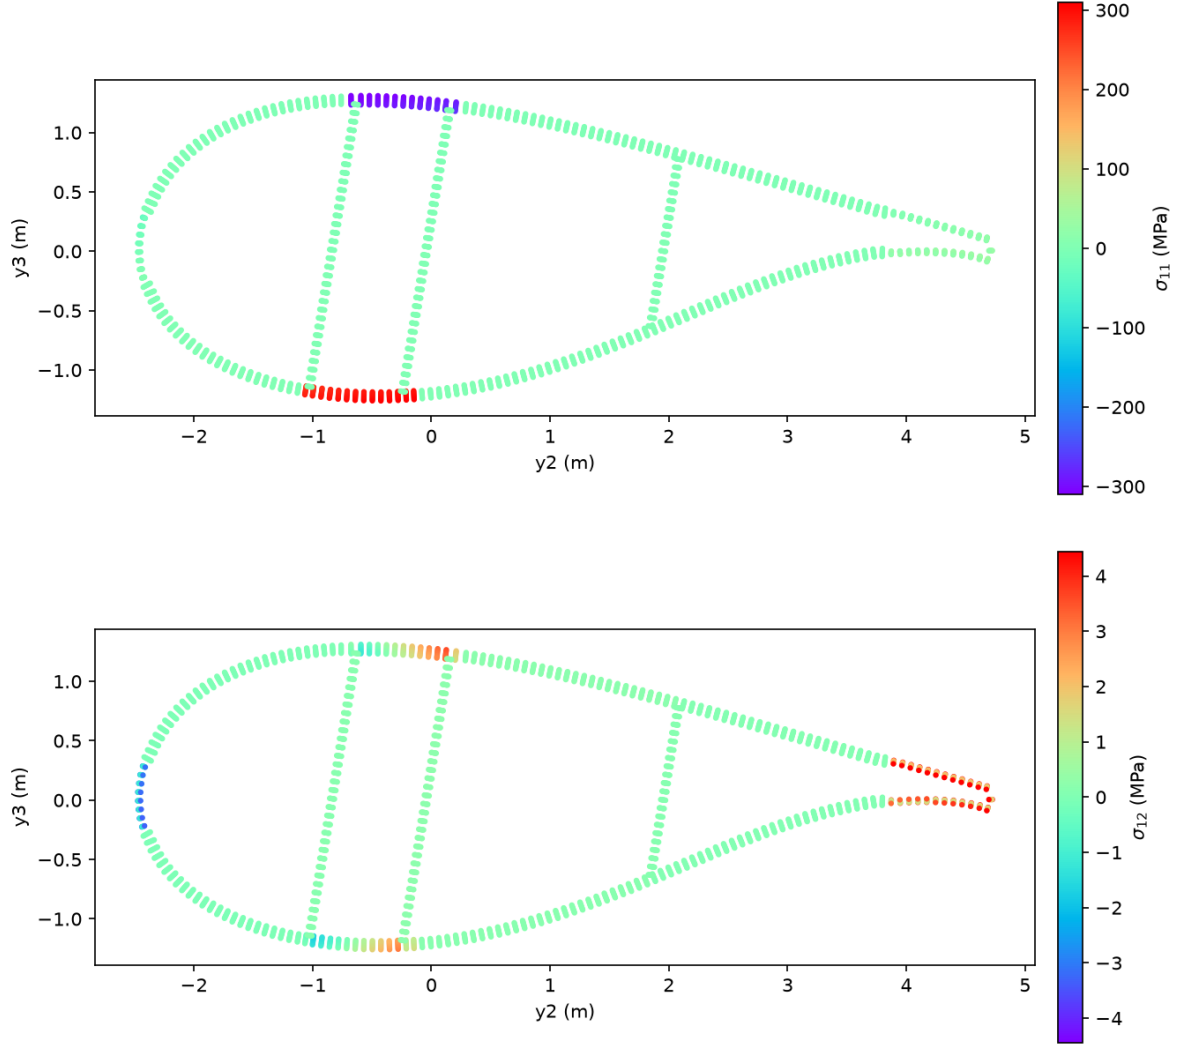


Figure 3.5: Recovered σ_{11} and σ_{12} over the IEA-22 blade cross-section at $r/R = 0.20$, plotted at the recovery points around the contour and the shear webs, from the two-step chain of Eq. (3.13) followed by `msgrm_strain_at_depth_batch`.

The call returns, at every element Gauss point, the local strain **Gamma** of shape $(E, Q, 6)$, the local stress **Sigma** of shape $(E, Q, 6)$ — both in SwiftComp storage order (xx, yy, zz, yz, xz, xy) — and the fluctuation-only displacement **U** of shape $(E, Q, 3)$. **plate_dehom_2d** is a two-output view of the same single pass, and **gauss_coords(r)** returns the physical coordinates of the recovery points as $(E \cdot Q, n_{sg})$.

export_gauss writes five files from one recovery: **<prefix>.txt** (the tab-separated Gauss table, one row per point with coordinates, six strains and six stresses), **<prefix>.vtk** (a point cloud for ParaView carrying all twelve components as scalars), and the OpenSG dehom files **<prefix>.SM** (stress), **<prefix>.EM** (strain) and **<prefix>.U** (fluctuation displacement). One convention trap is worth flagging: the printed component order in the **.SM**, **.EM** and **.U** files is 11 22 33 12 13 23, not the SwiftComp order. The reorder happens on write only; the arrays you hold in memory stay in (xx, yy, zz, yz, xz, xy) . In those three files the SG coordinates occupy the *last* n_{sg} of the (x, y, z) columns, with the leading slots zero, so that the last SG coordinate — the plate thickness direction — always lands in the z column.

Chapter 4

Tutorials: the Shell Engine (msg-shell)

The `msg-shell` engine solves structure genes whose heterogeneity lives in a *surface*: the mid-surface of a thin composite wall. Thickness never appears in the mesh. It lives inside the wall’s Reissner–Mindlin plate law and inside the through-thickness recovery ladder, so changing a ply schedule is a change of material data, not a remesh.

Five capabilities ship as runnable examples, all under `examples/OpenSG_shell/`. Every one of them takes a YAML file in and writes a timed output file in the SwiftComp `.K` layout.

example folder	driver	entry point	produces
1_get_beam_props_...	beam_homo_shell.py	build_rm_bundle	Timoshenko 6×6
2_get_beam_dehom_...	beam_dehom_shell.py	build_rm_bundle + recovery	3-D wall stress
3_get_solid_props_...	four sub-folders	build_solid_bundle	equivalent solid 6×6
4_get_solid_props_...	schwarz_solid_props.py	shell_sg3d	equivalent solid 6×6
5_taper_segment_...	run_taper_segment.py	segment_timo_from_3dyaml	tapered-segment 6×6

Table 4.1: The five `msg-shell` capabilities and the example folder that demonstrates each one. Folder names are abbreviated; the full names appear at the head of each section below.

4.1 Beam properties from a shell cross-section

4.1.1 What this capability computes

Given the contour of a thin-walled composite cross-section, this run produces the 6×6 Timoshenko beam stiffness matrix of that section: the constitutive law a beam solver such as BeamDyn or GEBT needs. It also writes the 8×8 Reissner–Mindlin plate law of every distinct wall region, because those are the intermediate quantities the beam matrix is assembled from.

The example is `examples/OpenSG_shell/1_get_beam_props_from_shell_cross_section`, and the input is `iea_s10_shell.yaml`: station $r/R = 0.20$ of the IEA-22 MW reference blade.

4.1.2 What a 1-D shell SG is

A **1-D shell structure gene** is the contour of the cross-section: a chain of straight two-node line elements along the wall mid-surface, each element carrying a laminate stack as material data

rather than as geometry. A 2-D solid cross-section mesh, by contrast, discretizes the wall *through* its thickness with area elements, so every ply interface must be resolved by the mesh.

The consequence for the user is size. This station spans about 7.2 m in y_2 and 2.5 m in y_3 , has spar caps 87.6 mm thick and three shear webs, and is fully described by 307 nodes and 310 line elements. The price is that the walls are modelled as Reissner–Mindlin plates, so wall-thickness effects enter through the plate law and the recovery ladder rather than through the mesh.

4.1.3 The input file the user edits

`build_rm_bundle` reads exactly one file. These are its blocks, with the values found in `iea_s10_shell.yaml`.

block	content	this station
<code>nodes</code>	<code>[y2 y3 0]</code> contour coordinates, metres	307 nodes
<code>elements</code>	1-based two-node line connectivity	310 elements
<code>sets: element</code>	named element sets, one per wall region	6 sets
<code>sections</code>	per set: <code>elementSet</code> plus <code>layup</code> as [<code>material</code> , <code>thickness</code> , <code>angle</code>] triples, outer ply first	6 sections
<code>elementOrientations</code>	per element, the flattened 3×3 frame $[e_1 \ e_2 \ e_3]$	310 rows
<code>materials</code>	<code>name</code> , <code>density</code> , <code>elastic</code> : $\{E, G, \nu\}$ as 3-vectors	6 materials
<code>reference</code>	the reference surface the whole run is referred to	<code>center</code>

Table 4.2: The seven YAML blocks read by `build_rm_bundle`.

The `reference` field is the single source of truth. `build_rm_bundle` reads it and maps it to a thickness fraction (`center` $\rightarrow$ 0.5, `oml` $\rightarrow$ 0.0, `iml` and `oml_flip` $\rightarrow$ 1.0). That one number is then used consistently for the ring laminate reference, the plate-SG z origin, the emitted ABD cache and the recovery depth conversion. Pass `ref=` explicitly only to override it. Because the reference here is the mid-surface, quantities that depend on the reference axis, in particular GJ and the bending–extension couplings, are mid-surface values.

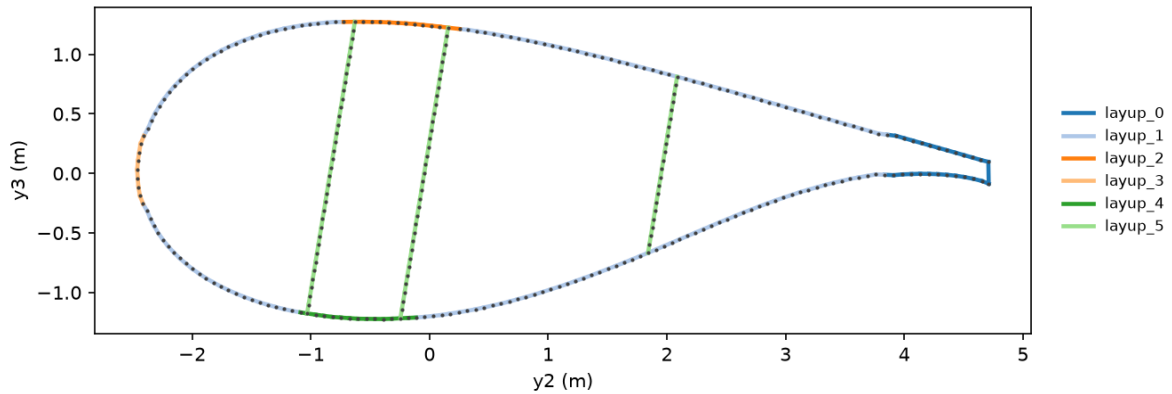


Figure 4.1: The 1-D shell SG of IEA-22 station $r/R = 0.20$: 307 nodes and 310 line elements along the wall mid-surface, coloured by `sets: element` entry. This is the figure written by `beam_homo_shell.py` as `iea_s10_mesh.png`.

Each colour in Figure 4.1 is one element set, and each set carries one laminate stack.

`layup_2` and `layup_4` are the carbon spar caps on the upper and lower surfaces, `layup_1` is the foam-cored skin that covers most of the contour, `layup_5` is the three shear webs, `layup_0` is

layup	plies, outer ply first	total thickness (m)	elements
layup_0	gelcoat, glass'triax, glass'uniax, glass'triax	0.03260055	25
layup_1	gelcoat, glass'triax, medium'density'foam, glass'triax	0.07711403	161
layup_2	gelcoat, glass'triax, carbon'uniax (0.08106 m), glass'triax	0.08756579	13
layup_3	gelcoat, glass'triax, glass'uniax, glass'triax	0.02808872	8
layup_4	gelcoat, glass'triax, carbon'uniax (0.07707 m), glass'triax	0.08358040	14
layup_5	glass'biax, medium'density'foam, glass'biax	0.04600000	89

Table 4.3: The six laminate stacks of station `iea_s10`, as read from the `sections` block and echoed in the header of each block of `iea_s10_shell_ABDG.out`.

the trailing-edge reinforcement and `layup_3` the leading edge. Every ply angle in this file is 0° ; the biax and triax fabrics are supplied as smeared orthotropic materials rather than as individual plies, so the material frame of the recovery coincides with the wall frame here.

4.1.4 Orientation frames

A wrong `elementOrientations` block is the most common way to get a plausible-looking but wrong answer, so the example driver calls `auto_emit` explicitly after the homogenization and writes an orientation figure. Note that `auto_emit` is called *by the driver*, not from inside `build_rm_bundle`: if you write your own script around `build_rm_bundle`, add the `auto_emit` call yourself.

e_1 is the beam axis (out of the page), e_2 (blue) is the in-plane ply-flow direction along the contour, and e_3 (green) is the wall normal, which sets the OML $\rightarrow$ IML sense used by the recovery.

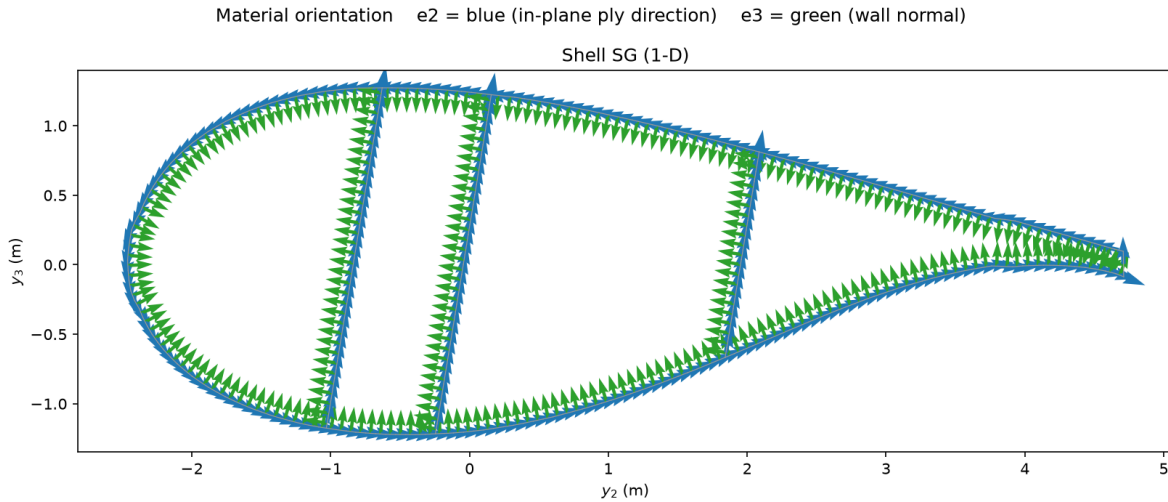


Figure 4.2: Per-element e_2 (in-plane ply direction) and e_3 (wall normal) on the contour, written by `auto_emit` as `iea_s10_orient.png`. Check that the normals point consistently into the section on the skin and consistently to one side on each web before trusting any stiffness number.

4.1.5 The element and the wall law

The ring is assembled as a one-quad-deep prismatic strip: the contour is extruded by the mean element length along the beam axis, and the extruded node row is DOF-mapped back onto the original row, which enforces the prismatic (span-invariant) condition exactly. All matrices are then

divided by that depth, so the result is per unit length. The strip actually assembled is returned in the bundle under the key `strip` as `(nodes, quads, h)`.

Each node carries **six** degrees of freedom, $[w_1 \ w_2 \ w_3 \ \omega_1 \ \omega_2 \ \omega_3]$. The drilling rotation ω_3 is an *independent* field rather than an algebraic function of the displacements. Making it independent is what allows adjacent walls meeting at a junction to share a consistent rotation, but it also introduces a spurious mode, which is removed by a weak drilling constraint carried by one element-constant Lagrange multiplier per element (`lam_space="elem"`). Element-constant is the inf-sup-stable choice; equal-order nodal multipliers over-constrain as the mesh is refined.

Transverse shear uses assumed-strain (MITC) tying, and the production ring scheme (`shear="mitc4_g23"`, the default of `build_rm_bundle`) ties **only** the γ_{23} row. The reason is specific to a prismatic strip: under span invariance γ_{13} carries no fluctuation gradient and is algebraic in the directors, so tying it would alias the drilling mode instead of curing shear locking. Only γ_{23} pairs a differentiated displacement with a rotation.

The wall constitutive law is therefore the 8×8 Reissner–Mindlin plate law

$$\mathbf{ABDG} = \begin{bmatrix} \mathbf{A} & \mathbf{B} & \mathbf{0} \\ \mathbf{B} & \mathbf{D} & \mathbf{0} \\ \mathbf{0} & \mathbf{0} & \mathbf{G} \end{bmatrix}, \quad \bar{\varepsilon} = [\varepsilon_{11} \ \varepsilon_{22} \ 2\varepsilon_{12} \ K_{11} \ K_{22} \ K_{12} + K_{21} \ 2\gamma_{13} \ 2\gamma_{23}]^T, \quad (4.1)$$

with exactly that row grouping printed in the header of `iea_s10_shell_ABDG.out`: rows `[eps11 eps22 2eps12 | K11 K22 K12+K21 | 2g13 2g23]`.

The 2×2 transverse-shear block $\mathbf{G}$ has a default, `g_source="msg"`: the MSG/VAM second-order-energy projection (the Yu–2002 least-squares construction, Eq. 61 of Yu, Hodges & Volovoi, *Computers & Structures* **81**:439–454, 2003), computed by `opensg_solid.rm_plate_1D.msg_rm_plate.rm_plate_msg`. The alternative, `g_source="whitney"`, is the coupling-aware complementary-energy shear flow. Table 4.4 shows why this is not a detail on a foam-cored blade section.

layup	G_{11} (N/m)	G_{22} (N/m)
layup_0	8.2828865×10^7	9.8804474×10^7
layup_1	4.1457954×10^6	4.1451801×10^6
layup_2	2.8674578×10^8	2.1272143×10^8
layup_3	5.8528099×10^7	8.6668255×10^7
layup_4	2.7301565×10^8	2.0317797×10^8
layup_5	2.4877763×10^6	2.4877763×10^6

Table 4.4: The MSG wall transverse-shear block $\mathbf{G}$ of each layup, rows 7 and 8 of the 8×8 blocks in `iea_s10_shell_ABDG.out`. The foam-cored skin `layup_1` and the foam-cored webs `layup_5` are roughly seventy and a hundred times more shear-compliant than the carbon cap `layup_2`, so the soft core dominates the section’s shear compliance and must not be assigned by a rule of thumb.

4.1.6 Run it

The driver has a single user-input line:

```
##### User Input #####
name = "iea_s10"           # reads <name>_shell.yaml
#####
```

Listing 4.1: The user-input block of `beam'homo'shell.py`.

```
cd examples/OpenSG_shell/1_get_beam_props_from_shell_cross_section
python beam_homo_shell.py
```

4.1.7 The one call

Everything is behind one function.

```
import numpy as np
from opensg_shell import build_rm_bundle, auto_emit

B = build_rm_bundle("iea_s10_shell.yaml")  # RM 6-DOF ring + MSG wall G
C6 = np.asarray(B["Timo"])                # (6, 6) Timoshenko stiffness
print(B["ref"], B["g_source"])             # "center msg"
print(np.diag(C6))
auto_emit("iea_s10_shell.yaml", out_png="iea_s10_orient.png")
```

Listing 4.2: The minimal script: build the bundle, take the 6x6, emit the orientation figure.

`build_rm_bundle` returns a **bundle**, not just a matrix, because the dehomogenization of Section 4.2 must reuse the identical discretization. The bundle carries the keys of Table 4.5.

key	content
Timo	the (6,6) Timoshenko stiffness
V0, V1	zeroth- and first-order warping fields, $(6m, 4)$ each, including the drilling ω_3 boundary values
corners, red_cells	the $(m, 2)$ contour coordinates and $(n_{el}, 2)$ connectivity
rx3, re3, k22	3-D ring coordinates, wall normals and hoop curvature per element
strip	the prismatic strip actually assembled, as (nodes, quads, h)
ax, cross	the beam-axis index and the two cross-section axis indices
layup_per_elem	the layup name of each element
layup_db, material_db	the geometry-free plate-SG databases
frac, ref, g_source	the reference fraction, its name, and the wall- G source

Table 4.5: Keys of the dictionary returned by `build_rm_bundle`.

4.1.8 What comes out

file	written by	content
iea_s10_shell_Timo.out	<code>build_rm_bundle</code> (via <code>write_sc_K</code>)	the effective Timoshenko stiffness and compliance in the SwiftComp .K layout, with an OpenSG banner and a Time taken footer
iea_s10_shell_ABDG.out	<code>build_rm_bundle</code> (via <code>write_abdg_out</code>)	one 8×8 RM plate stiffness and compliance block per section, each headed by its layup
abd/iea_s10_shell_abd.yaml	<code>emit_station_abd</code>	per-layup cache of the 8×8 wall law plus ply lists, thickness and mass per area
iea_s10_mesh.png	the driver	the contour coloured by layup
iea_s10_orient.png	<code>auto_emit</code>	the e_2/e_3 arrows

Table 4.6: Output files of `beam_homo_shell.py`.

Two notes on the ABD cache. It is written **only if it does not already exist**, so delete `abd/iea_s10_shell_abd.yaml` after changing the layouts or the change will not take. And it records `g_source: whitney` and `reference: mid`, because `emit_station_abd` defaults to the complementary-energy shear flow. It is a cache for downstream station-level tools such as shell buckling, not a dump of the ring’s own MSG wall law, which lives in `_ABDG.out`.

4.1.9 The numbers

This is the stiffness block of `iea_s10_shell_Timo.out` exactly as written, in SI units, on the strain set $[\varepsilon_{11} \ \gamma_{12} \ \gamma_{13} \ \kappa_1 \ \kappa_2 \ \kappa_3]$ (extension, the two transverse shears, twist, and the two bending curvatures, which is the VABS ordering):

The Effective Timoshenko Stiffness Matrix					

2.7660599E+010	-1.7230658E-005	4.6650498E-006	5.4020232E-006	1.6686413E+009	-2.0773040E+009
-1.7230658E-005	7.1861326E+008	5.7520370E+007	-1.0192044E+008	2.3079953E-006	5.2738749E-006
4.6650498E-006	5.7520370E+007	4.2174428E+008	-1.6217837E+008	8.4816767E-006	2.7931393E-007
5.4020232E-006	-1.0192044E+008	-1.6217837E+008	2.4375653E+009	1.6449557E-006	-8.1140553E-006
1.6686413E+009	2.3079953E-006	8.4816767E-006	1.6449557E-006	3.5143887E+010	-5.5571249E+009
-2.0773040E+009	5.2738749E-006	2.7931393E-007	-8.1140553E-006	-5.5571249E+009	6.8129724E+010

The diagonal is what the driver prints.

term	value	units	meaning
EA	2.7660599×10^{10}	N	axial stiffness
GA_2	7.1861326×10^8	N	transverse shear, chordwise
GA_3	4.2174428×10^8	N	transverse shear, flapwise
GJ	2.4375653×10^9	N·m ²	torsion about the mid-surface reference
EI_2	3.5143887×10^{10}	N·m ²	flapwise bending
EI_3	6.8129724×10^{10}	N·m ²	edgewise bending

Table 4.7: The Timoshenko diagonal of station `iea_s10`, read from `iea_s10_shell_Timo.out`.

The off-diagonals are the physics that a beam table without couplings would throw away. The extension–bending entries 1.6686×10^9 and -2.0773×10^9 N·m locate the tension centre away from the mid-surface reference point; -5.5571×10^9 N·m² is the flap–edge bending coupling, which says the section’s principal bending axes are not the y_2/y_3 axes; and -1.0192×10^8 and -1.6218×10^8 N·m are the shear–twist couplings that place the shear centre.

Entries printed at 10^{-5} against diagonals of 10^{10} are exact zeros to about fifteen digits: extension does not couple to transverse shear or to twist on this section. That is a useful self-check that the drilling constraint and the rigid-body kernel are behaving.

The footer of the same file reads `Time taken: 8.02 sec` for this run. That covers the whole bundle build: reading the YAML, the six per-layup MSG plate solves, the ring KKT factorization and the layup-database build.

4.2 Two-step recovery to 3-D wall stress

4.2.1 What this capability computes

Homogenization gave the beam its stiffness. *Dehomogenization* does the inverse: given the beam’s internal forces at this station, it reconstructs the 3-D stress at every point of every wall, which

is what a failure criterion actually needs. The example is `examples/OpenSG_shell/2_get_beam_dehom_from_shell_cross_section` and runs on the same `iea_s10_shell.yaml`.

4.2.2 The input the user edits

```
##### User Input #####
name = "iea_s10"           # reads <name>_shell.yaml
ff_file = "ff51_rmc_reform.dat" # beam FF per station (# eta F1 F2 F3 M1 M2 M3)
station_row = 10          # row 10 -> eta = r/R = 0.20 (iea_s10)
n_depth = 9               # through-thickness recovery points per element
stress_frame = "material"  # "material" (ply axes) | "plate" (wall axes)
#####
```

Listing 4.3: The user-input block of `beam_dehom_shell.py`.

`ff51_rmc_reform.dat` is a plain table whose header line reads `# eta F1 F2 F3 M1 M2 M3 (RM CENTER-ref BeamDyn, VABS order)`: one row per spanwise station, the first column $\eta = r/R$ and the remaining six the beam force and moment resultants, in the same VABS order and the same SI units (N, N·m) as the 6×6 . Row 10 is

$$FF = \begin{bmatrix} 4.1927 \times 10^4 & 8.2674 \times 10^3 & 1.4673 \times 10^6 & 1.2191 \times 10^6 & -6.0185 \times 10^7 & 3.0426 \times 10^5 \end{bmatrix}, \quad (4.2)$$

a 60 MN·m flapwise moment with a 1.47 MN flapwise shear, which is what dominates everything that follows. The forces must be referred to the same axis as the stiffness: this table is center-referenced, matching `reference: center` in the YAML.

4.2.3 Run it

```
cd examples/OpenSG_shell/2_get_beam_dehom_from_shell_cross_section
python beam_dehom_shell.py
```

4.2.4 The two-step chain

Step 1, along the contour. The macro beam strain is $st = \mathbf{C}_6^{-1} FF$. That strain is fed through `_macro_fields`, which recombines the bundle's warping fields into the nodal warping $w = V_0 st_m + V_1 st_{c1}$ and its axial derivative $w' = V_0 st_{c1} + V_1 st_{c2}$, and then through `_rm_shell_strain`, which applies the *same* element operators used to assemble the stiffness. The result is, per element, the six shell strains $[\varepsilon_{11} \ \varepsilon_{22} \ 2\varepsilon_{12} \ K_{11} \ K_{22} \ 2K_{12}]$ at mid-arc. Because it reuses `quad_ops_indep`, step 1 is the exact energy-consistent adjoint of the homogenization rather than a separate post-processing model.

The recovery also needs the *gradients* of those strains. The span gradient $\partial/\partial y_1$ comes from the operators directly; the arc gradient $\partial/\partial y_2$ is a finite difference of nodally averaged values, and the averaging is **layup-boundary aware**. Two element values are averaged at a node only when both elements carry the same layup, so no difference is ever taken across a section change where the strains legitimately jump.

Step 2, through the thickness. For each of the 6 layups, `rm_plate_msg` builds a 1-D MSG-RM plate structure gene (the warping ladder plus the MSG **G**), and `msgrm_strain_at_depth` evaluates the first-order recovery at a depth z measured from the reference surface, returning the 3-D Voigt strain, the 3-D Voigt stress $[\sigma_{11} \ \sigma_{22} \ \sigma_{33} \ \sigma_{23} \ \sigma_{13} \ \sigma_{12}]$ and the ply angle at that depth.

Both functions are imported from `opensg_solid.rm_plate_1D.msg_rm_plate`, shared verbatim with the plate and solid examples.

The driver evaluates `n_depth = 9` ply-interior stations per element, at $\zeta = (k + \frac{1}{2})/9$ with $\zeta = 0$ at the OML and $\zeta = 1$ at the IML, giving $310 \times 9 = 2790$ recovery points.

```
import numpy as np
from opensg_shell import build_rm_bundle, _macro_fields, _rm_shell_strain
from opensg_solid.rm_plate_1D.msg_rm_plate import rm_plate_msg, msgrm_strain_at_depth

B = build_rm_bundle("iea_s10_shell.yaml")
FF = np.loadtxt("ff51_rmc_reform.dat")[10, 1:]
st, st_m, aA, aB = _macro_fields(B, beam_force_vabs=FF)
s6, s2 = _rm_shell_strain(B, 75, 0.5, st_m, aA, aB) # element 75, mid-arc

ldb = B["layup_db"]; mdb = B["material_db"]; frac = float(B["frac"])
warp = rm_plate_msg(ldb["layup_2"]["thick"], ldb["layup_2"]["angles"],
                    ldb["layup_2"]["mat_names"], mdb, fraction=frac)
h = float(sum(ldb["layup_2"]["thick"]))
Gam, Sig, ply = msgrm_strain_at_depth(warp, (0.056 - frac) * h,
                                       np.asarray(s6, float), frame="material")
print(Sig / 1e6) # MPa, Voigt [S11 S22 S33 S23 S13 S12]
```

Listing 4.4: The recovery chain in miniature: one element, one depth.

4.2.5 What comes out

file	content
iea_s10_dehom_shell.txt	2790 rows, one per recovery point: <code>elem</code> , <code>y2</code> , <code>y3</code> , <code>z</code> from the reference surface, <code>zeta</code> , <code>ply</code> angle in degrees, then the six stresses in MPa. The header repeats the frame, η and the full FF.
iea_s10_dehom_stress.png	the section stress cloud, σ_{11} and σ_{12}
iea_s10_cap_tt.png	σ_{11} and σ_{12} against ζ along one through-thickness line at the arc-centre element of the peak-stress cap

Table 4.8: Output files of `beam_dehom_shell.py`.

The driver reports the peak as

```
peak |sigma11| = 318.18 MPa at (y2, y3) = (-0.677, 1.311), zeta = 0.06 [material frame]
```

4.2.6 Reading the result

The axial stress is confined almost entirely to the two spar caps, exactly as a flap-dominated load state should be.

The upper cap is in compression and the lower cap in tension under this flap-dominated state, at nearly equal magnitude, and both extremes fall at the outermost recovery station $\zeta = 0.056$, which for these layups lies just inside the carbon uniaxial ply. That is where a maximum-stress check on the carbon belongs. The in-plane shear tells a different story: it peaks not in the caps but in the trailing-edge and leading-edge regions, where the closed cell carries the torque as shear flow.

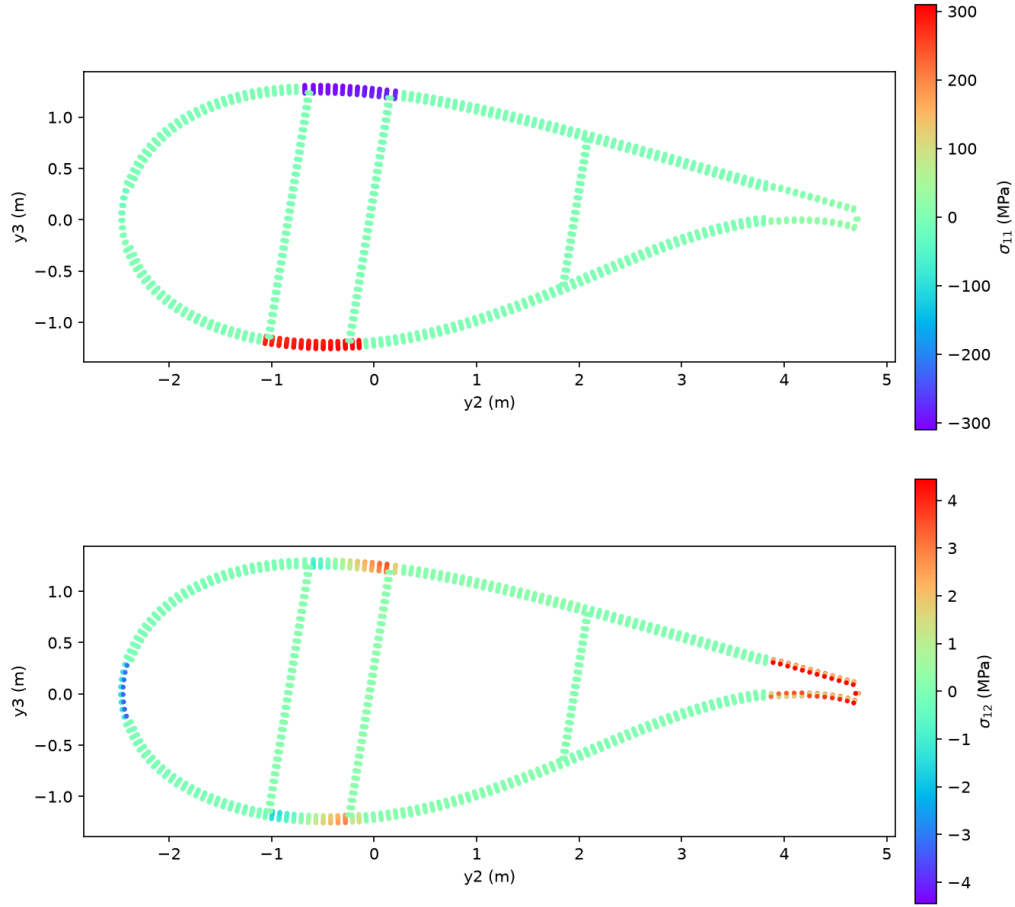


Figure 4.3: Recovered σ_{11} (top) and σ_{12} (bottom) over the cross-section, all 2790 recovery points, in MPa. Points sit slightly off the contour because each one is displaced from the mid-surface by its own depth z along the wall normal, which is why the cap points reach $y_3 = 1.311$ m while the contour stops at 1.273 m.

quantity	value	where
minimum σ_{11}	-318.177 MPa	element 75, <code>layup_2</code> , $(y_2, y_3) = (-0.677, 1.311)$, $\zeta = 0.056$
maximum σ_{11}	+314.461 MPa	element 150, <code>layup_4</code> , $(y_2, y_3) = (-0.145, -1.249)$, $\zeta = 0.056$
maximum $ \sigma_{12} $	5.573 MPa	element 11, <code>layup_0</code> , $(y_2, y_3) = (3.895, 0.335)$

Table 4.9: Extremes of `iea_s10_dehom_shell.txt` under the load state of Eq. (4.2).

4.2.7 What this route recovers, and what it does not

The repository’s `examples/OpenSG_shell/IEA_blade_beam` benchmark folder compares this same station’s recovery against a VABS 2-D solid run of the identical section (`iea_s10.sg.SM`), and records the result in `iea_s10_report.txt` as rms differences alongside the rms magnitude of the VABS field itself.

component	region	rms difference (MPa)	rms of the VABS field (MPa)
σ_{11}	skin	9.529	96.676
σ_{11}	web	43.073	44.440
σ_{12}	web	6.799	22.026
σ_{11}	spar-cap through-thickness path	38.355	285.457
σ_{11}	cap-left junction path	1.265	286.837

Table 4.10: Two-step shell recovery against a VABS 2-D solid run of the same section, from `iea_s10_report.txt`.

The in-plane picture is sound where the load is: about 10 % rms on the skin, 13 % along the cap thickness, and 0.4 % along the reference junction path. The web σ_{11} difference is the same size as the field itself, which is honest to state plainly: the webs carry almost no axial stress at this state, so the comparison there is a ratio of two small numbers.

Two components are **not** delivered by this route and should not be used from the output file:

- σ_{33} is machine-zero in the first-order recovery (rms 3.6×10^{-13} MPa against a VABS rms of 5.6×10^{-2} MPa). This is visible directly in the `S33` column of `iea_s10_dehom_shell.txt`, whose entries are of order 10^{-13} (median 1.96×10^{-13} , maximum 9.18×10^{-13}).
- σ_{13} is recovered at rms 6.3×10^{-3} MPa against a VABS rms of 2.4×10^{-1} MPa. This is structural, not a bug: on a prismatic ring the γ_{13} row is untied by construction, so it carries the flat-wall drilling mode and cannot serve as a recovery target. The companion diagnostic `iea_s10_q_consistency.txt` quantifies this. The tied γ_{23} channel closes its equilibrium identity $\int \sigma_{23} dz = (\mathbf{G}_{\text{msg}} s_2)_2$ to 1.05 % median error, while the untied γ_{13} channel does not, giving a σ_{13} target that is invalid by a factor of order 100. A physical σ_{13} needs the surface-quad route of Sections 4.4 and 4.5, where both rows are tied, not a rescale of this ring.

The same benchmark folder also records that adding the second-order recovery rung changes σ_{11} by an rms of 1.95×10^{-4} MPa against a first-order rms of 88.51 MPa, so the first-order chain used by `beam_dehom_shell.py` is the right default for this class of section.

4.3 Equivalent 3-D solid from a cross-section SG

4.3.1 What this capability computes

The same 1-D shell structure gene can be homogenized to an **equivalent 3-D solid** 6×6 instead of a beam 6×6 : the anisotropic continuum stiffness of a cell that is tiled periodically in the two transverse directions. This is the MSG thin-walled (MSG-TW) equivalent-continuum problem, and it is what you want for a cellular solid, a lattice, or any prismatic microstructure whose walls are thin.

The strain order is the solid Voigt order

$$\bar{\Gamma} = [\bar{\Gamma}_{11} \quad \bar{\Gamma}_{22} \quad \bar{\Gamma}_{33} \quad 2\bar{\Gamma}_{23} \quad 2\bar{\Gamma}_{13} \quad 2\bar{\Gamma}_{12}]^T, \quad (4.3)$$

with axis 1 along the prismatic direction. That string is returned in the bundle under the key `order` and exported as `GBAR_ORDER`.

Where the beam problem drives the SG with four beam strains, the solid problem drives it with the six macro strains, so **periodicity is always on**: opposite edges and the corners of the 2-D cell are tied (`periodic=True` is the default of `build_solid_bundle`). The wall law is the same Reissner–Mindlin 8×8 of Eq. (4.1), so the walls carry transverse shear that a classical (CLPT/Kirchhoff) wall model discards. That distinction is the entire point of the benchmarks below.

4.3.2 The driver

```
from opensg_shell import build_solid_bundle

b = build_solid_bundle("cell_1Dshell.yaml", cell_area=A_cell)
C3D = b["C3D"]           # 6x6 equivalent solid stiffness, Pa
b["cell_area"], b["area_source"] # the normalizing area and where it came from
b["solve_time"]           # seconds; also written into <yaml>_C3D.out
```

Listing 4.5: The one call for equivalent-solid properties from a cross-section SG.

`cell_area` is the one argument you must think about: it is the measure ω the energy is divided by. Pass it explicitly (then `area_source` reads "user"); if you omit it, the convex-hull area of the contour is used instead and `area_source` reads "hull". `build_solid_bundle` writes `<yaml>_C3D.out` by default, in the SwiftComp .K layout (effective stiffness, effective compliance, orthotropic-approximated engineering constants) with an `OpenSG` banner and a `Time taken` footer, plus `<yaml>_ABDG.out` for the wall laws.

4.3.3 Validation: Deo & Yu (2023)

The reference is A. Deo and W. Yu, *Equivalent 3D properties of thin-walled composite structures using mechanics of structure genome*, *Mechanics of Advanced Materials and Structures* **30**(9), 2023, 1737–1748. Two columns are quoted from that paper: **Deo TW**, its own thin-walled model with a classical wall law, and the reference **SwiftComp** column, which is the paper’s MSG solid result and the equivalent of an OpenSG 2-D-solid run. All values below are MPa, and **ours %** and **Deo TW %** are both measured against the SwiftComp column. Every table is the literal content of the `*_compare.dat` file written by the driver.

Four sub-folders live under `examples/OpenSG_shell/3_get_solid_props_from_shell_cross_section`. Each is a two-command run: a generator that writes the 1-D shell YAML, then the driver that homogenizes it.

```
cd examples/OpenSG_shell/3_get_solid_props_from_shell_cross_section/deo_cellular_solid
python make_deo_cellular_yamls.py
python deo_cellular_solid_props.py
```

The generator is where the geometry is edited. For the cellular solid it is a five-line block at the top of `make_deo_cellular_yamls.py`: `l, h, t = 0.10, 0.10, 0.005`, aluminium `E, nu = 68.9e9, 0.33`, and `nseg = 10` elements per wall of length l . The driver then computes the cell

area itself from the wall angle, `area = (2*l*np.cos(th))*(2*(h + l*np.sin(th)))`, and passes it as `cell_area`.

4.3.3.1 Cellular solid, $\theta = +15^\circ$ (paper Table 1)

term	OpenSG-TW (RM)	Deo MSG-TW	SwiftComp	ours %	Deo TW %
C_{11}	4733.84	4736.90	4678.90	+1.17	+1.24
C_{12}	1086.01	1089.40	1105.50	-1.76	-1.46
C_{13}	380.63	381.81	386.88	-1.61	-1.31
C_{22}	2444.24	2446.39	2488.90	-1.79	-1.71
C_{23}	846.69	847.44	860.89	-1.65	-1.56
C_{33}	306.74	306.99	311.48	-1.52	-1.44
$\mathbf{C}_{44}$	4.20	4.32	4.19	+0.18	+3.09
C_{55}	562.61	564.15	573.11	-1.83	-1.56
C_{66}	993.78	997.52	1000.10	-0.63	-0.26

Table 4.11: Deo cellular solid at $\theta = +15^\circ$, MPa, from `deo_cellular_compare.dat`. Aluminium $E = 68.9$ GPa, $\nu = 0.33$; $l = h = 10$ cm, $t = 5$ mm. Solve 1.5 s.

4.3.3.2 Re-entrant cellular solid, $\theta = -15^\circ$ (paper Table 2)

The auxetic lattice, with the negative C_{13} and C_{23} couplings.

term	OpenSG-TW (RM)	Deo MSG-TW	SwiftComp	ours %	Deo TW %
C_{11}	7505.26	7507.40	7352.90	+2.07	+2.10
C_{12}	1090.52	1094.10	1075.20	+1.42	+1.76
C_{13}	-219.81	-220.53	-213.94	+2.74	+3.08
C_{22}	4151.29	4154.90	4080.00	+1.75	+1.84
C_{23}	-846.69	-847.45	-821.77	+3.03	+3.12
C_{33}	180.61	180.75	173.48	+4.11	+4.19
$\mathbf{C}_{44}$	2.47	2.68	2.47	+0.17	+8.38
C_{55}	331.26	332.17	346.01	-4.26	-4.00
C_{66}	1687.82	1694.20	1706.40	-1.09	-0.71

Table 4.12: Deo re-entrant cellular solid at $\theta = -15^\circ$, MPa, from `deo_cellular_compare.dat`. Solve 0.2 s.

C_{44} is the in-plane shear channel, the one the paper flags as its largest error and attributes to the classical wall model dropping the segment transverse shear, with a first-order-shear wall model named as future work. That is exactly the RM wall law used here: the +3.09 % and +8.38 % errors drop to +0.18 % and +0.17 %. Every other term tracks the paper’s own thin-walled column to a few tenths of a percent, so the two independent MSG-TW implementations agree where they share physics.

4.3.3.3 Hierarchical square (paper Table 3)

Run from `deo_hierarchical_square`. The generator `make_deo_square_yaml.py` carries R , r , t = 0.10, 0.05, 0.005 and $nseg = 10$, the same aluminium.

term	OpenSG-TW (RM)	Deo MSG-TW	SwiftComp	ours %	Deo TW %
C_{11}	5183.48	5186.39	5099.03	+1.66	+1.71
C_{12}	24.22	24.83	26.75	-9.47	-7.18
C_{13}	24.22	24.83	26.75	-9.47	-7.18
C_{22}	46.23	47.13	50.46	-8.39	-6.60
C_{23}	27.15	27.94	30.59	-11.23	-8.66
C_{33}	46.23	47.13	50.45	-8.37	-6.58
C_{44}	3.20	3.22	3.39	-5.60	-5.01
C_{55}	647.56	650.00	670.92	-3.48	-3.12
C_{66}	647.56	650.00	670.93	-3.48	-3.12

Table 4.13: Deo hierarchical square, MPa, from `deo_square_compare.dat`. $R = 10$ cm, $r = 5$ cm, $t = 5$ mm. Solve 1.8 s.

This lattice is **bending-dominated**: its transverse channels are t^3 -scale ($C_{22} \approx 50$ MPa against $C_{11} \approx 5100$ MPa), so the load path is wall bending, not wall stretching. Two consequences are worth recording. First, the RM result is mesh-converged and the offset is physics: refining from 10 to 40 elements per segment moves C_{23} by 1 %, and running the same model with shear-rigid walls (the Kirchhoff limit) reproduces the paper’s classical column to 0.0–0.3 %. The gap between the two columns is therefore the wall transverse-shear compliance, which is real at the $t/l = 0.1$ ligaments; element order is not involved. Second, both thin-walled models miss the same junction stiffness. The residual against SwiftComp is the finite rotational stiffness of the joint regions, which no midline model carries. The classical model’s smaller apparent error is a partial cancellation, artificial shear rigidity offsetting missing joint stiffness, and the RM model removes the first error, exposing the second.

4.3.3.4 Composite square (paper Fig. 13 / Table 4)

Run from `deo_composite_square`. The cell is 25.4×25.4 mm, so the driver passes `cell_area = L2*L2` with $L2 = 25.4\text{e-}3$; horizontal segments sit at $y_3 = \pm 5.84$ mm with one vertical segment through the centre, and every wall is a $[15]_8$ laminate of $t = 1.016$ mm with $E_1 = 141.96$, $E_2 = E_3 = 9.79$, $G = 6.136$ GPa, $\nu = 0.42$.

C_{13} , C_{33} and C_{55} reproduce the paper’s thin-walled column exactly, and C_{11} improves on it against SwiftComp. Two open items are recorded honestly. C_{15} and C_{35} match the published magnitudes to 0.1 % with the *opposite sign*, a ply-angle handedness convention still to be reconciled, and the likely cause of the -6 to -8 % group. And C_{23} is zero in both thin-walled models, for the reason below.

4.3.3.5 A fifth folder: the isotropic square tube

`square_section_isotropic` is the simplest case in the set and the best place to start. It reads `square_tube_1Dshell.yaml` and its user-input block is four lines: `a`, `t_w = 1.0`, `0.03` and `CELL_AREA = 4*a*t_w`, which is the *wall material area*, the same measure the solid engines use, so the two routes are directly comparable. Run it with `python solid_props_msg_shell.py`; it writes `square_solid_msg_shell.out` with the 6×6 and the nine engineering constants obtained from `elastic_constants(C)`.

term	OpenSG-TW (RM)	Deo MSG-TW	SwiftComp	ours %	Deo TW %
C_{11}	15263.83	16133.90	15518.11	-1.64	+3.97
C_{12}	936.74	1016.82	1008.76	-7.14	+0.80
C_{13}	468.37	468.38	459.01	+2.04	+2.04
C_{15}	+1191.85	-1192.81	-1135.27	sign	+5.07
C_{16}	2383.70	2589.74	2535.23	-5.98	+2.15
C_{22}	906.11	983.56	988.88	-8.37	-0.54
C_{23}	0.00	0.00	20.44	-100	-100
C_{26}	292.25	317.09	311.80	-6.27	+1.70
C_{33}	453.06	453.06	456.25	-0.70	-0.70
C_{35}	+146.13	-146.06	-140.04	sign	+4.30
C_{44}	0.94	1.08	1.16	-18.57	-6.90
C_{55}	547.31	547.32	545.43	+0.35	+0.35
C_{66}	1094.63	1188.20	1188.30	-7.88	-0.01

Table 4.14: Deo composite square, MPa, from `deo_composite_square_compare.dat`. Solve 1.8 s. The `.dat` file prints the two sign-flipped rows as -204.98 and -204.35 percent, which is the arithmetic of a sign reversal, not a magnitude error.

4.3.4 Why C_{23} vanishes on axis-aligned lattices

For a wall at angle φ the only Γ_e entries carrying weight in *both* the $\bar{\Gamma}_{22}$ and $\bar{\Gamma}_{33}$ columns are the membrane ε_{22} row ($\cos^2 \varphi, \sin^2 \varphi$) and the transverse-shear $2\gamma_{23}$ row ($-\sin \varphi \cos \varphi, +\sin \varphi \cos \varphi$), giving a per-length integrand

$$(A_{11} - G_{\text{msg}}) \sin^2 \varphi \cos^2 \varphi. \quad (4.4)$$

On a 0/90 lattice every wall has $\sin^2 \varphi \cos^2 \varphi = 0$, so this $O(t)$ membrane path vanishes identically and the whole of C_{23} is the $O(t^2)$ **junction** contribution: the wall-overlap blocks, which have zero measure on a midline mesh. Inclined-wall cells are unaffected, which is why the cellular cases above carry C_{23} correctly and only the square lattices expose the junction term. Optional junction corrections (`junction="census"`, `"micro"`, `"microcell"`) recover it for stretch-dominated cells; they do *not* apply to bending-dominated lattices such as the hierarchical square, and they are off by default.

4.4 Equivalent 3-D solid from a 3-D shell SG

4.4.1 What this capability computes

A structure gene periodic in **all three** directions – a triply-periodic minimal surface (TPMS) unit cell, a lattice block, any 3-D microstructure whose material is a thin sheet – homogenizes to the same equivalent 3-D solid 6×6 of Eq. (4.3). `shell_sg3d` solves it when the microstructure is a thin sheet meshed as a *surface*: the wall carries the RM 8×8 law, so thickness is a parameter rather than a remesh.

It reuses the cross-section Γ_e / Γ_h operators unchanged (they are geometry-general) and adds only the 3-D environment: sparse assembly, the three-direction periodic map, drilling by penalty on the element-constant residual, and a three-translation kernel. Shell edges shared by more than two elements are detected as **junction lines** and reported as `n_junction_edges`; a smooth TPMS has none.

The example is `examples/OpenSG_shell/4_get_solid_props_from_shell_3D_SG`.

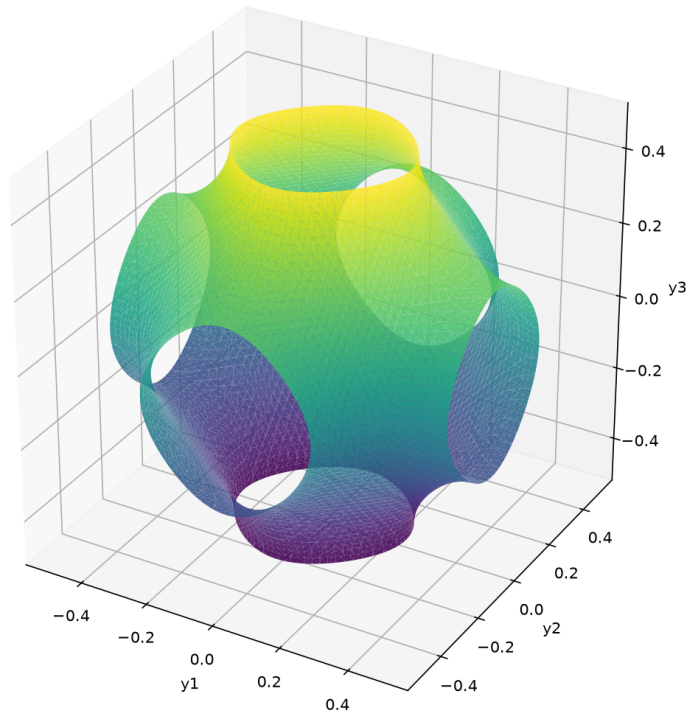


Figure 4.4: The Schwarz-P TPMS unit cell as a 3-D shell SG: 13 536 nodes and 26 360 triangular shell elements on the midsurface, written by `schwarz_solid_props.py` as `schwarz_p_mesh.png`. The cell is the unit cube, and the wall thickness is a number in the YAML, not geometry.

4.4.2 The input the user edits

The mesh comes from a gmsh 2.2 triangle file, and `make_schwarz_yaml.py` converts it. Its user block is four lines:

```
MSH = ("../../../../tests/08072026_square_shell_mesh/TPMS_SC_files/"
       "schwarz_p_D2_shell.msh")
T = 0.036457          # Sample_2, volume-consistent
E, nu = 69.0e9, 0.30
G = E/(2*(1+nu))
```

Listing 4.6: The user block of `make_schwarz_yaml.py`: mesh path, thickness, material.

The converter computes each element's frame from the triangle geometry (e_3 = unit normal, e_2 along the first edge, $e_1 = e_2 \times e_3$), writes one `sections` entry with the single ply `[alu, T, 0.0]`, and reports the surface area and the resulting relative density `area.sum()*T`.

4.4.3 Run it

```
cd examples/OpenSG_shell/4_get_solid_props_from_shell_3D_SG
python make_schwarz_yaml.py
python schwarz_solid_props.py
python compare_boundary_modes.py
```

```
from opensg_shell.sg_homo import shell_sg3d

r = shell_sg3d("schwarz_p_3Dshell.yaml")          # boundary="periodic"
    (default)
r = shell_sg3d("schwarz_p_3Dshell.yaml", boundary="aperiodic") # non-periodic SGs
    (explicit)
r["C3D"], r["n_junction_edges"], r["ndof"], r["solve_time"]
```

Listing 4.7: The two boundary treatments of `shell_sg3d`.

The SG measure ω defaults to the **midsurface area**, the 3-D analogue of ω = perimeter for a plane-section shell SG, and can be overridden with the `omega=` argument. The `.out` file is written per unit-cell volume so its moduli compare directly with a solid `.K`.

4.4.4 What comes out

`shell_sg3d` writes `schwarz_p_3Dshell_C3D.out`, and the driver writes `schwarz_p_mesh.png`. The banner line of the `.out` records the whole configuration, and the default periodic run at $t = 0.036457$ gives:

```
OpenSG msg-shell equivalent 3D solid (3-D shell SG, 13536 nodes, 26360 elems,
0 junction edges, periodic in 3 dirs, per unit cell 1)

The Effective Stiffness Matrix
-----
      2.2253086E+009      1.5648739E+009      1.5649503E+009      ...
      1.5648739E+009      2.2252770E+009      1.5647791E+009      ...
      1.5649503E+009      1.5647791E+009      2.2250347E+009      ...

The Engineering Constants (Approximated as Orthotropic)
```

```

-----
E1  =    9.3296450E+008
E2  =    9.3313789E+008
E3  =    9.3284790E+008
G12 =    1.0409258E+009
G13 =    1.0410061E+009
G23 =    1.0409794E+009
nu12=    4.1277916E-001
nu13=    4.1304617E-001
nu23=    4.1288357E-001

```

Time taken: 66.43 sec

Read the numbers as a health check first. The three normal terms agree to five digits (2.2253, 2.2253, 2.2250 GPa) and the three shear terms likewise (1.04098, 1.04101, 1.04093 GPa), so the effective law is cubic to five digits, as the Schwarz-P symmetry demands. Every symmetry-forbidden coupling sits at 10^3 – 10^5 Pa against diagonals of 10^9 Pa, four to six orders below. That is the health check on the all-directions periodic tie: if the tie map were wrong, those entries would not be small. The repository also records a head-to-head of this same surface against the msg-solid route on the same structure, where the shell result runs about 3% below on the normal terms and about 6% below on the shears, with cubic symmetry intact in both; because the solid column is digit-identical to SwiftComp, those percentages measure the thin-shell reduction itself at a surface reaching $t/R \approx 0.2$ near the saddle necks.

4.4.5 Boundary treatment: periodic default versus aperiodic

`shell_sg3d` takes a `boundary` argument, and the default is "periodic": opposite faces, edges and corners of the bounding box are tied through the sparse assembly map, and the three rigid translations are removed by area-weighted Lagrange rows. This is the exact treatment for a periodic medium, and it is what to report.

`boundary="aperiodic"` is the boundary-solution treatment. For a unit cell the boundary solution is the macro (affine) field itself, so mapping it onto the boundary nodes prescribes zero **translational** warping fluctuation ($w_1 = w_2 = w_3 = 0$, Dirichlet) on every node of the bounding-box faces, with the rotational DOFs left natural. That forbids the affine fluctuations which make a *free* aperiodic SG rank-one, fixes the rigid modes without a Lagrange border, and is a kinematic upper bound. Clamping the rotations as well would roughly double the offset.

`compare_boundary_modes.py` runs both on the current YAML, copies each per-mode `.out` to `schwarz_t<T>_<mode>.out`, and appends a block to `boundary_compare.dat`. Table 4.15 is that file.

The offset is the clamped-face boundary layer of a **single** cell: the expected kinematic bound, not an error in either path. It grows with wall thickness, from +6.8% on C_{11} at $t = 0.036457$ to +10.8% at $t = 0.129330$, because a thicker wall makes the clamped skin a larger fraction of the cell. Aperiodic is about 35% *faster* here, because the Dirichlet rows leave the factorization and there is no tie map or Lagrange border, despite the slightly larger nominal DOF count. Report periodic for a periodic medium; request "aperiodic" only for SGs that genuinely are not periodic.

4.5 Tapered and aperiodic segments

term	$t = 0.036457$			$t = 0.129330$		
	aperiodic	periodic	%diff	aperiodic	periodic	%diff
C_{11}	2375.89	2225.31	+6.767	9881.00	8916.81	+10.813
C_{22}	2375.92	2225.28	+6.770	9881.00	8916.85	+10.813
C_{33}	2376.22	2225.03	+6.795	9873.34	8916.17	+10.735
C_{12}	1537.47	1564.87	-1.751	4921.09	5352.21	-8.055
C_{13}	1539.24	1564.95	-1.643	4931.10	5352.71	-7.877
C_{23}	1538.99	1564.78	-1.648	4931.00	5352.55	-7.876
C_{44}	1078.28	1040.98	+3.583	4150.25	3961.63	+4.761
C_{55}	1078.32	1041.01	+3.585	4150.26	3961.63	+4.761
C_{66}	1078.61	1040.93	+3.620	4151.27	3961.51	+4.790
ndof	81216	79056		81216	79056	
solve	42.3 s	66.5 s		42.2 s	65.4 s	

Table 4.15: Aperiodic versus periodic on the same Schwarz-P YAML at two wall thicknesses, per unit cell, MPa. The literal content of `boundary_compare.dat`. In both blocks 720 free-face nodes of 13 536 are clamped by the aperiodic treatment.

4.5.1 What this capability computes

Everything so far has assumed the beam is prismatic: the classical msg-shell analysis meshes only the cross-section contour and enforces periodicity along the beam axis. A **tapered** segment has no such periodicity, because its two end cross-sections differ. `opensg_shell.sg_homo.segment_timo_from_3dyaml` handles this by replacing the axial periodic condition with Dirichlet data taken from the two ends. The input is no longer a 1-D ring but a genuine 3-D surface mesh of a slice of the beam.

The pipeline has four stages:

1. **Boundary extraction.** The two end cross-sections are found *topologically*: a mesh edge used by exactly one quad is a free edge, and each connected component of the free-edge graph with at least three nodes is one end ring. The axis is the direction between the two most widely separated components, and left/right is decided by the axial coordinate. Each ring is written out as a standalone 1-D YAML together with the ring-node $\rightarrow$ segment-node map.
2. **Boundary solves.** Each ring is homogenized on its own with `ring_indep`, giving its Timoshenko 6×6 and the warping fields V_0 (Euler–Bernoulli) and V_1 (Timoshenko), all six DOFs per node including the drilling rotation ω_3 .
3. **Mapping.** The ring V_0/V_1 are transferred onto the segment’s boundary nodes as Dirichlet data, replacing the periodic boundary condition and fixing the segment’s rigid-body modes.
4. **Segment solve.** One LU factorization of the constrained system serves both orders,

$$\mathbf{D}_{hh} V_0 = -\mathbf{D}_{he}, \quad \mathbf{D}_{hh} V_1 = b(V_0), \quad (4.5)$$

with $V_0 = V_0^{\text{ring}}$ and $V_1 = V_1^{\text{ring}}$ on both ends. The generalized-Timoshenko finalization divides the energy by the segment length L , which is measured as the extent of the nodes along the axis.

The example is `examples/OpenSG_shell/5_taper_segment_aperiodic_boundaries`.

4.5.2 Seeing the capability

BAR_URC_numEl_52_segment_12_boundaries segment e1/e2/e3

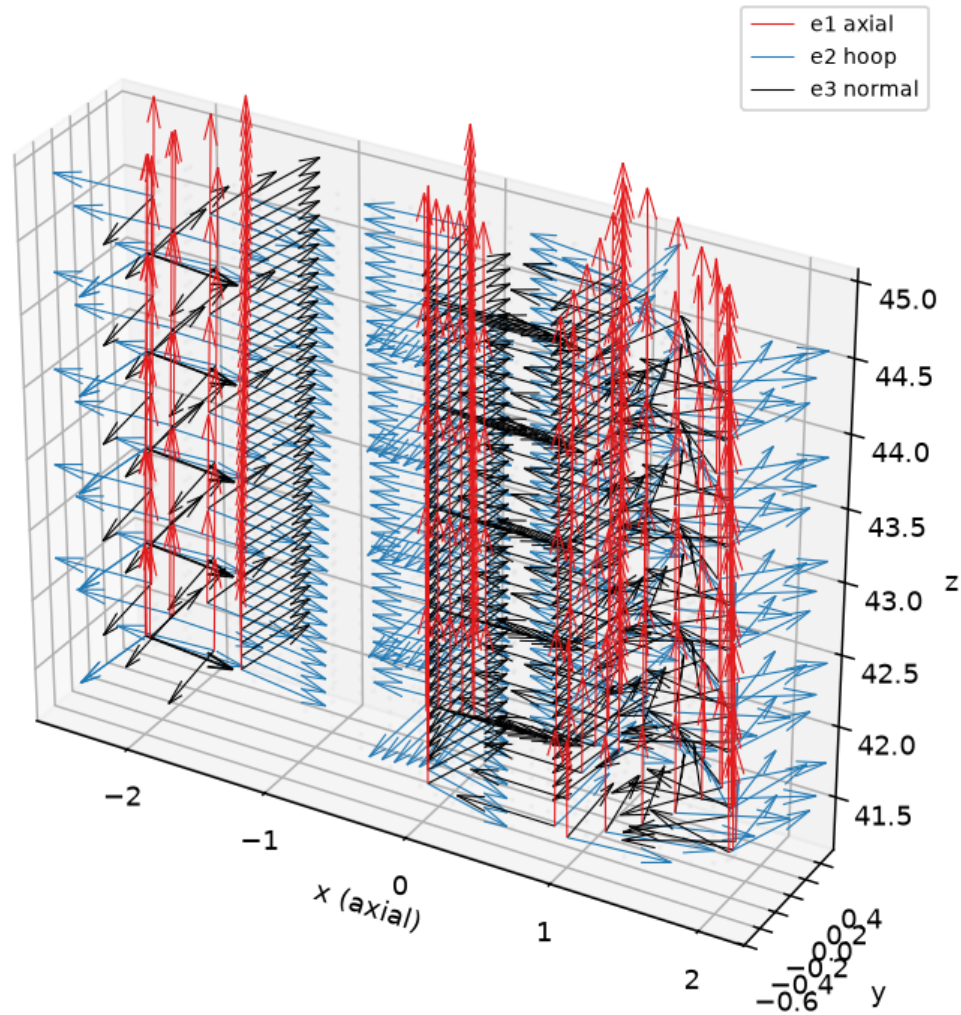


Figure 4.5: The BAR-URC blade segment the example runs, coloured by its per-element material frames. This is the surface on which the segment problem is solved: a 3-D shell mesh, not a cross-section.

4.5.3 The input the user edits

For the validation case, `make_cylinder_segment.py` generates the surface mesh. Its parameter block is the whole user interface:

```
R = 1.0          # wall mid-surface radius [m]
NC = 160         # circumferential quads
NL = 3          # axial quads over the segment (>=2 so an interior ring exists)
L = 1.5         # segment length [m]
HR = [0.05, 0.1, 0.2] # wall/radius ratios: thin, moderate, thick
```




Figure 4.6: The two end cross-sections extracted automatically from the free-edge graph of the segment mesh, left ring and right ring, each written as a standalone 1-D SG and solved on its own. On a tapered segment the two rings differ, and their two 6×6 matrices bracket the segment result.

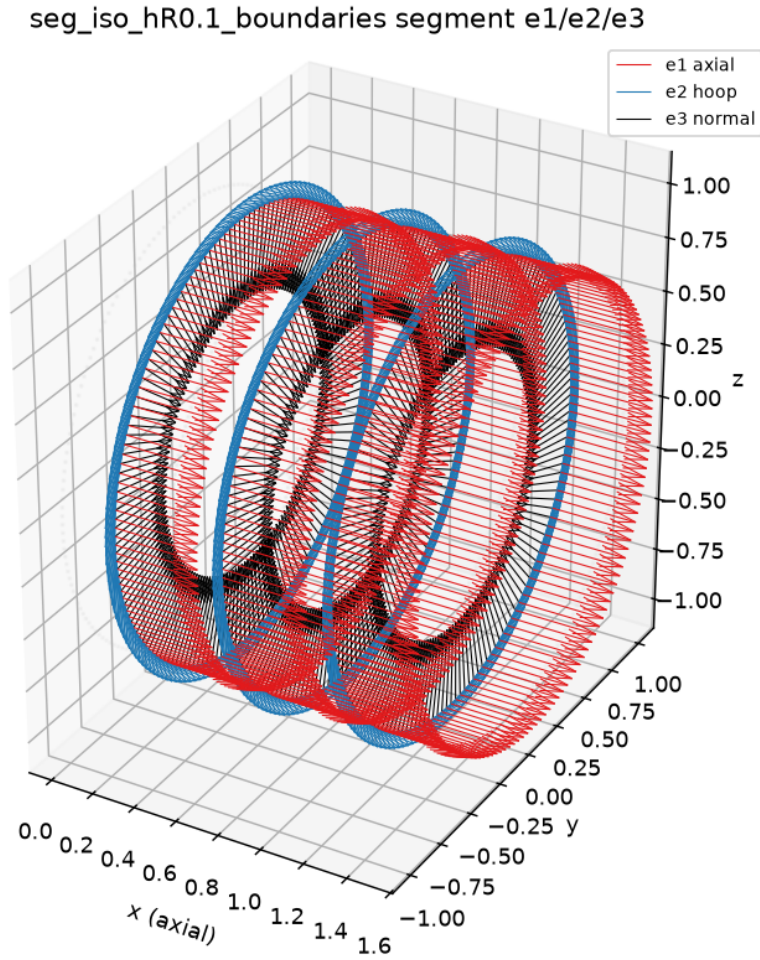


Figure 4.7: The prismatic circular cylinder used for the acceptance test. The same free-edge extraction runs on it, and here both ends are identical by construction, so the segment 6×6 must reproduce the ring 6×6 .

```
ISO = {"name": "iso", "density": 1800.0,
      "E": [70e9, 70e9, 70e9], "G": [26.923e9]*3, "nu": [0.3, 0.3, 0.3]}
ANI = {"name": "ani", "density": 1800.0,
      "E": [37e9, 9e9, 9e9], "G": [4e9, 4e9, 4e9], "nu": [0.3, 0.3, 0.3]}
```

Listing 4.8: The parameter block of `make_cylinder_segment.py`.

It writes six files into a `meshes/` sub-folder, named `seg_<tag>_hR<ratio>.yaml`: an isotropic single-ply tube and a balanced $[+45/-45]$ tube at each of the three thickness ratios. The beam axis is x , the cross-section plane is (y, z) , the reference surface is the wall mid-surface, and each element stores the nine-component triad $[e_1 e_2 e_3]$ with e_1 axial, e_2 the hoop tangent and e_3 the inward normal.

4.5.4 Run it

```
cd examples/OpenSG_shell/5_taper_segment_aperiodic_boundaries
python make_cylinder_segment.py
python run_taper_segment.py
python run_bar_urc_segment.py
```

The whole pipeline is one call on the 3-D shell YAML. There are no boundary files to prepare, because the ends are found from the mesh topology. Note the path: the cylinder meshes live in the `meshes/` sub-folder, so the argument carries that prefix.

```
from opensg_shell.sg_homo import segment_timo_from_3dyaml

r = segment_timo_from_3dyaml("meshes/seg_iso_hR0.1.yaml")
r["S6"]          # segment Timoshenko 6x6
r["C6L"], r["C6R"] # the two boundary-ring 6x6s
r["L"]          # segment length used to normalize the energy
r["solve_time"]  # seconds
```

Listing 4.9: The segment call, with the `meshes/` path used by `run_taper_segment.py`.

4.5.5 What comes out

Each run writes, alongside the input YAML, the two boundary 1-D YAMLs (`boundary_<tag>_L.yaml` and `_R.yaml`), the `<tag>_boundaries.npz` bundle, three orientation PNGs (`orient_<tag>_segment.png`, `orient_<tag>_ring-L.png`, `orient_<tag>_ring-R.png`), and the timed `<yaml>_Timo.out` in the SwiftComp layout. For the isotropic cylinder that file opens with

```
OpenSG msg-shell tapered/aperiodic segment (boundary V0/V1 Dirichlet, L=1.5)
```

and closes with `Time taken: 2.51 sec.`

One caveat on the figures. The extraction is called with `plot="auto"`, which means an orientation PNG is drawn *only if that file is not already on disk*. If you regenerate or edit a mesh and rerun, delete the three `orient_*.png` files for that tag first, or you will be looking at the frames of the previous mesh.

4.5.6 Acceptance test: the prismatic identity

For a **prismatic** segment the taper terms vanish, so the segment 6×6 must equal the boundary ring's own 6×6 . That identity is the acceptance test of the whole boundary extraction plus V_0/V_1 mapping, and `run_taper_segment.py` measures it on the prismatic circular tube ($R = 1$, $t/R = 0.1$, $L = 1.5$) in both the isotropic and the ± 45 layup, writing `seg_ring_identity.dat`.

term	segment S_6	boundary ring C_6	% error	case
EA	4.397947×10^{10}	4.397947×10^{10}	0.0000	iso_hR0.1 $L = 1.5$ solve 2.5 s
GA_2	8.473281×10^9	8.473258×10^9	0.0003	
GA_3	8.473281×10^9	8.473258×10^9	0.0003	
GJ	1.694078×10^{10}	1.694078×10^{10}	0.0000	
EI_2	2.200273×10^{10}	2.200269×10^{10}	0.0002	
EI_3	2.200273×10^{10}	2.200269×10^{10}	0.0002	
EA	7.706160×10^9	7.706160×10^9	0.0000	aniso_hR0.1 $L = 1.5$ solve 1.5 s
GA_2	3.262832×10^9	3.262807×10^9	0.0007	
GA_3	3.262832×10^9	3.262807×10^9	0.0007	
GJ	6.526891×10^9	6.526891×10^9	0.0000	
EI_2	3.855225×10^9	3.855204×10^9	0.0006	
EI_3	3.855225×10^9	3.855204×10^9	0.0006	

Table 4.16: The prismatic identity, diagonal terms, from `seg_ring_identity.dat`. The worst diagonal error is 0.0003% (on GA) for the isotropic tube and 0.0007% for the ± 45 layup. The worst error anywhere in the 6×6 is 0.0052% and it falls on the GA_2 – EI_2 shear–bending coupling of the anisotropic case, whose ring value is -3.684772×10^7 against a segment value of -3.684965×10^7 .

The **% error** matrix in the file reports insignificant ring terms as zero: entries whose magnitude is below 10^{-6} of the largest are divided by infinity rather than by numerical noise, which is why the file shows exact zeros where the ring value is 10^{-5} against diagonals of 10^{10} .

4.5.7 Tapered demonstration: BAR-URC segment 12

`run_bar_urc_segment.py` runs the same pipeline on a real tapered segment of the 100 m BAR-URC blade, `BAR_URC_numEl_52_segment_12.yaml`. Here no identity holds. Each boundary ring has its own 6×6 , and the segment result is the true length-averaged Timoshenko stiffness of the tapered piece. The physical check is that every segment diagonal falls *between* its two ring values, which the driver reports as the ratio $(S - R)/(L - R)$; a value in $[0, 1]$ means the segment lies between its two ends.

term	segment S	ring L	ring R	ratio
EA	1.487716×10^{10}	1.498819×10^{10}	1.483824×10^{10}	0.260
GA_2	6.098229×10^8	6.248039×10^8	6.030954×10^8	0.310
GA_3	1.398945×10^8	1.457255×10^8	1.345727×10^8	0.477
GJ	3.353538×10^8	3.684346×10^8	3.057355×10^8	0.472
EI_2	2.996686×10^9	3.244829×10^9	2.765385×10^9	0.482
EI_3	8.971707×10^9	9.620926×10^9	8.397279×10^9	0.469

Table 4.17: BAR-URC tapered shell segment 12, from `bar_urc_segment12.dat`. Segment length $L = 3.45293$ m, solve 15.9 s. All six ratios lie in $[0, 1]$, so every segment diagonal is bracketed by its two boundary rings.

Read the ratios as a taper diagnostic. The bending and torsion terms sit near 0.47–0.48, close to the arithmetic mean of the two ends, which is what a nearly linear taper in those channels produces. EA and GA_2 sit at 0.26 and 0.31, noticeably below the mean, which says the axial and chordwise-shear stiffness of this segment is closer to its thin end than a linear interpolation of the two ring values would suggest. A station-by-station beam table built by interpolating ring properties would therefore over-predict those two terms on this segment.

4.5.8 Shear-scheme rule for segments

`segment_timo_from_3dyaml` defaults to `shear="full"` (2×2 Gauss), and that is the production setting to keep: MITC tying aliases the algebraic drilling content on flat-walled and webbed sections. The tied variants exposed by the element ("`mitc4_wonly`", which ties both rows at the Dvorkin–Bathe points but keeps every rotation column at its full-integration value; "`mitc4_g23`", which ties only the γ_{23} row; and "`mitc4_both`", naive full tying) are ablation options for studying the element, not recommended production settings for segments. Note the contrast with the ring of Section 4.1, whose production default *is* "`mitc4_g23`": the ring is a one-quad-deep prismatic strip and the segment is a genuine surface mesh, and the two geometries do not want the same treatment.

Chapter 5

Tutorials: the Solid Engine (msg-solid)

The `msg-solid` engine reduces a *solid* structure gene (SG) — a mesh of ordinary continuum elements in one, two or three dimensions — to a macroscopic constitutive law, and then runs the same construction backwards to recover the pointwise three-dimensional strain and stress inside that gene. Everything in this chapter is reached through two entry points.

entry point	module	structure gene it reads
<code>rm_plate_msg</code>	<code>opensg_solid.rm_plate_1D.msg_rm_plate</code>	a 1-D line mesh through a wall thickness
<code>plate_homo_2d</code>	<code>opensg_solid.sg_homo</code>	a 1-D, 2-D or 3-D solid SG

Table 5.1: The two homogenization entry points of `msg-solid`.

The first is the dedicated through-thickness (laminate) route: the wall is a stack of plies, nothing varies in-plane, so the gene is one-dimensional and the result is a plate law. The second is the general route. Its `n_model` argument selects which macro model the same SG is reduced to.

<code>n_model</code>	macro model	row and column order	title infix
1	beam	[<code>eps11 gam12 gam13 k1 k2 k3</code>]	Timoshenko
2	plate	[<code>N11 N22 N12 M11 M22 M12</code>]	Classical Plate
3	3-D elastic	Voigt [<code>11 22 33 23 13 12</code>]	(none)

Table 5.2: `n_model` on `plate_homo_2d`. The infix goes into The Effective <infix> Stiffness Matrix; the plate route becomes Reissner-Mindlin Plate when `shear_refined=True` produces an 8×8 .

Every `plate_homo_2d` call writes a timed SwiftComp-.K-layout report — effective stiffness, effective compliance, and, for the 3-D solid law only, an engineering-constants block — opening with an `OpenSG` banner and closing with a `Time taken:` line in seconds. Unless you pass `plot=False` it also writes a `<base>.mesh.png` with the elements coloured by material. One rule governs the names of both: inside `plate_homo_2d` the output base is `base = os.path.splitext(sc_path)[0]`, so the report is *always* `<input basename>.out`, regardless of what the script calls the case.

The eight runnable examples live under `examples/OpenSG-solid`. Each runner is meant to be executed from inside its own folder, because the SG file is named relative to the working directory.

folder	script	what it does
1_get_plate_props_from_1DSG	1d_sg.py	layup $\rightarrow$ 1-D SG $\rightarrow$ plate law
2_get_plate_stress_from_1DSG	rm_dehom.py, rm_dehom_ff.py	plate resultants $\rightarrow$ 3-D ply stress
3_get_plate_props_from_2D_SG	plate_homo_2dsg.py	2-D cell SG $\rightarrow$ plate ABD
4_get_plate_dehom_from_2DSG	plate_dehom_2dsg.py	macro plate strain $\rightarrow$ fields in the cell
5_get_solid_props_from_SG	solid_homo_2dsg.py	2-D cell SG $\rightarrow$ equivalent 3-D solid
6_get_solid_props_from_3D_SG	tpms_solid_props.py and others	3-D SG $\rightarrow$ equivalent 3-D solid
7_get_beam_props_from_SG	beam_homo_sg.py	2-D cross-section SG $\rightarrow$ Timoshenko 6×6
8_get_beam_dehom_from_SG	beam_dehom_sg.py	macro beam strain $\rightarrow$ fields in the section

Table 5.3: The eight msg-solid example folders.

A note on what you will find in those folders before you run anything. Some of the files named as outputs below are regenerated on every run and are simply not checked in; where that is the case it is said explicitly. Nothing in this chapter depends on a pre-computed file being present.

5.1 Plate properties from a through-thickness 1-D SG

5.1.1 What it computes

The structure gene is the wall discretised through its own thickness: one element per ply, quartic by default, with each node carrying the three warping (fluctuation) degrees of freedom. Minimising the 3-D strain energy over that line mesh order by order in h/ℓ gives the warping ladder — the zeroth-order columns V_0 and the first-gradient columns V_{11} , V_{12} — from which the classical plate stiffness follows as

$$\mathbf{A}_6 = \langle (\boldsymbol{\Gamma}_\varepsilon + \boldsymbol{\Gamma}_h \mathbf{V}_0)^\top \mathbf{C}(z) (\boldsymbol{\Gamma}_\varepsilon + \boldsymbol{\Gamma}_h \mathbf{V}_0) \rangle, \quad (5.1)$$

where $\langle \cdot \rangle$ is the through-thickness integral and $\mathbf{C}(z)$ the ply stiffness rotated by its fibre angle. With `model: 1` the run additionally identifies the 2×2 MSG transverse-shear block $\mathbf{G}$ from the second-order energy and assembles the 8×8 law

$$\mathbf{ABDG} = \begin{bmatrix} \mathbf{A}_6 & \mathbf{0} \\ \mathbf{0} & \mathbf{G} \end{bmatrix}, \quad (5.2)$$

in which the transverse shears are uncoupled from the membrane and bending measures. Row and column order is [e11 e22 g12 k11 k22 k12 2g13 2g23], and that string is printed in the banner of every .out so a file can always be read without the manual.

5.1.2 The input you edit

Everything lives in `layup_db.yaml`. The script reads that file and nothing else, so a new laminate means editing the YAML, never the code.

For `fraction`, 0 is the bottom (OML) face, 0.5 the mid-surface and 1 the top face. It is a property of the *mesh*, not of the homogenization call: the generated node coordinates are measured from the reference plane, so they run from $-\text{fraction} \cdot h$ to $(1 - \text{fraction}) \cdot h$ and $x_3 = 0$ is the reference. The B block of the ABD depends on this choice, so homogenize, analyze and recover with the same `fraction`.

key	what it sets	value in the shipped file
model	0 = classical 6×6 ABD, 1 = 8×8 ABDG	1
fraction	reference surface as a fraction of thickness	0.5
mesh: n_per_layer	SG elements per physical ply	1
mesh: elem_order	element order; 4 = 5-noded quartic	4
materials	per material E: [E1,E2,E3], G: [G12,G13,G23], nu: [nu12,nu13,nu23], rho	ge, herex
layup	one entry per ply, bottom ply first	9 plies

Table 5.4: The six keys `1d_sg.py` reads from `layup_db.yaml`.

The shipped case is a $[0/90/0/90/\text{core}]_s$ sandwich: eight graphite/epoxy plies of 0.9525 mm ($E_1 = 128$ GPa, $E_2 = E_3 = 11$ GPa, $G_{12} = G_{13} = 4.48$ GPa, $G_{23} = 1.53$ GPa, $\rho = 1500$ kg/m³) around a 144.78 mm HEREX C70.130 PVC foam core ($E = 103.63$ MPa, $G = 50$ MPa, $\nu = 0.32$, $\rho = 130$ kg/m³), total $h = 0.1524$ m.

The same `layup_db.yaml` also carries a `V2` flag, a `plate:` block and a `dehom:` block. Those are read by the recovery scripts of Section 5.2; `1d_sg.py` itself uses only the six keys in Table 5.4.

5.1.3 Run it

```
cd examples/OpenSG-solid/1_get_plate_props_from_1DSG
python 1d_sg.py
```

A different database file may be passed as the single positional argument:

```
python 1d_sg.py my_other_layup.yaml
```

5.1.4 What comes out

file	content
<code>1dsg.yaml</code>	the generated 1-D SG mesh: an <code>sg:</code> header (<code>type: plate_1d</code> , <code>elem_order: 4</code> , <code>n_per_layer: 1</code> , <code>reference_fraction: 0.5</code> , <code>thickness</code> , <code>n_ply</code>), 37 nodes given as single x_3 coordinates from -0.0762 to $+0.0762$ m, 9 five-noded elements, the material blocks with densities, and one element set plus one <code>sections:</code> entry per ply carrying its material, angle and thickness
<code>1dsg.png</code>	the mesh figure, plies coloured by material
<code>layup_db_plate_homo.out</code>	the plate law, named <code><layup_db stem>_plate_homo.out</code>

Table 5.5: Outputs of `1d_sg.py`.

The `.out` opens with a banner that records the whole run, then the matrix whose title follows model — Reissner-Mindlin Plate here, Classical Plate at model: 0:

```
OpenSG msg-solid plate model from 1dsg.yaml: 9 plies, h = 0.152400 m, fraction = 0.5,
rho*h = 30.251400 kg/m^2, rows [e11 e22 g12 k11 k22 k12 2g13 2g23]
```

```
The Effective Reissner-Mindlin Plate Stiffness Matrix
```

5.4916502E+008	2.6417019E+007	1.5524611E-010	3.6182957E-006
3.6122933E-006	1.0244011E-024	0.0000000E+000	0.0000000E+000

The effective compliance follows in the same layout and the file closes with `Time taken: 0.82 sec`. Engineering constants are printed only for the 3-D solid law, never for a plate law, because a plate stiffness is not a material stiffness.

5.1.5 What the numbers mean

The eight diagonal entries of the shipped run, in SI (the code is unit-agnostic and simply follows the input, which is metres and pascals here):

term	value	units
A_{11}	5.4916502×10^8	N/m
A_{22}	5.4916502×10^8	N/m
A_{66}	4.1376600×10^7	N/m
D_{11}	3.0005458×10^6	N·m
D_{22}	2.9371144×10^6	N·m
D_{66}	2.0111708×10^5	N·m
G_{11}	7.7009772×10^6	N/m
G_{22}	7.5423712×10^6	N/m

Table 5.6: Diagonal of the 8×8 plate law of the shipped sandwich.

Three checks are worth making on any run of your own, and all three are visible in this one.

- **The section mass.** The banner’s $\rho h = 30.2514 \text{ kg/m}^2$ equals $8 \times 0.0009525 \times 1500 + 0.14478 \times 130 = 11.43 + 18.8214 \text{ kg/m}^2$, so the layup that reached the solver is the layup you wrote.
- **The B block.** The stack is symmetric about the mid-surface and `fraction: 0.5` puts the reference plane there, so membrane-bending coupling must vanish. It does: the largest entry of the B block is 3.6183×10^{-6} against an A_{11} of 5.4917×10^8 , fourteen orders down.
- **The transverse-shear block.** $G_{11} = 7.7010 \times 10^6 \text{ N/m}$ sits 6.4 % above the crude core-only estimate $G_{\text{core}} h_{\text{core}} = 50 \times 10^6 \times 0.14478 = 7.239 \times 10^6 \text{ N/m}$, which is the expected magnitude for a sandwich whose shear is carried almost entirely by the foam. A_{11} , by contrast, is set by the stiff faces.

5.1.6 What it is validated against

`src/opensg_solid/rm_plate_1D/tests/test_msg_rm_plate.py` gates the construction on analytic anchors and on an independent plain-NumPy re-assembly of the same SG matrices. For an isotropic plate with $\nu = 0$ the transverse-shear block comes out exactly $\frac{5}{6}Gh$, the textbook shear-correction factor, with the least-squares residual U^* at machine zero (`test_isotropic_nu_0_gives_five_sixths`); $\mathbf{A}_6$ equals the classical lamination-theory `msg_materials.compute_ABD_matrix` at the matching reference plane (`test_A6_matches_compute_ABD`); $\mathbf{A}_6(\text{fraction})$ equals the offset transform of $\mathbf{A}_6(0)$ (`test_reference_plane_transform`); and the warping fields satisfy the Euler-Lagrange equations and the gauge condition $\psi^T H V = 0$ for V_0 , V_{11} and V_{12} directly (`test_euler_lagrange_residuals`, `test_H_identities_and_gauge`). The formulation is that of Yu, Hodges and Volovoi, *Computers & Structures* 81 (2003) 439–454.

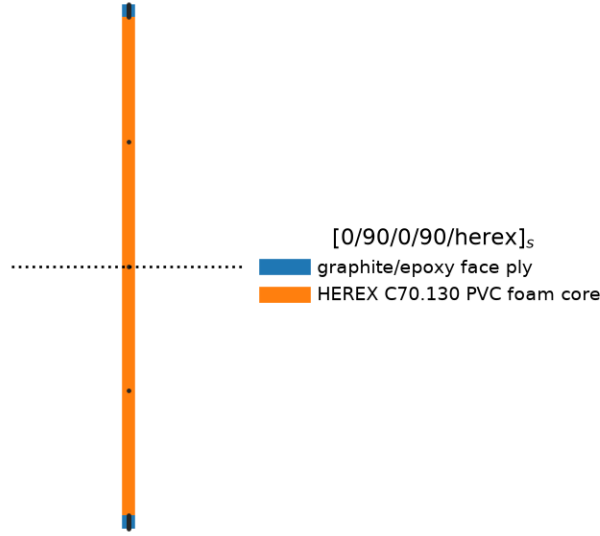


Figure 5.1: The through-thickness 1-D structure gene of the sandwich laminate, as written by the run to `1dsg.png`. The gene is a line, drawn with thickness for legibility: the thin graphite/epoxy face plies are at top and bottom, the foam core between them, and the dashed line marks the reference surface at mid-thickness.

5.2 Through-thickness stress recovery

5.2.1 What it computes

Homogenization threw information away; recovery puts it back. Given the section resultants at a point of the plate, the recovery evaluates the 3-D strain, stress, warping and displacement at every depth of the gene. The construction is linear in **42 drivers**,

$$\mathbf{D} = [\mathbf{E}_6, \mathbf{E}_{6,1}, \mathbf{E}_{6,2}, \mathbf{E}_{6,11}, \mathbf{E}_{6,12}, \mathbf{E}_{6,22}, \mathbf{qt}_6], \quad (5.3)$$

so the code builds three operators once per depth from 42 unit evaluations — $\mathbf{T}_E, \mathbf{T}_S \in \mathbb{R}^{6 \times 42}$ and $\mathbf{T}_W \in \mathbb{R}^{3 \times 42}$ — after which every station is one matrix-vector product, `jax.vmap`-ed over the whole field. The plate strains come from the section law itself, $\mathbf{E}_6 = \mathbf{A}_6^{-1} \mathbf{F}_6$, so a recovery never bypasses the homogenization.

Which driver feeds which component is the thing to understand before choosing an input.

driver	where it comes from	what it produces	without it
$\mathbf{E}_6$	$\mathbf{A}_6^{-1} \mathbf{F}_6$ at the station	$\sigma_{11}, \sigma_{22}, \sigma_{12}$ layer by layer	nothing
$\mathbf{E}_{6,1}, \mathbf{E}_{6,2}$	in-plane gradients of the resultants	σ_{13}, σ_{23} (the V_{11}/V_{12} warping)	$\sigma_{13} = \sigma_{23} \equiv 0$
$\mathbf{E}_{6,11}, \mathbf{E}_{6,12}, \mathbf{E}_{6,22}$	second gradients	the σ_{33} interior build-up	σ_{33} keeps only its face terms
$\mathbf{qt}_6$	the <i>applied</i> surface-pressure ladder $[\mathbf{q} \ \mathbf{q},1 \ \mathbf{q},2 \ \mathbf{q},11 \ \mathbf{q},12 \ \mathbf{q},22]$	the face traction $\sigma_{33} = -q$	$\sigma_{33} = 0$ at that face

Table 5.7: The four driver groups of the through-thickness recovery.

Q_1 and Q_2 are deliberately not part of $\mathbf{F}_6$: there is no shear slot among the 42 drivers, because in the asymptotic construction the transverse shears are produced by the gradient brackets. They enter only as the per-station rescale targets $\int \sigma_{13} dz = Q_1$ and $\int \sigma_{23} dz = Q_2$, so the profile *shape* comes from the gradients while the carried force is exactly the one you supplied.

5.2.2 Driver A: one station, resultants typed into the script

`rm_dehom.py` recovers a single station. The input is the `USER INPUT` block at the bottom of the file: `SG_YAML` (the mesh written in Section 5.1), `F6` and `Q2v`, plus the optional gradient and load ladders. `F6` and `Q2v` ship as `None` and the script raises a `ValueError` rather than run, by design — a built-in number would silently masquerade as a result. The block below is the file with the two mandatory entries filled in with an example loading; the values are yours to choose.

```
SG_YAML = os.path.join(HERE, "1dsg.yaml")
F6 = [1.0e6, 0.0, 0.0, 5.0e4, 0.0, 0.0] # [N11, N22, N12, M11, M22, M12]
Q2v = [0.0, 0.0] # [Q1, Q2] [N/m]
DE1 = DE2 = None # d(E6)/dx, d(E6)/dy
D11 = D12 = D22 = None # second gradients
QT6 = None # [q q,1 q,2 q,11 q,12 q,22]
LATTICE = "gauss" # "gauss" (default) or "nodes"
```

Listing 5.1: The `USER INPUT` block of `rm_dehom.py`, with the two mandatory entries supplied.

```
cd examples/OpenSG-solid/2_get_plate_stress_from_1DSG
python rm_dehom.py
```

It writes `1dsg_dehom.SM`, `.EM`, `.U` and `.vtk` — the `VTK` is part of the default output, not an extra step — and prints `max|S11|` through `max|S23|`. Because the script refuses to run until you supply `F6` and `Q2v`, these four files are produced by your own run and are not checked into the folder.

With every optional input left at `None` this is the honest classical recovery: $\sigma_{11}, \sigma_{22}, \sigma_{12}$ exact layer by layer, $\sigma_{13} = \sigma_{23} = 0$ exactly, σ_{33} at machine zero. One station has no neighbours, so it cannot supply gradients, and the code does not invent them. `LATTICE` selects the output depths: `"gauss"` (the default) puts them at the Gauss abscissae of each element, `"nodes"` at the SG nodes.

5.2.3 Driver B: a whole field from a .ff station table

`rm_dehom_ff.py` is the general driver and the one to use for real work. A `.ff` file is the plate analogue of a `VABS .glb`: whitespace separated, `#` comments, one row per in-plane station, in any row order and on any station geometry. The shipped table was collected from an Abaqus `S8R` shell field, but any solver can write it — the driver contains no Abaqus. Its first three lines state the format:

```
# plate dehom FF station table (collected from ex5_shell_S8R_field.dat)
# x[m] y[m] N11 N22 N12[N/m] M11 M22 M12[N] Q1 Q2[N/m] u1 u2 u3[m] wx wy[-]
# 40 x 40 rectangular station lattice, x-fastest
```

Ten columns are required (`x y N11 N22 N12 M11 M22 M12 Q1 Q2`); the optional columns 11–15 add the mid-surface displacement u_1, u_2, u_3 and slopes w_x, w_y , and without them the `.U` file carries the warping alone. The loader accepts exactly 10 or 15 columns and raises otherwise. **Every gradient driver is computed from the stations themselves**, by one of two paths chosen automatically: exact tensor-grid finite differences (`np.gradient` on the true non-uniform

spacings) when the coordinates form a complete rectangular lattice, or a meshfree KD-tree patch fit ($k = 12$ nearest neighbours, distance-weighted local quadratic least squares, first and second derivatives from one batched solve) for any other cloud. The flag `--scatter` forces the meshfree path.

Unlike the single-station driver, `rm_dehom_ff.py` has no `LATTICE` variable at all: it always calls `z_stations(sg, "gauss")` and therefore always reports at the element Gauss depths. `LATTICE = "nodes"` exists only in `rm_dehom.py`.

The applied face pressure is *not* in the table — loads are input, not solver output — so it lives in `layup_db.yaml`:

```
dehom:
  ff: Abaqus_results/ex5_shell_S8R_field.ff
  loads:
    top: {q0: 68.9476e6, shape: sinsin}  # uniform / sin_x / sin_y / sinsin
    bottom: none
```

Listing 5.2: The `dehom:` block of `layup_db.yaml`.

Each `shape` fixes the whole six-term ladder analytically, differentiated with `a` and `b` from the `plate:` block ($a = b = 1.524$ m in the shipped file). Bottom-face loads raise `NotImplementedError`: the 42-driver operator block carries the top ladder only.

```
cd examples/OpenSG-solid/2_get_plate_stress_from_1DSG
python rm_dehom_ff.py ex5_shell_S8R_field.ff
```

Pass the table explicitly, as above. The `dehom: ff:` key in the shipped `layup_db.yaml` points at `Abaqus_results/ex5_shell_S8R_field.ff`, and that folder does not exist in this example: the table sits at the top level of the folder as `ex5_shell_S8R_field.ff`. Leaving the path to the key therefore trips the driver's own guard, which reads `no .ff table: pass it on the command line or set dehom: ff` in followed by the database path. Either give the file name on the command line, as above, or correct the key. `--db` points at a database elsewhere. The run prints its chosen gradient path (`lattice FD (40 x 40)` for this table), the operator build, the `jax.vmap` over stations, and the peak of each stress component.

5.2.4 What comes out

Outputs are named after the table, `<ff stem>_ff`.

file	content
<code>ex5_shell_S8R_field_ff.SM</code>	3-D stress: columns <code>x y z</code> then <code>S11 S22 S33 S12 S13 S23</code> in Pa
<code>ex5_shell_S8R_field_ff.EM</code>	3-D strain, same layout, <code>E11</code> through <code>E23</code>
<code>ex5_shell_S8R_field_ff.U</code>	3-D displacement <code>U1 U2 U3</code> in m
<code>ex5_shell_S8R_field_ff_gauss.vtk</code>	ASCII <code>STRUCTURED_GRID</code> , <code>DIMENSIONS 40 40 45</code> , 72000 points, written only on a lattice

Table 5.8: Outputs of `rm_dehom_ff.py` on the shipped table.

The three text files share a two-line header naming the recovery and its station set. For this run the second line reads `1600 .ff stations [lattice FD (40 x 40)] x the 45 SG-element Gauss depths; ALL gradient drivers from the stations; S/E in the PLY MATERIAL frame (U global); z = 0 is the reference surface`. Four conventions matter when you read the files.

- z is in the **SG frame**: $z = 0$ is the reference surface, not the mid-plane, unless `fraction` put them at the same place.
- The depths are the Gauss abscissae of each five-noded element — five per ply here, 45 in all — so every output point is strictly inside one ply, and a material interface, where stress is genuinely double-valued, never appears in a file.
- Stress and strain are written in the **ply material frame** of each depth, which is where failure criteria live. The chain computes in the laminate frame — it must, since the gradients and the Q -rescale integrate across plies — and rotates only at write time. The displacement `.U` stays global.
- Component order in the files is 11 22 33 12 13 23, reordered from the internal SG Voigt order (11, 22, 33, 23, 13, 12) on write.

5.2.5 What it is validated against

The accuracy table in `src/opensg_solid/rm_plate_1D/USER_GUIDE.md` records the recovery errors against reference elasticity solutions, falling at $\mathcal{O}(S^{-2})$ in the slenderness S .

component (chain)	$S = 4$	$S = 10$	thin
σ_{13} (cross-ply)	21 %	4.4 %	0.18 % at $S = 50$
σ_{33} equilibrium	5.5 %	1.2 %	0.05 %
σ_{11} second-order	27 %	2.0 %	0.04 % at $S = 64$
σ_{12} angle-ply	18 %	—	0.07 % at $S = 64$
U_1	30 %	1.4 %	0.02 % at $S = 64$

Table 5.9: Recovery accuracy against reference elasticity solutions, from `USER_GUIDE.md`.

Soft-core sandwiches need a larger S for the in-plane second-order recovery; their σ_{13} , σ_{33} and displacements stay accurate at $S = 10$. Separately, `dehom_README.md` in the example folder records that the finite-difference gradient path and the analytically differentiated known-mode path were run side by side on the same field and agree to better than 1 % on every component in the interior (four integration points trimmed per edge); the 11–15 % whole-field figure is entirely the one-sided stencil band about two elements wide at the boundary. That same README derives the full chain equation by equation and states which term is Yu’s and which is this project’s. The second-order recovery gate itself is `examples/OpenSG-solid/CS_OpenSG_examples/static/validate_v2.py`, which drives four Pagano cylindrical-bending cases with exact closed-form harmonic drivers; its reference `.dat` profiles are produced by the per-case `run_case.py` and are not checked in.

5.3 Plate properties from a 2-D cell SG

5.3.1 What it computes

When the wall has in-plane microstructure — a honeycomb core, a corrugation, a truss — the gene is a 2-D mesh of one periodic cell, and `plate_homo_2d` homogenizes it to the plate ABD with `n_model=2`. Opposite faces, edges and corners are tied through the sparse periodic map; `boundary="periodic"` is the default and is the correct treatment for a periodic medium.

5.3.2 The example SG and the input you edit

RHC_SW_2UC_45.yaml is a two-unit-cell composite honeycomb sandwich section: `dim: 2`, `scale: 35.248`, 4251 nodes, 6640 three-node triangles, three materials. Coordinates are in millimetres and moduli in MPa.

The User Input block of `plate_homo_2dsg.py` is three items:

```
n_model = 2                # 1: Beam; 2: Plate; 3: 3D elastic
name = "RHC_SW_2UC_45"     # reads <name>.yaml

material_param = jnp.array([
    (108e3, 8e3, 8e3, 4e3, 4e3, 3e3, 0.32, 0.32, 0.30),      # ply +45
    (108e3, 8e3, 8e3, 4e3, 4e3, 3e3, 0.32, 0.32, 0.30),      # ply -45
    (69e3, 69e3, 69e3, 26.54e3, 26.54e3, 26.54e3, 0.30, 0.30, 0.30)])
angles = jnp.array([45.0, -45.0, 0.0]) # deg per material; 0.0 = none
```

Listing 5.3: The User Input block of `plate_homo_2dsg.py`.

`material_param` is one row of engineering constants per material, $(E_1, E_2, E_3, G_{12}, G_{13}, G_{23}, \nu_{12}, \nu_{13}, \nu_{23})$, and `angles` one rotation per material in degrees. Passing them *overrides* the material blocks stored in the SG file. That override is the intended route here and it is not cosmetic: opening `RHC_SW_2UC_45.yaml` shows materials 1 and 2 stored as `type: 2`, that is as full 6×6 **C** blocks already rotated to $\pm 45^\circ$ (their C_{16} entries are ∓ 25368.7), while material 3 is `type: 0`, isotropic aluminium with $E = 69000$ MPa and $\nu = 0.3$. Supplying `angles` together with the stored blocks would rotate the plies twice. Rebuilding from engineering constants and rotating in code is unambiguous. The same numbers are recorded next to the runner in `mat_override.yaml` for reference; omit both arguments to use the file's own blocks unchanged.

The solver reads `<name>.yaml`. A SwiftComp `.sc` is converted once with the packaged helper. That helper is a library function, not a command-line tool: the module `sc_to_yaml` has no `__main__` block, so `python -m opensg_solid.rm_plate_1D.helper.sc_to_yaml file.sc` does nothing. Call `convert` instead, which writes `<base>.yaml` and `<base>.msh` and returns the parsed dictionary:

```
from opensg_solid.rm_plate_1D.helper.sc_to_yaml import convert

sc = convert("RHC_SW_2UC_45.sc") # writes RHC_SW_2UC_45.yaml + .msh
```

Listing 5.4: Converting a SwiftComp `.sc` once.

5.3.3 Run it

```
cd examples/OpenSG-solid/3_get_plate_props_from_2D_SG
python plate_homo_2dsg.py
```

5.3.4 What comes out

The run writes `RHC_SW_2UC_45.out`, the timed Classical Plate stiffness and compliance in the `.K` layout, and `RHC_SW_2UC_45_mesh.png`, the cell mesh with elements coloured by material. The script also prints `r["C_eff"]`, the same 6×6 it wrote. The `.out` banner records the SG measure and the boundary treatment:

```
OpenSG msg-solid plate model, omega 35.248001, periodic
```

```
The Effective Classical Plate Stiffness Matrix
```

```
-----
      3.3585973E+005      7.7500043E+004      -1.4366892E+002      4.1488404E-001
      1.4861902E+000      3.6602858E-002
```

closing with Time taken: 7.83 sec for this 4251-node, 6640-triangle cell.

5.3.5 What the numbers mean

$\omega = 35.248001$ is the cell's in-plane period, and it is directly checkable against the mesh: the nodes run from $y_1 = -17.624$ to $+17.624$ mm. The diagonal, in the mesh's own units:

term	value	units
A_{11}	3.3585973×10^5	N/mm
A_{22}	1.1291139×10^5	N/mm
A_{66}	1.0551654×10^5	N/mm
D_{11}	9.0367521×10^7	N·mm
D_{22}	5.7011050×10^7	N·mm
D_{66}	4.6026320×10^7	N·mm

Table 5.10: Diagonal of the honeycomb cell's plate ABD.

The membrane law is strongly anisotropic, $A_{11}/A_{22} = 2.97$, while the bending law is much closer to isotropic, $D_{11}/D_{22} = 1.59$: the two directions see the cell very differently in stretching and much less differently in bending. The largest entry of the whole B block is 4.954 against A terms of order 10^5 and D terms of order 10^7 , which is what a cell symmetric about its mid-plane should give and is the first health check to make on a run of your own.

5.3.6 The Reissner-Mindlin option

Passing `shear_refined=True` to `plate_homo_2d` additionally runs the RM first-order warping ladder and returns `r["G_msg"]` (the 2×2 transverse-shear block), `r["ABDG"]` (the same 8×8 block form as Eq. (5.2)), `r["A6_ladder"]` and `r["Ustar_rel"]`. When the ladder produces an SPD fit the `.out` is written from the 8×8 and its matrices are titled **Reissner-Mindlin Plate** instead of **Classical Plate**; otherwise the run falls back to the 6×6 . The argument applies to `n_model=2` only and raises for any other model.

```
from opensg_solid.sg_homo import plate_homo_2d

r = plate_homo_2d("RHC_SW_2UC_45.yaml", material_param=material_param,
                  angles=angles, n_model=2, shear_refined=True)

print(r["ABDG"])
```

Listing 5.5: Requesting the 8x8 from a 2-D cell SG.

5.3.7 The 1-D gene in the same folder, and a naming trap

The folder also ships `Plate_1D_SG_2UC_45.yaml`, a **1-D** structure gene (`dim: 1`, two-node line elements through a stack), which runs through the identical call by changing `name. plate_homo_`

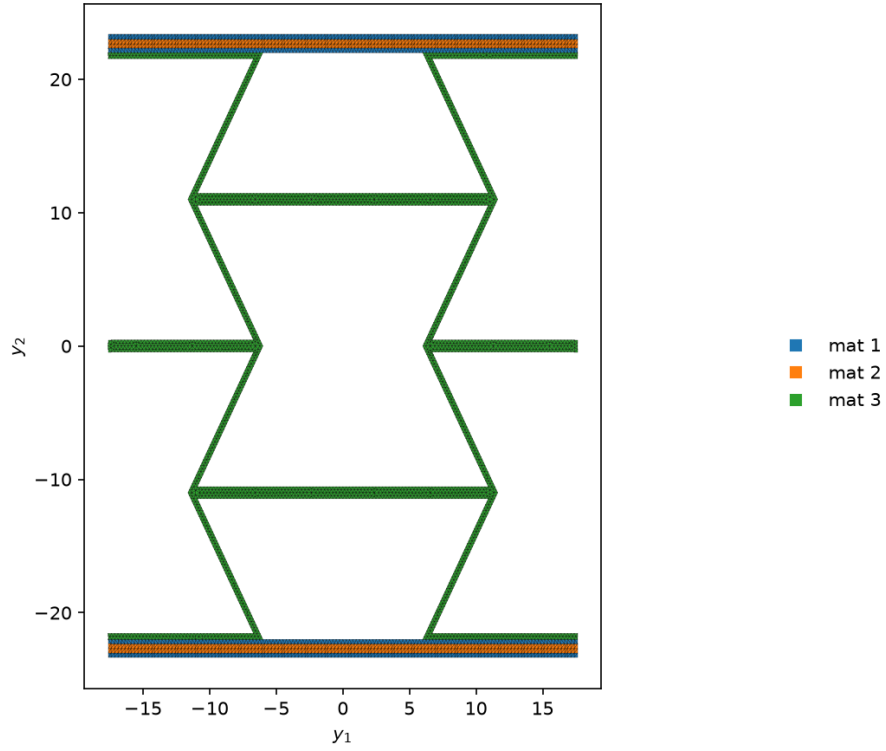


Figure 5.2: The two-unit-cell honeycomb sandwich structure gene, elements coloured by material, as written to `RHC_SW_2UC_45_mesh.png`. The $\pm 45^\circ$ face laminae (materials 1 and 2) are the thin horizontal bands at $y_2 = \pm 23$ mm and the isotropic core web (material 3) folds between them over the in-plane period. The through-thickness coordinate is y_2 , spanning ± 23.35 mm.

2d reads 1-D, 2-D and 3-D genes from the same code path, so a stack of plies can be homogenized either here or through the dedicated through-thickness route of Section 5.1.

Be careful about the output name. `plate_homo_2d` always derives its report path from the *input* basename, so setting `name = "Plate_1D_SG_2UC_45"` writes `Plate_1D_SG_2UC_45.out` — the .K-layout report — and nothing else. The file `Plate_1D_SG_2UC_45_plate_ABD.out` sitting in that folder is not produced by `plate_homo_2dsg.py` at all: it is an `np.savetxt` leftover from an older script style, a bare 6×6 under a single comment line (`# plate 6x6 [N11 N22 N12 M11 M22 M12] from the 1D SG Plate_1D_SG_2UC_45.sc`) with no banner, no compliance block and no timing. Its contents are still a valid record of that gene — $A_{11} = A_{22} = 1.65452926 \times 10^6$, $A_{66} = 6.42527474 \times 10^5$, $D_{11} = D_{22} = 7.86727254 \times 10^7$, $D_{66} = 3.12496023 \times 10^7$ in N/mm and N·mm — but do not expect your run to reproduce that file name or that layout.

5.4 Plate recovery from a 2-D SG

5.4.1 What it computes

Given a converged plate solution you know the macro plate strain at the point of interest. Feeding it back into the homogenized cell recovers the local 3-D strain and stress at **every Gauss point of the gene**, which is where a honeycomb actually fails — in the web, not in the smeared plate. `dehom_fields` returns the strain, the stress and the fluctuation displacement in one pass, using the warping columns V_0 that the homogenization already solved. Nothing is re-solved.

5.4.2 The input you edit

`plate_dehom_2dsg.py` takes the same `name`, `material_param` and `angles` as Section 5.3, plus one new line — the macro plate strain, in the order `[e11, e22, 2e12, k11, k22, 2k12]`:

```
epsilon_bar = jnp.array([0.0, 0.1, 0.0, 0.1, 0.0, 0.0])
```

Listing 5.6: The macro plate strain driving the recovery.

The shipped state combines a transverse extension $\varepsilon_{22} = 0.1$ with a bending curvature $\kappa_{11} = 0.1 \text{ mm}^{-1}$. This vector is yours: it comes from your plate solution at the station you care about, and there is no default that would be meaningful.

5.4.3 Run it

```
cd examples/OpenSG-solid/4_get_plate_dehom_from_2DSG
python plate_dehom_2dsg.py
```

5.4.4 What comes out

The 19920 rows are 6640 triangles times three quadrature points. The script prints the ABD diagonal and the peak of each stress component.

Two conventions are worth knowing before reading the files. In the `.SM/.EM/.U` tables the SG coordinates are placed in the **last** slots of the `x y z` triple, so a 2-D gene leaves the `x` column at zero and puts y_1 in `y` and the through-thickness y_2 in `z`. And `.U` is the **fluctuation-only** displacement — its own header says so — because a unit-state SG recovery has no macro displacement to add.

file	content
RHC_SW_2UC_45.out	the timed .K-layout Classical Plate report written by plate_homo_2d inside the script; regenerated on each run
RHC_SW_2UC_45_plate_ABD.out	the plain-text 6×6 ABD via np.savetxt , header plate 6x6 [N11 N22 N12 M11 M22 M12] from the 2D SG RHC_SW_2UC_45
RHC_SW_2UC_45_dehom.txt	one row per Gauss point: GP_Index, Coord_X, Coord_Y , then Eps_xx Eps_yy Eps_zz Eps_yz Eps_xz Eps_xy and Sig_xx through Sig_xy — SwiftComp component order; one header line plus 19920 rows
RHC_SW_2UC_45_dehom.vtk	ASCII UNSTRUCTURED_GRID point cloud of the same 19920 points, each strain and stress component as its own SCALARS array, ready for ParaView
RHC_SW_2UC_45_dehom.SM / .EM / .U	the same fields in the rm_plate_1D layout: x y z then S11 S22 S33 S12 S13 S23, E11 through E23 , and U1 U2 U3
RHC_SW_2UC_45_mesh.png	the mesh figure, from the plate_homo_2d call the script makes first

Table 5.11: Outputs of `plate_dehom_2dsg.py`.

5.4.5 Reading the result

The first Gauss point of the shipped run sits at $(y_1, y_2) = (17.54067, 23.29375)$ mm, right at the top face of the cell whose half-thickness is 23.35 mm, and reports

$$\varepsilon_{11} = 2.329375, \quad \sigma_{11} = 8.755003 \times 10^4, \quad \sigma_{22} = 7.102971 \times 10^4, \quad \sigma_{12} = -6.542276 \times 10^4 \quad (5.4)$$

in MPa. That ε_{11} is exactly $\kappa_{11}y_2 = 0.1 \times 23.29375$, the macro part of the strain reproduced to every printed digit, which is the cheapest possible check that the strain state you passed is the strain state that arrived. The other five components are what the recovery adds: $\varepsilon_{22} = 0.2643$ and $\varepsilon_{33} = -0.9187$ are the fluctuation response of the cell, and σ_{12} is large even though the applied macro shear strain $2\varepsilon_{12}$ is zero, which is consistent with the off-axis face laminae the mesh figure shows at that height.

Over the whole gene the field maxima are:

component	max $ \sigma $ (MPa)	max $ \varepsilon $
<i>xx</i>	1.641632×10^5	2.329375
<i>yy</i>	9.199997×10^4	1.499038
<i>zz</i>	2.535821×10^4	1.032184
<i>yz</i>	1.083274×10^4	1.153314
<i>xz</i>	5.210321×10^3	8.807437×10^{-1}
<i>xy</i>	7.369978×10^4	7.881358×10^{-1}

Table 5.12: Component maxima over the 19920 Gauss points of the shipped plate recovery.

The *xx* strain maximum is again $\kappa_{11}y_2^{\max} = 2.329375$, as it must be at the extreme fibre. Local states like the σ_{zz} and σ_{yz} columns are exactly what a smeared plate model cannot show you, and the reason to run a dehomogenization at all. The driver here is a demonstration magnitude, not a service load; scale it to your own macro state before reading the stresses as failure indices.

5.5 Equivalent 3-D solid from a 2-D SG

5.5.1 What it computes

`n_model=3` reduces an SG to an equivalent **3-D solid** stiffness: the 6×6 material law of the homogenized continuum, in Voigt order [11, 22, 33, 23, 13, 12] with engineering shears. On a **2-D** SG this is the generalized-plane-strain problem: the cell is periodic in its two in-plane directions and uniform out of plane, six unit macro strains are applied, the fluctuation field $\mathbf{V}_0$ is solved for each, and the effective law is

$$\mathbf{D}_{\text{eff}} = \frac{\mathbf{D}_{ee} + \mathbf{V}_0^T \mathbf{D}_{he}}{\omega}, \quad (5.5)$$

with ω the cell area. This is the classical micromechanics unit-cell problem, which makes it the natural place to validate the route against published numbers.

5.5.2 The example SG

`examples/OpenSG-solid/5_get_solid_props_from_SG` homogenizes a unidirectional fibre/matrix square unit cell: 801 nodes, 1536 three-node triangles, 512 matrix elements and 1024 fibre elements, cell area $\omega = 1$.

material	E_1, E_2, E_3 (MPa)	G_{12}, G_{13}, G_{23} (MPa)	$\nu_{12}, \nu_{13}, \nu_{23}$	density
matrix	4760, 4760, 4760	1737.226 each	0.37, 0.37, 0.37	1200.0
fibre	276000, 19500, 19500	70000, 70000, 5735	0.28, 0.28, 0.70	1800.0

Table 5.13: The two phases of the UD unit cell. The matrix shear modulus is written by the converter as $4760/(2 \cdot 1.37)$.

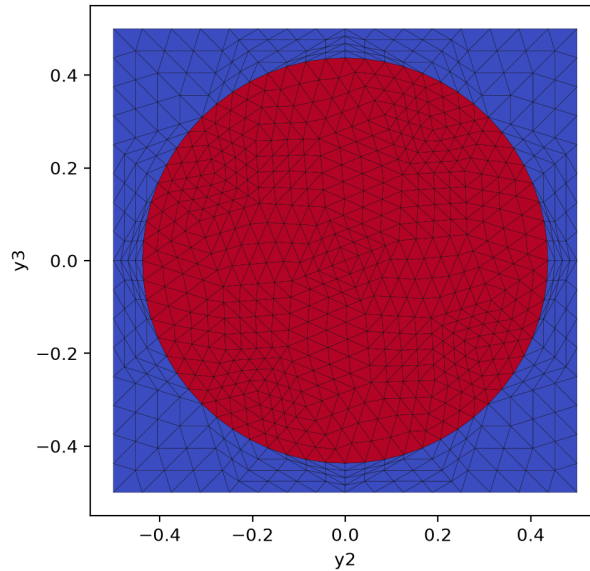


Figure 5.3: The unidirectional composite unit cell written to `UDcomp_2D_mesh.png`, fibre and matrix elements coloured by phase, with the SG coordinates labelled y_2 and y_3 .

5.5.3 Step 1: build the SG yaml from the gmsh mesh

`make_udcomp_yaml.py` is a one-time converter from `UDcomp_2D.msh` (gmsh 2.2 format) to `UDcomp_2D.yaml`. It writes the nodes as - `[x y z]` rows, the triangles as 1-based - `[n1 n2 n3]` rows, a constant `elementOrientations` frame ($e_1 = \text{axial } z$, $e_2 = +x$, $e_3 = +y$), the two materials as engineering constants in MPa, and `sets.element` splitting the mesh into the matrix and fibre phases by gmsh physical tag. The yaml is already checked in, so this step is only needed if you remesh.

```
cd examples/OpenSG-solid/5_get_solid_props_from_SG
python make_udcomp_yaml.py
```

5.5.4 Step 2: homogenize

```
python solid_homo_2dsg.py
```

The `User Input` block is three lines: `n_model = 3`, `name = "UDcomp_2D"` (which reads `<name>.yaml`), and the `paper` dictionary of reference constants to compare against.

This particular runner is deliberately self-contained. It assembles constant-strain triangles, the periodic master-slave node map (right to left matching y , top to bottom matching x , with corner chains resolved by three passes of `master = master[master]`) and the three pinned rigid translations in plain NumPy, so the entire `n_model=3` algebra is readable in one file. It therefore writes its own `_Deff.out` through `np.savetxt` rather than the SwiftComp-layout report, and it consumes the `nodes/elements/elementOrientations/materials/sets` yaml dialect that `make_udcomp_yaml.py` emits, not the `dim/nodes/cells/mat_id/materials` dialect that `opensg-solid.sg_mesh.load_sg_input` parses. The engine path itself is exercised on the honeycomb SG: `n_model=3` on `RHC_SW_2UC_45.yaml` runs through `plate_homo_2d` and writes the full SwiftComp `.out` with its engineering-constants block.

5.5.5 What comes out

file	content
<code>UDcomp_2D_Deff.out</code>	the 6×6 $\mathbf{D}_{\text{eff}}$ in MPa, Voigt order <code>[e11 e22 e33 2e23 2e13 2e12]</code> , with ω in the header
<code>UDcomp_2D_constants_vs_paper.dat</code>	the nine effective engineering constants next to the published values and the percentage difference
<code>UDcomp_2D_mesh.png</code>	the unit cell, elements coloured by phase

Table 5.14: Outputs of `solid_homo_2dsg.py`.

5.5.6 What the numbers mean, and what they were validated against

The nine constants are read off the compliance $\mathbf{S} = \mathbf{D}_{\text{eff}}^{-1}$ as $E_i = 1/S_{ii}$, $G_{ij} = 1/S_{kk}$ and $\nu_{ij} = -S_{ij}/S_{ii}$, and compared against Table II Model-3 of the ASC-23 OpenSG-Solid paper — the same case as the `FEniCS 3DModel.ipynb` in `wenbinyugroup/OpenSG`. The shipped `UDcomp_2D_constants_vs_paper.dat` reads:

Every constant agrees with the published value to within 0.002 %, which is the round-off of the paper's own printed precision. The route is exact against its reference, not merely close.

constant	this code	paper	% difference
E_1 (GPa)	167.255337	167.255300	+0.0000
E_2 (GPa)	11.413657	11.413600	+0.0005
E_3 (GPa)	11.413657	11.413600	+0.0005
G_{23} (GPa)	3.095555	3.095500	+0.0018
G_{13} (GPa)	6.801763	6.801700	+0.0009
G_{12} (GPa)	6.801763	6.801700	+0.0009
ν_{12}	0.311780	0.311780	-0.0000
ν_{13}	0.311780	0.311780	-0.0000
ν_{23}	0.575743	0.575740	+0.0006

Table 5.15: UDcomp_2D_constants_vs_paper.dat, verbatim.

The stiffness itself, from UDcomp_2D_Deff.out (MPa, $\omega = 1$):

$$\mathbf{D}_{\text{eff}} = \begin{bmatrix} 1.726544 \times 10^5 & 8.658488 \times 10^3 & 8.658488 \times 10^3 & 0 & 0 & 0 \\ 8.658488 \times 10^3 & 1.750725 \times 10^4 & 1.026390 \times 10^4 & 0 & 0 & 0 \\ 8.658488 \times 10^3 & 1.026390 \times 10^4 & 1.750725 \times 10^4 & 0 & 0 & 0 \\ 0 & 0 & 0 & 3.095555 \times 10^3 & 0 & 0 \\ 0 & 0 & 0 & 0 & 6.801763 \times 10^3 & 0 \\ 0 & 0 & 0 & 0 & 0 & 6.801763 \times 10^3 \end{bmatrix} \quad (5.6)$$

Two health checks are worth making a habit of. First, the symmetry the geometry demands is recovered: $D_{22} = D_{33}$ and $D_{55} = D_{66}$ to all printed digits, and every normal-shear coupling term in the shipped file is either exactly zero or below 3.4×10^{-2} MPa, six to seven orders under the diagonal, which is the numerical signature of a correctly tied periodic cell. Second, the transverse plane is **not** isotropic: a transversely isotropic material would satisfy $D_{44} = (D_{22} - D_{23})/2 = 3621.7$ MPa, whereas the computed D_{44} is 3095.6 MPa, 14.5 % lower. A square fibre array is tetragonal, so G_{23} genuinely has to be homogenized rather than inferred from E_2 and ν_{23} , which is precisely why a unit-cell solve is needed instead of a rule of mixtures.

5.6 Equivalent 3-D solid from a 3-D SG

5.6.1 What it computes

When the SG is periodic in all three directions — a triply-periodic minimal surface (TPMS) unit cell, a lattice block, any genuine 3-D microstructure — the same macro model is reached with `plate_homo_2d(..., n_model=3, boundary="periodic")` on a tet or hex mesh. "periodic" is the default on every route; `boundary="aperiodic"` maps the boundary solution onto the bounding-box-face nodes as Dirichlet data (solid elements carry only translations, so this clamps every degree of freedom of those nodes) and is the explicit request for SGs that genuinely are not periodic. Aperiodic supports the plate and solid models with `solver="direct"` only; asking for it with `n_model=1` or `solver="cg"` raises.

5.6.2 The samples and the runners

Two TPMS samples are supplied as SwiftComp .sc meshes of linear tets on a unit cell, in aluminium. Reading the .sc meta line directly gives their sizes.

Four runners sit in `6_get_solid_props_from_3D_SG`.

sample	surface	nodes	tets	relative density ω
Sample_1	Schwarz-P	116 851	545 741	0.3000
Sample_2	Schwarz-P	54 874	191 957	0.0857

Table 5.16: The two TPMS solid structure genes.

script	what it does
sample_1/run_sample_1.py, sample_2/run_sample_2.py	homogenize one sample at $E = 69$ GPa, $\nu = 0.3$ with <code>boundary="periodic"</code> and compare term by term against the vendor's own <code>Sample_N.sc.k</code> ; writes <code>Sample_N.out</code> , <code>Sample_N_msg_solid.out</code> , <code>Sample_N_compare.dat</code> and <code>Sample_N_mesh.png</code>
compare_boundary_modes.py	runs both samples under both boundary treatments and writes <code>boundary_compare.dat</code> , plus per-mode copies <code>Sample_N_periodic.out</code> and <code>Sample_N_aperiodic.out</code>
tpms_solid_props.py	the plain homogenization driver, taking the sample number as an optional argument
sc_to_3dyaml.py	converts the <code>.sc</code> tets to the OpenSG 3-D solid yaml and reports the tet-volume check that distinguishes a solid mesh from a shell surface

Table 5.17: The runners of example 6.

```
cd examples/OpenSG-solid/6_get_solid_props_from_3D_SG/sample_1
python run_sample_1.py
```

```
cd examples/OpenSG-solid/6_get_solid_props_from_3D_SG
python compare_boundary_modes.py
```

One detail to check before comparing numbers across scripts: the two sample runners and `compare_boundary_modes.py` use $E = 69$ GPa, matched to the SwiftComp `.K`, whereas `tpms_solid_props.py` and `sc_to_3dyaml.py` use $E = 70$ GPa. Only the 69 GPa runs are comparable with the benchmark below. The `Sample_N_msg_solid.out` files that `tpms_solid_props.py` writes at the top level of the folder are regenerated on each run.

5.6.3 Normalization: per unit material volume, or per unit cell

The `.out` that `plate_homo_2d` writes is in the SG measure: ω appears in the banner, and for these samples ω is the relative density, because the bounding cell has unit volume. So `Sample_1_periodic.out` opens with `OpenSG msg-solid 3D elastic model, omega 0.3, periodic` and reports $C_{11} = 3.3967192 \times 10^{10}$ Pa — the stiffness per unit volume of *aluminium*. The sample runners multiply by ω to get the per-unit-cell value the vendor prints, $3.3967192 \times 10^{10} \times 0.3 = 1.019016 \times 10^{10}$ Pa = 10190.2 MPa. Every comparison table below is per unit cell, in MPa.

5.6.4 The SwiftComp digit-parity benchmark

Digit-for-digit on both samples, to seven significant figures on every entry. The effective law is cubic to five digits, and every symmetry-forbidden coupling sits four to five orders below the diagonal, which is the health check on the all-directions periodic tie. The engineering constants that the `.out` prints for Sample 2 — $E_1 = 1.1383725 \times 10^{10}$ Pa, $G_{12} = 1.2914214 \times 10^{10}$ Pa, $\nu_{12} = 0.41174$ — are per unit material volume in the same way.

term	Sample 1			Sample 2		
	msg-solid	SwiftComp	err %	msg-solid	SwiftComp	err %
C_{11}	10190.158	10190.158	−0.000	2303.160	2303.160	−0.000
C_{12}	5646.069	5646.068	+0.000	1612.130	1612.130	−0.000
C_{13}	5646.092	5646.091	+0.000	1612.141	1612.141	+0.000
C_{22}	10190.131	10190.131	+0.000	2303.067	2303.067	+0.000
C_{23}	5646.012	5646.012	+0.000	1612.120	1612.120	+0.000
C_{33}	10189.958	10189.958	+0.000	2303.019	2303.018	+0.000
C_{44}	4519.640	4519.640	−0.000	1106.734	1106.735	−0.000
C_{55}	4519.637	4519.637	−0.000	1106.668	1106.668	+0.000
C_{66}	4519.755	4519.755	−0.000	1106.664	1106.664	−0.000

Table 5.18: `Sample_1_compare.dat` and `Sample_2_compare.dat`, per unit cell in MPa, at $E = 69$ GPa and $\nu = 0.3$. Sample 1 is 545 741 tets and solved in 165.9 s; Sample 2 is 191 957 tets and solved in 61.4 s.

5.6.5 Periodic versus aperiodic

`compare_boundary_modes.py` runs the same `.sc` through both treatments, so the percentage column measures the aperiodic boundary layer of a single cell directly against the exact periodic answer.

term	Sample 1			Sample 2		
	aperiodic	periodic	% diff	aperiodic	periodic	% diff
C_{11}	12977.036	10190.158	+27.349	2810.329	2303.160	+22.021
C_{22}	12977.030	10190.131	+27.349	2810.363	2303.067	+22.027
C_{33}	12976.815	10189.958	+27.349	2810.251	2303.019	+22.025
C_{12}	5423.565	5646.069	−3.941	1548.627	1612.130	−3.939
C_{13}	5423.674	5646.092	−3.939	1548.954	1612.141	−3.919
C_{23}	5423.151	5646.012	−3.947	1549.049	1612.120	−3.912
C_{44}	5545.997	4519.640	+22.709	1300.352	1106.734	+17.494
C_{55}	5546.044	4519.637	+22.710	1300.151	1106.668	+17.483
C_{66}	5546.133	4519.755	+22.709	1300.048	1106.664	+17.474
solve	146.3 s	150.2 s		52.4 s	51.5 s	

Table 5.19: `boundary_compare.dat`, per unit cell in MPa. The aperiodic run clamps 17 610 boundary nodes on Sample 1 and 4456 on Sample 2.

Read the table this way. Clamping the fluctuation on the cube faces forbids the affine fluctuation modes, so the cell can only come out stiffer: the normal and shear diagonals rise by 17 to 27 %, while the off-diagonal C_{12} family falls by about 4 %. The bias is large because the clamped set is large — 17 610 of 116 851 nodes, or 15 %, for Sample 1, and 4456 of 54 874, or 8 %, for Sample 2 — since the solid sheet meets the cube faces in two-dimensional patches. On the solid route aperiodic is also **not** faster: the periodic tie merges only face pairs, so the factorized size barely changes, and the two timings are within a few percent of each other in both directions. Periodic is the exact treatment for a periodic medium and is therefore the default; aperiodic is the right model only when the SG genuinely is not periodic.

The folder carries two further comparison tables, both regenerated by their own scripts: `tpms_all_compare.dat`, which lines the solid results up against the same Schwarz-P surface homogenized by the `msg-shell` route at matched thickness, and `solid_vs_shell_compare.dat`, which adds the

normalized stiffness $C/(E\rho)$ and the Zener ratio $2C_{44}/(C_{11} - C_{12})$ — 1.989 for Sample 1, 3.203 for Sample 2, and 3.151 for the shell run at the matched thickness $t = 0.0365$. Those three rows are the cleanest available statement that the two engines describe the same structure.

5.7 Beam properties from a 2-D SG

5.7.1 What it computes

`n_model=1` reduces a cross-sectional SG to the Timoshenko beam constitutive law, relating the axial force, two transverse shear forces, torque and two bending moments to the six generalized strains $[\epsilon_{11}, \gamma_{12}, \gamma_{13}, \kappa_1, \kappa_2, \kappa_3]$. Internally this is the Beam solid KKT engine merged into `sg_assembly/sg_homo`: the zeroth-order warping solve V_0 is run under four rigid-body Lagrange constraints, the l -chain first-order solve V_{1s} reuses the same factorization, and the pair is reduced to the 6×6 . The classical Euler-Bernoulli 4×4 in $[\epsilon_{11}, \kappa_1, \kappa_2, \kappa_3]$ falls out of the same V_0 solve and rides along in `r["C_eff_EB"]` at no extra cost. The beam route requires an SG of dimension 2 or 3.

5.7.2 The example SG and the input you edit

`examples/OpenSG-solid/7_get_beam_props_from_SG` homogenizes the same `RHC_SW_2UC_45.yaml` honeycomb cross-section as Section 5.3: 4251 nodes, 6640 three-node triangles. Coordinates are in mm and moduli in MPa, so the resulting stiffnesses are in N and N·mm².

The runner has no command-line arguments — the SG file and the materials are the `User Input` block at the top of the script, identical to the plate runner except for `n_model`.

id	material	E_1, E_2, E_3 (MPa)	G_{12}, G_{13}, G_{23} (MPa)	angle
1	ply	108000, 8000, 8000	4000, 4000, 3000	+45°
2	ply	108000, 8000, 8000	4000, 4000, 3000	−45°
3	aluminium core	69000, 69000, 69000	26540, 26540, 26540	none

Table 5.20: The three materials of the honeycomb section; $\nu_{12}, \nu_{13}, \nu_{23}$ are 0.32, 0.32, 0.30 for the plies and 0.30 throughout for the core.

```
import numpy as np
import jax.numpy as jnp

from opensg_solid.sg_homo import plate_homo_2d

n_model = 1                # 1: Beam; 2: Plate; 3: 3D elastic
name = "RHC_SW_2UC_45"    # reads <name>.yaml

material_param = jnp.array([
    (108e3, 8e3, 8e3, 4e3, 4e3, 3e3, 0.32, 0.32, 0.30),
    (108e3, 8e3, 8e3, 4e3, 4e3, 3e3, 0.32, 0.32, 0.30),
    (69e3, 69e3, 69e3, 26.54e3, 26.54e3, 26.54e3, 0.30, 0.30, 0.30)])
angles = jnp.array([45.0, -45.0, 0.0])

r = plate_homo_2d(name + ".yaml", material_param=material_param,
                  angles=angles, n_model=n_model)
np.set_printoptions(precision=5)
print("beam 6x6  [eps11 gam12 gam13 kappa1 kappa2 kappa3] (Timoshenko):")
```

```
print(r["C_eff"])
print("beam 4x4 [eps11 kappa1 kappa2 kappa3] (EB, same run):")
print(r["C_eff_EB"])
```

Listing 5.7: beam_homo_sg.py, complete.

5.7.3 Run it

```
cd examples/OpenSG-solid/7_get_beam_props_from_SG
python beam_homo_sg.py
```

5.7.4 What comes out

The run writes RHC_SW_2UC_45.out, the timed SwiftComp-layout report containing The Effective Timoshenko Stiffness Matrix followed by The Effective Timoshenko Compliance Matrix, with banner OpenSG msg-solid beam model, omega 1 and closing line Time taken: 8.94 sec; and RHC_SW_2UC_45_mesh.png, the SG mesh coloured by material.

The banner reports $\omega = 1$: for a beam model on a 2-D SG the measure is unity, so the 6×6 is the **total sectional stiffness**, not a per-area density. No engineering-constants block is printed, because a beam stiffness is not a material stiffness.

5.7.5 What the numbers mean

The shipped RHC_SW_2UC_45.out stiffness block reads:

9.8992866E+006	6.9973096E+003	1.2577025E+001	-7.7065215E-001
2.2740495E+000	-8.6717860E-001		
6.9973096E+003	1.9074524E+006	5.9324366E+001	-3.4044009E+001
-1.6298115E+000	-6.0670378E-002		
1.2577025E+001	5.9324366E+001	9.3619028E+005	-8.4787043E+001
-9.3250231E-001	8.5948371E-001		
-7.7065184E-001	-3.4044009E+001	-8.4787043E+001	2.9774561E+008
-3.1862083E+006	-7.3057137E+003		
2.2740506E+000	-1.6298115E+000	-9.3250231E-001	-3.1862083E+006
2.1895745E+009	-9.5964309E+004		
-8.6717875E-001	-6.0670378E-002	8.5948371E-001	-7.3057137E+003
-9.5964309E+004	9.2899273E+008		

Read the diagonal only as a first orientation. When couplings are present the engineering stiffnesses are the inverses of the **compliance** diagonal, which is why the same .out prints the compliance: here $1/S_{11} = 9.89926 \times 10^6$ against $C_{11} = 9.89929 \times 10^6$ (0.0003 % apart) and $1/S_{44} = 2.97741 \times 10^8$ against $C_{44} = 2.97746 \times 10^8$ (0.0015 % apart), so on this section the couplings shift the engineering values by less than 0.002 %.

The twist-bend term C_{45} is the physically meaningful signature of the $\pm 45^\circ$ layup. Quantify it rather than eyeballing it: at 3.1862×10^6 N·mm² it is a factor 93 below C_{44} and a factor 690 below C_{55} — two to three orders down, not three.

5.7.6 The built-in cross-check: Euler-Bernoulli against Timoshenko

`r["C_eff_EB"]` is the classical 4×4 from the same V_0 solve, printed by `beam_homo_sg.py`. Its four entries must reproduce the classical rows of the Timoshenko 6×6 , since the two differ only by the

entry	conjugate pair	value	reads as
C_{11}	ϵ_{11}	9.8992866×10^6 N	axial (extensional) stiffness
C_{22}	γ_{12}	1.9074524×10^6 N	transverse shear stiffness, direction 2
C_{33}	γ_{13}	9.3619028×10^5 N	transverse shear stiffness, direction 3
C_{44}	κ_1	2.9774561×10^8 N·mm ²	torsional stiffness
C_{55}	κ_2	2.1895745×10^9 N·mm ²	bending stiffness about axis 2
C_{66}	κ_3	9.2899273×10^8 N·mm ²	bending stiffness about axis 3
C_{45}	$\kappa_1 - \kappa_2$	-3.1862083×10^6 N·mm ²	twist-bend coupling from the $\pm 45^\circ$ plies

Table 5.21: The Timoshenko 6×6 of the honeycomb section, entry by entry.

l -chain refinement that produces the shear terms. On this SG they agree to at least five significant figures on every classical diagonal.

term	EB 4×4	Timoshenko 6×6
extension	9.89926177×10^6	9.89928657×10^6
torsion	2.97745363×10^8	2.97745606×10^8
bending 2	2.18957447×10^9	2.18957452×10^9
bending 3	9.28992811×10^8	9.28992729×10^8

Table 5.22: The two classical laws from one run. The Timoshenko column is RHC_SW_2UC_45_beam_Timo.out; the EB column is the same four numbers, recorded in RHC_SW_2UC_45_beam_EB.out in example 8, a file left over from an earlier version of that script.

The two transverse shear stiffnesses C_{22} and C_{33} exist **only** in the Timoshenko 6×6 ; that is the entire reason to run `n_model=1` rather than read the EB block.

5.8 Beam recovery

5.8.1 What it computes

Dehomogenization takes a macro beam state and recovers the pointwise 3-D strain and stress inside the SG, at every element Gauss point. For `n_model=1` this runs the generalized-Timoshenko recovery ladder (`sg_dehom.compute_fluctuations_gpu`): a successive-derivative product-rule chain $\mathbf{F}' = \mathbf{R}\mathbf{F}$ seeded with $\mathbf{F}_{1d} = \mathbf{C}_{\text{eff}}^{-1}\bar{\epsilon}$, which builds the shear-corrected states and the zeroth- and first-order warping displacement fields. Nothing from the homogenization is recomputed: the result dictionary `r` carries the warping modes, the material tables and the quadrature data, so you homogenize once and recover as often as you like.

5.8.2 The input you edit

`examples/OpenSG-solid/8_get_beam_dehom_from_SG` runs the same honeycomb SG. Beyond the material block, the one new user input is `epsilon_bar`, the **macro beam strain** $[\epsilon_{11}, \gamma_{12}, \gamma_{13}, \kappa_1, \kappa_2, \kappa_3]$ — a strain six-vector, not a load vector. The shipped driver is $\epsilon_{11} = 0.001$ combined with $\kappa_2 = 0.01$ mm⁻¹.

```
from opensg_solid.sg_homo import plate_homo_2d
```

```

from opensg_solid.sg_dehom import dehom_fields, export_gauss

# the MACRO beam state [eps11, gam12, gam13, kappa1, kappa2, kappa3]
epsilon_bar = jnp.array([0.001, 0.0, 0.0, 0.0, 0.01, 0.0])

r = plate_homo_2d(name + ".yaml", material_param=material_param,
                  angles=angles, n_model=n_model)
np.savetxt(name + "_beam_Timo.out", r["C_eff"], fmt="%16.8e",
          header="beam Timoshenko 6x6 [eps11 gam12 gam13 kappa1 kappa2"
                " kappa3] (Beam_solid KKT engine) from the %d SG %s"
                % (r["n_sg"], name))

Gam, Sig, U = dehom_fields(r, epsilon_bar)
export_gauss(r, Gam, Sig, name + "_dehom", U_eqd=U)
for i, nm in enumerate(("xx", "yy", "zz", "yz", "xz", "xy")):
    print(" max|Sig_%s| = %.5e" % (nm, np.abs(Sig[:, i]).max()))

```

Listing 5.8: The body of beam_dehom.sg.py after the shared material block.

Only **classical-channel** states are valid drivers: extension, twist, bending and their combinations. The recovery chain is kept verbatim from its validated reference, and its seed is the compliance-scaled state $\mathbf{C}_{\text{eff}}^{-1}\bar{\epsilon}$, which makes the two transverse shear entries `epsilon_bar[1]` and `epsilon_bar[2]` **recovery-inert** — a shear-only driver recovers essentially zero stress. This is a documented deviation from the refined theory stated in the docstring of `compute_fluctuations_gpu`, not a switch to flip.

5.8.3 Run it

```

cd examples/OpenSG-solid/8_get_beam_dehom_from_SG
python beam_dehom_sg.py

```

5.8.4 What comes out

`dehom_fields` returns three arrays shaped $(E, Q, \cdot)$ over elements and Gauss points: `Gam` $(E, Q, 6)$ strain, `Sig` $(E, Q, 6)$ stress, and `U` $(E, Q, 3)$ the **fluctuation-only** displacement (for the beam route, the zeroth- plus first-order warping $w_1 + w_{1s}$; there is no macro contribution in a unit-state SG recovery). `export_gauss` writes them out.

The `.txt/.vtk` pair uses the SwiftComp component order `xx yy zz yz xz xy`; the `.SM/.EM/.U` files reorder to `11 22 33 12 13 23` on write only. Units follow the SG input system throughout, MPa here.

5.8.5 What the numbers mean

The shipped table is the run of the driver above. Its component maxima are:

The axial field is the one to sanity-check first, because beam kinematics predict it directly: $\epsilon_{xx} \approx \bar{\epsilon}_{11} + \kappa_2 y_3$ plus a warping correction. The first row of the shipped `.txt` sits at $y_3 = 23.29375$ mm and reports $\epsilon_{xx} = 2.339375 \times 10^{-1}$, against $0.001 + 0.01 \times 23.29375 = 0.2339375$: an exact match, and the same value is the table maximum, as it must be at the extreme fibre.

The useful content of the recovery is everything *else*: the transverse and shear components, which exist purely because the cross-section is heterogeneous and warps, and which no beam theory

file	content
RHC_SW_2UC_45.out	the Timoshenko report written by <code>plate_homo_2d</code> itself, as in Section 5.7; regenerated on each run
RHC_SW_2UC_45_beam_Timo.out	the bare 6×6 written by the script through <code>np.savetxt</code> , one commented header line — convenient to <code>np.loadtxt</code>
RHC_SW_2UC_45_dehom.txt	tab-separated Gauss table: <code>GP_Index</code> , <code>Coord_X</code> , <code>Coord_Y</code> , six <code>Eps_*</code> , six <code>Sig_*</code> ; one header line plus 19 920 rows (6640 triangles times three quadrature points)
RHC_SW_2UC_45_dehom.vtk	the same cloud as an ASCII unstructured grid of vertex cells, each strain and stress component a <code>SCALARS</code> field — open in ParaView
RHC_SW_2UC_45_dehom.SM / .EM / .U	the OpenSG dehom files: stress, strain and fluctuation displacement in the <code>rm_plate_1D</code> layout, <code>x y z</code> columns then components printed in the order 11 22 33 12 13 23, with the SG coordinates in the last <code>n_sg</code> of the <code>x</code> , <code>y</code> , <code>z</code> slots; regenerated on each run
RHC_SW_2UC_45_mesh.png	the mesh figure

Table 5.23: Outputs of `beam_dehom_sg.py`.

component	$\max \sigma $ (MPa)	$\max \varepsilon $
<i>xx</i>	1.529334×10^4	2.339375×10^{-1}
<i>yy</i>	3.460157×10^3	2.265195×10^{-1}
<i>zz</i>	5.539976×10^2	8.787251×10^{-2}
<i>yz</i>	6.034080×10^2	1.344338×10^{-1}
<i>xz</i>	1.176515×10^3	1.704428×10^{-1}
<i>xy</i>	2.959409×10^3	1.028684×10^{-1}

Table 5.24: Component maxima over the 19 920 Gauss points of the shipped beam recovery.

can supply. The shipped driver is a demonstration magnitude, not a service load; scale it to your own macro state before reading the stresses as failure indices.

5.9 Files at a glance

Table 5.25: Every msg-solid capability in one table. <name> is the name variable of the runner, <ff stem> the basename of the .ff table.

ex	you edit, then you run	it writes
1	layup_db.yaml; python 1d_sg.py	1dsg.yaml, 1dsg.png, layup_db_plate_homo.out
2	the USER INPUT block; python rm_dehom.py	1dsg_dehom.SM, .EM, .U, .vtk
2	a .ff table and the dehom: block; python rm_dehom_ff.py ex5_shell_S8R_field.ff	<ff stem>_ff.SM, .EM, .U, <ff stem>_ff_gauss.vtk
3	name, material_param, angles; python plate_homo_2dsg.py	<name>.out, <name>_mesh.png
4	the above plus epsilon_bar; python plate_dehom_2dsg.py	<name>.out, <name>_plate_ABD.out, <name>_dehom.txt, .vtk, .SM, .EM, .U, <name>_mesh.png
5	name and the paper dictionary; python solid_homo_2dsg.py	<name>_Deff.out, <name>_constants_vs_paper.dat, <name>_mesh.png
6	the .sc path, E and ν ; python run_sample_1.py	Sample_1.out, Sample_1_msg_solid.out, Sample_1_compare.dat, Sample_1_mesh.png
6	nothing; python compare_boundary_modes.py	boundary_compare.dat, Sample_1_periodic.out, Sample_1_aperiodic.out and the Sample 2 pair
7	name, material_param, angles; python beam_homo_sg.py	<name>.out, <name>_mesh.png
8	the above plus epsilon_bar; python beam_dehom_sg.py	<name>.out, <name>_beam_Timo.out, <name>_dehom.txt, .vtk, .SM, .EM, .U, <name>_mesh.png

Chapter 6

Full Blade Pipeline: windIO to BeamDyn and Back

A wind-turbine blade is designed as a three-dimensional laminated shell but analysed, aeroelastically, as a one-dimensional beam. This chapter walks the whole round trip on the IEA-22 blade: a windIO blade description becomes one 1-D shell structure gene per span station, each station is homogenized to a Timoshenko 6×6 , the spanwise table of those matrices is what a 1-D beam solver needs, the beam run returns sectional force and moment resultants station by station, and those resultants drive the dehomogenization back down to three-dimensional stress in the wall.

Three separate tools are involved, and the boundary between them is the single most important thing to understand before running anything. OpenSG never runs the blade dynamics. It produces the sectional constitutive law that the beam solver needs, and it consumes the sectional loads that the beam solver returns.

Table 6.1: The five stages of the round trip, and which tool owns each one.

Stage	What happens	Tool	Driver
1	windIO blade $\rightarrow$ per-station 1-D shell SG YAML	OpenSG'io	<code>scripts/opensg_io.py</code>
2	1-D shell SG $\rightarrow$ Timoshenko 6×6	OpenSG-2.0	<code>1_homo_beam_props.py</code> <code>4_sweep_51_stations.py</code>
3	spanwise 6×6 table $\rightarrow$ blade dynamics	BeamDyn / OpenFAST	run by you
4	sectional loads returned as a table	BeamDyn / OpenFAST	<code>ff51_rmc_reform.dat</code>
5	loads + $6 \times 6 \rightarrow$ 3-D wall stress	OpenSG-2.0	<code>2_dehom_v2_vabs.py</code> <code>4_sweep_51_stations.py</code>
	correctness check on transverse shear	OpenSG-2.0	<code>3_q_consistency_check.py</code>

6.1 The worked example

Everything in this chapter runs in the directory `examples/OpenSG_shell/IEA_blade_beam/`. Run the scripts from inside that directory: the package holds no path assumptions, and the example owns every path it uses.

The three single-station scripts all analyse the same section, `iea_s10`, the IEA-22 station at $r/R = 0.20$. Its 1-D shell SG, `iea_s10_shell.yaml`, is a ring of **310 wall elements** carrying **6 layups** (`layup_0` through `layup_5`) built from **6 materials** (`gelcoat`, `glass_triax`, `glass_uniax`, `medium_density_foam`, `carbon_uniax`, `glass_biax`). The element count is confirmed by

the recovery output: `iea_s10_elem_plate_forces.dat` has two header lines and 310 data rows, one per ring element. The fourth script, `4_sweep_51_stations.py`, repeats the same computation for all 51 stations of the blade.

6.2 Stage 1: windIO blade to per-station 1-D shell SG YAMLs

What it does

`OpenSG_io` is the input layer, and it is a *separate repository*: https://github.com/bagla0/OpenSG_io, documented at https://bagla0.github.io/OpenSG_io/. It reads a windIO blade description – auto-detecting windIO v1 and v2 – interpolates the outer shape, the layup stacks and the material database to a requested span fraction, and writes the cross-section in the two forms an MSG analysis can use:

- the **1-D shell SG YAML** that `opensg_shell` reads directly, which is what stages 2 and 5 of this chapter consume; and
- a **PreVABS XML** that meshes to a 2-D solid cross-section, which is the route that produces the independent VABS reference used to validate the recovery in stage 5.

It also reads PreVABS XML cross-sections and OpenFAST ElastoDyn/BeamDyn blade data, so published beam properties can be pulled in as a validation reference. Its own README is explicit that it does not run windIO or OpenFAST; it reads those formats so you do not have to hand-build the structure gene.

Installing it

```
git clone --recurse-submodules https://github.com/bagla0/OpenSG_io
cd OpenSG_io
pip install -r requirements.txt
python scripts/fetch_prevabs.py
```

The `requirements.txt` in that repository lists `numpy`, `scipy`, `pyyaml` and `meshio` as the core dependencies, plus `gmsh`, `tetgen` and `pyvista` for the mesh generators. A windIO *v2* input file additionally needs the `windIO` package installed; *v1* files do not. The `fetch_prevabs.py` script downloads the PreVABS release binary for your operating system, which is required only for the 2-D solid route – the 1-D shell YAML needed for stages 2 through 5 is written by pure Python.

The command line

One CLI handles any of the supported inputs. It writes a set of stations in a single call:

```
python scripts/opensg_io.py BAR_URC.yaml out --name bar --stations 0.3 0.5 0.7 --solid
```

Here `BAR_URC.yaml` is the windIO blade, `out` is the output directory, `--name bar` is the file-name stem, `--stations` takes the span fractions r/R , and `--solid` additionally emits the PreVABS XML and runs PreVABS to build the 2-D solid section. Omit `--solid` if you only want the 1-D shell YAMLs.

The Python API

The API is what you script a 51-station blade with, and it is what generated the station files used in the rest of this chapter:

```
from opensg_io import load_blade, build_cross_section, emit_opensg_yaml, emit_prevabs

blade = load_blade("IEA-22-280-RWT.yaml")      # windIO v1 or v2, auto-detected
cs = build_cross_section(blade, r=0.5)          # one span fraction
emit_opensg_yaml(cs, "shell_r050.yaml")         # the 1-D shell SG for opensg_shell
emit_prevabs(cs, "prevabs_r050", name="r050")   # PreVABS XML -> 2-D solid route
```

Listing 6.1: Building one station's 1-D shell SG and its PreVABS twin.

Loop over your station list and you have the `iea_s00_shell.yaml` through `iea_s50_shell.yaml` directory that stage 2 points at.

What the 1-D shell SG YAML contains

`iea_s10_shell.yaml` is the reference for the format. Its top-level keys, in the order they appear in the file, are listed in Table 6.2.

Table 6.2: Top-level keys of the 1-D shell SG YAML, in file order.

Key	Content
<code>nodes</code>	contour node coordinates [<code>y1</code> , <code>y2</code> , <code>y3</code>] in metres, one per line
<code>elements</code>	two-node line segments along the section contour
<code>sets</code>	element sets, one per layup, holding the element labels
<code>sections</code>	<code>type: shell</code> , <code>elementSet: layup_k</code> , and the layup as [<code>material</code> , <code>thickness (m)</code> , <code>angle (deg)</code>] triples, outermost ply first
<code>elementOrientations</code>	one 3×3 frame per element, flattened; the first row is $\mathbf{e}_1$, out of the section plane, along the beam axis
<code>materials</code>	<code>density</code> in kg/m^3 and <code>orthotropic elastic: {E, G, nu}</code> triples in Pa
<code>reference</code>	which surface the section geometry refers to

A concrete section block from that file, the spar-cap laminate:

```
sections:
- type: shell
  elementSet: layup_0
  layup:
  - - gelcoat
    - 0.0005
    - 0.0
  - - glass_triax
    - 0.00300294
    - 0.0
  - - glass_uniax
    - 0.02609467
    - 0.0
  - - glass_triax
    - 0.00300294
    - 0.0
```

The `reference` field is load-bearing and is the single source of truth for the whole chapter. `build_rm_bundle` reads it when no override is passed, and it fixes the through-thickness offset `frac` used by the ring laminate law, the plate SG's reference plane, the emitted ABD and the recovery depth conversion alike. The IEA stations all carry `reference: center`.

Table 6.3: The `reference` field and the through-thickness fraction it sets.

reference	frac	Meaning
center	0.5	mid-surface (what the IEA stations use)
oml	0.0	outer mould line
oml_flip	1.0	outer mould line, reversed stacking
iml	1.0	inner mould line

6.3 Stage 2: each station to a Timoshenko 6×6

What it computes

The RM shell ring homogenization: a six-degree-of-freedom-per-node shell element with an element-wise drilling Lagrange multiplier, γ_{23} tied by MITC, and the MSG (Yu 2002 least-squares) wall transverse-shear law $\mathbf{G}$. The ring warping problem is solved for the four Euler–Bernoulli modes $\mathbf{V}_0$ and the Timoshenko correction $\mathbf{V}_1$, and the energy is condensed to the beam 6×6 in the VABS strain order

$$\boldsymbol{\varepsilon} = [\varepsilon_{11} \quad \gamma_{12} \quad \gamma_{13} \quad \kappa_1 \quad \kappa_2 \quad \kappa_3]^T,$$

whose diagonal is $[EA \quad GA_2 \quad GA_3 \quad GJ \quad EI_2 \quad EI_3]$.

What you edit

One line at the top of `1_homo_beam_props.py`:

```
##### User Input #####
name = "iea_s10"           # IEA-22 station at r/R = 0.20
#####
```

The command

```
python 1_homo_beam_props.py
```

The API, if you drive it yourself

```
import numpy as np
from opensg_shell import build_rm_bundle

B = build_rm_bundle("iea_s10_shell.yaml")
C6 = np.asarray(B["Timo"])           # (6,6) Timoshenko stiffness
print(B["ref"], B["g_source"])       # 'center' 'msg'
```

Listing 6.2: The whole homogenization is one call.

The full signature is `build_rm_bundle(shell_yaml, ref=None, shear="mitc4_g23", g_source="msg")`. Passing `ref=None` means the YAML's own reference field decides, which is why homogenization and dehomogenization cannot silently disagree; pass an explicit `ref` only to override. `g_source` chooses the wall transverse-shear law, "msg" for the Yu 2002 least-squares projection or "whitney" for the complementary-energy shear flow.

What comes back is a bundle, not just a matrix. It carries `Timo`, the warping modes `V0` and `V1`, the ring geometry (`corners`, `red_cells`, `rx3`, `re3`, `k22`, `ax`, `cross`, `strip`), `layup_per_elem`, the geometry-free `layup_db` and `material_db`, and `frac`, `ref`, `g_source`. Stage 5 consumes every one of those entries, so do not throw the bundle away after reading the matrix out of it.

What comes out

Table 6.4: Files written by a single-station homogenization run.

File	Written by	Content
<code>iea_s10_shell_Timo.out</code>	<code>build_rm_bundle</code>	the timed SwiftComp .K layout: the banner OpenSG msg-shell beam model [ext sh2 sh3 twist bend2 bend3], The Effective Timoshenko Stiffness Matrix, its compliance, and a Time taken footer
<code>iea_s10_shell_ABDG.out</code>	<code>build_rm_bundle</code>	one block per section: The Effective Reissner- Mindlin Plate Stiffness Matrix, the 8×8 ABD plus $\mathbf{G}$, and its compliance
<code>abd/iea_s10_shell_abd.yaml</code>	<code>build_rm_bundle</code>	the per-station ABD YAML, emitted once and cached; carries <code>mass_per_area</code> per layup
<code>iea_s10_beam_Timo.out</code>	the script	the bare 6×6 as text, with the strain order and the reference recorded in the header
<code>iea_s10_ring_mesh.png</code>	the script	the real computed ring, elements coloured by layup

Two details about the ABD YAML are worth knowing before you reuse it. It is written by `emit_station_abd` with `ref="mid"` when the station is `center`-referenced, so its `reference: mid` field means the same surface as the ring's `center`. And it is written with the emitter's default transverse-shear source, so the file records `g_source: whitney`: the 8×8 block in that YAML uses the Whitney shear-flow $\mathbf{G}$, whereas the ring homogenization itself used the MSG $\mathbf{G}$. The membrane and bending blocks are identical either way; only the two transverse-shear rows differ. For `iea_s10` the file reports `n_layups: 6`, and for `layup_0` a total `thickness` of 0.03260055 m and a `mass_per_area` of 62.89 kg/m².

What the numbers mean

Table 6.5 is the content of `iea_s10_beam_Timo.out`, in SI units. The YAML is in metres and pascals, so EA , GA_2 and GA_3 are in N and GJ , EI_2 , EI_3 in N·m².

Read the matrix as physics rather than as six numbers on a diagonal. The extension–bending entries 1.67×10^9 and -2.08×10^9 say that the section's tension centre does not sit on the reference axis. The bending–bending coupling -5.56×10^9 couples flap and edge bending, so the principal bending axes are not the reference axes either. The shear–twist entries -1.02×10^8 and -1.62×10^8 locate the shear centre away from the reference axis as well. The entries printed at 10^{-5} against diagonals of 10^{10} are numerically zero: extension does not couple to transverse shear or to twist in

Table 6.5: The Timoshenko 6×6 of IEA-22 station `iea_s10` at $r/R = 0.20$, in the VABS strain order, from `iea_s10_beam_Timo.out`.

	ε_{11}	γ_{12}	γ_{13}	κ_1	κ_2	κ_3
ε_{11}	2.76606e+10	-1.72307e-05	4.66505e-06	5.40202e-06	1.66864e+09	-2.07730e+09
γ_{12}	-1.72307e-05	7.18613e+08	5.75204e+07	-1.01920e+08	2.30800e-06	5.27387e-06
γ_{13}	4.66505e-06	5.75204e+07	4.21744e+08	-1.62178e+08	8.48168e-06	2.79314e-07
κ_1	5.40202e-06	-1.01920e+08	-1.62178e+08	2.43757e+09	1.64496e-06	-8.11406e-06
κ_2	1.66864e+09	2.30800e-06	8.48168e-06	1.64496e-06	3.51439e+10	-5.55712e+09
κ_3	-2.07730e+09	5.27387e-06	2.79314e-07	-8.11406e-06	-5.55712e+09	6.81297e+10

this section, and the solver reproduces that null result to fifteen orders of magnitude, which is a useful sanity check that the ring assembled and condensed correctly.

The spanwise table: all 51 stations

`4_sweep_51_stations.py` repeats the homogenization for every station of the blade and, in the same loop, runs the first-order recovery of stage 5. What you edit is the block at the top:

```
##### User Input #####
yaml_dir = os.path.expanduser(
    "~/OpenSG-TW-claude/examples/data/iea_all_stations/shell51/1d_yaml")
ff_file = "ff51_rmc_reform.dat"
n_depth = 9 # through-thickness recovery points per element
stations = range(51) # s00 .. s50
#####
```

`yaml_dir` is where `iea_s00_shell.yaml` through `iea_s50_shell.yaml` live, which is the OpenSG'io output of stage 1. Point it at your own directory. The script builds each path as `iea_s%02d_shell.yaml` against that directory, and reads the load table `ff_file` from the current directory.

```
python 4_sweep_51_stations.py
```

A station whose YAML is missing prints `s%02d: yaml missing -- skipped` and is passed over, and any station that raises is caught and reported as `s%02d: FAILED` so that one bad section cannot kill a sweep that has already spent minutes on the others. In the shipped run, **49 of the 51 stations completed**: both `iea51_beam_props.dat` and `iea51_peak_stress.dat` carry $\eta = 0.00$ through 0.94 in steps of 0.02 plus $\eta = 1.00$, with $\eta = 0.96$ and $\eta = 0.98$ absent.

One indexing rule matters here. The sweep takes station i 's load vector as row i of the FF table, `FF = ffall[i, 1:]`, and its span fraction as `eta = ffall[i, 0]`. The row order of the load table must therefore match the station numbering of the YAML files. In the shipped data, station `s10` is row 10 and $\eta = 0.20$.

`iea51_beam_props.dat` holds one row per completed station: η followed by the six diagonal terms, written with the header `IEA-22 spanwise Timoshenko beam properties (RM shell ring)`. Selected rows, verbatim from the file:

The $\eta = 0.20$ row is digit-for-digit the diagonal of the standalone `iea_s10` run of Table 6.5: EA is 2.76605989e+10 in both, GJ is 2.43756534e+09 in both, and so on for all six. The sweep and the single-station script are the same computation, which is the cheapest available check that your sweep is wired correctly – run `1_homo_beam_props.py` on one station and match its row.

Table 6.6: Selected rows of `iea51_beam_props.dat`. Stiffnesses in N (EA , GA_2 , GA_3) and N·m² (GJ , EI_2 , EI_3).

$\eta = r/R$	EA	GA_2	GA_3	GJ	EI_2	EI_3
0.00	6.44275512e+10	7.96306621e+09	8.36135930e+09	1.27413308e+11	2.97295270e+11	2.19213722e+11
0.10	2.89212767e+10	1.11237808e+09	1.04545606e+09	1.14245218e+10	8.40070906e+10	1.21502270e+11
0.20	2.76605989e+10	7.18613262e+08	4.21744284e+08	2.43756534e+09	3.51438873e+10	6.81297238e+10
0.50	2.15596413e+10	5.34263266e+08	2.02128533e+08	4.95011412e+08	7.26524060e+09	1.82791086e+10
0.80	9.28038409e+09	3.90243799e+08	7.82870454e+07	6.27349440e+07	5.76401363e+08	2.07536066e+09
0.94	2.64020156e+09	1.80834082e+08	3.43479097e+07	1.35795150e+07	6.21667876e+07	4.27156667e+08
1.00	2.65581077e+08	1.56743220e+07	1.88135914e+06	5.15174420e+04	3.04364786e+05	1.60428557e+06

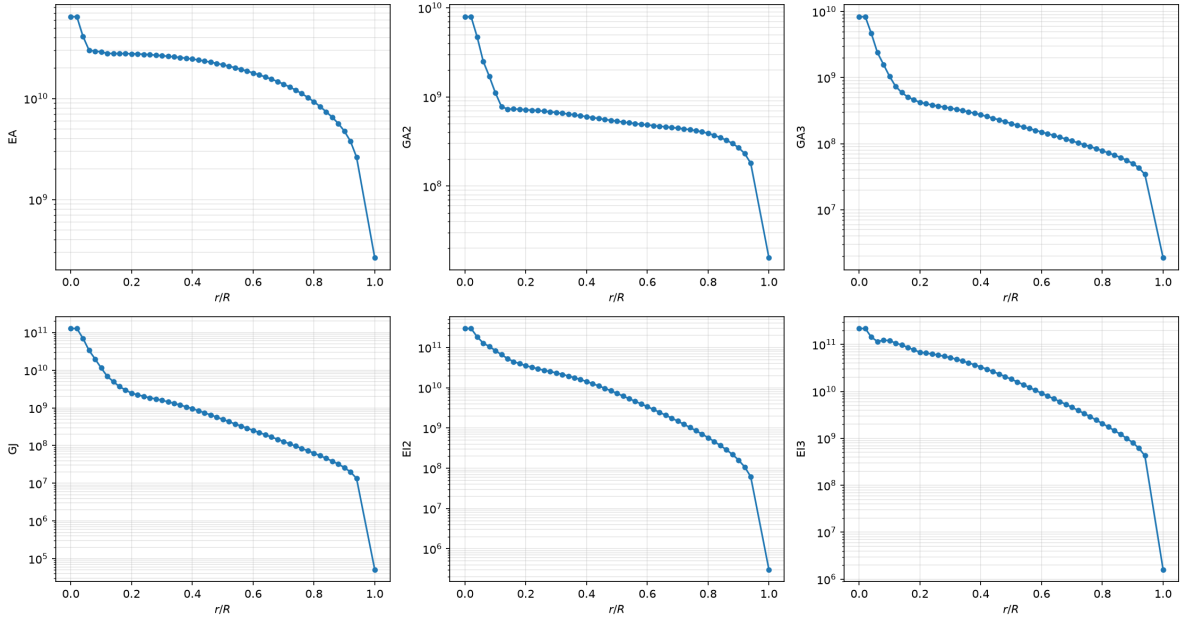


Figure 6.1: Spanwise Timoshenko diagonal of the IEA-22 blade: the six terms EA , GA_2 , GA_3 , GJ , EI_2 , EI_3 on log axes against r/R , one panel each, produced by `4_sweep_51_stations.py`.

Figure 6.1 plots those six columns. Three regimes are visible. The root collapses fast as the circular root transitions into an aerofoil: GJ falls from 1.274×10^{11} at $\eta = 0$ to $1.142 \times 10^{10} \text{ N}\cdot\text{m}^2$ at $\eta = 0.10$, an order of magnitude in the first tenth of span, and GA_2 falls from 7.96×10^9 to $1.11 \times 10^9 \text{ N}$ over the same interval. The mid-span then decays smoothly as the section thins. The tip drops off a cliff. Across the whole blade GJ goes from 1.27×10^{11} to $5.15 \times 10^4 \text{ N}\cdot\text{m}^2$, six and a half decades, which is why the figure is drawn on log axes and why a beam solver must be given the table rather than an average.

6.4 Stage 3: handing the table to BeamDyn

Be explicit about what changes hands here. **OpenSG produces the sectional 6×6 stiffness matrix, and nothing else.** BeamDyn, the geometrically exact beam module of OpenFAST, is a separate program that you install, configure and run yourself. OpenSG-2.0 ships no BeamDyn input file and no BeamDyn results, and this chapter does not attempt to document BeamDyn's input format: for the meaning, ordering and units of every field in a BeamDyn blade input file, and for the choice of quadrature and the number of input stations, consult the OpenFAST BeamDyn documentation, which is the authority on that file.

The bridge that OpenSG'io provides

OpenSG_io contains an `openfast_io` module whose job is exactly this hand-off. Two functions write the OpenFAST side:

```
import numpy as np
from opensg_io.openfast_io import timo_to_beamdyn, write_beamdyn_blade

# etas: (n,) span fractions; Ks: list of n OpenSG Timoshenko 6x6 matrices
Kbd = timo_to_beamdyn(Ks[0]) # one matrix, reordered
write_beamdyn_blade(etas, Ks, M_list=None,
                    out_path="blade_BeamDyn_Blade.dat")
```

Listing 6.3: Writing a BeamDyn blade input from a spanwise table of OpenSG 6x6 matrices.

`timo_to_beamdyn(Ktimo)` reorders an OpenSG Timoshenko 6×6 , which is stored in the VABS order $[EA, GA_2, GA_3, GJ, EI_2, EI_3]$, into the BeamDyn degree-of-freedom order. It applies a symmetric permutation `Ktimo[np.ix_(q, q)]` with `q = [1, 2, 0, 4, 5, 3]`, which is the mapping in Table 6.7. Because the permutation is applied to both rows and columns, every off-diagonal coupling is carried across intact.

Table 6.7: The reordering performed by `timo_to_beamdyn`: which OpenSG diagonal term lands in which BeamDyn slot.

BeamDyn slot	Meaning	From OpenSG term
1	shear'x	GA_2
2	shear'y	GA_3
3	axial	EA
4	bend'x	EI_2
5	bend'y	EI_3
6	torsion	GJ

`write_beamdyn_blade(etas, K_timo_list, M_list=None, out_path="blade_BeamDyn_Blade.dat", damp=(0.003, 0.002, 0.002, 0.002, 0.003, 0.002))` takes the span fractions and the list of OpenSG matrices, reorders each one internally with `timo_to_beamdyn`, and writes a BeamDyn blade input with a `station_total` equal to the number of entries you supplied, `damp_type` set to 1, the six damping coefficients from `damp`, and then a stiffness block followed by a mass block for each station. Verify the resulting file against the BeamDyn documentation for the OpenFAST version you are running before trusting it.

The mass matrix is yours

`write_beamdyn_blade` takes `M_list` as an *optional* argument and **writes a 6×6 block of zeros for every station when it is omitted**. That is a placeholder, not a mass model. Nothing in this pipeline computes a sectional mass matrix: the only mass quantity OpenSG-2.0 produces here is `mass_per_area` per laminate in the emitted ABD YAML (Section 6.3). Building the sectional inertia matrix, assembling the complete BeamDyn input, and running the aeroelastic simulation are all yours, outside OpenSG.

Use the full matrix, not the table's diagonal

`iea51_beam_props.dat` records only the six diagonal terms, for plotting and inspection. The couplings displayed in Table 6.5 are precisely what a composite blade beam model exists to carry, so feed the beam solver the full 6×6 of each station – either from that station's `<station>_Timo.out` or, more conveniently, straight from `B["Timo"]` in your own driver script, collected into the `K_timo_list` above.

Reading OpenFAST data back as a reference

The same module reads in the other direction, which is how you validate an OpenSG table against a published blade. `read_beamdyn_blade(path)` parses a BeamDyn blade input and returns (`etas`, `K_list`, `M_list`) with each matrix in BeamDyn order; `beamdyn_to_timo(Kbd)` reorders one back into the OpenSG order so it can be compared term by term. `read_elastodyn_blade(path)` parses an ElastoDyn blade file and returns arrays of `B1Fract`, `PitchAxis`, `StrcTwst` in degrees, `BMassDen` in kg/m, and `FlpStff` and `EdgStff` in N·m², which map to OpenSG's EI_2 (flap) and EI_3 (edge); `elastodyn_at(ed, r)` interpolates those to any span fraction.

6.5 Stage 4: the loads come back as the FF table

A BeamDyn or GEBT run returns, at every station, the sectional force and moment resultants the blade actually carries in a given load case. That table is the input to recovery. `ff51_rmc_reform.dat` is such a table. It has one comment header line and 51 data rows, one per station. The header and the first data rows, verbatim:

```
# eta F1 F2 F3 M1 M2 M3 (RM CENTER-ref BeamDyn, VABS order)
0.00000000e+00 -6.44900592e-06 -2.39422988e-08 2.23607775e+06 1.21251850e+06
-1.12030544e+08 -4.11329552e-07
2.00000000e-02 2.07495361e+03 7.56198425e+01 2.15497000e+06 1.21427150e+06
-1.05899552e+08 2.54692651e+03
4.00000000e-02 4.74173926e+03 1.68900665e+02 2.07209938e+06 1.23365012e+06
-9.99422000e+07 5.32342041e+03
```

Column 1 is $\eta = r/R$, running from 0.00 to 1.00 in steps of 0.02. Columns 2 through 4 are the forces F_1, F_2, F_3 in N; columns 5 through 7 are the moments M_1, M_2, M_3 in N·m. The row used by the single-station scripts is row 10:

```
2.00000000e-01 4.19268867e+04 8.26739746e+03 1.46733512e+06 1.21914500e+06
-6.01849720e+07 3.04264594e+05
```

The frame and the component order stated in that header are not decoration. The resultants must be expressed about the same reference axis and in the same component order as the 6×6 that produced them, or the round trip does not close and the recovered stress is silently wrong. Here both are *RM center-ref* and VABS order, matching **reference: center** in the station YAMLs. Note also the $\eta = 0$ row: its axial and in-plane entries print as -6.4×10^{-6} and -2.4×10^{-8} N, a numerically zero root row rather than a physical load.

A converter turns the table into an annotated YAML and pulls one station out of it:

```
from opensg_shell.helper.ff_to_yaml import convert, station_ff

d = convert("ff51_rmc_reform.dat") # writes ff51_rmc_reform.yaml
FF, eta = station_ff("ff51_rmc_reform.yaml", eta=0.20) # (6,) resultants, and 0.2
```

Listing 6.4: ff51_rmc_reform.yaml: the FF table as a self-describing file.

`convert(dat_path, out_base=None, frame="RM center-ref")` reads the seven-column table, raising if it has fewer than seven columns, and writes `<base>.yaml`. `station_ff(yaml_path, eta=None, row=None)` returns the (6,) resultant vector and the η of one station, selected either by nearest η or by row index. The resulting `ff51_rmc_reform.yaml` records the convention explicitly next to the data, which is what makes the file readable months later:

```
source: ff51_rmc_reform.dat
convention:
  order: [F1, F2, F3, M1, M2, M3]
  frame: RM center-ref
  units: {force: N, moment: N.m}
stations:
- row: 0
  eta: 0.0
  FF: [-6.44900592e-06, -2.39422988e-08, 2236077.75, 1212518.5, -112030544.0,
    -4.11329552e-07]
- row: 10
  eta: 0.2
  FF: [41926.8867, 8267.39746, 1467335.12, 1219145.0, -60184972.0, 304264.594]
```

6.6 Stage 5: dehomogenization back to 3-D wall stress

What it computes

A two-step chain, because a blade wall is a laminate inside a section:

beam **FF** $\xrightarrow{\text{RM shell ring}}$ per-element plate forces $\xrightarrow{\text{RM plate SG}}$ $\sigma(z)$ through the wall.

Step 5a, the section (`opensg_shell`). The macro beam strain is $\bar{\epsilon} = \mathbf{C}_6^{-1} \mathbf{FF}$; `_macro_fields(B, beam_force_vabs=FF)` solves it and recombines the nodal RM warping fields $\mathbf{w} =$

$\mathbf{V}_0\bar{\epsilon} + \mathbf{V}_1\epsilon'$ and their derivatives, and `_rm_shell_strain(B, e, xi, st_m, aA, aB)` evaluates, for ring element `e` at arc coordinate `xi`, the six shell strains

$$\mathbf{s}_6 = \begin{bmatrix} \varepsilon_{11} & \varepsilon_{22} & 2\varepsilon_{12} & \kappa_{11} & \kappa_{22} & 2\kappa_{12} \end{bmatrix}.$$

That wall's own MSG ABD turns them into the **plate reaction forces**

$$\mathbf{F}_6 = \mathbf{A}_6 \mathbf{s}_6 = \begin{bmatrix} N_{11} & N_{22} & N_{12} & M_{11} & M_{22} & M_{12} \end{bmatrix},$$

the interface quantity handed down to the plate SG.

Step 5b, the wall (`opensg_solid.rm_plate_1D`). `rm_plate_msg(thick, angles_deg, mat_names, material_db, fraction=frac)` builds the through-thickness MSG-RM structure gene for each layup once, and `msgrm_strain_at_depth` – or its vectorized twin `msgrm_strain_at_depth_batch`, which evaluates many points of one laminate in a handful of einsums – returns the 3-D Voigt strain and stress at depth z . Both default to `frame="material"`, meaning the result is rotated into the ply material frame where failure criteria live; pass `frame="plate"` to stay in the wall frame.

Recovery needs strain *gradients*, and they come from the ring itself. The span gradient $\partial\mathbf{E}/\partial x_1$ comes from the macro recovery ladder, computed per element as `BDe @ st_cl1 + BDh @ aB[g]` with the element operators from `quad_ops_indep`. The arc gradient $\partial\mathbf{E}/\partial x_2$ comes from nodal differencing of $\mathbf{s}_6$ between the two elements sharing a node – but only where those two elements carry the *same* layup, because a layup change is a physical jump and must never be differenced across. Passing the second gradients as well (`dE11, dE12, dE22`) selects the second-order (V2) recovery, the rung that can in principle carry the transverse pair σ_{33}, σ_{13} that first order cannot.

What you edit

The user block at the top of `2_dehom_v2_vabs.py`:

```
##### User Input #####
name = "iea_s10"                # IEA-22 station at r/R = 0.20
ff_file = "ff51_rmc_reform.dat" # BeamDyn FF (RM center-ref, VABS order)
station_row = 10                # row 10 -> eta = 0.20
vabs_sm = "iea_s10.sg.SM"       # the VABS 2-D solid reference cloud
jpath_file = "iea_s10.lp_sparcap_left_thickness.coords"
#####
```

```
python 2_dehom_v2_vabs.py
```

What comes out

The first two data rows of `iea_s10_elem_plate_forces.dat` show what the interface quantity looks like in practice:

```
# per-element PLATE REACTION FORCES from the RM shell beam model (Timo), eta=0.20
# elem  y2(m) y3(m)  e11 e22 2e12 k11 k22 2k12  N11 N22 N12(N/m) M11 M22 M12(N)
      0  4.677080e+00  1.048036e-01  5.426575e-04 -1.683049e-04  5.685206e-04 ...
```

Table 6.8: Files written by `2_dehom_v2_vabs.py`.

File	Content
<code>iea_s10_report.txt</code>	the validation report: the FF vector, the Timo diagonal, rms differences against VABS split web/skin, the V2 payload block, and the through-thickness path tables
<code>iea_s10_elem_plate_forces.dat</code>	310 rows, one per ring element: element index, y_2 y_3 , the six shell strains, and the six plate reaction forces N_{11}, N_{22}, N_{12} [N/m] and M_{11}, M_{22}, M_{12} [N]
<code>iea_s10_dehom_v2.txt</code>	166 302 rows, one per VABS gauss point: y_2 y_3 elem z , then the six recovered V2 stresses and the six VABS stresses, all MPa
<code>iea_s10_dehom_v2.npz</code>	the same fields plus <code>C6</code> , <code>FF</code> , <code>s6mid</code> , <code>F6mid</code> and every strain gradient, for re-plotting without re-solving
<code>iea_s10_v2_section.png</code>	section contours, VABS beside RM V2, for σ_{11} , σ_{12} , σ_{13} , σ_{33}
<code>iea_s10_parity.png</code>	parity clouds, first order and V2 against VABS
<code>iea_s10_thickness_paths.png</code>	through-thickness profiles on a spar-cap wall, a web, and the station's own reference path

What it was validated against

`iea_s10.sg.SM` is the VABS stress cloud of the *same* cross-section meshed as a 2-D solid, which is the independent reference: the recovery is projected onto its gauss points and differenced there, 166 302 points in all. Every point is assigned to its nearest ring element, a local arc coordinate and a signed wall depth, and the VABS columns are permuted into the (11, 22, 33, 23, 13, 12) order and converted from Pa to MPa before the comparison. Table 6.9 is copied from `iea_s10_report.txt`, with the VABS rms alongside so each difference has a scale.

Table 6.9: rms difference against VABS in MPa, web / skin, from `iea_s10_report.txt` at $\eta = 0.20$.

Component	first order (web / skin)	V2 (web / skin)	VABS rms (web / skin)
σ_{11}	43.073 / 9.529	43.073 / 9.529	44.440 / 96.676
σ_{22}	0.612 / 0.482	0.612 / 0.482	0.704 / 0.998
σ_{12}	6.799 / 1.255	6.798 / 1.255	22.026 / 6.009
σ_{33}	0.081 / 0.049	0.081 / 0.049	0.081 / 0.049
σ_{13}	0.394 / 0.192	0.394 / 0.192	0.394 / 0.193
σ_{23}	0.035 / 0.028	0.035 / 0.028	0.035 / 0.028

Read this honestly, because the table says three different things at once.

The in-plane skin stress is good. σ_{11} in the skin differs by 9.53 MPa rms against a VABS rms of 96.68 MPa, and σ_{12} by 1.26 against 6.01. The report also tabulates three through-thickness paths, and those sharpen the picture considerably. On the station's own reference thickness path, whose 15 points sit **0.00 mm** from the nearest VABS gauss point and are therefore exactly in the reference frame, the σ_{11} difference is **1.265 MPa against a VABS rms of 286.837 MPa**, better than half a percent. The two paths generated from the ring geometry sit 2.44 mm and 2.43 mm from the nearest VABS point, and their larger differences – 38.355 MPa rms on the spar cap, 2.299 MPa on the web – are dominated by that geometric offset rather than by the recovery itself. The printed nearest-VABS distance is the frame check: millimetres means the same frame, hundreds of millimetres means you are comparing against a foreign mesh.

The web is the weak spot. For σ_{11} in the web the difference, 43.07, is essentially the VABS rms itself, 44.44, which means the web axial stress is not being reproduced. The same pattern holds for

the three transverse components everywhere: the difference equals the VABS rms to three digits, which is what you get when the recovered field is very nearly zero. This is the known transverse recovery gap of the shell-to-plate route, not a tuning problem.

The second-order rung is inert at this load state. The report's V2 payload block measures what V2 *changes*, rather than a rounded difference that could hide a small effect. At this station σ_{11} moves by 1.950×10^{-4} MPa rms against a first-order rms of 8.851×10^1 , σ_{12} by 5.685×10^{-3} against 1.068×10^1 , σ_{33} by 5.190×10^{-5} MPa against a VABS rms of 5.576×10^{-2} , and σ_{13} and σ_{23} by exactly 0.000×10^0 . For this constant-force blade state the V2 drivers carry no payload, and the first-order σ_{33} rms is 3.603×10^{-13} MPa, machine zero.

The correctness check on transverse shear

`3_q_consistency_check.py` tests an identity that any recovered transverse shear must satisfy, wall by wall: the thickness integral of the recovered stress must equal the wall's own transverse-shear resultant, which the RM shell already knows.

$$I_a = \int_h \sigma_{a3} dz \stackrel{!}{=} Q_a = (\mathbf{G}_{\text{msg}} \mathbf{s}_2)_a, \quad \mathbf{s}_2 = \begin{bmatrix} 2\gamma_{13} & 2\gamma_{23} \end{bmatrix}.$$

The plate pipeline enforces this by construction – shape from the strain gradients, amplitude from the resultant, σ_{a3} rescaled by Q/I . The shell-to-plate chain never uses $\mathbf{s}_2$, so nothing pins the amplitude, and the ratio $r = I/Q$ measures how far off it is. Consistency means $r = 1$.

```
##### User Input #####
name = "iea_s10"
ff_file = "ff51_rmc_reform.dat"
station_row = 10          # eta = r/R = 0.20
n_z = 41                  # integration points through each wall
#####
```

```
python 3_q_consistency_check.py
```

The script writes `iea_s10_q_consistency.txt` and `iea_s10_q_consistency.png`, the latter plotting recovered $|I_{13}|$ against wall $|Q_1|$ on log axes with the consistency line, beside the histogram of $\log_{10}(I_{13}/Q_1)$. The measured result:

Table 6.10: Q-consistency ratios at $\eta = 0.20$, from `iea_s10_q_consistency.txt`.

Ratio	median	mean	min	max	Verdict
I_{13}/Q_1	5.228e−01	−6.974e+00	−1.299e+03	2.260e+01	target invalid
I_{23}/Q_2	9.895e−01	1.096e+00	−1.217e+01	1.194e+01	target valid

σ_{23} **passes**. The median I_{23}/Q_2 is 0.9895, a **1.05% Q-consistency error**, with a wall Q_2 rms of 8.9686 N/m against a recovered I_{23} rms of 8.3085 N/m.

σ_{13} **is not measurable in a cross-section model**, and the script explains why rather than papering over it. This ring is homogenized with `shear="mitc4_g23"`: γ_{23} is tied by MITC while γ_{13} is raw and carries the flat-wall drilling mode, so a Q_1 built from it is not a physical wall shear and cannot serve as a recovery target. The fingerprint is in the magnitudes – Q_1 rms is 9.9064×10^2 N/m against a Q_2 rms of 8.9686 N/m, a factor of about 110, which is implausible for a thin-walled section that carries its load as in-plane shear flow. The ring is a one-quad-deep prismatic strip,

so the γ_{13} tying interpolates along a direction in which the row is already linear and reproduces it exactly: the script measures `rms |Q1(g23) - Q1(both)| = 0.0000e+00 N/m` and the same for Q_2 , so `mitc4_g23` and `mitc4_both` are bit-identical here even though both flags are plumbed and branch. A physical γ_{13} needs the surface-quad route, where both rows are genuinely tied, not a rescale of this ring against a contaminated Q_1 .

The practical rule that follows: trust σ_{11} , σ_{22} and σ_{12} from this pipeline, treat σ_{23} as good to about one percent in amplitude, and do not use the cross-section route's σ_{13} or σ_{33} as a design quantity.

The same recovery, all 51 stations

`4_sweep_51_stations.py` runs the *first-order* recovery – it passes only the two first gradients to `msgm_strain_at_depth_batch` – at `n_depth = 9` depths per wall element. The depths are mid-bin in the normalized thickness coordinate, $\zeta = (k + \frac{1}{2})/9$ for $k = 0 \dots 8$, converted to a physical depth by $z = (\zeta - \text{frac})h$ with h the total thickness of that element's layup and `frac` taken from the bundle. The peak $|\sigma|$ per component over the whole section, in the ply material frame, goes to `iea51_peak_stress.dat`.

Table 6.11: Selected rows of `iea51_peak_stress.dat`: peak $|\sigma|$ per component over the whole section, ply frame, in MPa. Column order follows the file header.

$\eta = r/R$	σ_{11}	σ_{22}	σ_{33}	σ_{23}	σ_{13}	σ_{12}
0.00	1.49271417e+02	1.53636678e+00	4.13972884e-13	5.39458803e-03	4.12768841e-02	2.24186054e+00
0.16	3.25793641e+02	4.14543750e+00	8.97794962e-13	3.91335971e-02	3.51941097e-02	7.01052831e+00
0.20	3.18177433e+02	3.08795353e+00	9.12696123e-13	1.57149557e-02	3.45770096e-02	5.66031217e+00
0.54	2.14382707e+02	1.62953363e+00	8.13510269e-13	1.74810053e-02	8.23774625e-02	5.64234617e+01
0.80	1.11316749e+02	1.94984342e+00	1.93947926e-13	1.15167225e-02	5.58043894e-02	3.85749086e+01
1.00	4.88165692e-01	2.71026227e-02	2.03726813e-15	4.70632777e-05	5.13380478e-02	7.89278421e+00

Reading the whole file rather than these six rows: the peak axial stress of the entire blade in this load case is **325.79 MPa at $\eta = 0.16$** , and the peak in-plane shear is **56.42 MPa at $\eta = 0.54$** , where the shear webs take over from the caps. The σ_{33} column never leaves the range 2×10^{-15} to 2×10^{-12} MPa over all 49 stations – identically zero to round-off, the first-order limit noted above – so do not read it as a physical through-thickness stress. The σ_{13} column, which stays between 0.033 and 0.105 MPa over the whole blade, is subject to the same caveat as in the Q-consistency check and is not a design quantity either.

Figure 6.2 shows both halves. The left panel plots the spanwise peaks of σ_{11} and σ_{12} : the axial peak climbs steeply out of the root, crests near $\eta \approx 0.16$ and decays to almost nothing at the tip, while the shear peak rises in distinct steps rather than smoothly, near $\eta \approx 0.36$ and $\eta \approx 0.46$, where the peak jumps from 4.85 to 25.75 MPa and from 24.40 to 54.30 MPa respectively as a different wall takes over the shear. The right panel records the per-station wall time of the two halves separately, so you can see where a sweep's cost actually sits before scaling it to more stations or more blades. The same arrays are saved to `iea51_sweep.npz` under the keys `eta`, `props`, `peak`, `t_homo`, `t_dehom` and `stations`, so a sweep never has to be repeated just to redraw a figure.

6.7 Where each tool ends

The chain closes only because the conventions match at every hand-off: the same reference surface (`center`), the same component order (VABS), and the same units (SI, metres and pascals in,

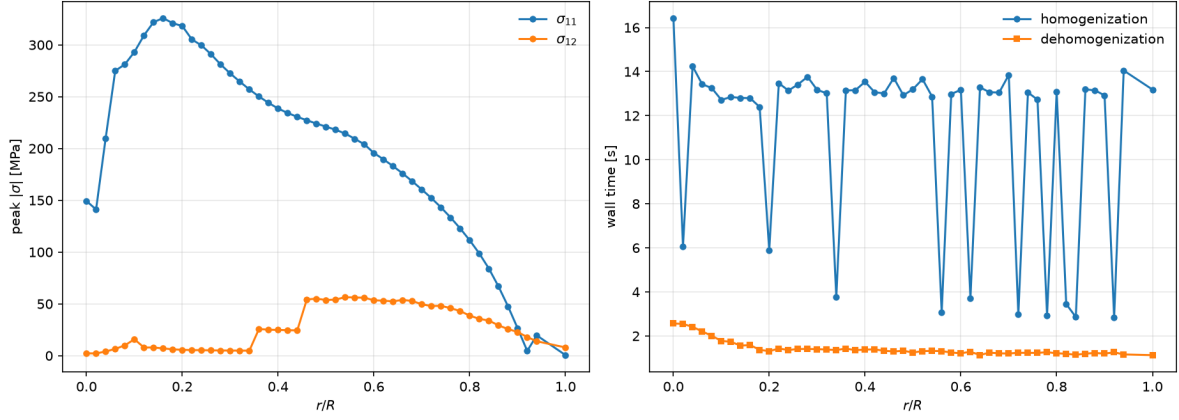


Figure 6.2: The two halves of the 51-station sweep. Left: the spanwise peaks of σ_{11} and σ_{12} against r/R . Right: the recorded per-station wall time, homogenization against dehomogenization.

Table 6.12: Who does what across the three tools in the round trip.

OpenSG'io	OpenSG-2.0	OpenFAST / BeamDyn
Reads windIO v1 and v2, PreVABS XML, and OpenFAST ElastoDyn/BeamDyn blade data.	Homogenizes each 1-D shell SG to the Timoshenko 6×6 and writes <code><station>_Timo.out</code> .	Runs the blade dynamics. Installed, configured and run by you, outside OpenSG.
Writes the per-station 1-D shell SG YAMLs that <code>opensg_shell</code> consumes.	Writes the RM wall law per section, <code><station>_ABDG.out</code> , and the ABD YAML with <code>mass_per_area</code> .	Returns the per-station sectional force and moment resultants that come back as the FF table.
Writes the PreVABS XML for the 2-D solid route, which supplies the independent VABS reference.	Recovers the 3-D wall stress from the FF table and validates it against that VABS cloud.	Owens the blade input file format; consult the BeamDyn documentation for it.
Bridges the hand-off with <code>timo_to_beamdyn</code> and <code>write_beamdyn_blade</code> , and reads OpenFAST data back as a validation reference.	Runs the Q-consistency diagnostic on the recovered transverse shear.	Sectional mass matrices are not produced by either OpenSG tool and remain your responsibility.

newtons and newton-metres back). Those three lines are the first things to check when a recovered stress field looks wrong, and they are checkable without rerunning anything – the station YAML records its **reference**, the FF table records its frame and order in the header line, and the ABD YAML records the reference it was emitted at.