
Practical No 7

Aim: Inter-VLAN Routing

Topology

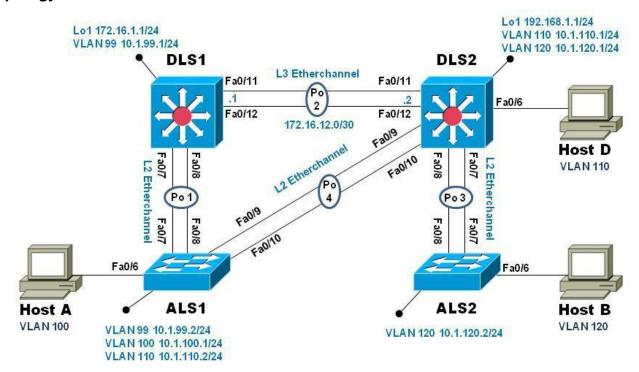

Objectives

- Implement a Layer 3 EtherChannel
- Implement Static Routing
- Implement Inter-VLAN Routing

Required Resources

- 2 Cisco 2960 with the Cisco IOS Release 15.0(2)SE6 C2960-LANBASEK9-M or comparable
- 2 Cisco 3560v2 with the Cisco IOS Release 15.0(2)SE6 C3560-IPSERVICESK9-M or comparable
- Computer with terminal emulation software
- Ethernet and console cables
- 3 PCs with appropriate software

Part 1: Configure Multilayer Switching using Distribution Layer Switches

Step 1: Load base config

Use the reset.tcl script you created in Lab 1 "Preparing the Switch" to set your switches up for this lab. Thenload the file BASE.CFG into the running-config with the command **copy flash:BASE.CFG running-config**. An example from DLS1:

```
DLS1# tclsh reset.tcl
Erasing the nvram filesystem will remove all configuration files! Continue? [confirm]
Erase of nvram: complete
Reloading the switch in 1 minute, type reload cancel to halt
Proceed with reload? [confirm]
*Mar 7 18:41:40.403: %SYS-7-NV BLOCK INIT: Initialized the geometry of nvram
*Mar 7 18:41:41.141: %SYS-5-RELOAD: Reload requested by console. Reload Reason:
Reload command.
<switch reloads - output omitted>
Would you like to enter the initial configuration dialog? [yes/no]: n
Switch> en
*Mar 1 00:01:30.915: %LINK-5-CHANGED: Interface Vlan1, changed state to
administratively down
Switch# copy BASE.CFG running-config
Destination filename [running-config]?
184 bytes copied in 0.310 secs (594 bytes/sec)
DLS1#
```

Step 2: Verify switch management database configuration

At each switch, use the show sdm prefer command to verify the appropriate template is chosen. The DLS switches should be using the "dual ipv4-and-ipv6 routing" template and the ALS switches should be using the "lanbase-routing" template. If any of the switches are using the wrong template, make the necessary change and reboot the switch with the **reload** command. An example from ALS1 is below:

```
ALS1# sho sdm pref

The current template is "default" template.
<output omitted>
ALS1# conf t

Enter configuration commands, one per line. End with CNTL/Z.

ALS1(config)# sdm pref lanbase-routing

Changes to the running SDM preferences have been stored, but cannot take effect until the next reload.

Use 'show sdm prefer' to see what SDM preference is currently active.

ALS1(config)# end

ALS1# reload
```

```
System configuration has been modified. Save? [yes/no]: y
*Mar 1 02:12:00.699: %SYS-5-CONFIG_I: Configured from console by console
Building configuration...
[OK]
Proceed with reload? [confirm]
```

Step 3: Configure layer 3 interfaces on the DLS switches

Enable IP Routing, create broadcast domains (VLANs), and configure the DLS switches with the layer 3interfaces and addresses shown:

Switch	Interface	Address/Mask
DLS1	VLAN 99	10.1.99.1/24
DLS1	Loopback 1	172.16.1.1/24
DLS2	VLAN 110	10.1.110.1/24
DLS2	VLAN 120	10.1.120.1/24
DLS2	Loopback 1	192.168.2.1/24

An example from DLS2:

```
DLS2 (config) # ip routing
DLS2(config) # vlan 110
DLS2(config-vlan) # name Management
DLS2(config-vlan)# exit
DLS2(config) # vlan 120
DLS2(config-vlan)# name Local
DLS2(config-vlan)# exit
DLS2(config)# int vlan 110
DLS2(config-if)# ip address 10.1.110.1 255.255.255.0
DLS2(config-if) # no shut
DLS2(config-if)# exit
DLS2(config)# int vlan 120
DLS2(config-if)# ip address 10.1.120.1 255.255.255.0
DLS2(config-if)# no shut
DLS2(config-if)# exit
DLS2(config) # int loopback 1
DLS2(config-if)# ip address 223.168.1.1 255.255.255.0
DLS2(config-if) # no shut
DLS2(config-if)# exit
DLS2 (config) #
```

At this point, basic intervlan routing can be demonstrated using an attached host. Host D is attached to DLS2via interface Fa0/6. On DLS2, assign interface Fa0/6 to VLAN 110 and configure the host with the address 10.1.110.50/24 and default gateway of 10.1.110.1. Once you have done that, try and ping Loopback 1's IP address (192.168.1.1). This should work just like a hardware router; the switch will provide connectivity between two directly connected interfaces. In the output below, the **switchport host** macro was used to quickly configure interface Fa0/6 with host-relative commands:

```
DLS2(config) # int f0/6
DLS2(config-if) # switchport host
switchport mode will be set to access
spanning-tree portfast will be enabled
channel group will be disabled

DLS2(config-if) # switchport access vlan 110
DLS2(config-if) # no shut
DLS2(config-if) # exit
DLS2(config) #
```

```
Windows IP Configuration

Ethernet adapter Local Area Connection:

Connection-specific DNS Suffix .:
Link-local IPv6 Address . . . : fe80::59a7:56ce:f785:ed46%11
IPv4 Address . . . . : 10.1.110.50
Subnet Mask . . . . . . : 255.255.255.0
Default Gateway . . . : 10.1.110.1

C:\Users\student>ping 192.168.1.1

Pinging 192.168.1.1 with 32 bytes of data:
Reply from 192.168.1.1: bytes=32 time=1ms TTL=255
Reply from 192.168.1.1: bytes=32 time=2ms TTL=255
Reply from 192.168.1.1: bytes=32 time=1ms TTL
```

Step 4: Configure a Layer 3 Etherchannel between DLS1 and DLS2

Now you will interconnect the multilayer switches in preparation to demonstrate other routing capabilities. Configure a layer 3 EtherChannel between the DLS switches. This will provide the benefit of increased available bandwidth between the two multilayer switches. To convert the links from layer 2 to layer 3, issue the **no switchport** command. Then, combine interfaces F0/11 and F0/12 into a single PAgP EtherChanneland then assign an IP address as shown.

DLS1	172.16.12.1/30	DLS2	172.16.12.2/30
------	----------------	------	----------------

Example from DLS1:

```
DLS1(config) # interface range f0/11-12

DLS1(config-if-range) # no switchport

DLS1(config-if-range) # channel-group 2 mode desirable

Creating a port-channel interface Port-channel 2

DLS1(config-if-range) # no shut

DLS1(config-if-range) # exit

DLS1(config) # interface port-channel 2

DLS1(config-if) # ip address 172.16.12.1 255.255.252

DLS1(config-if) # no shut

DLS1(config-if) # exit

DLS1(config) #
```

Once you have configured both sides, verify that the EtherChannel link is up

```
DLS2# show etherchannel summary
Flags: D - down
                     P - bundled in port-channel
       I - stand-alone s - suspended
       H - Hot-standby (LACP only)
       R - Layer3 S - Layer2
                     f - failed to allocate aggregator
       U - in use
       M - not in use, minimum links not met
       u - unsuitable for bundling
       w - waiting to be aggregated
       d - default port
Number of channel-groups in use: 1
Number of aggregators:
Group Port-channel Protocol
                              Ports
2 Po2(RU) PAGP Fa0/11(P) Fa0/12(P)
DLS2# ping 172.16.12.1
Type escape sequence to abort.
Sending 5, 100-byte ICMP Echos to 172.16.12.1, timeout is 2 seconds:
Success rate is 80 percent (4/5), round-trip min/avg/max = 1/3/9 ms
DLS2#
```

Step 5: Configure default routing between DLS switches

At this point, local routing is support at each distribution layer switch. Now to provide reachability across the layer 3 EtherChannel trunk, configure fully qualified static default routes at DLS1 and DLS2 that point to eachother. From DLS1:

```
DLS1(config) # ip route 0.0.0.0 0.0.0.0 port-channel 2
%Default route without gateway, if not a point-to-point interface, may impact
performance
DLS1(config) # ip route 0.0.0.0 0.0.0.0 port-channel 2 172.16.12.2
DLS1(config) #
```

Once done at both ends, verify connectivity by pinging from one switch to the other. In the example below, DLS2 pings the Loopback 1 interface at DLS1.

```
DLS2# show ip route
Codes: L - local, C - connected, S - static, R - RIP, M - mobile, B - BGP
<output omitted>
Gateway of last resort is 172.16.12.1 to network 0.0.0.0
S*
      0.0.0.0/0 [1/0] via 172.16.12.1, Port-channel2
      10.0.0.0/8 is variably subnetted, 2 subnets, 2 masks
С
         10.1.110.0/24 is directly connected, Vlan110
         10.1.110.1/32 is directly connected, Vlan110
      172.16.0.0/16 is variably subnetted, 2 subnets, 2 masks
С
         172.16.12.0/30 is directly connected, Port-channel2
         172.16.12.2/32 is directly connected, Port-channel2
      192.168.1.0/24 is variably subnetted, 2 subnets, 2 masks
        192.168.1.0/24 is directly connected, Loopback1
С
         192.168.1.1/32 is directly connected, Loopback1
DLS2# ping 172.16.1.1
Type escape sequence to abort.
Sending 5, 100-byte ICMP Echos to 172.16.1.1, timeout is 2 seconds:
Success rate is 100 percent (5/5), round-trip min/avg/max = 1/4/9 ms
DLS2#
```

Step 6: Configure the remaining EtherChannels for the topology

Configure the remaining EtherChannel links as layer 2 PagP trunks using VLAN 1 as the native VLAN.

Endpoint 1	Channel number	Endpoint 2	VLANs Allowed
ALS1 F0/7-8	1	DLS1 F0/7-8	All except 110
ALS1 F0/9-10	4	DLS2 F0/9-10	110 Only

ALS2 F0/7-8	3 DLS2 F0/7-8	All
-------------	---------------	-----

Example from ALS1:

```
ALS1(config) # interface range f0/7-8
ALS1 (config-if-range) # switchport mode trunk
ALS1(config-if-range)# switchport trunk allowed vlan except 110
ALS1(config-if-range) # channel-group 1 mode desirable
Creating a port-channel interface Port-channel 1
ALS1 (config-if-range) # no shut
ALS1(config-if-range)# exit
ALS1(config) # interface range f0/9-10
ALS1(config-if-range) # switchport mode trunk
ALS1 (config-if-range) # switchport trunk allowed vlan 110
ALS1 (config-if-range) # channel-group 4 mode desirable
Creating a port-channel interface Port-channel 4
ALS1 (config-if-range) # no shut
ALS1(config-if-range) # exit
ALS1 (config) #end
ALS1# show etherchannel summary
Flags: D - down P - bundled in port-channel
       I - stand-alone s - suspended
       H - Hot-standby (LACP only)
       R - Layer3 S - Layer2
       U - in use
                    f - failed to allocate aggregator
       M - not in use, minimum links not met
       u - unsuitable for bundling
       w - waiting to be aggregated
       d - default port
Number of channel-groups in use: 2
Number of aggregators:
Group Port-channel Protocol Ports
Pol(SU)
                   PAgP
                            Fa0/7(P) Fa0/8(P)
                    PAgP Fa0/9(P) Fa0/10(P)
      Po4(SU)
ALS1# show interface trunk
Port
         Mode
                        Encapsulation Status Native vlan
         on
                         802.1q
Po1
                                      trunking
Po4
                         802.1q
                                      trunking
Port Vlans allowed on trunk
```

```
Po1 1-109,111-4094
Po4 110
<output omitted>
ALS1#
```

Step 7: Enable and Verify Layer 3 connectivity across the network

In this step we will enable basic connectivity from the management VLANs on both sides of the network.

- Create the management VLANs (99 at ALS1, 120 at ALS2)
- Configure interface VLAN 99 at ALS1 and interface VLAN 120 at ALS2
- Assign addresses (refer to the diagram) and default gateways (at DLS1/DLS2 respectively).

Once that is all done, pings across the network should work, flowing across the layer 3 EtherChannel. Anexample from ALS2:

```
ALS2(config) # vlan 120
ALS2(config-vlan) # name Management
ALS2(config-vlan)# exit
ALS2 (config) # int vlan 120
ALS2 (config-if) # ip address 10.1.120.2 255.255.255.0
ALS2(config-if)# no shut
ALS2(config-if)# exit
ALS2 (config) # ip default-gateway 10.1.120.1
ALS2(config)# end
ALS2# ping 10.1.99.2
Type escape sequence to abort.
Sending 5, 100-byte ICMP Echos to 10.1.99.2, timeout is 2 seconds:
Success rate is 60 percent (3/5), round-trip min/avg/max = 1/3/8 ms
ALS2#
ALS2# traceroute 10.1.99.2
Type escape sequence to abort.
Tracing the route to 10.1.99.2
VRF info: (vrf in name/id, vrf out name/id)
  1 10.1.120.1 0 msec 0 msec 8 msec
  2 172.16.12.1 0 msec 0 msec 8 msec
  3 10.1.99.2 0 msec 0 msec *
ALS2#
```

Part 2: Configure Multilayer Switching at ALS1

At this point all routing is going through the DLS switches, and the port channel between ALS1 and DLS2 is not passing anything but control traffic (BPDUs, etc).

The Cisco 2960 is able to support basic routing when it is using the LANBASE IOS. In this step you will configure ALS1 to support multiple SVIs and configure it for basic static routing. The objectives of this stepare:

- Enable intervlan routing between two VLANs locally at ALS1
- Enable IP Routing
- Configure a static route for DLS2's Lo1 network travel via Port-Channel 4.

Step 1: Configure additional VLANs and VLAN interfaces

At ALS1, create VLAN 100 and VLAN 110 and then create SVIs for those VLANs:

```
ALS1 (config) # ip routing
ALS1 (config) # vlan 100
ALS1(config-vlan) # name Local
ALS1(config-vlan)# exit
ALS1 (config) # vlan 110
ALS1(config-vlan) # name InterNode
ALS1(config-vlan)# exit
ALS1 (config) # int vlan 100
ALS1(config-if) # ip address 10.1.100.1 255.255.255.0
ALS1(config-if)# no shut
ALS1(config-if)# exit
ALS1 (config) # int vlan 110
ALS1 (config-if) # ip address 10.1.110.2 255.255.255.0
ALS1 (config-if) # no shut
ALS1(config-if)# exit
ALS1 (config) #
```

Step 2: Configure and test Host Access

Assign interface Fa0/6 to VLAN 100. On the attached host (Host A) configure the IP address 10.1.100.50/24with a default gateway of 10.1.100.1. Once configured, try a traceroute from the host to 10.1.99.2 and observe the results.

In the output below, the **switchport** host macro was used to quickly configure interface Fa0/6 with host-relative commands.

```
ALS1(config)# interface f0/6
ALS1(config-if)# switchport host
switchport mode will be set to access
spanning-tree portfast will be enabled
channel group will be disabled

ALS1(config-if)# switchport access vlan 100
ALS1(config-if)# no shut
ALS1(config-if)# exit
```

```
C:\Windows\system32\ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

Connection-specific DNS Suffix .:
Link-local IPv6 Address . . . : fe80::d53b:d1d3:aabd:b3c4x11
IPv4 Address . . . . : 10.1.100.50
Subnet Mask . . . . . : 255.255.255.0
Default Gateway . . . : 10.1.100.1

C:\Windows\system32\tracert 10.1.99.2

Tracing route to 10.1.99.2 over a maximum of 30 hops

1  2 ms  1 ms  1 ms 10.1.99.2

Trace complete.

C:\Windows\system32\stem32\_
```

The output from the host shows that attempts to communicate with interface VLAN 99 at ALS1 were fulfilledlocally, and not sent to DLS1 for routing.

Step 3: Configure and verify static routing across the network

At this point, local routing (at ALS1) works, and off-net routing (outside of ALS1) will not work, because DLS1doesn't have any knowledge of the 10.1.100.0 subnet. In this step you will configure routing on several different switches:

- At DLS1, configure:
 - o a static route to the 10.1.100.0/24 network via VLAN 99
- At DLS2, configure
 - o a static route to the 10.1.100.0/24 network via VLAN 110
- At ALS1, configure
 - o a static route to the 192.168.1.0/24 network via VLAN 110
 - o a default static route to use 10.1.99.1

Here is an example from ALS1:

```
ALS1(config) # ip route 192.168.1.0 255.255.255.0 vlan 110 ALS1(config) # ip route 0.0.0.0 0.0.0.10.1.99.1 ALS1(config) # end
```

```
ALS1# show ip route

Codes: L - local, C - connected, S - static, R - RIP, M - mobile, B - BGP

D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area

N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2

E1 - OSPF external type 1, E2 - OSPF external type 2

i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2

ia - IS-IS inter area, * - candidate default, U - per-user static route

o - ODR, P - periodic downloaded static route, H - NHRP, 1 - LISP

+ - replicated route, % - next hop override
```

Gateway of last resort is 10.1.99.1 to network 0.0.0.0

```
S* 0.0.0.0/0 [1/0] via 10.1.99.1

10.0.0.0/8 is variably subnetted, 6 subnets, 2 masks

C 10.1.99.0/24 is directly connected, Vlan99

L 10.1.99.2/32 is directly connected, Vlan99

C 10.1.100.0/24 is directly connected, Vlan100

L 10.1.100.1/32 is directly connected, Vlan100

C 10.1.110.0/24 is directly connected, Vlan110

L 10.1.110.2/32 is directly connected, Vlan110

S 192.168.1.0/24 is directly connected, Vlan110
```

After configuring all of the required routes, test to see that the network behaves as expected.

From ALS1, a traceroute to 10.1.120.2 should take three hops:

```
ALS1# traceroute 10.1.120.2

Type escape sequence to abort.

Tracing the route to 10.1.120.2

VRF info: (vrf in name/id, vrf out name/id)

1 10.1.99.1 0 msec 0 msec 0 msec

2 172.16.12.2 9 msec 0 msec 0 msec

3 10.1.120.2 0 msec 8 msec *

ALS1#
```

From ALS1, a traceroute to 192.168.1.1 should take one hop:

```
ALS1# traceroute 192.168.1.1

Type escape sequence to abort.

Tracing the route to 192.168.1.1

VRF info: (vrf in name/id, vrf out name/id)

1 10.1.110.1 0 msec 0 msec *

ALS1#
```

Traces from Host A show an additional hop, but follow the appointed path:

Step 4: End of Lab

Save your configurations. The switches will be used as configured now for lab 5-2, DHCP.