


# Stereo headphone amplifier / optional module / PIN GUIDE

IN = into this board OUT = from this board I/O = both directions GND = 0 V 3V3 = 3.3 V

## BACK / READ FROM THIS SIDE

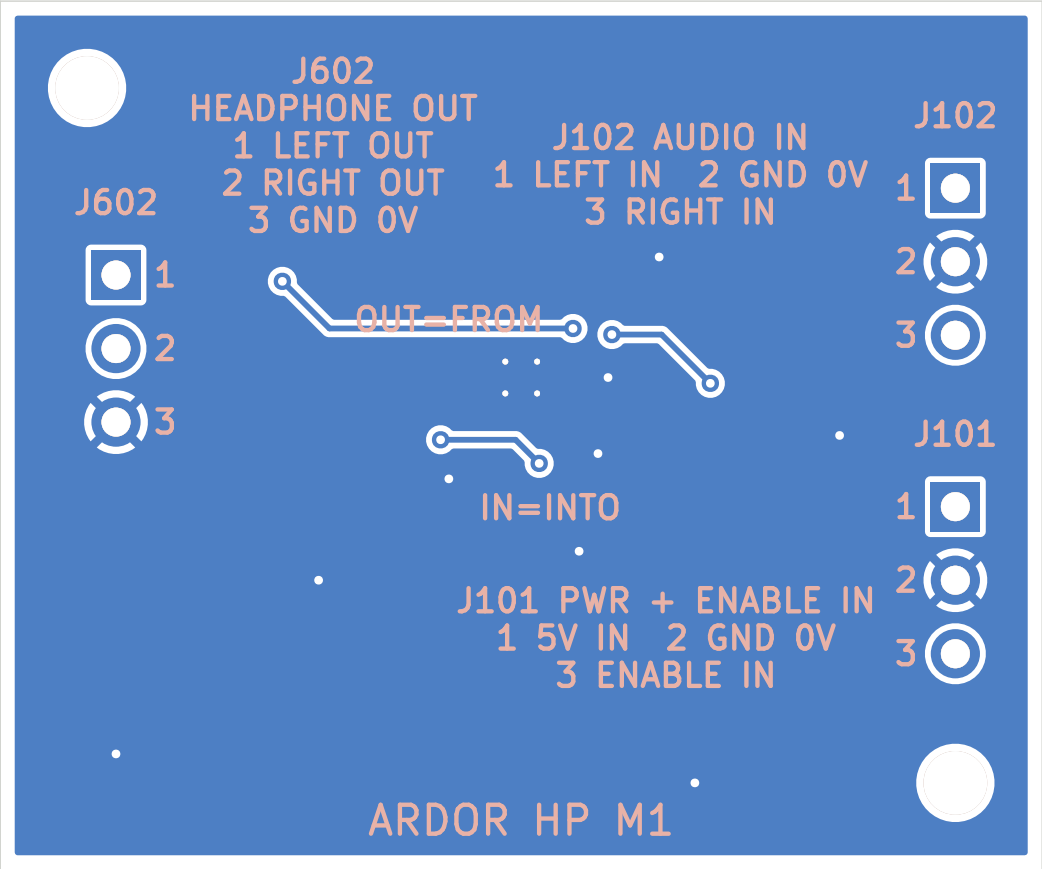

### J101 / 5V POWER + ENABLE INPUT

#### 1: 5V IN / POWER INPUT

Positive output of the matching regulated supply.

#### 2: GND 0V / GROUND

Host or cable ground / 0 V.

#### 3: ENABLE IN / CONTROL INPUT

Host control output. Keep LOW until audio and supply are stable.

### J102 / STEREO AUDIO INPUT FROM SOURCE

#### 1: LEFT IN / INPUT

DAC/codec left audio output,  $\leq 1$  Vrms.

#### 2: GND 0V / GROUND

Host or cable ground / 0 V.

#### 3: RIGHT IN / INPUT

DAC/codec right audio output,  $\leq 1$  Vrms.

### J602 / STEREO HEADPHONE AUDIO OUTPUT

#### 1: LEFT OUT / OUTPUT

TRS socket tip; headphones  $\geq 32$  ohm.

#### 2: RIGHT OUT / OUTPUT

TRS socket ring; headphones  $\geq 32$  ohm.

#### 3: GND 0V / GROUND

TRS socket sleeve; enclosure bond.

## The square connector pad is pin 1.

Match the connector name and pin number.

Connector assignments differ between modules.

H1 / H2: mounting holes; no electrical connection.

Small via holes are not wire connectors.

Use the connector pin table before you connect power.

Use ASSEMBLY.md for the short procedure. Disconnect the power supply before solder work or jumper changes.