
FRC
Sensor CAN

Revision D SC12 · Prototype engineering and assembly guide

Three industrial / logic sensor inputs
Regulated 12 V and 5 V sensor power

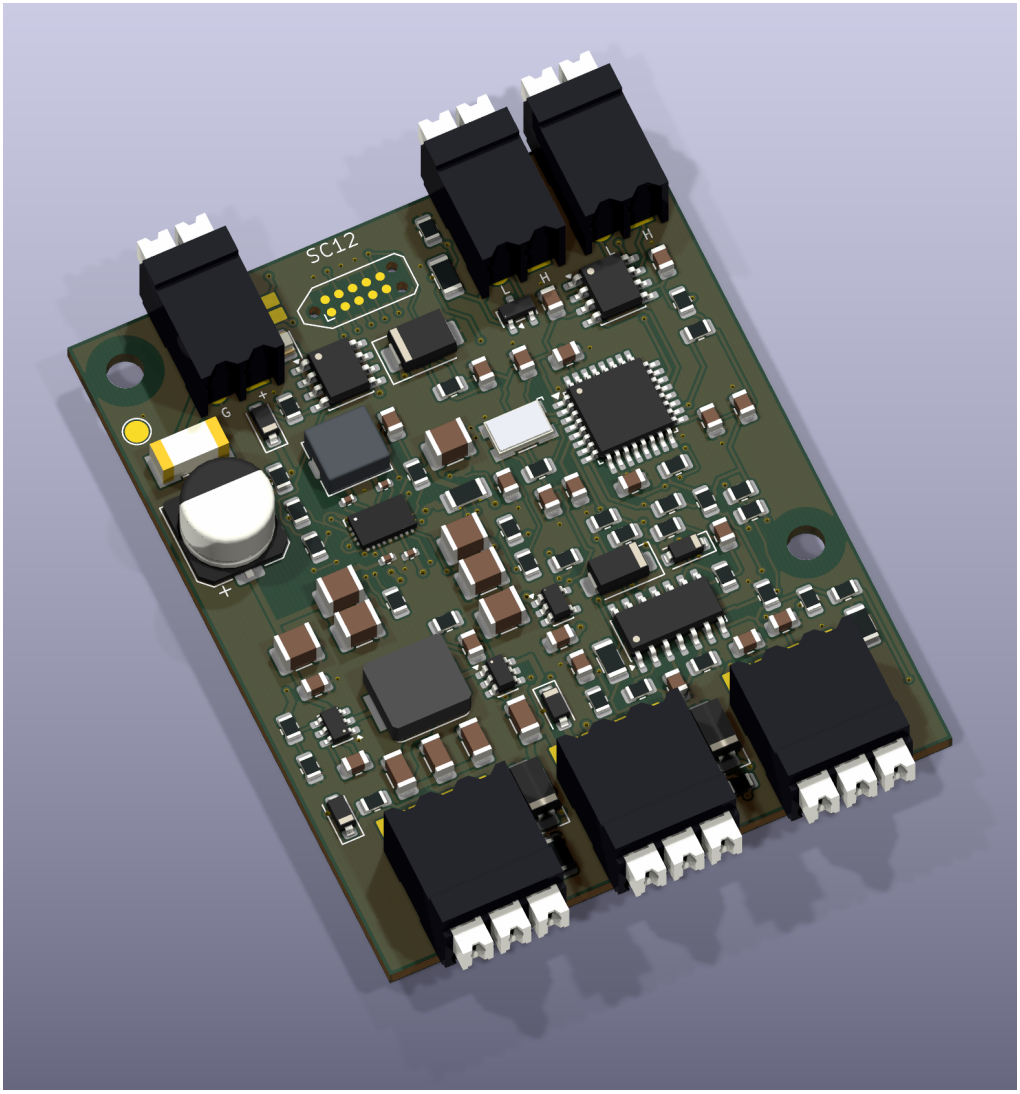

2026-09-08

Editable KiCad files, DigiKey BOM, firmware, robot examples and verification records accompany this guide. No physical prototype has been tested. Electrical ratings are design targets pending the included qualification plan.

Contents

1 Product overview 3

2 Simplification 5

3 Wiring and programming contacts 7

4 Hand assembly 10

5 Firmware 11

6 CAN protocol 12

7 Robot integration 14

8 Purchasing and factory quote 15

9 Validation and qualification 17

10 Connector evidence 19

11 Tools and reproduction 20

12 Sources and notices 21

1 Product overview

Source: README.md

Three industrial digital inputs, selectable **regulated 12 V or 5 V sensor power**, and classic CAN for FRC team projects. The **52 × 64 mm** PCB keeps horizontal Weidmüller push terminals and the compact TC2050 programming contacts. It uses four copper layers, with both inner layers reserved for ground.

Engineering prototype release. CAD, source, manufacturing files and checks are provided for review and prototype fabrication. No physical Rev D board has been assembled or qualified. Production release and competition use require the tests in VALIDATION.md; CAD checks do not establish either.

Item	Rev D design target
Board input	6-22 V DC at J1, protected distribution branch required
Sensor supplies	12.01 V nominal buck-boost and 5 V nominal; 300 mA shared per rail
Inputs	Three PNP, NPN or push-pull inputs; positive signal range 0-30 V
Logic thresholds	LOW ≤1.2 V, HIGH ≥2.4 V targets; supports 3.3/5 V logic, not guaranteed 1.8 V
Connectors	Weidmüller LSF-SMT 3.50/90; 1824420000 and 1824430000
MCU / CAN	STM32F042K6T6 LQFP32 + TCAN3413 SO8; 1 Mbit/s
Power stage	TPS552872-Q1, synchronous buck-boost; 3.3 µH shielded inductor
Assembly	104 fitted parts: 98 SMT and six through-hole terminals; 48 purchase lines
Parts estimate	$54.89 using dated DigiKey quantity-one observations; PCB/assembly/tax/freight extra
Firmware	0.4.0, hardware 4, original protocol v3; Java, C++ and Python interfaces


12 V remains regulated when the battery is above or below 12 V within the qualified input/load envelope. It is intended for compatible three-wire Omron/Banner sensors; verify the exact model, current, output type and residual/leakage voltage. A brand name alone is not a compatibility guarantee. Sensor power is hardware-enabled; solder selectors choose each port's supply. No raw battery output is exposed on Rev D.

Firmware reports qualified 12 V power-good and 5 V switch fault status. Counts pause on either rail fault and resume only after 100 ms of continuous good indications. Drivers provide a health-checked input helper. These indications are not calibrated voltage measurements and cannot detect every cable or sensor failure.

The integrated switches, current limiting, shared 5 V driver bias and PCB Kelvin taps avoid extra purchased power devices. Most passives remain 0805 or larger. Four local 0402 capacitors and the 21-pad HotRod QFN require a stencil and controlled reflow/heatbed; inspect the power IC joints. Hand soldering the remaining parts is practical. See design choices.

Deliverable	Link
Native KiCad PCB / schematic	PCB, schematic
Manufacturing / assembly	Gerbers and drills, interactive BOM, schematic PDF
Ordering	DigiKey import, grouped BOM, factory instructions
Prototype factory packet	ZIP
Complete source/review release	ZIP, hashes
Mechanical handoff	STEP, dimensioned drawing
Setup and operation	wiring, assembly, protocol, drivers

Deliverable	Link
Engineering checks	Consolidated report, qualification plan
Printable handbook	PDF

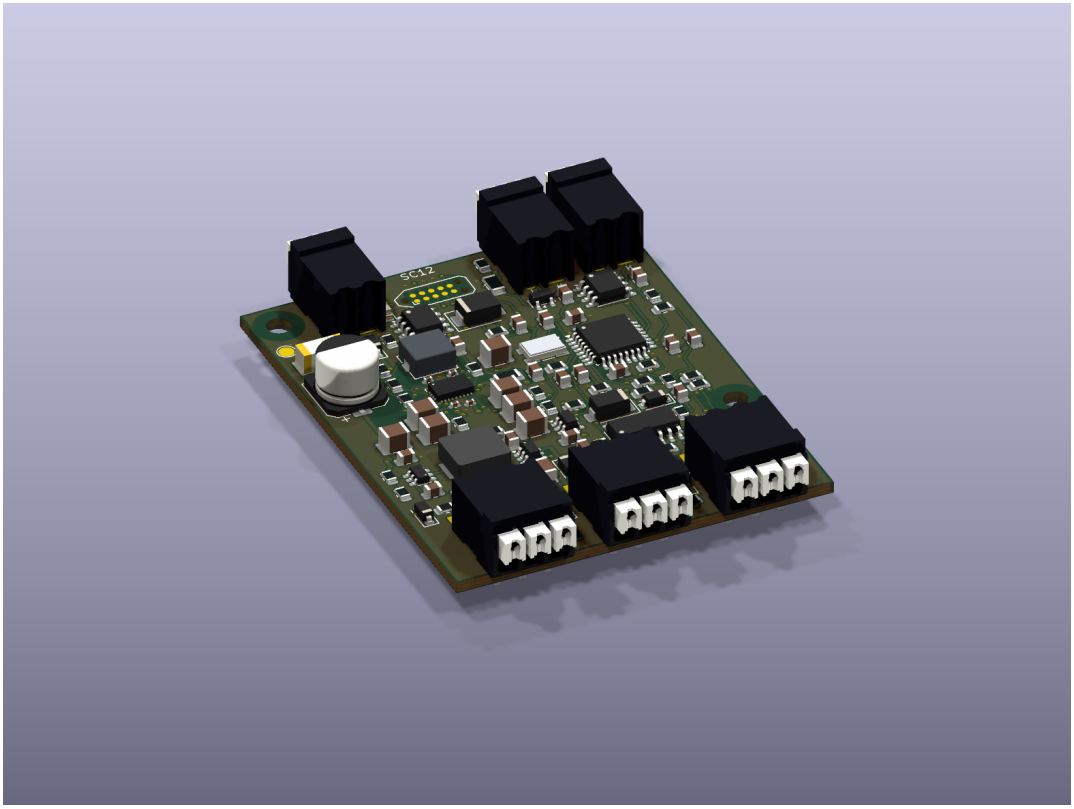

Connector geometry and official model provenance. Case design is a subsequent task after review of this revision; the mechanical files are a nominal handoff, not an enclosure fit test. Earlier A/B/B-2/C designs remain available in the repository.

2 Simplification

Source: docs/SIMPLIFICATION.md

Rev D adds regulated 12 V while retaining three inputs and a 52 × 64 mm PCB. Compared with Rev C's 52 × 56 mm, area grows 14.3%; it is still 18.4% smaller than the 60 × 68 mm B versions. Rev C has 89 fitted parts; D has 104. The increase buys regulation across the battery's 12 V crossing and explicit power-health handling.

What saves space and parts

• A four-switch synchronous TPS552872-Q1 integrates the buck-boost switches and output-current-limit control. It replaces the raw-battery rail and its separate TPS1H200A switch, current-set resistor and three capacitors.

• Its driver uses the existing internal 5 V buck rail, avoiding the high-input-voltage loss of its internal linear bias regulator. The 5 V design reserves 100 mA for this supply. Startup and brownout sequencing must be checked on the prototype.

• One 0.1 ohm 1206 resistor sets the 12 V current limit. Separate PCB Kelvin taps carry the feedback signals; they are copper features, not extra components. This resistor dissipates about 9 mW at 300 mA.

• Both internal copper layers are ground. Signal and power routing stay on the outer layers. The return planes and local ground vias help a compact switching layout; this is not a measured EMI claim.

• MCU internal pullups read the two open-drain health outputs without two external resistors. The converter's unused current-limit and cable-compensation status/functions are omitted.

• 10k compensation resistance reuses an existing BOM line. Firmware inversion/debounce, fixed input thresholds and one status LED retain Rev C's simpler interface.

Why the remaining capacitors matter

The converter has two bootstrap capacitors, two high-frequency supply bypasses, input/output energy-storage banks, a driver-bias capacitor and compensation capacitor. They serve different current paths. Moving or merging a bootstrap/bypass capacitor into a distant bulk capacitor is not equivalent.

The six added 10 µF 50 V X7R 1210 capacitors share one MPN. Samsung's typical bias curves plus explicit tolerance, temperature and aging allowances give approximately 7.10 µF for the two-cap input bank at 22 V, 15.32 µF for the three-cap output bank at 12.22 V, and 6.20 µF for driver bypass at 5.22 V. TI calls for at least 4.7 µF effective input, 10 µF output and 4.7 µF bias capacitance. These are engineering budgets from typical curves, not manufacturer-guaranteed minima. Substitution needs the same review.

The existing three 22 µF capacitors on the 5 V buck retain its effective-capacitance budget. Input TVS/filter/feedback parts handle industrial wiring and noise. Each MCU/CAN/comparator bypass remains at its local supply pins. Numerical checks record the assumptions.

Assembly compromise

There are 39 resistors, 37 capacitors and 28 other fitted parts. Only four capacitors are 0402; other small passives are largely 0805, with 1206/1210 parts where power or effective capacitance requires them. The converter is a 5 × 3 mm HotRod QFN with five long electrical power pads, not a generic exposed-pad QFN. Its footprint follows TI drawing RYQ0021B. A laser stencil, controlled reflow and joint inspection are required for repeatable assembly. This is less forgiving than Rev C's mostly leaded packages.

No per-port electronic power switch, output driver, encoder interface, ADC voltage/current telemetry, wireless radio or USB connector is added. All three ports share each rail's load budget. There are six solder selectors (power and bias per input) and one optional CAN termination bridge, with no loose jumper headers.

Efficiency and stability scope

Nominal switching frequency is 781.25 kHz; automatic light-load mode is enabled. The shielded 3.3 µH inductor is sized for converter peak-current protection, not just the 300 mA load rating. The low-value shunt and external 5 V gate bias reduce avoidable loss. No measured efficiency percentage is claimed.

The boost continuous-conduction analytical model screens 192 corners using TI equations 19-26, capacitor derating, inductance tolerance, a ±20% transconductance allowance and an assumed full-cycle delay. It is not

a switching simulation. PFM, current limiting, line steps, load steps, startup and the buck/boost transition still require measurement. See loop report and plot.

At these modest sensor loads, operation can enter discontinuous/light-load mode; the 192-corner CCM model is a screening model rather than a prediction of the normal light-load waveform. The 3.3 µH choice keeps the inductor small with adequate saturation margin, while automatic light-load operation avoids unnecessary circulating current. Measure ripple and input power with the actual sensors.

3 Wiring and programming contacts

Source: docs/WIRING.md

Use Rev D hardware, firmware and host tools together. Board coordinates below are viewed from the component side, origin at the top-left PCB corner. Bottom silkscreen is read after turning the board over. Do not infer pin numbering from left/right after flipping.

Connector	Pin 1	Pin 2	Pin 3
J1 power	Positive input, 6-22 V	GND	-
J2, J3 CAN	CAN H	CAN L	-
J4 input 1	Selected sensor power	GND	Signal
J5 input 2	Selected sensor power	GND	Signal
J6 input 3	Selected sensor power	GND	Signal

Each terminal pole has two solder legs; they are one electrical contact. J2/J3 are connected in parallel for bus continuation, with no onboard CAN ground terminal. Common ground comes through robot power. Use twisted H/L wiring; keep branches short. Strip 8 mm using the conductor range specified by Weidmüller for the exact terminal. Press the white release button for removal and for conductor types requiring it. Provide cable strain relief independently of the terminal.

Feed J1 from appropriately fused robot distribution. F1 is secondary board protection. Do not backfeed J4-J6 power pins, parallel the two sensor rails, or apply external power to the programming rail. The board is not galvanically isolated.

Solder settings

All selectors ship **open**, with no stencil paste on their pads. Configure with power disconnected, then inspect and check continuity. A small iron bridge joins adjacent pads. Remove solder before changing settings.

Channel	Power selector	Bias selector	Center X, mm
1 / J4	JP101	JP103	Power 7; bias 13
2 / J5	JP201	JP203	Power 23; bias 29
3 / J6	JP301	JP303	Power 39; bias 45

These six selectors are at Y=51.5 mm, just above the sensor connectors. **Pads 1, 2, 3 run left to right when viewed from the component side.** The square pad identifies pin 1. Use the detailed assembly drawing/interactive BOM to identify a selector before soldering.

Selector	Bridge 1-2	Bridge 2-3	Open
Power	Regulated 5 V	Regulated 12 V	Port power disconnected
Bias	10 kΩ pullup to selected port supply, through diode: NPN/open collector	10 kΩ pulldown: PNP	Push-pull or external pullup

One bridge per selector. Bridging both sides of a power selector shorts 12 V to 5 V. Bridge JP2 only at a CAN bus end that needs a 120 Ω termination. Leave it open at intermediate nodes; normally there are two terminations on the entire bus.

Examples:

• Industrial NPN: select the sensor's required supply; bias 1-2. Output current from the pullup is below about 1.3 mA at 12 V. Select inversion in firmware if asserted means pulled low.

• Industrial PNP: select supply; bias 2-3. Verify the sensor's OFF leakage cannot raise the input above the LOW target through 10 kΩ (1.2 V / 10 kΩ ≈120 µA before margin).

• 3.3/5 V push-pull: bias open; select power only if the board powers that sensor. Always connect signal ground.

• 3.3 V open drain that is not 5 V tolerant: bias open, external pullup to the sensor's own 3.3 V rail. There is no onboard 3.3 V sensor supply selector.

Design targets: 0-30 V positive input, LOW ≤1.2 V / HIGH ≥2.4 V, common-ground offset budget ±0.1 V. Do not use as an analog input, quadrature encoder, IO-Link port or continuous negative-voltage input. Sampling is 1 ms with 1-100 ms debounce; short pulses can be missed. Sensor power budgets are shared, 300 mA per rail. Rail-health indications are available; they are not calibrated voltage/current measurements. A fault on either rail makes the health-checked driver input unavailable. See protocol.

Representative industrial sensors

Regulated 12 V is a suitable nominal supply for the following families, subject to exact model and cable checks. Connect the selected output only; insulate unused complementary output wires separately. Brown/blue/black is common supply/ground/output coloring, but follow the specific datasheet rather than assuming colors.

Family	Published limits	Rev D setup / limitation
Omron E3Z three-wire NPN/PNP	12-24 V ±10%; typically 30 mA maximum, through-beam pair 35 mA; residual ≤1 V below 10 mA	Power 2-3 for 12 V. NPN bias 1-2; PNP bias 2-3. Residual voltage fits the LOW target at this board's small load
Banner QS18 standard opposed/diffuse/retroreflective variants	10-30 V; <25 mA excluding output load; standard outputs <1 V at 10 mA	12 V supply is in range. Select NPN or PNP bias to match model; use one output. Account for its 100 ms power-up delay
Banner QS18 DVS/DL/FF variants	NPN residual specified up to 1.5 V at 10 mA	This exceeds the board's design LOW target. Prefer a compatible PNP variant or qualify actual NPN residual at the ~1.2 mA pullup load; do not assume all QS18 NPN models work

Sources: Omron E3Z specifications, Banner QS18 manual. PNP OFF leakage must also meet the input pulldown budget. Observe manufacturer cable/fusing requirements. Two-wire current-loop, AC, analog, IO-Link and safety/OSSD sensors are not supported as interchangeable three-wire inputs.

12 V is specified at the board, not guaranteed at the remote cable end under every transient. The analytical DC divider/reference budget is approximately 11.80-12.22 V before dynamic/distribution allowances; check ≥10.8 V at an E3Z during startup and worst battery/load conditions. Three 30 mA sensors are comfortably within the 300 mA shared design target, but include emitters, indicator loads, cable losses and inrush. The board's 100 ms rail qualification is not proof that every sensor has completed its own startup.

Programming contacts

J8 uses the **TC2050-IDC-NL mechanical pattern and a custom electrical mapping**, centered at (24, 5.75) mm. Use a mapped adapter, not an assumed ARM/STDC ribbon pinout. Ten 0.7874 mm contact pads are on 1.27 mm pitch, with three mechanical guide holes. In the component-side view, the upper row runs **10, 9, 8, 7, 6** left to right at Y=5.115 mm; the lower row runs **1, 2, 3, 4, 5** at Y=6.385 mm. Pin 1 is at X=21.46 mm, Y=6.385 mm. Use this U-shaped numbering, not an odd/even ribbon numbering assumption.

J8 pin	Signal	Connection
1	NRST	Probe reset, optional
2	MCU UART RX	3.3 V UART adapter TX
3	MCU UART TX	UART adapter RX
4	SWCLK	SWD clock
5	SWDIO	SWD data

J8 pin	Signal	Connection
6	+3V3	Probe VTref sense **only**, board output
7	GND	Probe ground
8	GND	UART ground
9	BOOT0	Normally leave open; onboard pulldown
10	GND	Ground

Power the board through J1 during programming. Leave adapter/probe power disconnected. BOOT0 is normally low. SWD programming and custom pogo-adapter fit require bench verification. The intended clip-free probe is held perpendicular by a fixture; the no-legs pattern does not retain itself.

4 Hand assembly

Source: docs/ASSEMBLY.md

Use the exact BOM, assembly drawing, interactive BOM and placement files. Reference labels are in these drawings; dense placement does not leave room to print every reference legibly on the actual top silkscreen.

1. Order the 52 ×64 mm, four-layer, 1.6 mm board with 1 oz finished copper target. Use the exported Gerbers and separate plated/nonplated drill files. Have the fabricator review its actual stackup, annular rings, mask registration and minimum features. Gold finish is useful at the programming contacts; keep solder and paste off them.

2. Check bare-board continuity and orientation. Apply paste to SMT pads only. A 0.10 mm stencil is a starting point; the assembler must review release and the exact QFN apertures. Solder selectors, TC2050 contacts and the test point deliberately have no paste.

3. Place 0402/0805/1206/1210 passives, diodes and ICs. Verify C1 polarity, TVS/diode cathodes, pin 1 on each IC and the exact latch-off TPS2553DBVR-1 suffix. U8 TPS552872-Q1 has five long electrical power lands and fine-pitch perimeter pads; it is not a generic single-exposed-pad package. Use its supplied paste pattern, a controlled reflow profile and suitable joint inspection. There are no components on the bottom.

4. Inspect joints and measure for supply shorts. Hand solder the six horizontal Weidmüller terminals after SMT reflow unless the assembler qualifies their THR process. Fill both plated holes per terminal pole. Support the board without loading fresh SMT joints. The terminal pins extend below the board.

5. Leave all selectors open for initial bring-up. Supply J1 from a current-limited bench supply, starting at 12 V and a modest current limit. Confirm input polarity, protected input, approximately 5.07 V internal, 3.3 V logic and 12.01 V regulated rails. Sensor headers remain unpowered while power selectors are open.

6. Program through the custom TC2050 mapping, verify flash and configure a unique CAN ID over UART. Then power off, choose each port's supply/bias and termination settings, inspect bridges and check that 5 V and 12 V are not shorted.

7. Perform the qualification checks before connecting a robot harness. Begin with a known load and known logic source, then the actual sensor/cable.

Use M3 hardware at (3.5,4) and (48.5,42.5) mm. Holes are 3.2 mm NPTH. The copper keepout has at least 3.30 mm radius; use hardware whose contact area stays within a 6.4 mm diameter, with insulating washers/spacers as appropriate. Account for component bodies, connector overhang and protruding pins. Do not clamp the PCB between conductive surfaces. The mechanical drawing gives nominal geometry, not a fitted enclosure.

The compact board still benefits from magnification and a fine iron. It removes loose shunts and retains large passives where possible. The buck-boost QFN and four 0402 capacitors make stencil/reflow work more demanding than Rev C; it is not a through-hole beginner kit.

5 Firmware

Source: firmware/README.md

Bare-metal STM32F042K6T6 firmware for three digital inputs. Build allocation is recorded by the current linker map/build report; stack depth has not been measured. The final two 1 KiB flash pages hold redundant 32-byte versioned configuration with CRC and commit-last writes.

From `rev_d/`:

```
source tools/env.sh
make -C firmware
bash scripts/test_firmware.sh
```

Outputs: `build/sensor_can.elf`, `.hex`, `.bin`, `.map`. No ADC, sensor rail GPIO control or per-input LED logic remains. The 8 MHz external crystal and PLL generate 48 MHz; bxCAN uses 16 time quanta with an 87.5% sample point at 1 Mbit/s. Auto bus-off recovery is enabled; automatic transmit retry is disabled.

Power through J1 from a bench supply. Use the custom TC2050 wiring: VTref sense→6, SWDIO→5, SWCLK→4, ground→7, optional reset→1. Leave probe power disconnected.

```
openocd -f interface/stlink.cfg -f target/stm32f0x.cfg \
  -c 'adapter speed 1000' \
  -c 'program firmware/build/sensor_can.elf verify reset exit'
```

This command has not been exercised on physical Rev D hardware. Verify MCU identity, supply and flash readback. Normal application programming should preserve the two configuration pages; full-chip erase removes them. Version-1/2 configuration is rejected.

UART: adapter TX→J8.2, RX→J8.3, ground→J8.8; 3.3 V, 115200 baud, 8N1; adapter power disconnected.

```
python host/sensor_can.py info --port /dev/ttyUSB0
python host/sensor_can.py configure --port /dev/ttyUSB0 \
  --device 17 --invert 1 --debounce 2
```

Device IDs 0-63 must be unique in this Team Use address space. Invert is a 3-bit mask; debounce is 1-100 ms. UART `SET id invert debounce_ms` persists and resets; CAN configuration is volatile. Unconfigured boards stay CAN-silent. **Hardware sensor power is enabled independently of firmware**, including during reset or programming; open power selectors disconnect individual ports.

The independent watchdog is serviced only after the full 1 ms foreground cycle. A >20 ms foreground delay, clock failure, hard fault or PVD low-voltage detection puts CAN into standby; the watchdog provides reset recovery. The single LED pulses approximately 100 ms per second when configured and healthy, or 100 ms per 200 ms for configuration/clock/CAN errors. Rail faults also trigger the fast fault indication. PA3 reads 12 V PG and PA4 reads 5 V FAULT_N, both with internal pullups. A fault clears qualification immediately; recovery needs 100 ms continuously good indications. Counts freeze and debounce is re-baselined during this interval.

Broadcast Disable ID 0 stops telemetry and aborts pending transmissions. Local sampling and hardware sensor power continue. An explicit `RESUME` UART command or CAN resume command re-enables telemetry; reads never do this automatically. See protocol v3. Host tests cover firmware logic and mocked peripheral boundaries, not actual oscillator startup, electrical timing or STM32 peripheral behavior.

6 CAN protocol

Source: docs/CAN_PROTOCOL.md

1 Mbit/s classic CAN, extended 29-bit identifiers, 8-byte telemetry. This is an original Team Use protocol, not CTRE Phoenix. Device type=10 (Miscellaneous), manufacturer=8 (Team Use), unique device ID=0-63. Address = `(10 << 24) | (8 << 16) | (API << 6) | device`.

The APIs differ from A/B/B-2; Rev C shares these API numbers but uses protocol v2, which Rev D drivers reject. The version and capability checks prevent drivers from interpreting the wrong revision's payload. Provision each board over 3.3 V UART before connecting multiple boards. An unconfigured board remains CAN-silent; its sensor power hardware is still enabled.

All multibyte fields are little endian. Masks use bits 0-2 for inputs 1-3. Unsupported versions, reserved bits, wrong lengths or stale frames must be reported as unavailable.

API	Period	Eight-byte payload
0x120 status	10 ms	version=3, sequence, debounced input mask, raw mask, channels=3, capabilities=0x3F, flags, reset flags
0x121 counts 1/2	100 ms	two uint32 rising-edge totals
0x122 count 3	100 ms	uint32 total, uint32 reserved=0
0x130 diagnostics	100 ms	uint32 transmit drops, TEC byte, REC byte, LEC byte, CAN flags byte
0x131 identity	1000 ms	3, firmware major=0, minor=4, patch=0, hardware=4, device ID, debounce ms, inversion mask

Status flags: configured=1, clock healthy=2, CAN initialized=4, bus-off=8, qualified 12 V power-good=16, qualified 5 V no-fault=32. Reset flags: power-on=1, pin reset=2, watchdog=4, software=8. Capabilities bits 0-4 indicate edge counts, runtime configuration, UART persistence, standalone hardware power and broadcast disable. Bit 5 indicates rail-health reporting capability. Capabilities are static; flags bits 4/5 carry live qualified indications. The raw mask is the uninverted sampled comparator state. The debounced mask applies configured logical inversion and debounce. Sequence is an unsigned byte and wraps. Counters wrap at 2^32 and clear on reset; runtime configuration preserves totals.

Diagnostic LEC is the STM32 three-bit last-error code (0-7); CAN flags are bus-off=1 and error-passive=2. There is no calibrated sensor voltage/current telemetry. The 12 V PG signal has the converter's typical threshold and tolerances; 5 V no-fault is an overcurrent-switch indication, not proof of voltage. Raw masks remain diagnostic data during faults.

A bad rail indication clears its flag at the next 1 ms sample; restoration needs 100 consecutive good samples. During faults and recovery, firmware re-baselines input debounce and freezes edge totals, preventing supply collapse/recovery from adding counts. All ports require both rail indications because solder-selector positions are not readable. Java/C++ input helpers also require fresh telemetry, configuration, clock health and CAN health. They cannot detect every failed/disconnected sensor or open cable.

Command API	Payload	Effect
0x220 runtime input config	`53 43 03 invert debounce_lo debounce_hi 00 00`	invert 0-7; debounce 1-100 ms; volatile, does not change ID
0x221 resume telemetry	`53 43 03 00 00 00 00 00`	Explicitly resume after broadcast disable

Extended arbitration ID **0** is the FRC broadcast disable. Firmware stops telemetry and aborts pending transmit mailboxes immediately on processing it. Sampling and standalone sensor power continue; there are no actuator outputs. Resume requires the explicit command above, UART `RESUME`, or reset. Drivers never resume from a read loop. Integrate explicit resume with a reviewed robot lifecycle policy; this implementation still requires robot-bus testing and does not establish competition approval. See WPILib CAN addressing.

Read timeouts: status 100 ms, counters/diagnostics 350 ms, identity 1500 ms. Counters 1/2 and 3 are separate snapshots. Sampling is 1 kHz; debounce requires a continuously stable logical state for the selected interval. This is not a high-speed pulse counter or encoder.

UART: 115200 baud, 8N1, 3.3 V logic. Commands `INFO`, `HELP`, `SET id invert debounce_ms`, `RESUME`. `SET` saves a version-3 redundant CRC-protected record and resets. The old four-argument command and v1/v2 flash records are rejected; provision Rev D explicitly. No power-control command exists.

7 Robot integration

Source: examples/README.md

Java 17 and C++ examples target WPILib 2026.2.1. Rev D uses protocol **3**, firmware **0.4.0**, hardware **4**. Rev C Lite frames and the earlier four-input protocols are rejected. Copy the relevant `SensorCan12` and `SensorCan12Codec` files into a robot project, then set the same unique device ID provisioned over UART.

```
private final SensorCan12 sensorBoard = new SensorCan12(17);
// In periodic(): absent means unavailable or a reported fault.
var detected = sensorBoard.input(1);
if (detected.isPresent()) {
  boolean sensorActive = detected.get();
  // Use a reviewed subsystem policy for this observation.
}
```

C++: `sensorcan12::SensorCan12 board{17};` then `board.ReadInput(1)` returns `std::optional<bool>`. Construct the driver once; an empty result must not silently become a valid “no object” observation. The helper requires fresh status, configured identity state, healthy clock/CAN and both qualified power indications. Raw `status()` / `ReadStatus()` remains available to diagnose faults. Counts are frozen during power faults and wrap at 2^32; compare/reset policy in the robot application.

Reads do not transmit or resume telemetry. `configureRuntime` / `ConfigureRuntime` sends volatile input inversion/debounce; it does not set persistent ID. `resumeTelemetry` / `ResumeTelemetry` is an explicit action after investigating broadcast disable, not a periodic automatic retry. Status timeout is 100 ms; count/diagnostic timeout 350 ms; identity timeout 1500 ms.

The Python host tool supports UART `info`, `configure`, `resume` and passive CAN `monitor`. UART uses 3.3 V levels at 115200 8N1; disconnect adapter power. CAN monitor requires a suitable external CAN interface; a UART adapter is not a CAN interface.

```
source tools/env.sh
python host/sensor_can.py configure --port /dev/ttyUSB0 --device 17 --invert 1 --debounce 2
python host/sensor_can.py monitor --interface socketcan --channel can0 --device 17
bash scripts/test_drivers.sh
```

Tests cover codec boundaries, all reserved status bits, stale/malformed responses, fault rejection, unsigned counts and explicit-only writes. The C++ example compiles against the actual pinned WPILib headers; Java compiles against pinned WPILib jars. Hardware bus behavior and competition acceptance remain open qualification steps. See protocol, wiring, and validation.

8 Purchasing and factory quote

Source: docs/FACTORY_ORDER.md

Use RevD_SC12_Factory_Upload.zip for a **prototype lot**, after reviewing the validation plan. No board has been physically qualified, no factory quotation is included and no order has been placed. The exact-MPN BOM is intended for a Chinese or other assembler that accepts customer-specified sourcing; it is not a pre-approved JLCPCB/LCSC turnkey basket.

Fabrication

Setting	Requirement
Board	52 × 64 mm, four copper layers, FR-4, 1.6 mm nominal
Layer order	F.Cu signal/power, In1.Cu GND, In2.Cu GND, B.Cu signal/power
Copper	35 µm nominal each layer; verify finished copper with supplier
Dielectric	Symmetric four-layer stack; target outer-to-inner dielectric ≤0.25 mm; supplier must confirm final stack
Finish	ENIG specified for exposed programming contacts and fine-pitch QFN
Minimum trace	0.18 mm
Clearance	0.20 mm general; U8 package pad-to-pad 0.15 mm local minimum
Vias	Through vias, minimum 0.30 mm drill / 0.60 mm pad; no blind/buried vias
Drills	Separate PTH and NPTH Excellon; no plated mounting or alignment holes
Solder mask	Both sides; preserve fine-pitch openings; review U8 mask webs with CAM
Stencil	Top only, nominal 0.10 mm laser-cut; use supplied paste apertures
Panels	Factory rails/fiducials may be added outside the delivered outline; preserve connector overhang

Native nominal stack: 0.035 mm copper on all four layers, 0.20 / 1.04 / 0.20 mm dielectric and 0.01 mm solder mask per side, totaling 1.60 mm. These are planning thicknesses; final fabrication tolerances and material selection belong to the approved supplier stack.

This stack is an order requirement, not a confirmed laminate/impedance quotation. CAN is short board-level routing; no fabricated impedance coupon has been qualified. Get the supplier's CAM/stackup review before fabrication.

Assembly

104 fitted components: **98 SMT on top, six through-hole/THR terminals**. Use `positions_smd_top.csv` for SMT and `positions_all_top.csv`/assembly drawing for reference. R64 is physically a normal two-terminal 1206 resistor; its four numbered PCB pads include two copper-only Kelvin taps. NT1 is a copper ground tie and is not a purchased component. Do not interpret pad count as component termination count.

All power/bias/termination solder bridges and all J8 contacts are **unbridged/unpasted as supplied**. The factory must not add solder across selectors unless a separate reviewed port-configuration work instruction is supplied. Through-hole connectors can be hand or selective soldered after SMT reflow. The family name “LSF-SMT” does not make these exact connectors ordinary two-pad SMT parts.

Do not replace U8 with a generic 21-pin QFN, substitute a lower-saturation inductor, change the precision divider grade, or replace the 1210 capacitor bank with a nominally equal capacitance without approval of the actual electrical/footprint data. DigiKey substitute labels alone are insufficient. Maintain 0.1 ohm shunt value, tolerance and terminal orientation.

Inspect fine-pitch solder bridges and the five long QFN power pads with suitable inspection/X-ray for the prototype lot. Perform unpowered shorts/selector tests, current-limited staged bring-up, firmware programming/readback and functional rail/input/CAN tests before accepting units. Track lot and component substitutions.

Cost and quantity

The BOM totals **$54.89 per board on a conservative quantity-one component basis**, using dated supplier observations. PCB, stencil, sourcing service, attrition, placement, through-hole work, inspection, programming, test, freight, duties and taxes are extra. Quantity breaks can reduce parts cost; factory-specific assembly fees require a real quotation. This release does not claim a fabricated-board or delivered-PCBA price.

9 Validation and qualification

Source: docs/VALIDATION.md

No Rev D prototype has been assembled, powered or tested. The files support engineering review and prototype fabrication. The production/competition qualification gates below remain open, even when every automated check passes.

Automated evidence

The release contains native KiCad electrical/design-rule reports, explicit pin-model/schematic/PCB parity, placement/selector/programming-contact checks, manufacturing-file parsing and copper checks, host firmware tests, and Java/C++/Python protocol tests. These check design consistency and modeled behavior. Mocked peripheral tests do not prove STM32 timing or CAN electrical operation.

Electrical checks sweep input-threshold tolerances, divider accuracy, resistor stress, fuse/load budgets and manufacturer-curve capacitor derating. The separate converter model screens boost CCM loop corners only. Neither substitutes for hardware measurement. Reports state their assumptions rather than treating typical values as guaranteed bounds.

Prototype gates before production release

Gate	Measurement / acceptance intent
Assembly	Confirm exact horizontal terminals, pin-to-hole fit, polarity, U8 long-pad joints, R64 Kelvin layout, selector isolation and no solder shorts
Staged power	No sensors first; current-limited 12 V source, verify 5 V/3.3 V before full operation, then regulated 12 V and low-load input current
Regulation	Sweep 6-22 V with 0-300 mA on each rail separately and together; verify 12 V remains within the selected sensors' supply limits at their cable ends
External bias	Scope V5_INTERNAL, BB_EN, V12_RAW and 3V3 during slow/fast input ramps, repeated starts and brownouts. Confirm converter bias never causes unsafe switching or back-powering; review operation below 6 V
Transients	6↔14↔22 V line steps; 0↔300 mA load steps; representative sensor startup/inrush and cable lengths; check ringing/undershoot through the buck/boost crossing
Stability	Measure loop response or justified equivalent transient qualification in buck, boost, transition and light-load/PFM modes; target >45° phase and >10 dB gain margin where measured
Faults	Short each sensor supply and each port; verify current-limit behavior, 12 V automatic recovery versus 5 V latch, firmware flags, no spurious counts and safe temperatures. Do not assume every 12 V short enters hiccup
Electrical protection	Reverse input, realistic protected-branch fault energy, fuse clearing/I^2t, inductive transients and TVS stress using suitable test equipment. Not automotive load-dump qualified
Temperature	Both rails fully loaded at 6/12/22 V, intended ambient and later enclosure; measure U8/U1/L1/L2/Q1/fuse/terminal and MCU temperatures, hot-start/restart and surface safety
Inputs	0-30 V PNP/NPN/push-pull thresholds, off-state leakage/residual voltage, ground offset, sensor disconnection, wiring transients and all intended sensor models
CAN/firmware	Real roboRIO bus at 1 Mbit/s with correct end termination; startup silence before provisioning, unique IDs, bus-off, clock faults, watchdog, broadcast disable, explicit resume, stale data and power-fault handling
EMC/mechanical	Motor-noise environment, ESD at terminals, cable retention, vibration, mounting insulation and programming-adapter fit; repeat after enclosure design
Production process	Approved stackup/CAM, stencil/profile, supplier alternates, test fixture, serial/lot records, programming/provisioning and final functional limits

FRC integration

Use a single appropriate protected power-distribution branch and wiring sized for its protection. The 0451 3 A fuse has a published 300 A interrupt rating at 32 V DC; confirm prospective branch fault current and clearing energy for the actual harness. The onboard fuse is secondary protection, not permission to bypass the robot distribution rules. Sensor grounds are common with the board; isolate conductive sensor cases where required by frame-ground rules. Do not use dedicated radio/roboRIO power outputs as a convenient supply.

The custom Team Use CAN address uses manufacturer 8 and miscellaneous device type 10. The implementation processes broadcast disable ID 0; it has no actuator outputs. It is not a CTRE Phoenix device. Robot inspection and the current season's rules still apply. Commercial CAN product acceptance, assigned identifiers and required ecosystem support are separate outstanding steps; Java/C++ examples alone do not establish approval.

Primary references: 2026 FIRST manual, especially custom-circuit voltage, distribution/wire and frame-ground rules; WPILib CAN addressing and acceptance requirements. Recheck applicable rules for the actual event/season.

10 Connector evidence

Source: docs/CONNECTORS.md

References	Exact MPN	Series description	DigiKey
J1-J3	**1824420000**	LSF-SMT 3.50/02/90 3.5SN BK TU	281-2020-ND
J4-J6	**1824430000**	LSF-SMT 3.50/03/90 3.5SN BK TU	281-2021-ND

Manufacturer pages: 2-pole, 3-pole. `/90` gives horizontal wire entry parallel to the PCB. `/135` is the angled version and is not used. Phoenix PTSM is not fitted.

These are through-hole/THR parts despite “SMT” in the family name. Pitch is 3.5 mm, with two solder legs per pole and 7 mm row spacing. PCB drills are 1.1 mm. Housing widths are 7.7 mm / 11.2 mm. Manufacturer CAD is 14.3 mm deep; the footprint conservatively reserves 14.75 mm. Height is 8.5 mm above the mounting surface; nominal pin tips reach 3.5 mm below that surface (about 1.9 mm beyond a 1.6 mm PCB).

Current renders use the official STEP solids with a rigid translation (-2.13,-12.625,-3.5) mm into the footprint origin. They are not approximate connector boxes. Display colors are assigned by the project. Original files, transformed files, URLs, hashes, pin/drill checks and nominal bounds are in vendor_connectors.json. Script `import_connector_models.py` checks all six placed pad patterns and the two vendor models. Do not regenerate models merely to change routing: STEP exporters can alter file headers without changing geometry.

Top terminals face outward at the power/CAN edge; three sensor terminals face outward at the opposite edge. Conservative complete footprint envelope is 52 ×72.1 mm; add room for cable bend, strain relief and button access. Renders do not validate conductor retention, tool clearance in an enclosure, molding tolerances or actual solder fit.

11 Tools and reproduction

Source: TOOLS.md

The saved native KiCad schematic/PCB are authoritative. Generation/placement/router scripts record design construction; they are not a one-command reroute of the reviewed board. Editing the circuit requires matching schematic, BOM, PCB and new checks. Earlier revisions remain separate.

Tested toolchain: KiCad 10.0.6, its matching Python/pcbnew interpreter, Python 3.12, Arm GNU GCC 13.2.1, GNU make, host GCC/G++, Java 17, Poppler, InteractiveHtmlBom 2.11.2 and the packages pinned in `tools-requirements.lock`. Tool binaries/caches are external to the repository. Install those native tools for the host operating system. The `kicad-python` wrapper must use the interpreter matching the KiCad binary bindings, not an arbitrary venv Python.

```
# In rev_d/, after installing native tools:
uv venv --python python3.12 .venv
uv pip sync --python .venv/bin/python tools-requirements.lock
source tools/env.sh
python tools/fetch_driver_dependencies.py
bash scripts/validate_release.sh
```

`tools/env.sh` uses a revision-local venv, or the repository venv when working in the full checkout. It prepends `$CANDI_TOOLS_ROOT/bin` (default `$HOME/.local/share/candi-tools/bin`). Wrappers expected there are `kicad-cli`, `kicad-python`, `host-gcc`, `host-g++`, `ibom`, and Arm compiler commands. Java is under the configured tools root or selected with `CANDI_JDK`. Fonts for the PDFs are DejaVu Sans/Mono.

The validation script checks the saved design and refreshes manufacturing evidence, firmware and host tests; it does not move or reroute components. A visual/documentation refresh is separate:

```
bash scripts/render_board.sh
python scripts/build_documents.py
python scripts/build_handbook.py
python scripts/review_documents.py
python scripts/build_release.py
```

The factory packet is built by `build_documents.py`. Rebuild it after any BOM/placement/fabrication change. `build_release.py` selects authoritative files and writes a manifest plus ZIP checksum. Check an extracted archive with `verify_archive.py`; the release manifest deliberately excludes itself and the enclosing ZIP from its file hashes.

Use `python scripts/import_connector_models.py` only when restoring/reviewing vendor models. It checks the original STEP hashes and all six native connector pad patterns, then writes translated local models. It can change STEP headers, requiring a fresh STEP export, renders and release. Keep the originals and provenance JSON together.

`hardware/design/circuit.py` is the explicit component/net model; `generate_schematic.py` rebuilds the schematic. Construction helpers such as `pack_compact.py`, `route_critical.py` and `apply_routes.py` operate on intermediate files and can overwrite placement/routing. They are not part of release validation. The boost CCM analytical loop screen is in `check_converter_loop.py`. It is not a switching simulation or thermal qualification. Do not reuse older revision reports as evidence for this changed supply.

12 Sources and notices

Source: docs/SOURCES_AND_LICENSES.md

KiCad library/model notices are retained under `licenses/`, together with Arm CMSIS, ST device-header and WPILib notices. Firmware third-party directories and InteractiveHtmlBom output retain their notices. Original project work has no selected blanket license. Manufacturer documents/CAD remain their owners' material; retaining a file is not a redistribution-license grant.

Subject	Primary reference
Input fuse interruption / derating	Littelfuse 451/453
Buck and capacitors	TI LMR51420
Regulated 12 V converter / exact RYQ0021B package	TI TPS552872-Q1, SLVSHF9 August 2023
Shielded 3.3 µH inductor	Bourns SRP5030TA
Input/output/bias capacitor curve	Samsung CL32B106KBJNNW
Banner supply/residual voltage exceptions	QS18 product manual
5 V latch-off limiter	TI TPS2553, -1 variant
Comparator/leakage caveats	TI LM339LV
CAN interface / bypass	TI TCAN3413
STM32 pinout, supplies, clock	ST STM32F042
Example industrial output residual levels	Omron E3Z specifications
Terminal geometry and exact MPNs	Weidmüller 1824420000, 1824430000
CAN addressing / broadcast disable	WPILib

Samsung CL31A226KAHNNNE typical characteristic data is retained in `sources/datasheets/samsung_CL31A226_characteristics.json`, inherited from the earlier design's manufacturer retrieval. Typical curves do not establish guaranteed capacitance. DigiKey URLs, exact codes and dated observations are in `bom/catalog_selected.json`. Vendor STEP URLs, hashes and transforms are in `hardware/library/3d/vendor_connectors.json`.

Equivalent parts need engineering review; distributor substitution suggestions do not establish electrical/mechanical equivalence. Availability and season rules can change after these observations.

Rev D retains the retrieved Samsung CL32B106 characteristic JSON and TI converter datasheet under `sources/datasheets/`. The project-created converter footprint/model is documented in `hardware/library/converter_package.json`; its STEP representation is parametric package geometry, not official manufacturer CAD. The horizontal connector STEP models are official vendor geometry.