FRC Sensor CAN · mounting template

Print at 100% / actual size. Verify the 50 mm ruler before drilling.

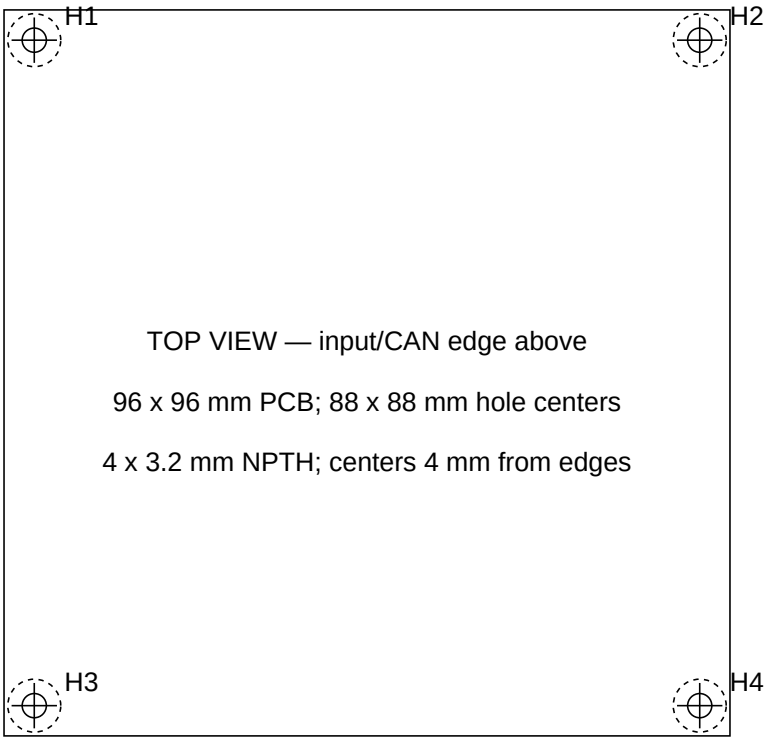



This line must measure 50 mm

Use M3 nylon hardware and at least 10 mm standoffs.

Dashed circles show 3.5 mm nominal copper-clearance radius.

Allow room beyond the board for terminal wiring and screwdriver access.

Check the actual PCB, hardware and enclosure before making final holes.

Revision A prototype. Nominal geometry; not a measured or certified part.