# SpeakerTheory

April 27, 2024

## 1 Basic electromechanical theory of sealed and ported speakers

Francis Deck

The MIT License (MIT) Copyright (c) 2018-2024 Francis Deck

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

#### 1.1 Preface

This document is intended to show where the equations of basic speaker design come from. It offers little to no practical design advice, and may even fall into that great literary genre of "explanations of things for people who already understand them."

### 1.2 Known bugs and issues:

1. Some of the links have broken, probably because the sites have been taken down. I will try to relocate these pages or find newer references to the same material

### 1.3 Disclaimer

I always provide the disclaimer that I'm not a professional audio or electrical engineer. My equations have not been vetted by professional engineers, they may contain mistakes, and should not be trusted for design work. In addition, the Python code violates many rules of good software design, to make it readable and concise. Please verify your results using trusted tools!

#### 1.4 Contents

- Historical background
- Strategy
  - Figure out the driver by itself, without box or port
    - \* Simplistic voltage-current relationship
      - · Ohm's Law
      - · Faraday's Law (back EMF)
    - \* The forces on the cone
      - · The driving force
      - · Electrical damping (back EMF)
      - · Mechanical damping
      - · Mechanical resistance
    - \* The equation of motion
    - \* Solving the equation of motion
  - How the box works
  - Thiele-Small Parameters
  - How the port works
  - Coil inductance
  - System impedance
  - Putting it together: My modeling approach
  - Compute all of the useful graphs
    - \* SPL
    - \* Excursion
    - \* Port air speed
    - \* Impedance
- Physics Cheat Sheet
  - Ohm's Law
  - Faraday's Law
  - Magnetic Force Law
  - Hooke's Law
  - Principle of "damping"
  - Newton's Law
  - Acoustical Output
- Math & Engineering Cheat Sheet
  - Transformation from time space to frequency space
  - The business of "Q"

## 1.5 Historical background

The most often cited starting point for modern speaker design was Neville Thiele's 1961 paper, which is archived in many places. Here's a link.

https://diyaudioprojects.com/Technical/Papers/Loudspeakers-in-Vented-Boxes-Part-I.pdf

Thiele's paper is quite approachable. He uses a lumped element model of the ported (vented) speaker, where electromechanical elements of the system are represented by a coupled network of electrical circuit symbols. This approach works because the electrical components – resistor, capacitor, inductor – have behavior proportional to current, the integral of current, and its derivative. Thus, these components can represent terms in linear differential equations. Modeling the speaker becomes a matter of computing the response function of an electrical circuit.

Upshot: The circuit diagras represent sets of coupled linear differential equations.

Thiele goes further, identifying specific configurations of the speaker "circuit" to well known electrical filter circuits such as Butterworth, Bessel, etc. This was a useful analogue at the time because electrical engineers are well versed in the principles of filter design.

It was not as useful for me, since I understand basic filters well enough but am not steeped in engineering filter design methods. Instead, I decided to follow a more "physics like" approach, which is to write down the equations themselves, in algebraic form, and solve them by hand. I also prefer the algebraic equations because I can turn them directly into computer code for writing my own modeling software.

This is what you get here: A physics-centric approach to modeling speakers, that starts with the applicable laws of physics and ending up with response formulas that can be turned into computer code.

Wish me luck!

### 1.6 Strategy

Before diving into the physics and math, I'm going to summarize my strategy for deriving the speaker response formulas.

- 1. Figure out the driver by itself, without box or port. The bare driver is the simplest way to understand the physical laws that govern speaker behavior. This behavior involves electricity, magnetism, and mechanics, all affecting the motion of the cone at the same time.
  - Simplistic voltage-current relationship. First of all, voltage and current are things that are easily measured in the lab. *Voltage* is what the amplifier puts out. It's fair to treat the amplifier as an ideal voltage source whose output voltage represents the signal that we want the speaker to reproduce. *Current* is important because an amplifier typically has a current limit, and because current generates the force that drives the cone in and out. But voltage and current are not independent of one another. They are related by the *impedance* of the speaker.
    - Ohm's Law is the relationship bewteen voltage and current when the cone is sitting still. It can be generalized to include the resistance and inductance of the voice coil.
    - Faraday's Law is the relationship between voltage and the motion of the coil in the magnetic field. Together they dictate the voltage-current relationship of the

speaker.

- The forces on the cone. I've turned all of the physical relationships into sources of force acting on the cone.
  - The driving force, proportional to current: Current flowing in the voice coil produces a force in the coil. This is probably the most familiar concept related to how speakers work.
  - Electrical damping (back EMF), proportional to speed: Faraday's Law leads to a velocity-dependent loss of energy.
  - Mechanical damping, proportional to speed: Flexing of the suspension material (spider and surround) causes heat to be transferred to those materials, resuting in a loss of energy from the moving system.
  - Mechanical resistance, proportional to displacement: Because the suspension is stretchy, it acts like a spring, pushing back against the excursion of the cone.
  - Inertia, proportional to acceleration: This can be thought as an additional force on the cone, that's proportional to its acceleration.
  - A missing force: I am not modeling the interaction of the cone and port with the
    air outside the box. Thiele's paper makes the same approximation, and justifies it
    because the energy loss is quite small.
- The equation of motion: Once I know all of the forces, I add them up and set the sum, including inertia to zero. This is also a statement of Netwon's Third Law.
- Solving the equation of motion: This is a differential equation, that is solved by a trick: Here is where we switch from the time domain to the frequency domain and start using complex numbers. As a result, the solution is a frequency response curve, which is typically what we're looking for anyway. We learn the master equation of cone motion. My approach is to treat everything else as a modification of this equation.
- 2. **System impedance**: Faraday's Law already gave us a relationship between voltage, current, and the motion of the driver. Now we have an equation of motion, so we can derive a pure relationship between voltage and current, the ratio of which is the system impedance.
- 3. The business of Q: While not strictly necessary to understand speakers, Q is how the speaker makers report the specs of a driver, so we have to undertand what Q is.
- 4. **How the box works**: We apply a simple relationship between the displacement of the cone, and the pressure in the box. If the area of the cone is known, then pressure can be turned into force.
- 5. **Thiele-Small Parameters**: At some point we'll want to start modeling real speakers, so we need to convert the typical published specs into our electromechanical parameters. We do that here.
- 6. **How the port works**: This is where we look into how the cone and port interact with one another through the pressure in the box. It's hairy.

- 7. Coil inductance: A minor, but necessary detail
- 8. Putting it together: My modeling approach: Here we see how I take my equation of cone motion and modify it to accommodate the box, ports, and coil impedance.
- 9. Compute all of the useful graphs: Finally we compute the performance of a system that I built several years ago.
  - SPL
  - Excursion
  - Port air speed
  - Impedance

### 1.7 Physics Cheat Sheet

I've written down all of the physical laws that are needed for my model. Understand that many of these are approximations or simplifications of more general laws. I'll try to be explicit about this.

#### 1.8 Ohm's Law

This is the familiar Ohm's Law of electronics, V = IR, where:

V =Voltage across the voice coil, in Volts

I = Current through the voice coil, in Amperes

R = Resistance of the voice coil, in Ohms

Anything with a current-to-voltage relationship approximating a simple proportion can be thought of as a resistor. The voice coil is made of wire that has finite conductivity, thus it has a resistance associated with it, that's what you get when you measure with an ohmmeter.

#### 1.9 Faraday's Law

Michael Faraday discovered that a wire moving through a magnetic field would induce a voltage on the wire. The general math formula is more complicated, being written in differential, vector form. But in a speaker, the magnetic field, length of wire, and velocity of the cone, are all perpendicular to one another (how convenient), and we assume that B is constant over the length of wire suspended in the magnetic gap. Specifically, the magnetic field points radially outward, and the coil is tangent to this field. So we can use a greatly simplified equation with a scalar variable for velocity. In this case, the voltage (EMF) induced by the motion of the cone is V = BLv, where:

B = Magnetic field in Teslas

L = Length of coil wire in meters

v = velocity of coil in meters per second

The voltage induced in this way will later be referred to as the "back EMF" because it results in a force opposing the motion of the cone.

When Faraday's Law and Ohm's Law are combined, the voltages add up, as if they are in series:

$$V = IR + BLv$$

### 1.10 Magnetic Force Law

Current flowing through a wire suspended in a magnetic field produces a force on the wire:

F = BLI

B = Magnetic field in Teslas

L = Length of coil wire in meters

I = Current flowing through coil in amperes

#### 1.11 Hooke's Law

Hooke's Law is an approximation for describing the behavior of a spring, or a material deflected by a force. It is written as F = -Kx, where:

F = Force in Newtons

K = Spring constant, or "mechanical resistance," in Newtons per meter

x = Excursion of voice coil in meters

The negative sign tells us that this is a restoring force, i.e., that if we push on the cone and let go, the cone will return to its rest position defined as x = 0. In a speaker, the spring constant is related to the springy-ness of the suspension (surround and spider).

Real things that are springy are much more complicated than this, for instance having nonlinear behavior or 3-dimensional vector forces. For very small amounts of excursion, the simple linear proportionality represented by a spring constant is good enough and represents the mainstream approach for modeling speakers.

## 1.12 Principle of "damping"

Like Hooke's Law, the concept of "damping" is an approximation. It describes effects that cause a system to lose energy, typically by converting it to heat. An example would be pushing your hand through water. The damping behavior is proportional to velocity, so a damping "law" is written as F = -Cv, where:

F =Force in Newtons

C = Damping constant in Newtons per meter per second

v =Velocity in meters per second

By now you're getting used to replacing complicated vector behavior with simple scalar equations that are good enough for our design model. In a speaker, mechanical damping is probably due to a small amount of heat generated by flexing the suspension material. Heat generation is important. A speaker is quite inefficient from a thermodynamic standpoint. You could think of a speaker as an electric heater that produces a bit of acoustical power.

### 1.13 Newton's Law

This is the familiar F = ma, where:

F = the force on the cone, in Newtons

m =The mass of the cone in kg

a = The acceleration of the cone

I'm writing force and acceleration as scalars because the suspension constrains the motion of the cone to a single dimension.

### 1.14 Acoustical Output

Here I call upon a couple of useful references:

http://www.acs.psu.edu/drussell/demos/baffledpiston/baffledpiston.html

http://www.ase.uc.edu/~pnagy/ClassNotes/AEEM728%20Introduction%20to%20Ultrasonics/part6.pdf

For the purposes of this document, I'm going to treat the speaker as an "ideal" piston, meaning that the entire cone moves in and out as a unit. Effects such as cone "breakup" and dust cap radiation are ignored. In practice, this will give us a theory that works for the bass to low midrange, i.e., up to around 250 Hz. This is also where box design matters. At higher frequencies, the published response graphs for the speaker are suitable for DIY analysis, and there are (hopefully) more sophisticated techniques based on empirical measurements for commercial design.

Equation 6.10 in the second reference gives the pressure density at the output of a cylindrical radiator of radius r:

$$p_0 = -i\omega\rho r^2 v$$

Here, v is the familiar velocity of the cone, and is the density of air. But , the acceleration of the cone, so we can write:

$$p_0 = -\rho R^2 a$$

At a distance R, equation 6.1 of the second reference gives the pressure:

$$p = \frac{p_0}{R} = \frac{-\rho r^2 a}{R}$$

The next thing to know is a defined quantity, the reference value for 0 dB SPL is  $p_{ref} = 20 \mu Pa$  RMS. We'll use that when we draw SPL graphs using the formula:

$$SPL = 20log_{10} \left( \frac{p}{p_{ref}} \right)$$

### 1.15 Math & Engineering Cheat Sheet

## 1.16 Transformation from time space to frequency space

This is a topic that's taught in college level engineering, and it represents a conceptual hurdle, even for the best of students. I won't try to derive or prove it here. All I want to do is state some assumptions of this transformation, namely that the system is linear. So we're giving up something by using this math trick – the ability to study nonlinear response – but it helps us derive a formula that's useful. The transformation looks like this:

$$\begin{aligned} x(t) &\to x(\omega) \\ v(t) &\to j\omega x(\omega) \\ a(t) &\to -\omega^2 x(\omega) \end{aligned}$$

Here,  $\omega$  is the "angular" frequency, equal to  $2\pi f$ , and  $j = \sqrt{-1}$ . This is where frequency enters our theory, allowing us to create frequency response graphs.

When we make this transformation, x becomes a complex number, i.e., having a real part and an imaginary part. The magnitude of  $x(\omega)$  is the amplitude of a sinusoidal function of frequency  $\omega$ , and the ratio between the real and imaginary parts determines the phase. I'm not going to do anything with phase in this document.

# 1.17 The business of "Q"

Since there's no such thing as a perpetual motion machine, every oscillating system loses a bit of energy through each cycle. For instance in the speaker, the energy is mostly lost to heating the voice coil. Some is also "lost" to the acoustic wave, but since direct radiating speakers are so inefficient, we literally ignore the acoustical output when studying the mechanics of the speaker! The factor Q is the reciprocal of the fraction of energy lost per cycle.

I'll refer to some useful articles

http://www.physics.ox.ac.uk/qubit/tutes/DampedHO.pdf

http://en.wikipedia.org/wiki/Q factor

The useful thing to know is that Q is proportional to the imaginary term in the denominator of response functions:

$$F(\omega) \propto \frac{1}{\omega_0^2 + \frac{j\omega\omega_0}{Q} - \omega^2}$$

I will make only one use of this formula, which is to relate the Q's of Thiele-Small theory to the electromechanical parameters of the speaker.

# 2 Deriving the speaker response formula

My derivation is a re-vamping of the treatment in this excellent reference. Kyle Lahnakoski's web page is defunct, but it's been preserved by the Internet Archive:

https://web.archive.org/web/20180602121243/http://www.arcavia.com/kyle/Equations/index.html

A familiar technique in mechanics is to identify all of the forces on a body, add them up, and equate them to the product of mass and acceleration. Three primary forces are:

Magnetic force: Combining Ohm's and Faraday's laws:

$$V = IR + BLv$$

Solving for I:

$$I = \frac{V - BLv}{R}$$

Notice that the second term has a negative sign, indicating a force that opposes the motion of the cone. The term BLv is the  $back\ EMF$  of the voice coil. Recalling that the force on the coil is proportional to the current, and substituting:

$$F_{mag} = BLI = \frac{BLV}{R} - \frac{BL^2v}{R}$$

The second term has a negative sign, so it's an *opposing* force, and because it's proportional to velocity, it behaves just like a damping force. The effect of moving a conductor in a magnetic field is called *magnetic damping*.

**Spring force**: From Hooke's Law:

$$F_{spring} = -Kx$$

Mechanical damping force: From the damping formula:

$$F_{mech} = -Cv$$

Summing the forces:

$$F_{tot} = F_{mag} + F_{spring} + F_{mech}$$

$$F_{tot} = \frac{BLV}{R} - \frac{(BL)^2 v}{R} - Kx - Cv$$

$$F_{tot} = \frac{BLV}{R} - \left(\frac{(BL)^2}{R} + C\right)v - Kx$$

Applying Newton's Law:

$$F_{tot} = ma$$

We arrive at the equation governing the motion of the cone:

$$\frac{BLV}{R} - \left(\frac{(BL)^2}{R} + C\right)v - Kx = ma$$

## 2.1 Solving the equation of motion

First, apply the transformation to frequency space. Here goes:

$$\frac{BLV}{R} - j\omega x \left(\frac{(BL)^2}{R} + C\right) - Kx = -\omega^2 x m$$

Remember that this transformation is based on the assumption that the input singul and the motion of the cone, are both sinusoidal functions of time. But thanks to this assumption, the resulting equation of motion is a simple linear equation in x.

$$x\left(K+j\omega\left(\frac{(BL)^2}{R}+C\right)-\omega^2m\right)=\frac{BLV}{R}$$

So now we can solve it:

This is the master equation of cone motion:

$$x(\omega) = \frac{\left(\frac{BLV}{mR}\right)}{\left(\frac{K}{m} + j\omega\left(\frac{(BL)^2}{mR} + \frac{C}{m}\right) - \omega^2\right)}$$

Before we leave this topic, let's go one step further. As shown above, sound pressure is proportional to acceleration, or  $\omega^2 x$ . Writing this out:

$$\omega^2 x = \frac{\omega^2 \left(\frac{BLV}{mR}\right)}{\left(\frac{K}{m} + j\omega \left(\frac{(BL)^2}{mR} + \frac{C}{m}\right) - \omega^2\right)}$$

$$\omega^2 x = \frac{\left(\frac{BLV}{mR}\right)}{\left(\frac{K}{m\omega^2} + \frac{j}{\omega}\left(\frac{(BL)^2}{mR} + \frac{C}{m}\right) - 1\right)}$$

The denominator is a polynomial in  $1/\omega$ . Because of this, we can look at three distinct frequency "domains" where the three terms of the denominator are important:

Low frequency:  $\omega^2 \to 0$ 

Demominator  $\rightarrow \frac{K}{m\omega^2}$ 

At low frequencies, the dependence produces the well known 12 dB/octave rolloff of the driver, approaching zero acoustical output at DC.

Mid frequency: 
$$\omega^2 \approx \frac{K}{M}$$

Denominator: 
$$\frac{j}{\omega} \left( \frac{(BL)^2}{mR} + \frac{C}{M} \right)$$

The mechanical and magnetic damping factors determine the height and width of the resonant peak. The frequency where  $\omega^2 = \frac{K}{M}$  is known as the resonant frequency  $\omega_0 = \sqrt{K/M}$ 

High frequency: 
$$\omega^2 \to \infty$$

Denominator: 
$$\frac{BLV}{mR}$$

At frequencies well above resonance, the acoustical output is constant. In a real speaker, this corresponds to a region of relatively flat SPL response well into the lower midrange.

The fact that such a simple electromechanical device has flat frequency response over a reasonable range is the miracle that makes speakers useful when driven by a voltage source. Also, it is the balance between these three domains that is at play when tuning a box design for a particular driver.

## 2.2 Impedance

The general (frequency dependent) version of Ohm's Law is:

$$V = IZ$$

Thus Z can be defined as the voltage-current ratio:

$$Z = \frac{V}{I}$$

Going all the way back to the beginning, we have an equation containing voltage and current, but not their ratio:

$$I = \frac{V - BLv}{R}$$

However, we can work with that equation, because we now know that cone velocity v is proportional to the input voltage, and we have a formula for it. Making a small re-write:

$$I(\omega) = \frac{V - j\omega BLx}{R} = V\left(\frac{1 - \frac{j\omega BLx}{V}}{R}\right)$$

Thus:

$$Z = \frac{R}{1 - \frac{j\omega BLx}{V}}$$

Since x is proportional to V, we can use the value of x for a 1-Volt input to compute Z:

$$Z = \frac{R}{1 - j\omega BLx} \bigg|_{V=1}$$

When I'm modeling a speaker, I always compute x, so it's easy to compute Z as well.

### 2.3 Back to the Q's

Referring to the master equation of cone motion above, here's the denominator:

$$\frac{K}{m} + j\omega \left( \frac{(BL)^2}{mR} + \frac{C}{m} \right) - \omega^2$$

This denominator looks like:

$$\omega_0^2 + j\omega\omega_0\frac{1}{Q} + \omega^2$$

We can pull out the Q factor:

$$\frac{1}{Q} = \frac{(BL)^2}{KR} + \frac{C}{K}$$

Now it's clear that 1/Q contains two pieces. The right term is purely mechanical. It only depends on mechanical properties. The left term is *electromechanical* combining electrical and mechanical properties of the system. The sum of these terms is the *total* Q of the system. These will become the two Q's of the Thiele-Small parameters.

### 2.4 Can these parameters be measured?

Yes. I won't go into too much detail. We've got a bunch of parameters, and they're all mixed together. We don't want to use acoustical measurements, because that's too hard, and we don't have an anechoic chamber or calibrated microphone at our disposal. Everybody should have a good ohmmeter, so we can measure R right away.

We can measure the resonant frequency by comparing the voltage and current in the speaker at different frequencies. For instance, if we put the speaker in series with a known resistor, then the voltage across the resistor is proportional to the current, and the voltage across the speaker is what it is. So now we know K/m.

Textbook methods now call for *changing* either K or m and seeing how the resonant frequency changes. You can change K by putting the driver in a box of known volume (see how this affects the spring constant, below). Or you can change m, for instance by putting a blob of modeling clay

on the cone. So now we know both K and m. If you do both measurements, you can get the value for  $S_d$ , the effective frontal area of the speaker.

The damping constants are related to the width of the resonant peak, which can be measured. The problem with measuring the damping constants is that they are mixed together in every equation. However, you can change R by putting an additional resistor in series with the speaker.

Now we know R, K, m, BL, and C, with  $S_d$  thrown in for good measure. I'm not sure this is the best way of measuring these parameters, but the point to be made is that **the electromechanical** parameters of the speaker are all measurable by collecting impedance curves under different conditions. This is why the engineers are so hung up on seeing impedance curves.

## 2.5 My approach going further

As a fair warning: Going further, the lowly K becomes a frequency dependent function  $K(\omega)$ , as we apply the box and the port. Thus the box and port change, not only the resonant frequency, but the overall resonant behavior of the system. For instance the box will tend to *increase* K, so it will *increase* K. This is noticeable in systems that obtain a measurable resonant "hump" when stuffed into a smaller box. In practice, the designer has to start out with a speaker whose K is lower than what will be needed from the built-up system.

This equation is for the "raw" driver, without box or port. Rather than going through the trouble of deriving new equations from scratch, I am going to treat the box and port as *modifications* of the raw driver. We'll see how this works.

### 3 How the box works

Reference:

http://www.animations.physics.unsw.edu.au/jw/Adiabatic-expansion-compression.htm

The principle here is a squeeze box. You push on the cone, it compresses the air in the box, and the higher pressure in the box pushes back at you. The box makes it harder to push on the cone. It's described as an "adiabatic" process, meaning that it happens quickly enough that the compression and expansion of the air don't exchange heat with the surroundings. Under this condition, a small change in the volume of air in the system (due to the cone moving in and out) is related to a change in pressure:

$$\frac{dP}{P_{atm}} = -\gamma \frac{dV}{V_{box}}$$

dP =Change in pressure

dV =Change in volume

 $P_{atm} = \text{Atmospheric pressure}$ 

 $\gamma = \text{Adiabatic constant}$ , approximately 1.4 in air.

So the pressure change is equal to:

$$dP = -\frac{\gamma P_{atm} dV}{V_{box}}$$

The change in volume is proportional to the product of displacement x and cone area  $S_d$ :

$$dP = -\frac{\gamma P_{atm} S_d x}{V_{box}}$$

Now the change in volume is the product of cone area and displacement x:

The change in pressure has a negative sign because positive x refers to outward motion of the cone. The force on the cone is the product of pressure change and cone area:

$$F_{box} = -\frac{\gamma P_{atm} S_d^2}{V_{box}} x$$

This looks just like Hooke's Law, if we let the box have an effective spring constant:

$$K_{box} = \frac{\gamma P_{atm} S_d^2}{V_{box}}$$

So the box just acts as a spring! We can modify the response function for cone excursion, simply by adding to the mechanical spring constant of the driver:

The master equation of cone motion is the same, but with a new K:

$$x(\omega) = \frac{\left(\frac{BLV}{mR}\right)}{\left(\frac{K_{total}}{m} + j\omega\left(\frac{BL^2}{mR} + \frac{C}{m}\right) - \omega^2\right)}$$

where  $K_{total} = K_{driver} + K_{box}$ . Remember that the Q is changed too:

$$\frac{1}{Q_{total}} = \frac{(BL)^2}{K_{total}R} + \frac{C}{K}$$

Observation: Putting the speaker in a box raises the total spring constant, so it raises the resonant frequency of the system. It also narrows the width of the resonant peak.

# 4 Effect of coil inductance

Coil inductance is handled by replacing the series resistance of the coil with a complex value:

$$R \to R + i\omega L$$

## 5 Back to sound pressure for a moment

The sound pressure formula was:

$$p = \frac{p_0}{R} = \frac{-\rho r^2 a}{R}$$

Now we know what to do with the acceleration:

$$p = \frac{p_0}{R} = \frac{\rho r^2 \omega^2 x}{R}$$

### 6 Thiele-Small Parameters

Finally, we're in a position to talk about the mysterious Thiele-Small parameters. The point of ThieleSmall theory was to explain speakers to engineers who deeply understand electrical filters. My interest in the T-S parameters is to make use of published speaker data by converting them into the electromechanical parameters of my equation. The Thiele-Small parameters, and the electromechanical parameters are just two different ways of expressing the same things.

Returning to the derivation of the cone excursion function,  $x(\omega)$  is a complex number, and its absolute value is equal to the amplitude of cone excursion. There is a frequency where the real part of the denominator goes to zero, referred to as the "resonant" frequency:

$$\omega_0 = \sqrt{\frac{K}{m}}$$

Converting this into a frequency gives us the "free air" resonance:

$$f_s = \frac{\omega_0}{2\pi}$$

Continuing from the discussion of the box, we can also compute an effective resonant frequency for the box by itself if we know the mass of the cone:

$$\omega_{box}^2 = \frac{k_{box}}{m} = \frac{\gamma P_{atm} S_d^2}{m V_{box}}$$

Solving for  $V_{box}$  gives us the box volume equivalent to the spring constant of the driver:

$$V_{as} = \frac{\gamma P_{atm} S_d^2}{m\omega_0^2}$$

We can recall the equation for cone excursion:

$$x(\omega) = \frac{\left(\frac{BLV}{mR}\right)}{\left(\frac{K_{total}}{m} + j\omega\left(\frac{(BL)^2}{mR} + \frac{C}{m}\right) - \omega^2\right)}$$

And compare it to the rule for Q:

$$F(\omega) \propto \frac{1}{\omega_0^2 + \frac{j\omega\omega_0}{Q} - \omega^2}$$

We can equate the imaginary terms in the denominator as follows:

$$\frac{j\omega\omega_0}{Q}=j\omega\left(\frac{(BL)^2}{mR}+\frac{C}{m}\right)$$

$$\frac{1}{Q} = \frac{1}{\omega_0} \left( \frac{(BL)^2}{mR} + \frac{C}{m} \right)$$

Now we can assign separate Q values to the electromagnetic and mechanical terms:

$$\frac{1}{Q_{tot}} = \frac{1}{Q_{es}} + \frac{1}{Q_{ms}}$$

where:

$$\frac{1}{Q_{es}} = \frac{BL^2}{\omega_0 mR}$$

$$\frac{1}{Q_{ms}} = \frac{C}{\omega_0 m}$$

Total system Q: A recent TalkBass thread asked about the total Q of the system, as opposed to the driver. This is the parameter  $Q_{tc}$ . It's not too hard to see what happens to Q when the driver goes into a box. Let's return to the equation for Qts:

$$\frac{1}{Q}_{ts} = \frac{1}{\omega_0} \left( \frac{(BL)^2}{mR} + \frac{C}{m} \right)$$

All of the symbols inside the parentheses are electromechanical parameters of the driver. These don't change when you put it in a box. However, the resonant frequency changes:

$$\omega_{system}^2 = \frac{1}{m} (k_{driver} + k_{box})$$

With some substitution,

$$\omega_{system} = \omega_0 \sqrt{1 + \frac{V_{as}}{V_{box}}}$$

And since Q is proportional to the resonant frequency,

$$Q_{tc} = Q_{ts} \sqrt{1 + \frac{V_{as}}{V_{box}}}$$

Some rules of thumb can be drawn from this. First, enclosing a driver in a box always raises the system Q. Second, the smaller the box, the higher the Q.

Now we're ready to unpack the Thiele-Small parameters. Here's the program. First, I'm going to look up the datasheet for a speaker that I happen to own:

http://www.eminence.com/pdf/DeltaliteII 2512.pdf

This will give us a chance to see how to find the information we need in a reputable speaker datasheet. Do you mind if we switch to Python?

```
[1]: F_s = 37 # resonant frequency in Hz
R_e = 5.04 # series resistance of voice coil in Ohms
L_e = 0.46*0.001 # inductance of voice coil converted from mH to H
Q_ms = 3.13 # mechanical contribution to Q factor
Q_es = 0.44 # electromagnetic contribution to Q factor
Vas = 147*0.001 # equivalent box volume, liters converted to m^3
Xmax = 4.90*0.001 # maximum excursion, converted from mm to m
S_d = 519.5/1e4 # cone area converted from cm^2 to m^2
```

Now we'll turn them into the electromechanical parameters. Do you mind if we import some useful libraries?

```
[2]: from numpy import * # array math library
     %matplotlib inline
     from matplotlib.pyplot import *
     gamma = 1.4 # adiabatic constant, dimensionless
     P atm = 101325 # atmospheric pressure, Pa
     rho = 1.2041 # density of air, kq/m^3
     c = 345 # speed of sound in air
     w_0 = 2*pi*F_s
     print('resonant angular frequency w_0 (1/s) = ', w_0)
     m = gamma*P_atm*S_d**2/w_0**2/Vas
     print('cone mass m (kg) = ', m)
     BL = sqrt(w_0*m*R_e/Q_es)
     print('magnetic field length product BL (T m) = ', BL)
     C = w_0*m/Q_ms
     print('mechanical damping factor (N/(m/s)) = ', C)
     K = w_0 **2*m
     print('mechanical spring constant (N/m)', K)
     print('mechanical compliance (m/N)', 1/K)
     r = sqrt(S d/pi)
     print('cone radius (m) =', r)
```

```
resonant angular frequency w_0 (1/s) = 232.4778563656447 cone mass m (kg) = 0.04818759285734274 magnetic field length product BL (T m) = 11.327846159124995 mechanical damping factor (N/(m/s)) = 3.5790889108292303 mechanical spring constant (N/m) 2604.3444125000005 mechanical compliance (m/N) 0.00038397379209920444 cone radius (m) = 0.12859315140102884
```

Now it's time to model the speaker. Here are the design conditions:


```
[3]: Znom = 8
Pin = 1
Vrms = sqrt(Pin*Znom)
print('input voltage amplitude (V RMS) =', Vrms)
V_box = 32*1e-3 # box volume, 32 l converted to m^3
# Additional parameters for when we get to the ported design
f_port = 40 # port tuning frequency in Hz
Q_port = 50
d_port = 100*0.01 # diameter of port in cm converted to m
```


input voltage amplitude (V RMS) = 2.8284271247461903


```
[9]: f = logspace(1, 3, 300) # a range of frequencies from 10 to 1000 Hz
     # Angular frequency
     w = 2*pi*f
     # Combined voice coil resistance and inductance
     z = R_e + 1j*w*L_e
     # Excursion, complex valued, anticipating box spring constant
     def plots(K_box, ported = False):
         # Corrections for port... we'll learn how this works below
         if ported:
             w_port = 2*pi*f_port
             print('Port angular frequency (1/s)', w_port)
             Q_port = 50
             kappa = w**2/(w**2 - 1j*w*w_port/Q_port - w_port**2)
         else:
             kappa = 1
         Keff = K + kappa*K_box
         x = BL*Vrms/m/z/(Keff/m + 1j*w*(BL**2/m/z + C/m) - w**2)
```

```
semilogx(f, abs(x)*1000*1.414)
title('Excursion graph')
xlabel('frequency (Hz)')
ylabel('cone excursion amplitude (mm)')
show()
# Impedance, complex valued
Z = z/(1 - 1j*w*BL*x/Vrms)
semilogx(f, abs(Z))
title('Impedance graph')
xlabel('frequency (Hz)')
ylabel('impedance ($\Omega$)')
show()
# Listening distance, 1 meter
R = 1
# Sound pressure at listening distance
p = rho*r**2*w**2*kappa*x/R/2
p_ref = 20e-6 # reference pressure in Pa RMS
# Sound pressure level in dB SPL
spl = 20*log10(abs(p)/p_ref)
semilogx(f, spl)
title('Sensitivity graph')
xlabel('Frequency (Hz)')
ylabel('Sound pressure (dB SPL)')
show()
# More ported behavior
if ported:
    kappa2 = w_port**2/(w**2 - 1j*w*w_port/Q_port - w_port**2)
    Keff = K + kappa*K_box
    S_port = pi*d_port/4
    x = BL*Vrms/m/z/(Keff/m + 1j*w*(BL**2/m/z + C/m) - w**2)
    x_port = kappa2*x*S_d/S_port
    v_port = 1j*w*x_port
    semilogx(f, abs(v_port)*1000*1.414/c)
    xlabel('frequency (Hz)')
```

```
ylabel('port air speed (mach)')
show()
plots(K)
```

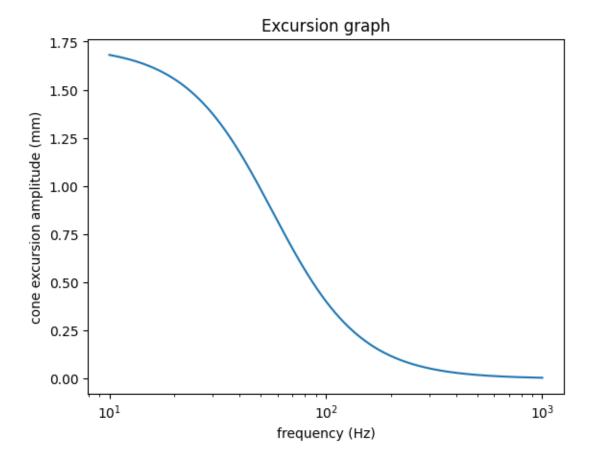

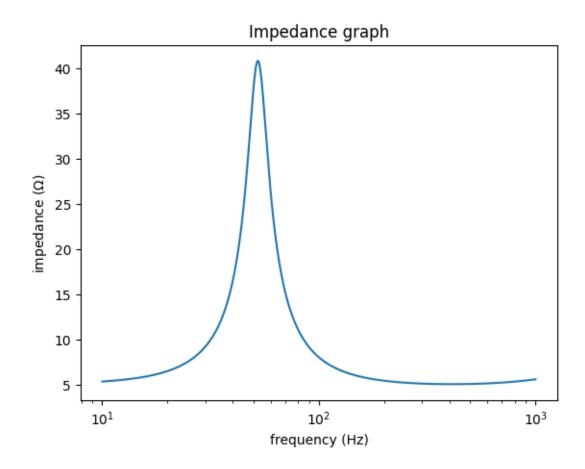

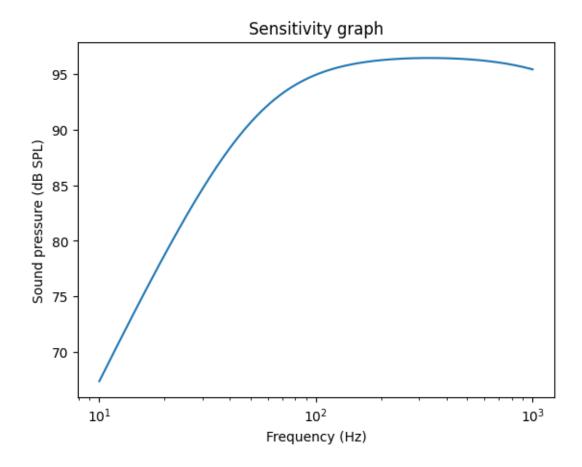


# 7 Okay, now let's put it in a box


Recalling the formula for the spring constant added by the box:


$$K_{box} = \frac{\gamma P_{atm} S_d^2}{V_{box}}$$

Let's try a box of 32 liters, and see how it affects the performance of the speaker.

box spring constant (N/m) 11963.707144921877

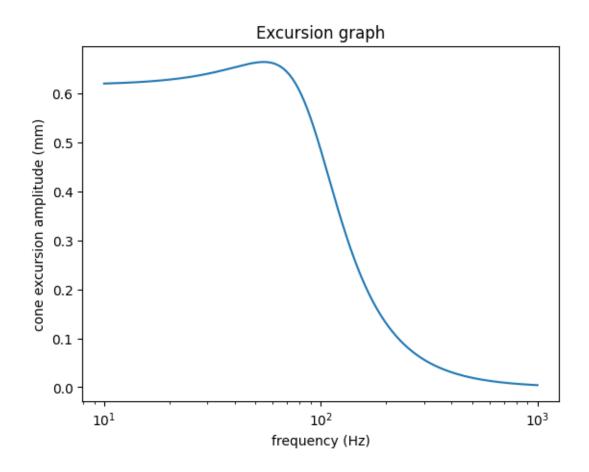

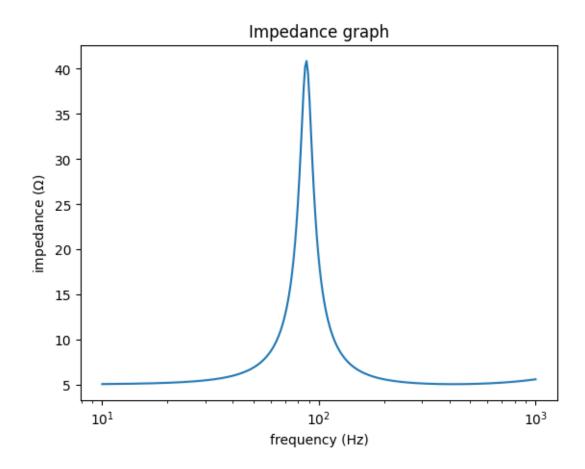

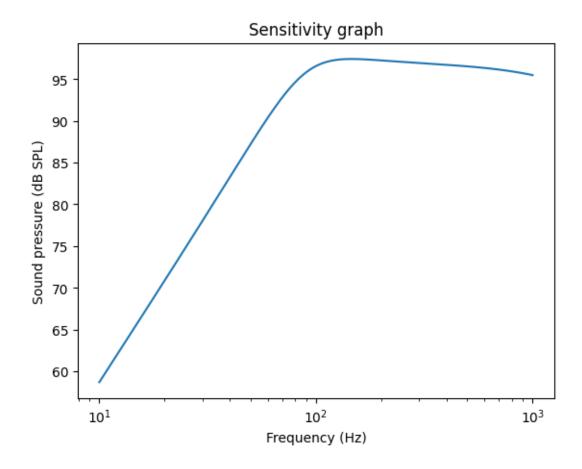

# 8 How the port works

Introducing the symbols:

 $S_{cone} = \mbox{Frontal}$  area of cone, previously labeled  $S_d$ 

 $S_{port} =$  Frontal area of port

 $x_{cone} =$  Displacement of the cone. Note adding "cone" to the symbol for clarity

 $\boldsymbol{x}_{port} = \text{Displacement}$  of the "slug" of air inside the port

 $m_{port} = \text{Mass of air "slug" inside the port}$ 

We're going to start with the effect of the cone and port on the volume of the box. The total change of volume is the sum of the volumes displaced by the cone and the port:

$$dV = S_{port} x_{port} + S_{cone} x_{cone}$$

Change in pressure as discussed in section on box behavior

$$dP = -\frac{\gamma P_{atm}(S_{port}x_{port} + S_{cone}x_{cone})}{v_{box}}$$

Using the equation for the spring constant of the cone as a template, we can define independent spring constants for the cone and for the port:

$$K_{cone} = \frac{\gamma P_{atm} S_{cone}^2}{V_{box}}$$

$$K_{port} = \frac{\gamma P_{atm} S_{port}^2}{V_{bor}}$$

Likewise, I'll define a resonant frequency for the port:

$$\omega_{port} = \sqrt{\frac{K_{port}}{M_{port}}}$$

Now we can re-write dP:

$$dP = -(\frac{K_{port}x_{port}}{S_{port}} + \frac{K_{cone}x_{cone}}{S_{cone}})$$

Just as in the case of the sealed box, air pressure on the cone produces a force. We'll write it, then rearrange it into convenient terms:

$$\begin{split} F_{cone} &= -\frac{\gamma P_{atm} S_d S_{port} x_{port}}{V_{box}} - \frac{P_{atm} S_d^2 x_{cone}}{V_{box}} \\ F_{cone} &= -\frac{K_{box} S_{port} x_{port}}{S_d} - K_{box} x_{cone} \end{split} \tag{1}$$

There is also a force on the port:

$$\begin{split} F_{port} &= \omega^2 x_{port} m_{port} + S_{port} dP \\ F_{port} &= \frac{\omega^2 x_{port} K_{port}}{\omega_{port}^2} + S_{port} dP \\ \\ F_{port} &= \frac{\omega^2 x_{port} K_{port}}{\omega_{port}^2} - S_{port} (\frac{K_{port} x_{port}}{S_{port}} + \frac{K_{box} x_{cone}}{S_d}) \end{split}$$

Many substitutions later, and setting the total force (inertia plus pressure driven) to zero:

$$F_{port} = \frac{K_{box}S_{port}^2\omega^2x_{port}}{S_{cone}^2\omega_{port}^2} - \frac{K_{box}S_{port}^2x_{port}}{S_{cone}^2} - \frac{K_{box}S_{port}x_{cone}}{S_{cone}} = 0 \tag{2}$$

Notice that I labeled equations (1) and (2) above. This is a pair of equations that can be solved for  $x_{cone}$  and  $x_{port}$ , resulting in:

$$x_{cone} = \frac{(\omega_{port}^2 - \omega^2) F_{cone}}{K_{box} \omega^2}$$

$$x_{port} = -\frac{S_{cone}\omega_{port}^2 F_{cone}}{K_{box}S_{port}\omega^2}$$

Look at this. When  $\omega = \omega_{port}$ ,  $x_{cone}$  drops to zero. This is the classic behavior of a ported speaker: At the port resonance, the port is doing everything and the cone is doing nothing but transferring force from the amplifier to the port.

Next we'll rearrange the solution for  $x_{cone}$  to write  $F_{cone}$  as a function of x. Now we've got a force proportional to  $x_{cone}$ , which can be turned into a force law with spring constant  $K_{eff}$ :

$$F_{cone} = \frac{K_{box}\omega^2 x_{cone}}{\omega_{nort}^2 - \omega^2}$$

$$K_{eff} = \frac{F_{cone}}{x_{cone}} = -\frac{K_{box}\omega^2}{\omega_{nort}^2 - \omega^2}$$

This equation shows an obvious factor that completely describes the effect of the port, which I call the "port correct factor"  $\kappa$ :

$$\kappa = \frac{\omega^2}{\omega^2 - \omega_{port}^2}$$

To "use" the port, simply multiply K by the port correction factor which imposes a frequency dependent spring constant on the box.

What happens to  $\kappa$  when  $\omega = \omega_{port}$ ? At the port tuning frequency, K goes to infinity, i.e., the box becomes infinitely stiff, and the cone stops moving. Also, a program using this formula will produce a divide-by-zero error. In reality, the port probably dissipates some heat, so we can give it a Q factor, which also eliminates the program error, for instance:

$$\kappa = \frac{\omega^2}{\omega^2 + \frac{j\omega\omega_{port}}{Q_{nort}} - \omega_{port}^2}$$

Assigning an arbitrarily high value to , such as 50, prevents the modeling program from crashing, and is probably realistic.

Now, looking ahead, the sound produced by the system will be based on the total volume displaced by both the cone and the port. So we find out how much that is.

$$\frac{x_{port}}{x_{cone}} = -\frac{S_{cone}\omega_{port}^2}{S_{port}(\omega_{port}^2 - \omega^2)}$$

The total displacement of air is the sum of the cone and port:

$$\begin{split} S_{port}x_{port} + S_{cone}x_{cone} &= S_{cone}x_{cone} - \frac{S_{cone}\omega_{port}^2x_{cone}}{(\omega_{port}^2 - \omega^2)} \\ &= -\frac{S_{cone}\omega^2x_{cone}}{(\omega_{port}^2 - \omega^2)} = \kappa S_{cone}x_{cone} \end{split}$$


To get the total air displacement, we correct displacement of the cone by the same factor that we use to correct the spring constant.


### 8.1 Port air speed


Going back to the relationship between the two port displacements, the speed is simply  $j\omega$  times the displacement:


$$j\omega x_{port} = \frac{S_d \omega_{port}^2 x}{S_{port} (\omega^2 + \frac{j\omega \omega_{port}}{Q_{port}} - \omega_{port}^2)}$$

Port angular frequency (1/s) 251.32741228718345

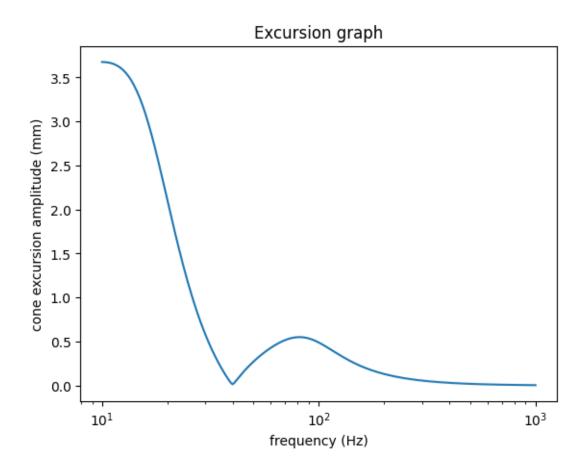

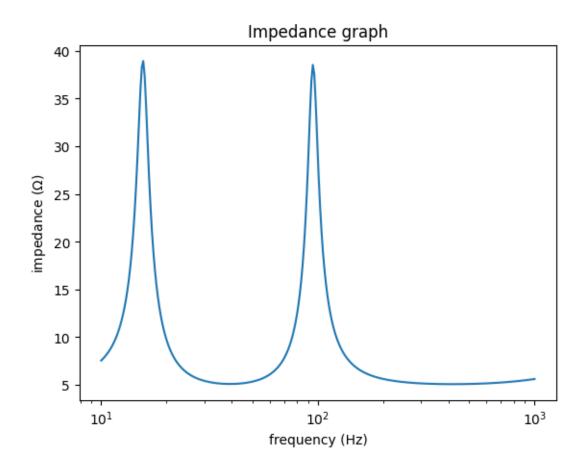

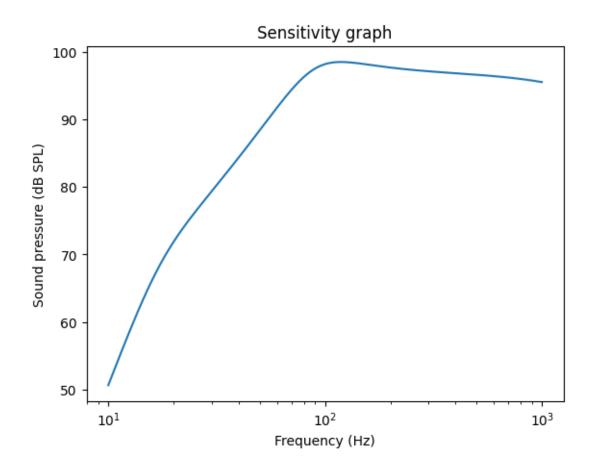

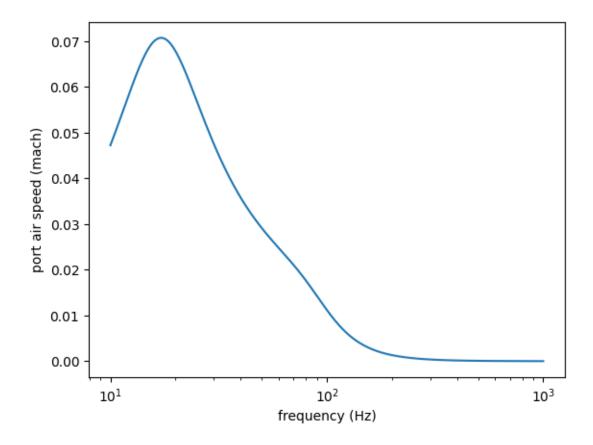

# 9 Port length

So far I haven't talked about the length of the port. Remember that I'm treating the port as a "slug" of air that has a particular frontal area and mass. But the mass is the product of area and length.

Recalling the spring constant of the port:  $K_{port} = \frac{\gamma P_{atm} S_{port}^2}{V_{bor}}$ 

The mass of the air in the port:  $M_{port} = S_{port} L_{port} \rho$ 

And the resonant angular frequency of the port, from above:  $\omega_{port}^2 = \frac{K_{port}}{M_{port}}$ 

We can solve these equations for the port length:  $L_{port} = \frac{\gamma P_{atm} S_{port}}{\rho V_{box} \omega_{port}^2}$ 

In terms of frequency and diameter:  $L_{port} = \frac{\gamma P_{atm}(\pi D_{port}^2/4)}{\rho V_{box}(4\pi^2 f_{port}^2)}$ 

[16]: gamma\*P\_atm\*np.pi/4/rho/4/np.pi\*\*2

### [16]: 2343.755133741053

Converting to centimeters and liters...

$$l_{port}(cm) = 23438 \frac{d_{port}(cm)^2}{v_{box}(liters)f_{port}(Hz)^2} \label{eq:loss}$$

Typical "port length calculator" references give a constant of 23563. This would be a difference of about 0.03 inches on a 6 inch port, and could just be due to variations in the physical properties of air in different references. Close enough!

https://www.ajdesigner.com/phpvent/subwoofer\_vent\_port\_equation\_length\_l.php

## 10 Comparison to WinISD

Because WinISD is the gold standard in the DIY world, and is freely available, I decided to compare the results of my program to its graphs. I've found that I can reconcile my graphs with WinISD if I make an allowance for how our respective programs compute the voltage at the terminal of the speaker. According to the help file in WinISD:

Cone excursion shows how much driver cone moves with sinusoidal excitation at chosen powerlevel. The powerlevel is controlled in "plot"-tab. The power applied can be related to excitation voltage with following relation:  $Eg=sqrt(P \cdot Re)$ , or  $P=Eg^2/Re$  where Eg is the RMS voltage applied to driver's terminals, P is the input power in watts and Re is the DC resistance of the voice coil.

So WinISD computes power according to:

$$P = \frac{V_{rms}^2}{R_e}$$


In contrast, I compute voltage according to:

$$P = \frac{V_{rms}^2}{Z_{nom}}$$


I think that "my" method is actually more common in the industry. For instance, Eminence datasheets cite 2.83 V RMS as the test voltage for their sensitivity graphs. This isn't a criticism of WinISD, but is just a matter of trying to understand the nuts and bolts.

To make a precise comparison, you have to make sure that both programs are using the same driver model. The datasheet parameters for some speakers have changed over the years. For instance my programs all use the datasheet that was published when I bought my 2512-ii driver, but WinISD uses updated values. So I had to make sure that the same values were typed into both programs.


Let's take my favorite Eminence speaker, where  $Z_{nom}=8~\Omega$  and  $R_e=5~\Omega$ . In my program, 1 Watt translates into  $\sqrt{8}=2.83$  V RMS, and in WinISD,  $\sqrt{5}=2.24$  V RMS. Under these conditions, my program would report a cone displacement 26% higher than WinISD, and 2 dB higher SPL. This is borne out in the graphs. Here's WinISD for SPL at 1 W:

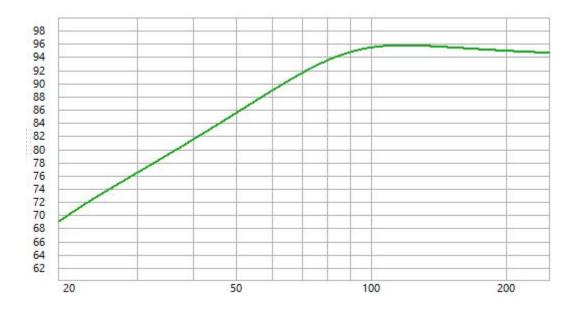


And here's my program (online Javascript version):

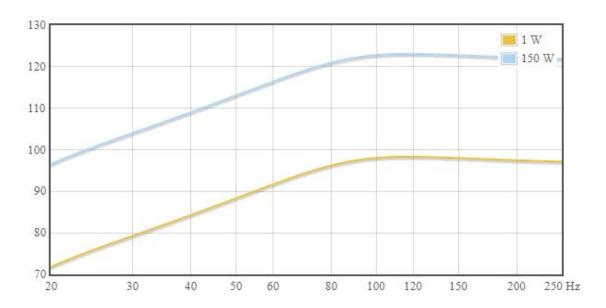

Likewise, here's WinISD for excursion at 250 W:

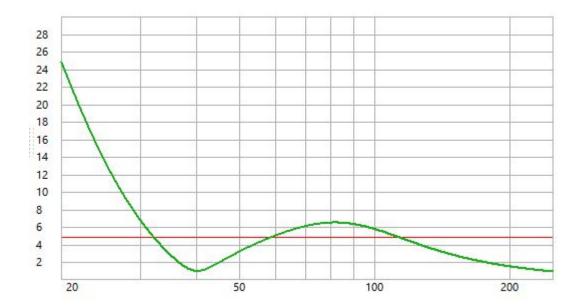

And here's my program:

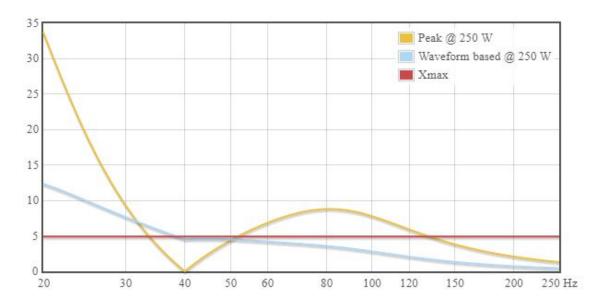

These graphs confirm that my program comes out about 2 dB and 26% higher for SPL and excursion. There's a bit of a difference in the excursion graph near the port resonance, which I think is due to modeling a Q factor for the port. My computations above use the port Q factor, but the Javascript version doesn't.

## 11 More References

Background reading that I found to be useful http://www.arcavia.com/kyle/Equations/index.html http://www.silcom.com/~aludwig/

```
http://www.diysubwoofers.org/
    Information that I pulled into this report
    http://hyperphysics.phy-astr.gsu.edu/hbase/oscda.html
    http://www.physics.ox.ac.uk/qubit/tutes/DampedHO.pdf
    http://www.animations.physics.unsw.edu.au/jw/Adiabatic-expansion-compression.htm
    Appendix 1: wxMaxima code for solving x, xport:
    dp: -(kport*xport/sport + kbox*x/sd);
    eq1: fcone = -kbox*sport*xport/sd - kbox*
    eq2: kbox*sport**2*w**2*xport/sd**2/wport**2
        - kbox*sport**2*xport/sd**2
        - kbox*sport*x/sd = 0;
    solve([eq1, eq2], [x, xport])[1];
[1]: # Make sure you save the file before running this.
     !jupyter nbconvert --to pdf SpeakerTheory.ipynb
    [NbConvertApp] Converting notebook SpeakerTheory.ipynb to pdf
    [NbConvertApp] Support files will be in SpeakerTheory files\
    [NbConvertApp] Making directory .\SpeakerTheory_files
    [NbConvertApp] Writing 76502 bytes to notebook.tex
    [NbConvertApp] Building PDF
    [NbConvertApp] Running xelatex 3 times: ['xelatex', 'notebook.tex', '-quiet']
    [NbConvertApp] Running bibtex 1 time: ['bibtex', 'notebook']
    [NbConvertApp] WARNING | b had problems, most likely because there were no
    citations
    [NbConvertApp] PDF successfully created
    [NbConvertApp] Writing 351206 bytes to SpeakerTheory.pdf
[]:
```