



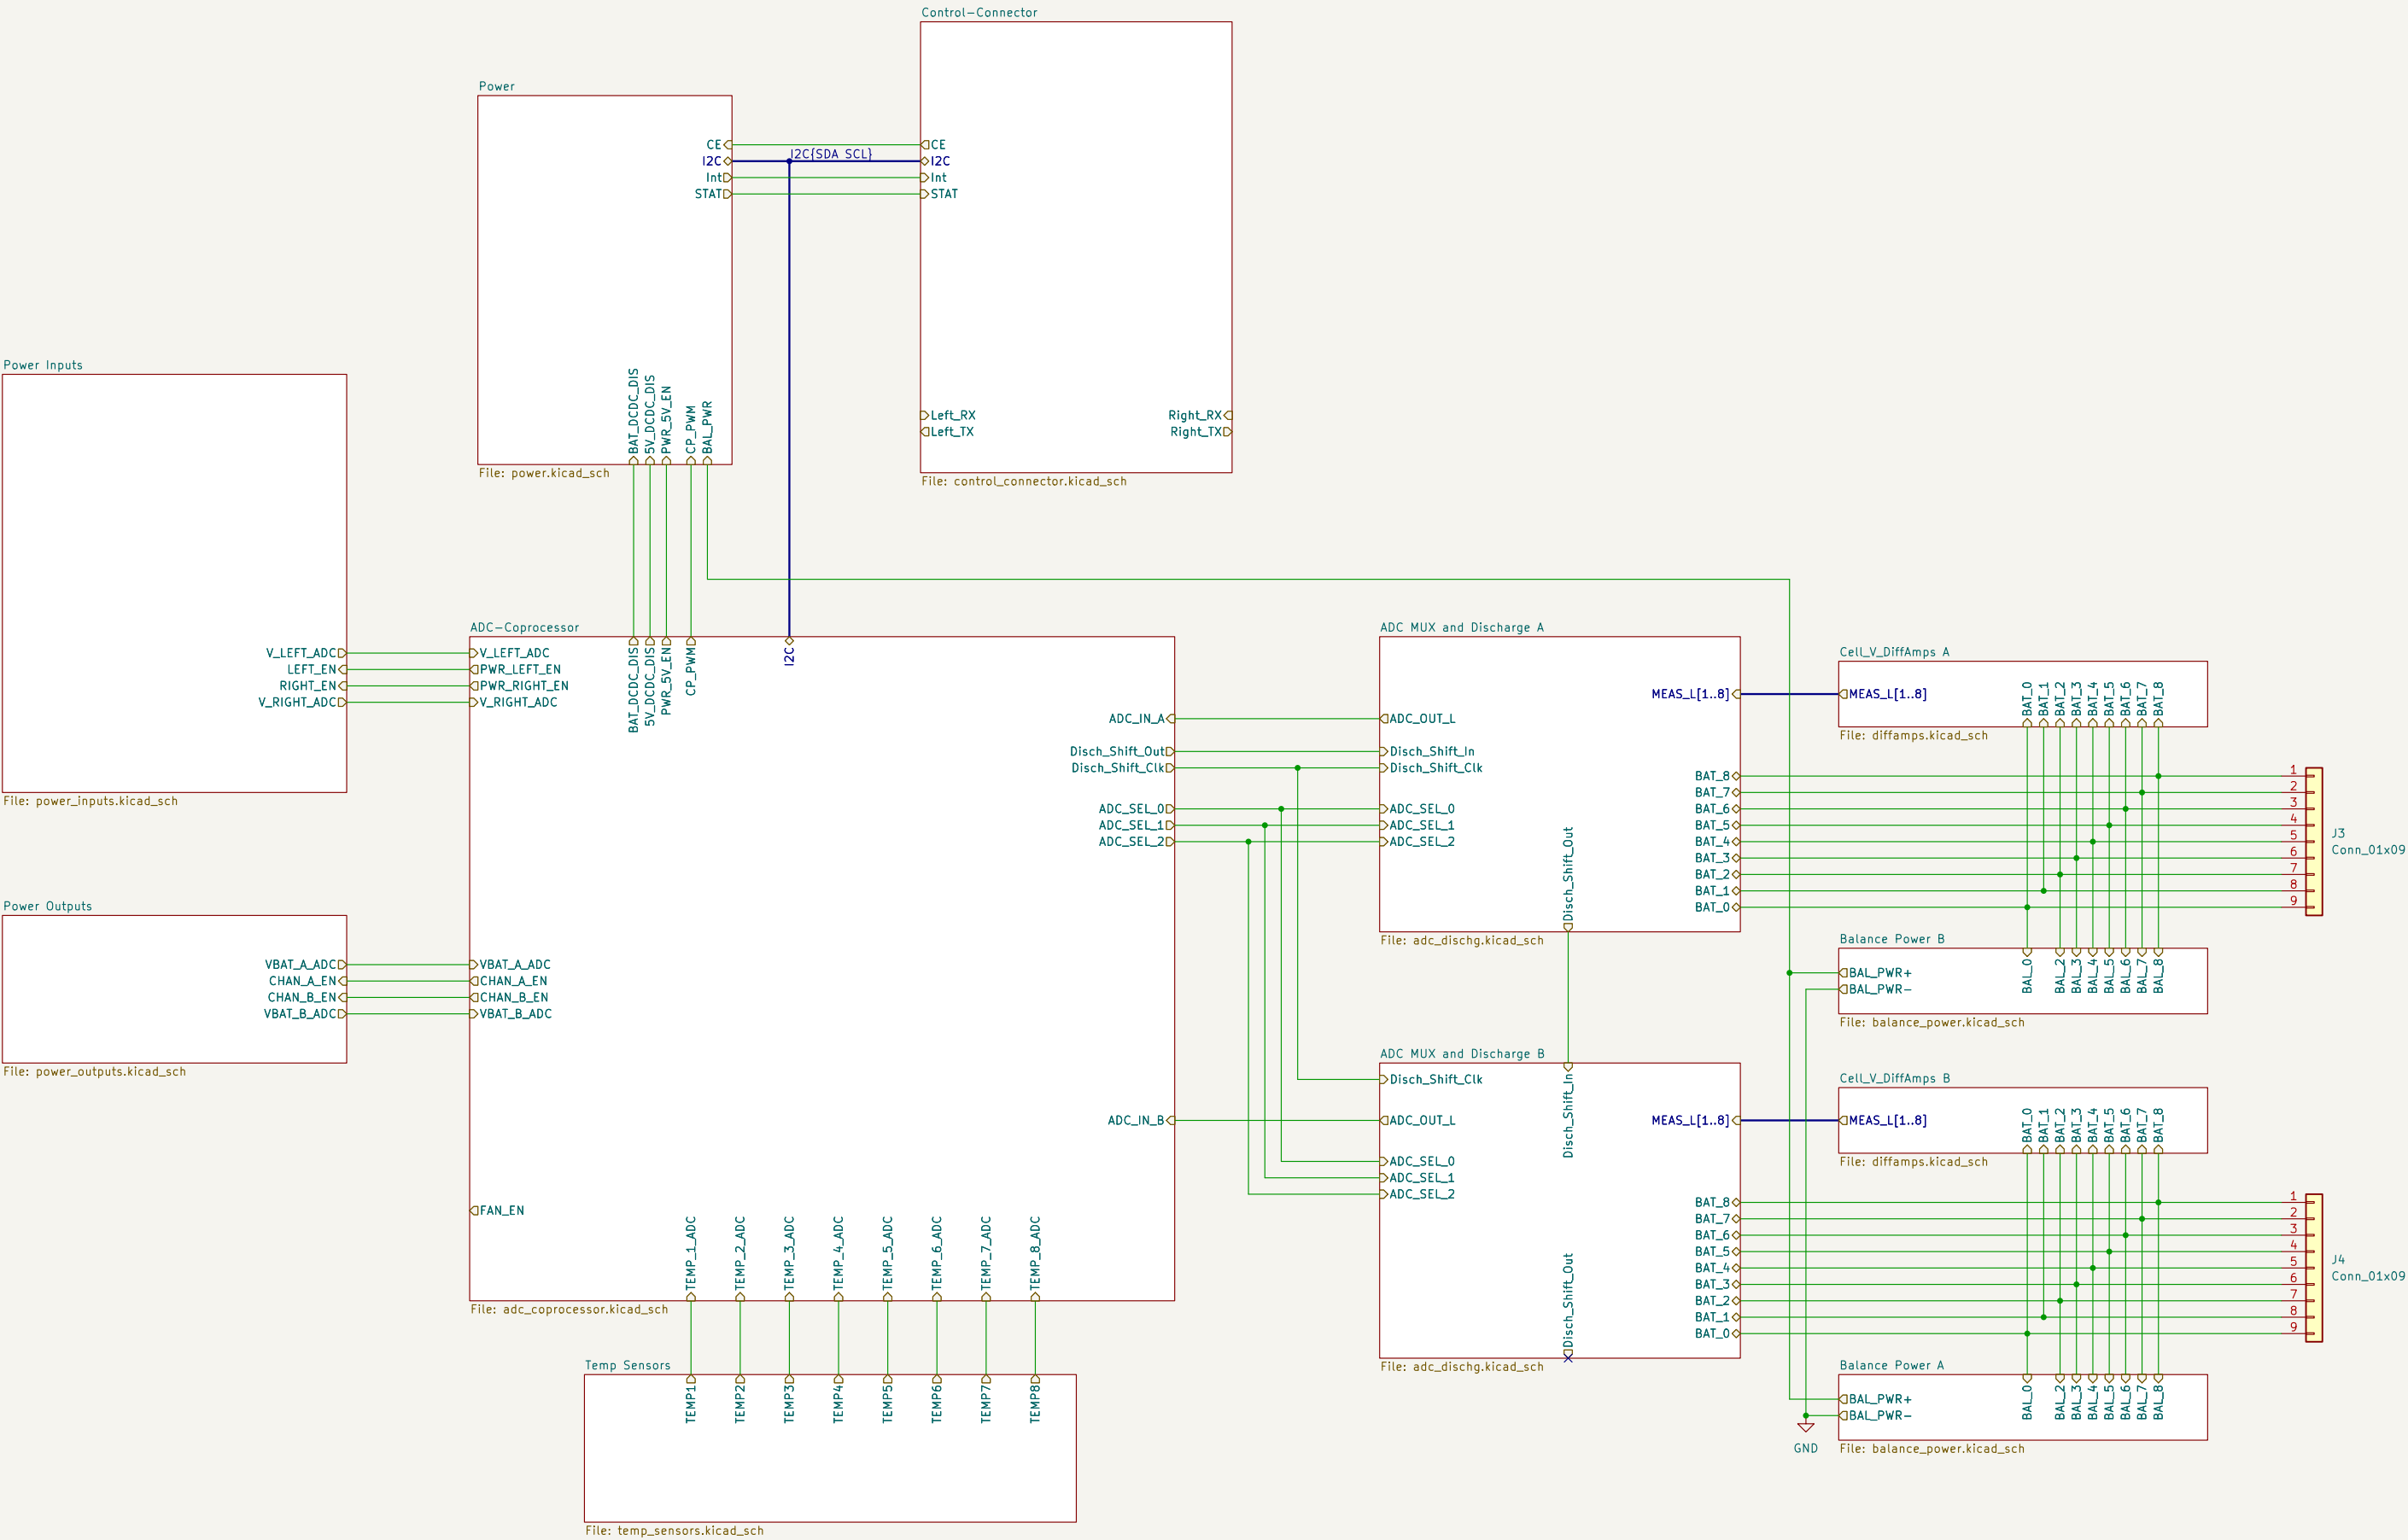
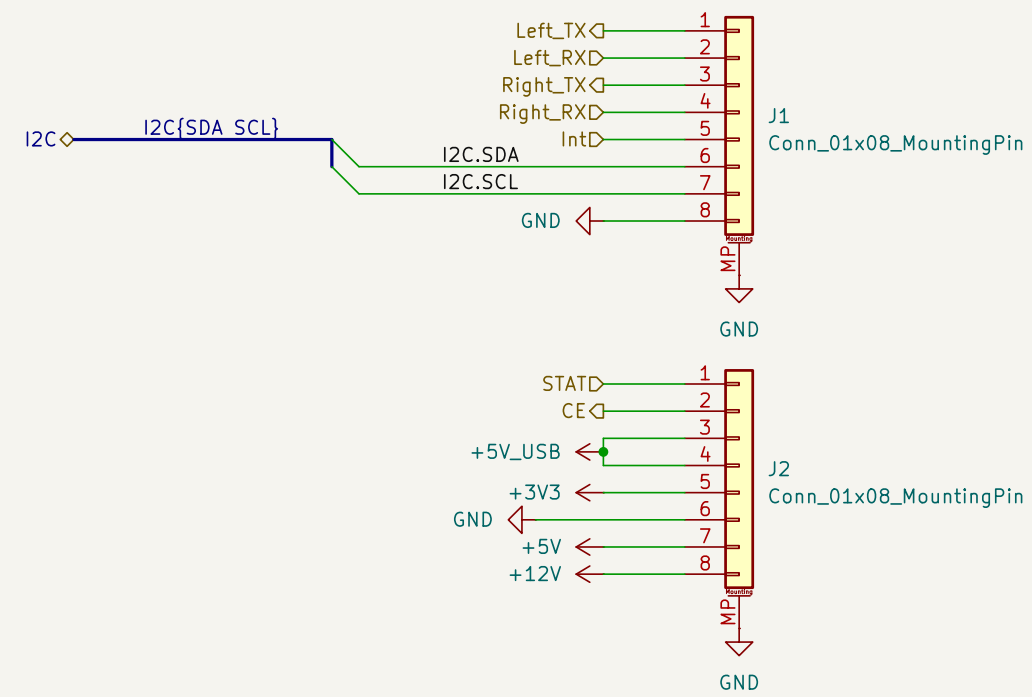
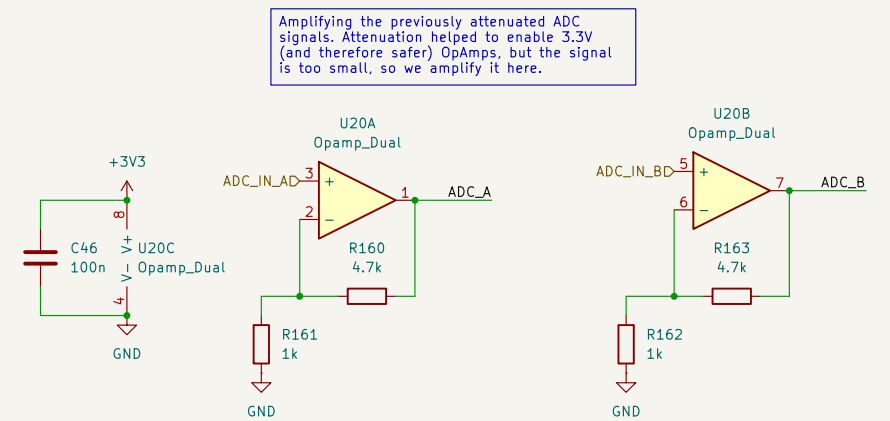
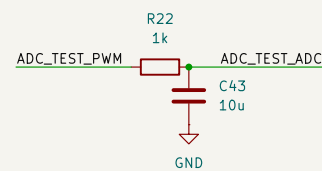
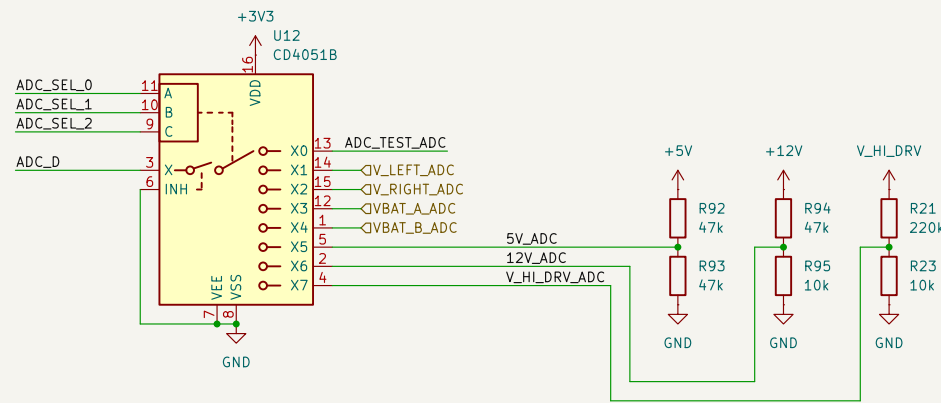
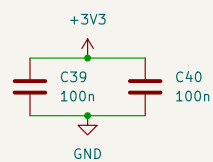



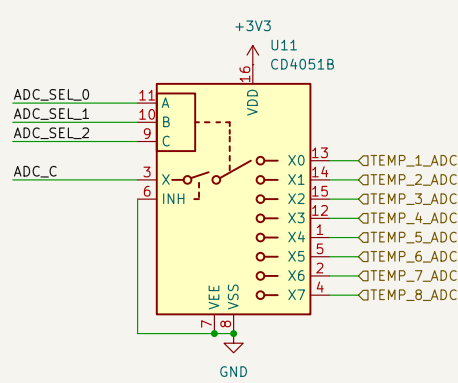


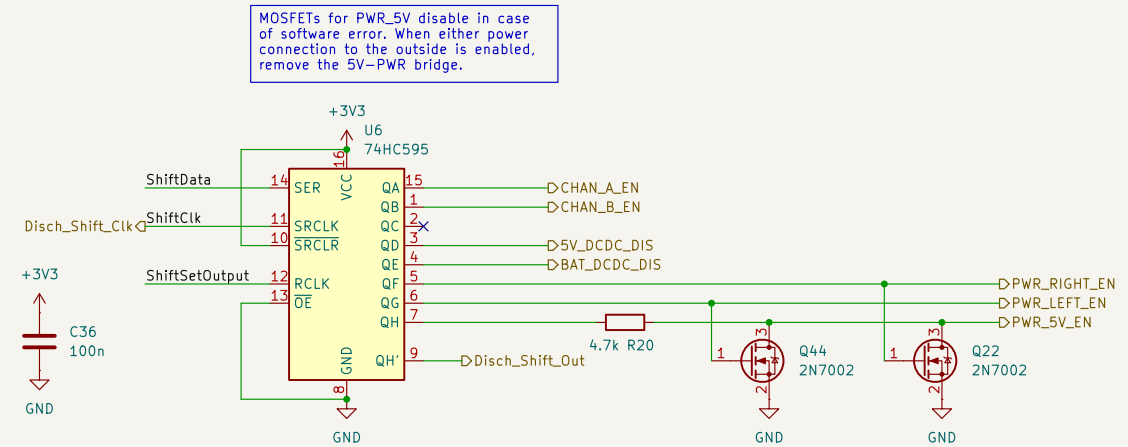


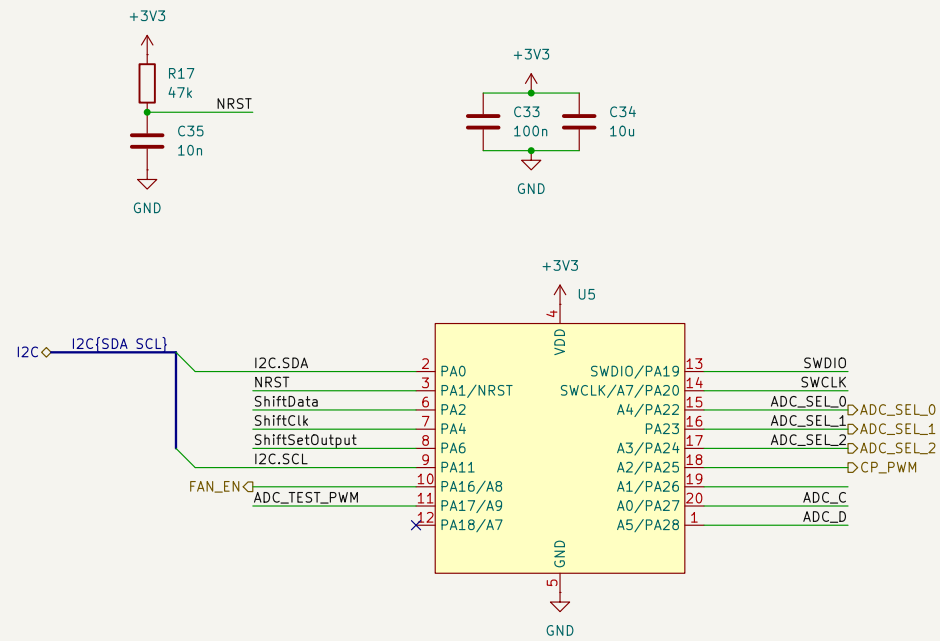




TODO: Check

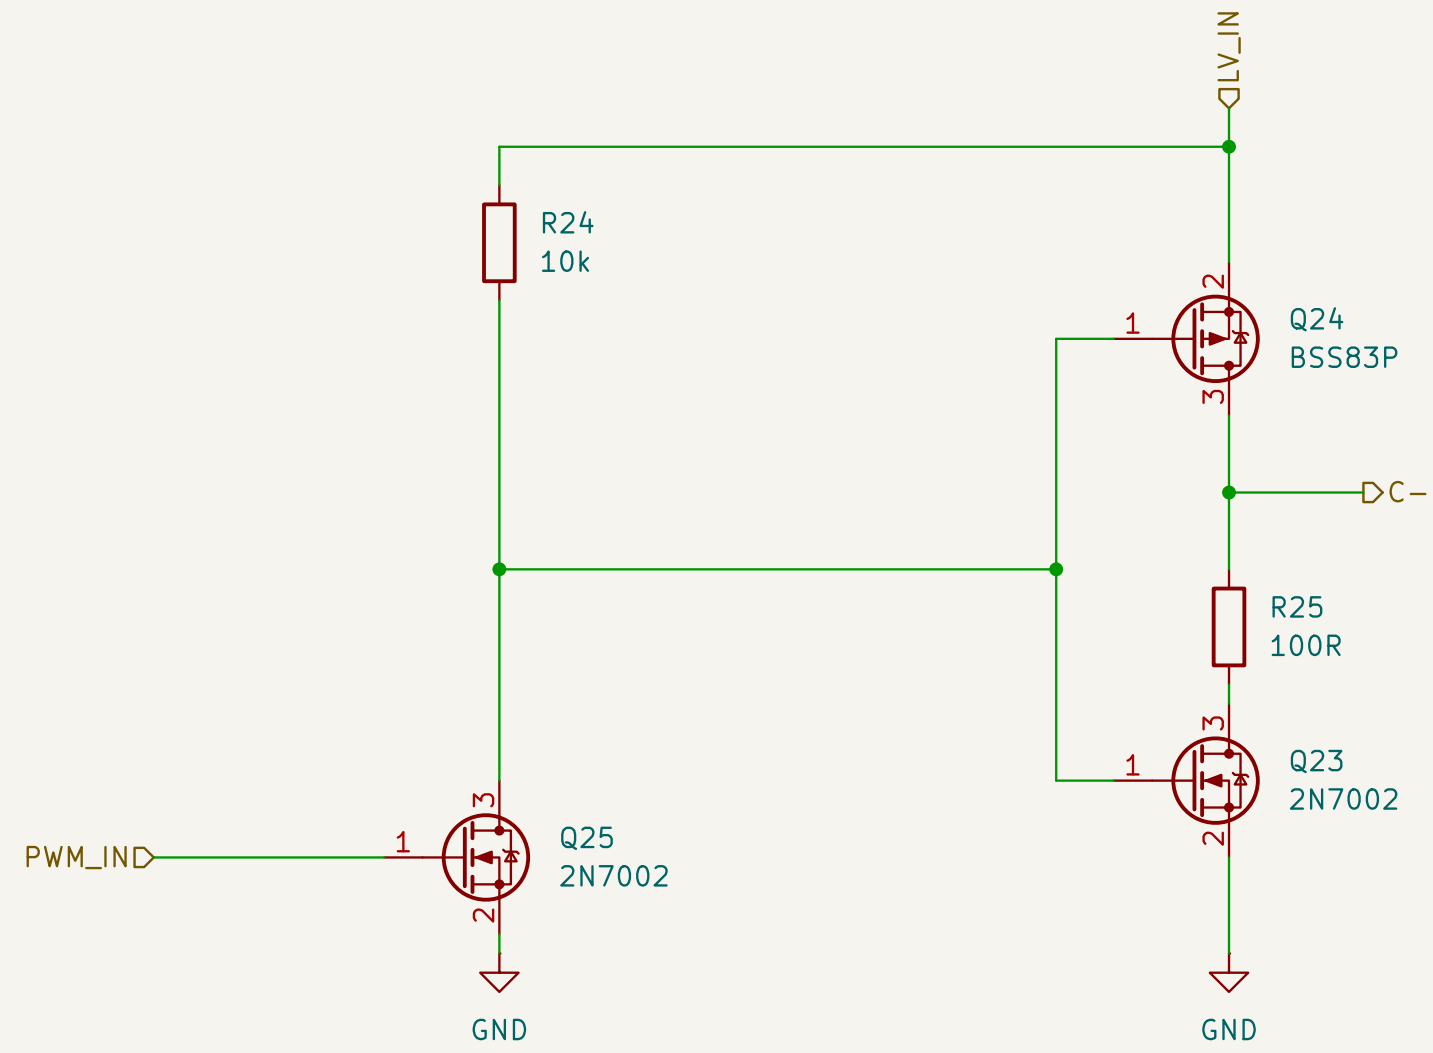

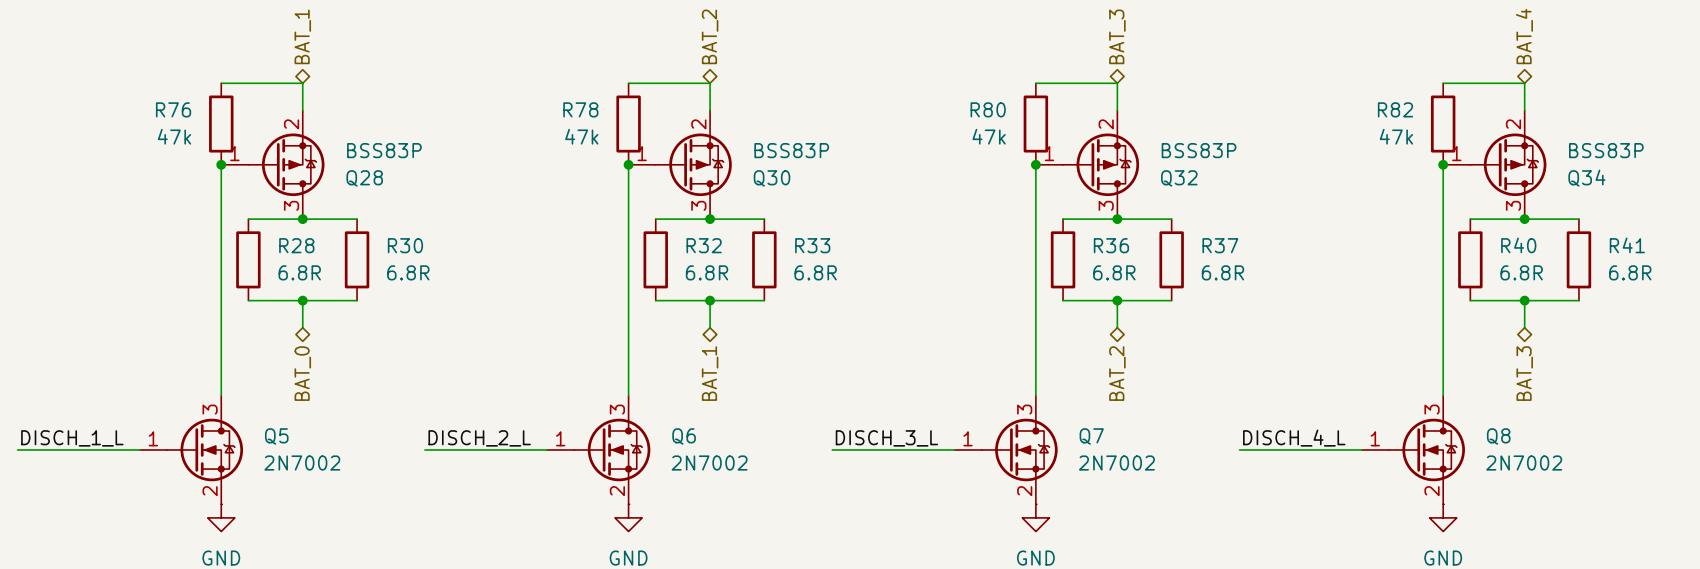
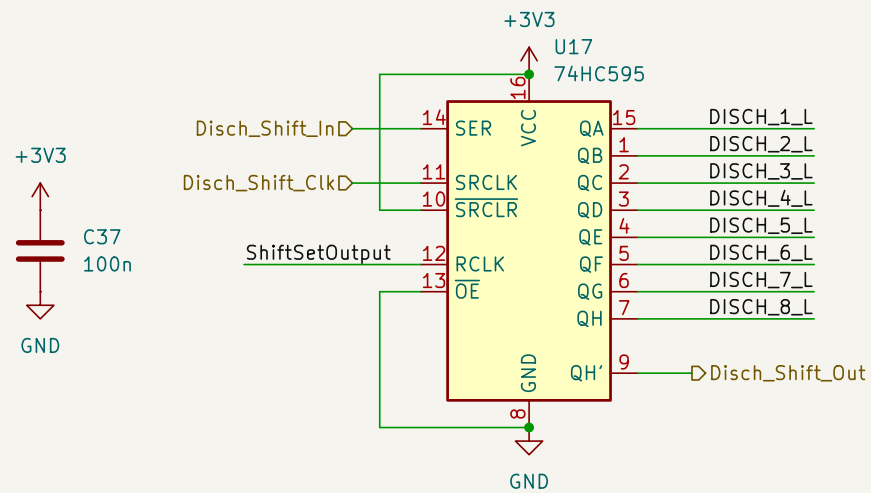



TODO: Search better PMOS

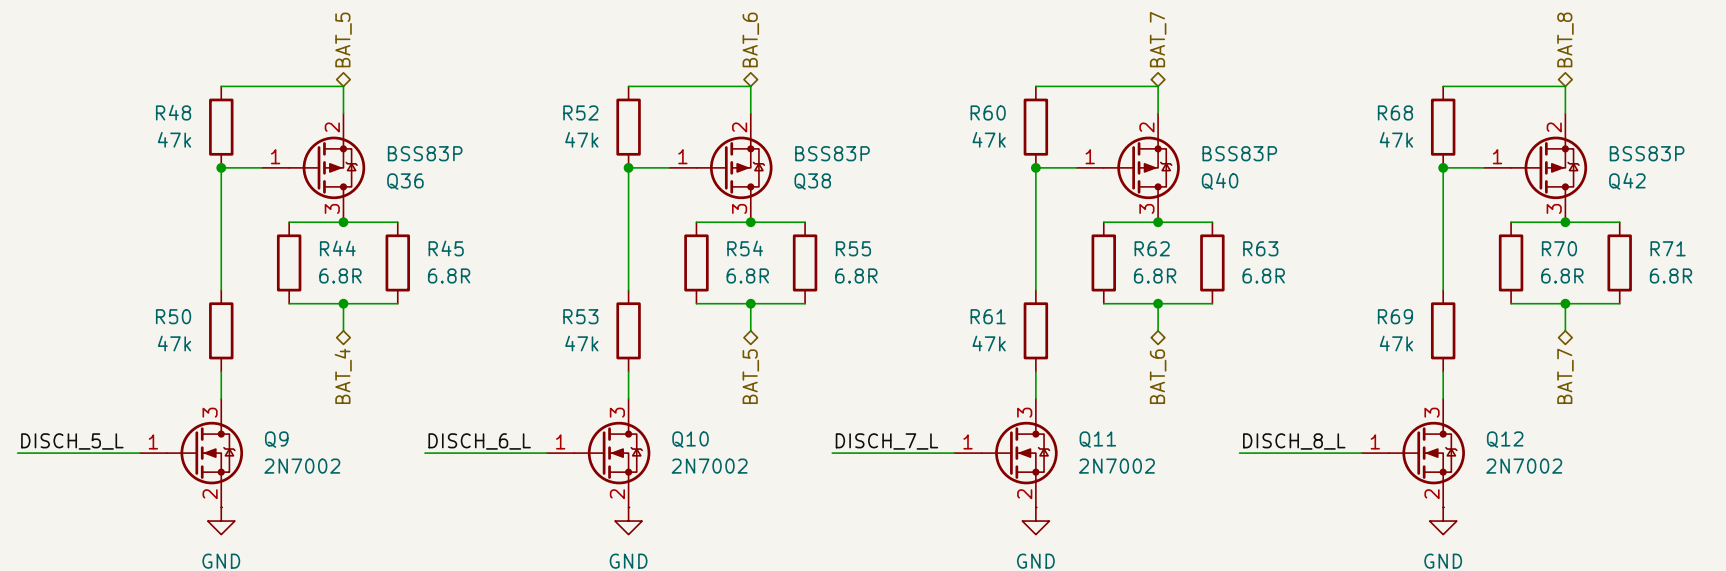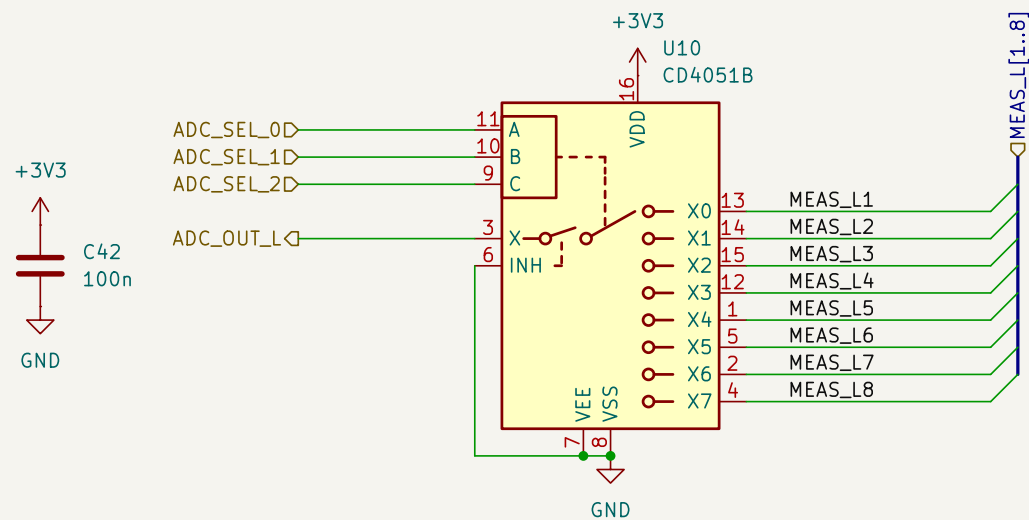

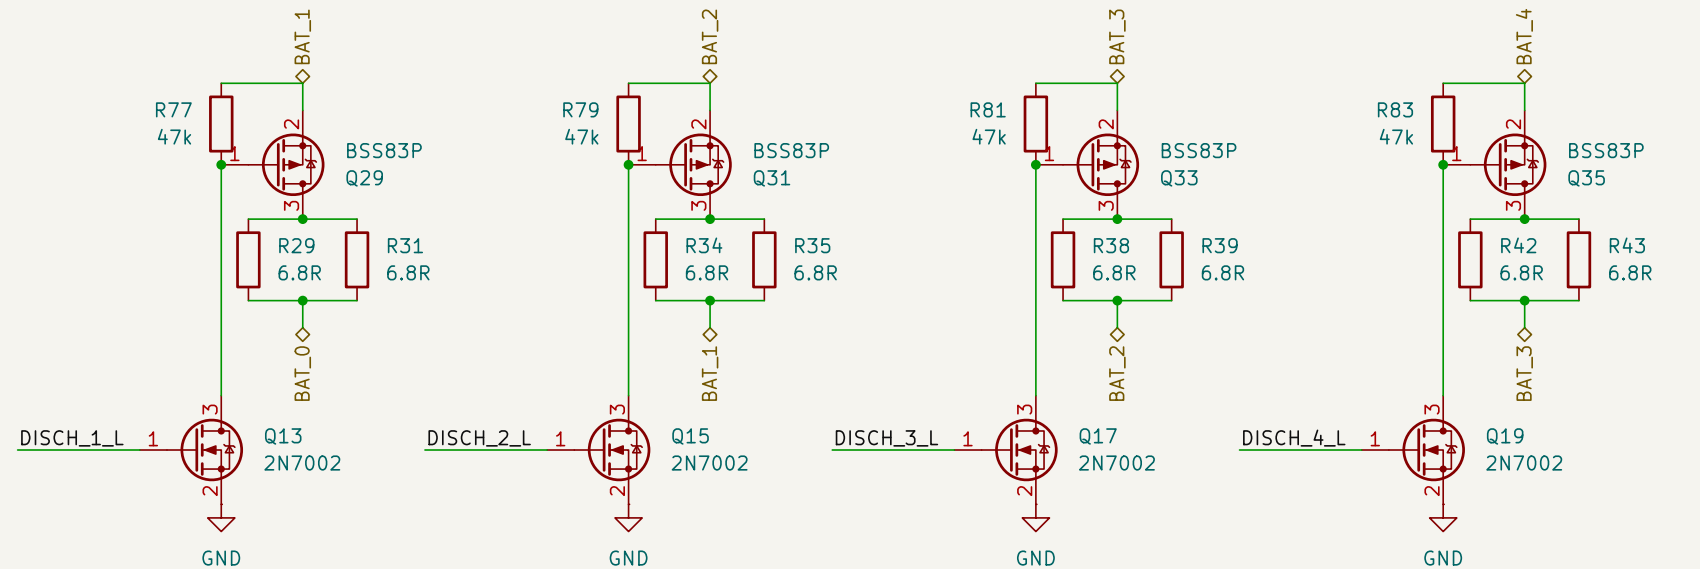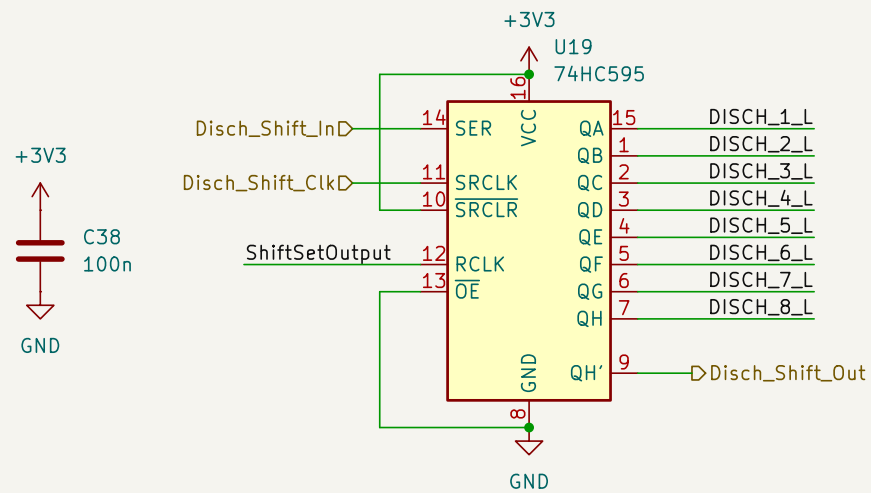


TODO: Search better PMOS

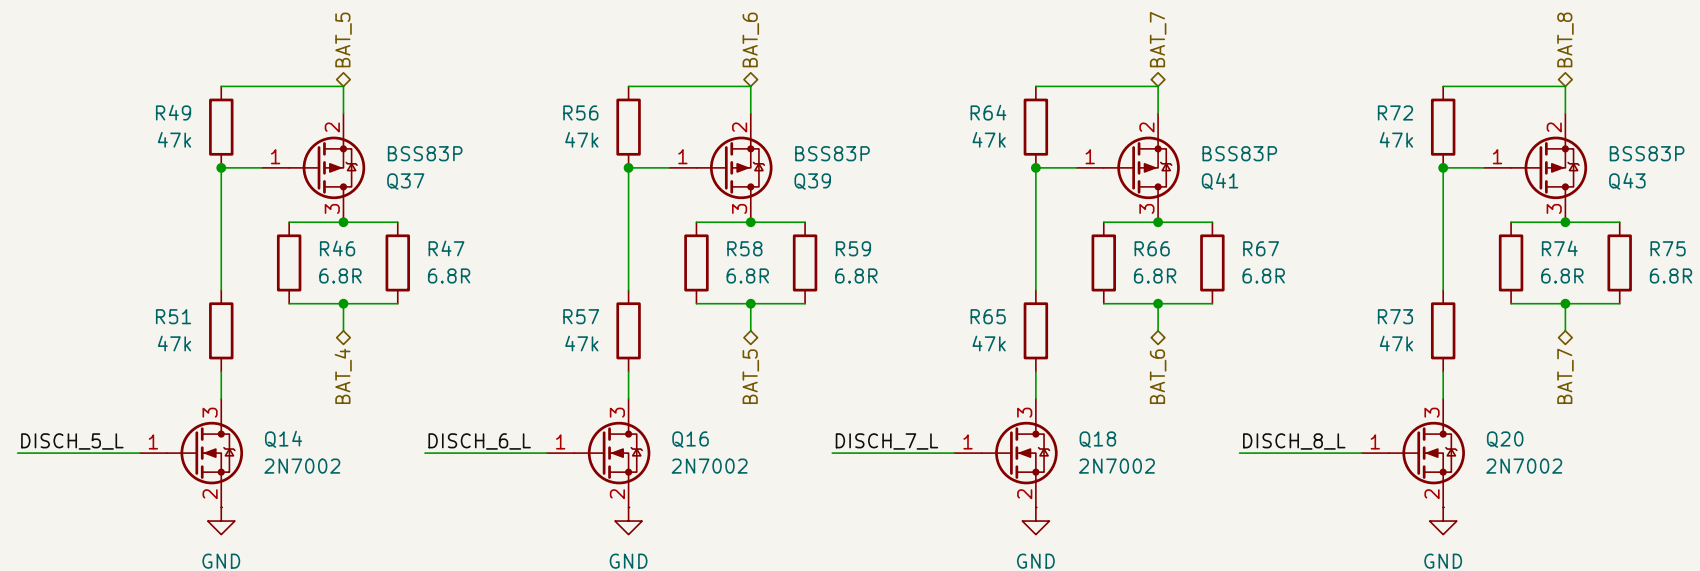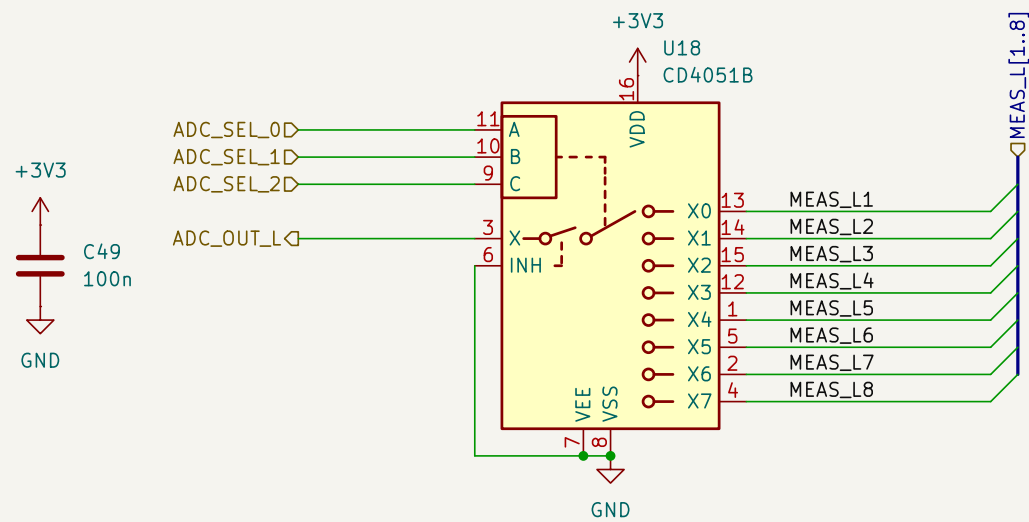


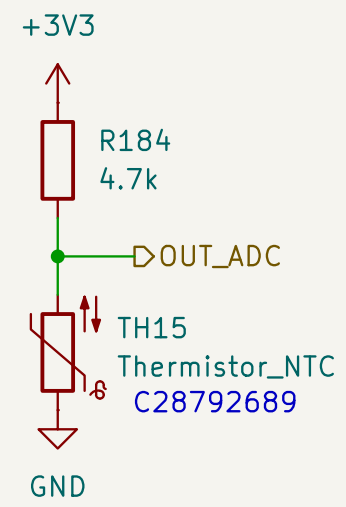


Thermistor has
~5k resistance at
40°, and therefore
the
counter-resistor
is set to this
value, too.

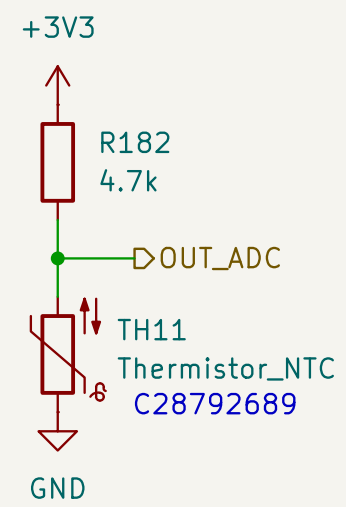


Thermistor has
~5k resistance at
40°, and therefore
the
counter-resistor
is set to this
value, too.

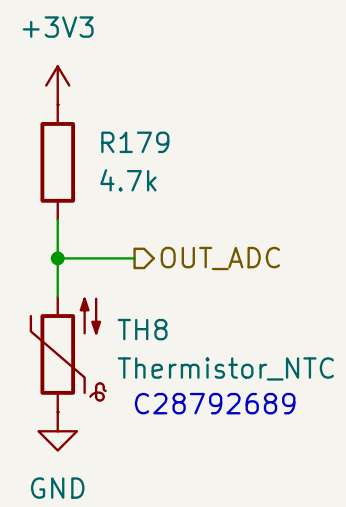


Thermistor has
~5k resistance at
40°, and therefore
the
counter-resistor
is set to this
value, too.

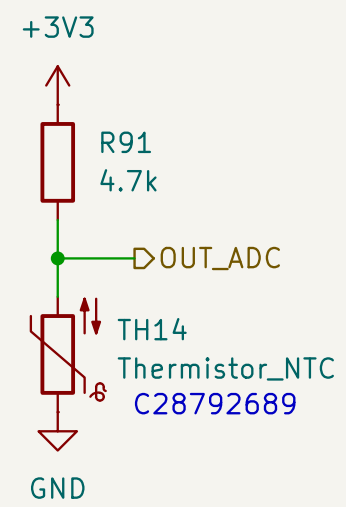


Thermistor has
~5k resistance at
40°, and therefore
the
counter-resistor
is set to this
value, too.

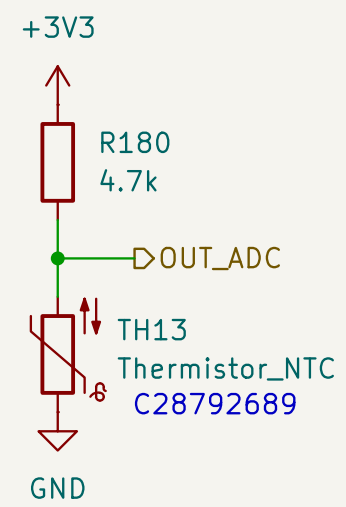


Thermistor has
~5k resistance at
40°, and therefore
the
counter-resistor
is set to this
value, too.

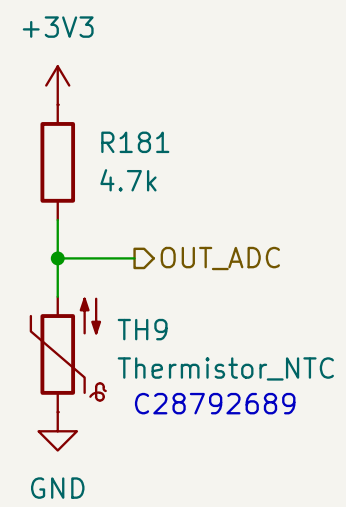



Thermistor has
~5k resistance at
40°, and therefore
the
counter-resistor
is set to this
value, too.


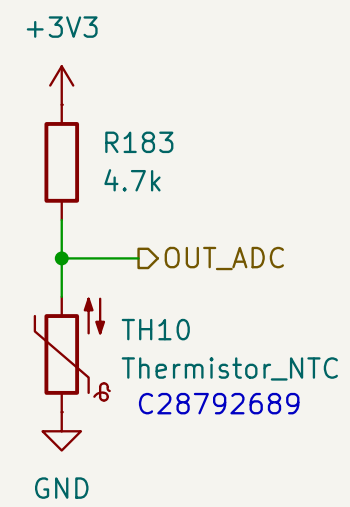


Thermistor has
~5k resistance at
40°, and therefore
the
counter-resistor
is set to this
value, too.

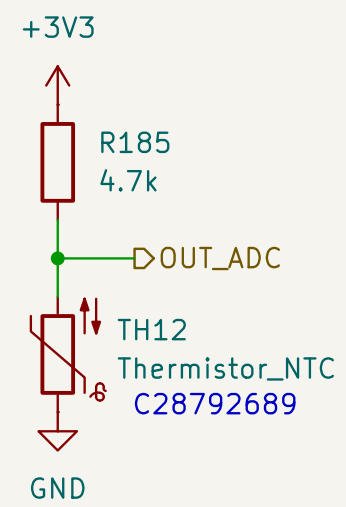


Thermistor has
~5k resistance at
40°, and therefore
the
counter-resistor
is set to this
value, too.

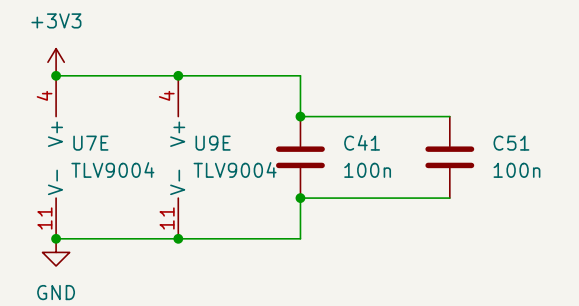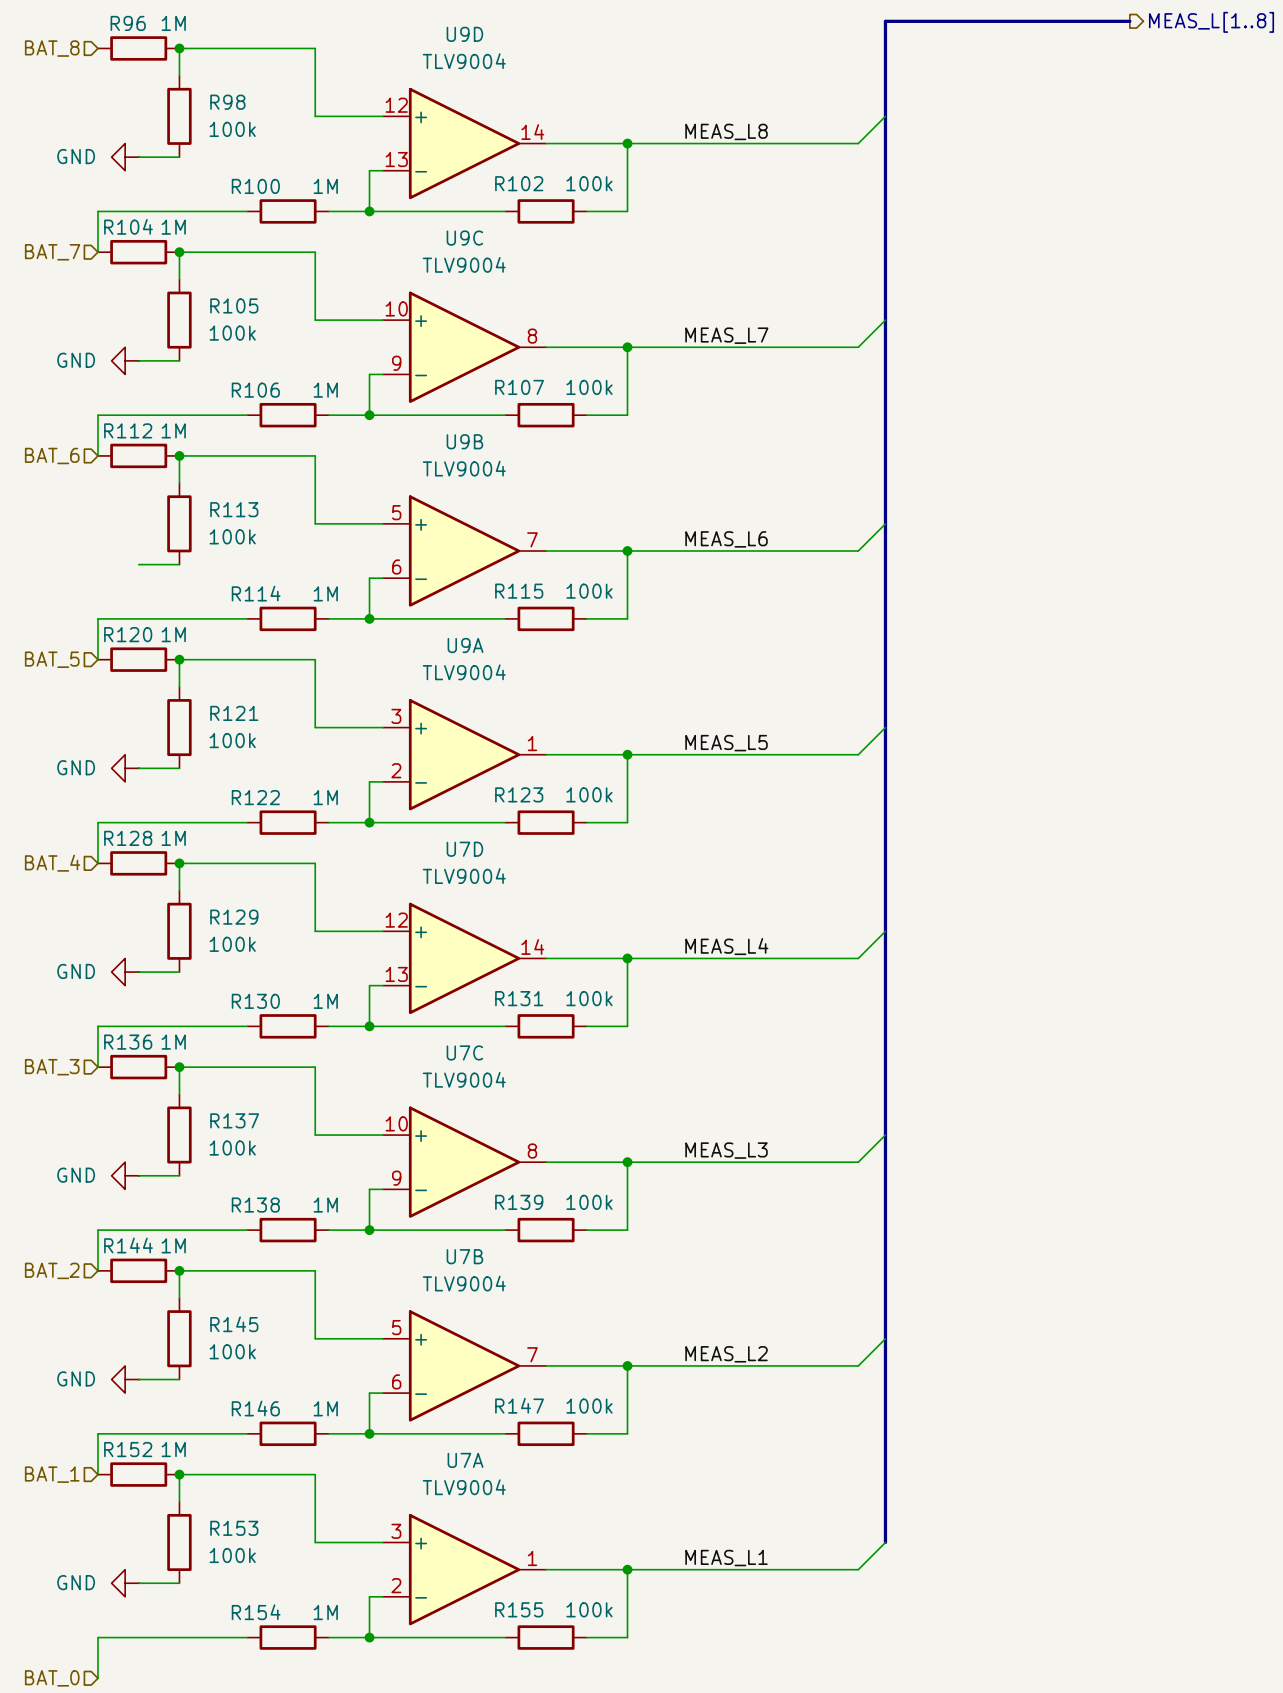

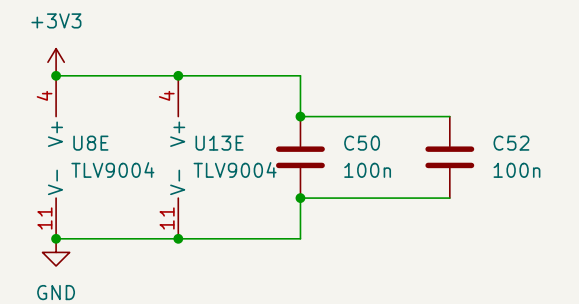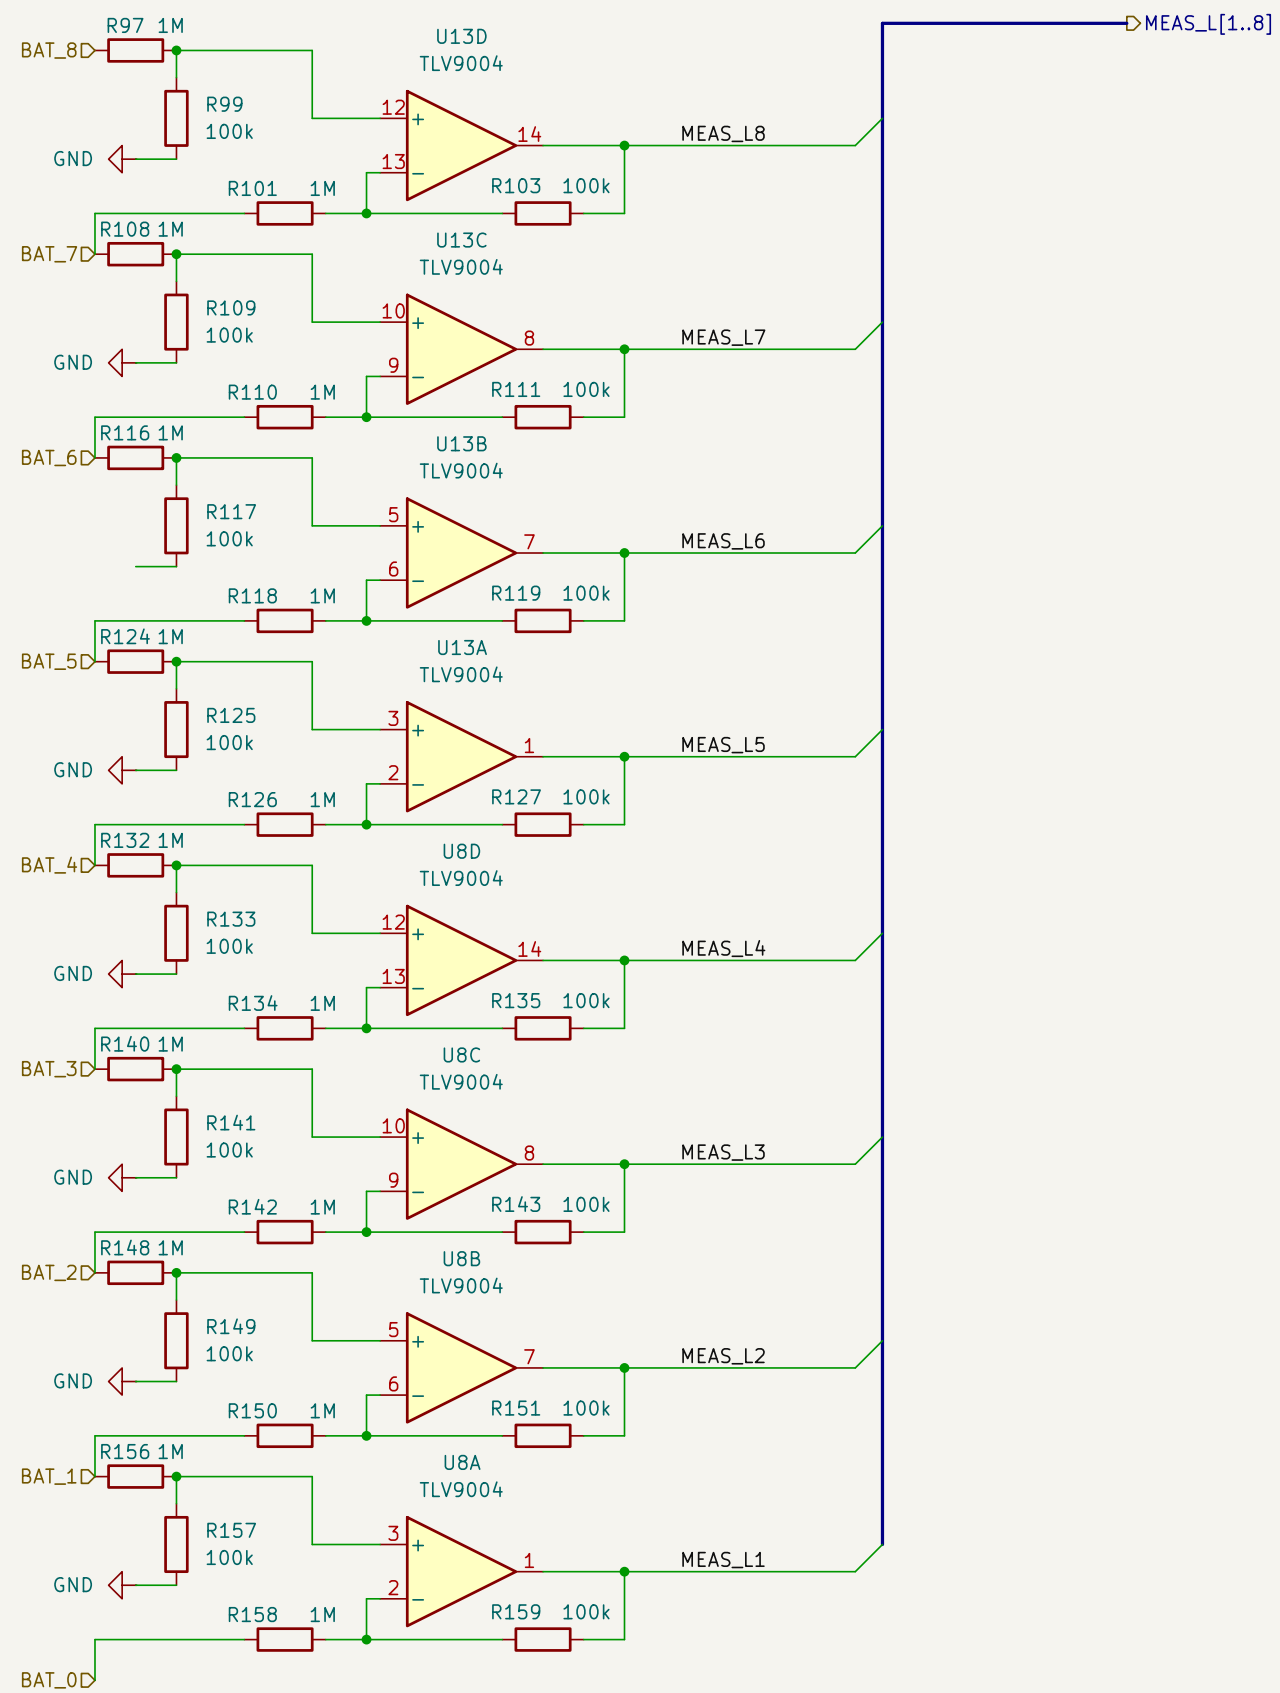


Choose any of the cells as the high voltage supply

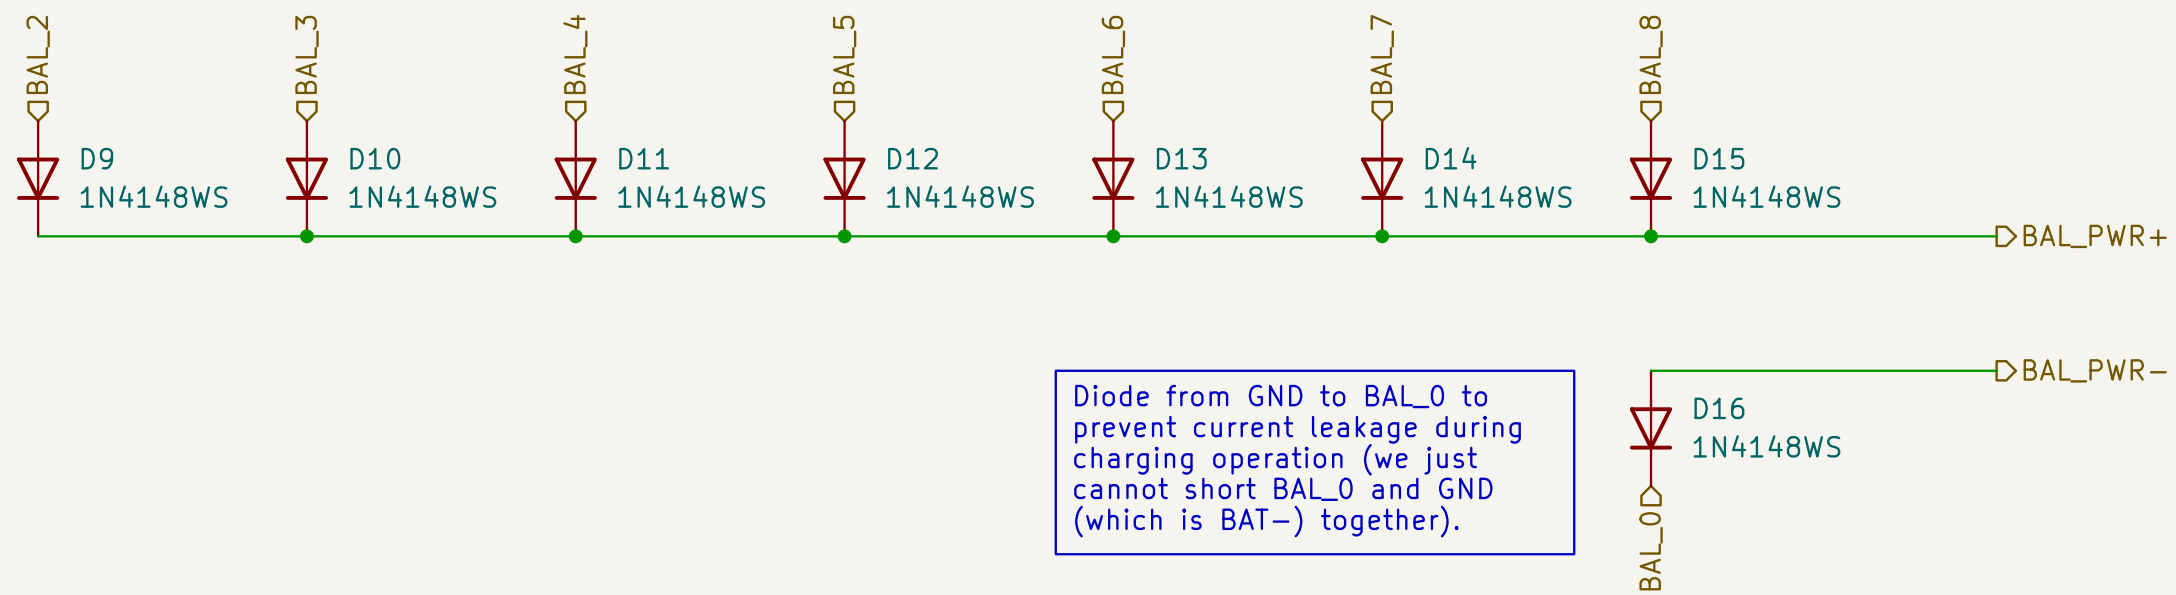

Diode from GND to BAL_0 to prevent current leakage during charging operation (we just cannot short BAL_0 and GND (which is BAT-) together).

Choose any of the cells as the high voltage supply

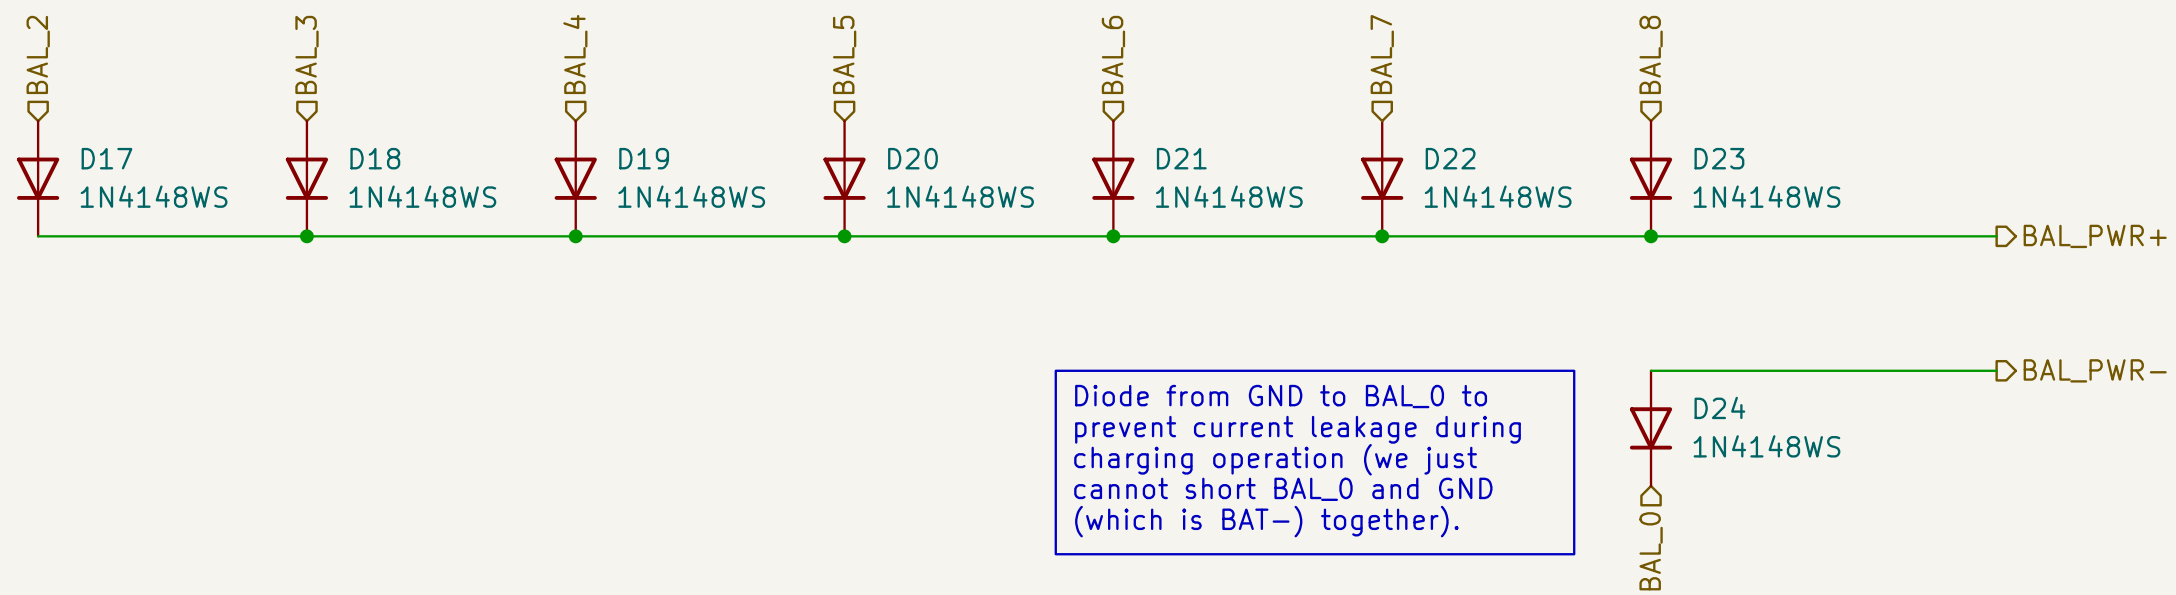

Diode from GND to BAL_0 to prevent current leakage during charging operation (we just cannot short BAL_0 and GND (which is BAT-) together).

