PeriWatch Surveillance™ 2022.1.002

Obstetrical Data Management System

PeriGen

Advanced
Perinatal Systems

System Administrator Manual

LAB00196 Rev 18.00

Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at their own expense.

NOTE: Changes or modifications to equipment not expressly approved in writing by WatchChild, LLC (PeriGen®) could void the user's authority to operate the equipment.

COPYRIGHT © WatchChild, LLC 2023. All rights reserved. No part of this text shall be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or by any information or retrieval system, without written permission from WatchChild, LLC (PeriGen).

CONFIDENTIAL INFORMATION
This manual is confidential and proprietary and remains the sole property of PeriGen. No portion may be copied, disclosed, or distributed without the prior written consent of WatchChild, LLC.

PeriWatch Surveillance is a registered trademark of WatchChild, LLC. All other products or brand names are trademarks or registered trademarks of their respective companies.

The information contained in this manual is subject to change without notice. PeriGen makes no commitment to update or keep current the information contained in this manual.

The only product warranty intended by PeriGen is the express, written warranty contained in the PeriWatch Surveillance license and purchase agreement. PeriGen makes no other warranty, express or implied, and in particular, makes no warranty of merchantability or fitness for any particular purpose.

Contents

Chapter 1: Preface

Description of Device 1-1
Intended Use 1-1
Indications for Use 1-2
Who Should Read This Manual 1-2
Manual Organization 1-3
Related Documentation 1-3
Summary of Warning and Caution Statements 1-4
Conventions 1-5
- Typographical 1-5
- Icons 1-6

Cleaning PeriWatch Surveillance Components 1-6
Proper Disposal of Non-Functional Equipment 1-6
Usage Tips. 1-6
- Signatures 1-6
- General Shortcuts 1-7
- Screen Buttons 1-8
- Pop-up Fields 1-10
- Tool Tip 1-10
- Check Boxes 1-10
- Time and Date Fields 1-11
  - Shortcut Keys 1-11
  - Drop-Down Calendar 1-11
- Determining Your PeriWatch Surveillance Version 1-12

Chapter 2: System and User Maintenance

User ID Security Maintenance 2-1
- Searching for System Users 2-3
- Adding New System Users 2-5
- Modifying Existing System Users 2-7
- Printing the List of System Users 2-8
- Forcing a Password Change for a Single User 2-8
- Forcing a Password Change for All System Users 2-9

User Access Restriction 2-10
Hospital Information Contacts 2-12
Role Maintenance 2-13
- Accessing Role Maintenance and Modifying Role Functions 2-13

Adding a New Role....2-15
Deleting Roles from Role Maintenance....2-16
Defining Role Features for Role Maintenance....2-16
Drop-Down Menus Reference Phrase Maintenance....2-20
Accessing the Reference Maintenance Screen....2-20
Customizing the Annotate Strip Screen....2-24
Customizing the Notes Screen....2-27
Set Up Categories and Phrases....2-27
Case-Sensitivity....2-27
Authorize Users to Verify Notes....2-27

Chapter 3: Patient Administration and Move/Delete Strip Functions

Patient Pregnancy Visit Administration....3-1
Move patient data from one patient to another patient....3-1
Move/Delete Strip Data....3-4
Moving or Deleting Strip Data....3-4

Chapter 4: Generating Reports

Accessing, Printing and Saving Reports....4-1
Printing Reports....4-2
Saving/Exporting Reports....4-3
Reports Navigation....4-3
Reports Viewer Toolbar Buttons....4-3
Sorting Report Data....4-5

Chapter 5: System Parameters Configuration Overview

Accessing the Parameters Configuration Screen....5-2
Configuration Screen Navigation....5-3
Configuration Screen Buttons....5-4
Inheriting Parameters....5-6
Setting and Changing Parameter Values....5-7
Parameters with an Inherit Check Box....5-7
Device-Specific Parameters....5-9
Adding and Deleting Configuration Nodes....5-10
Adding a Facility Group, Facility, or Bed Group....5-11
Adding a Workstation Group....5-12
Adding a Workstation....5-13
Verifying the Validity of a Workstation MAC Address....5-14
Adding a Bed....5-15
Adding Locales....5-16

Chapter 6: Configuring System Parameters

Facility Group and Facility Parameters....6-2

Workstation Group and Workstation Parameters 6-18
SurvBedList Parameter Configuration Procedure 6-29
Move Specific Beds from Configured to Available and Vice Versa 6-29
Move All Beds At Once from Available to Configured 6-29
Changing the Order of the Configured Beds List 6-29
Census Bedlist Parameter Configuration Procedure 6-30
Start Screen Parameter Configuration Procedure 6-30
StripMagnifyDefault Parameter Configuration Procedure 6-31
AlertBedList Parameter Configuration Procedure 6-31
AlertPresentation Parameter Configuration Procedure 6-32
CensusPatientColumns Procedure 6-33
CensusFieldList Parameter Configuration Procedure 6-33
CensusFieldListSC Parameter Configuration Procedure 6-35
CensusStatusColors Parameter Configuration Procedure 6-37
CensusStatusLabels Parameter Configuration Procedure 6-38
Flowsheet Parameter Configuration Procedure 6-39
FHR Category Colors Configuration Procedure 6-39
Strip Analysis Configuration Procedure 6-40
Bed Group and Bed Parameters 6-40
Alert Parameters 6-43
Upgrading to version 1.6.000 from a previous version 6-48
List of Parameters requiring restart 6-49

Chapter 7: Troubleshooting Tips

Resetting the Workstation 7-1
Workstation Seems to Have No Power 7-1
PeriWatch Surveillance Displays the Login Screen but You Cannot Log In 7-1
Screen is Frozen 7-2
Blank Entry on a Flowsheet 7-2
Audible Alert Does Not Sound 7-2
NIBP and SpO2 Sensor Data is Not Being Received 7-3
Fetal ECG Label Displays, Maternal Does Not 7-3
Only First Mark Button Press Puts Mark on Strip 7-3
Server Not Recognizing Newly Attached Fetal/Maternal Monitor 7-3
Maternal Monitor Data is Not Getting to PeriWatch Surveillance 7-4
Monitor Strip Display is Unevenly Distributed on Surveillance Screens 7-4
Monitor Strip Changes Colors 7-4
Downtime and Data Recovery 7-5
Loss of Data Collection and Display 7-5
Hospital Network Goes Down 7-5
PeriWatch Surveillance Server Goes Down 7-5
Data Restoration Delay After DAS-to-Server Connection Downtime 7-6
Application Downtime and Data Recovery Recommendations 7-6

Appendix A: List of Abbreviations

Index

Chapter 1

Preface

Description of Device

The PeriWatch Surveillance™ Obstetrical Data Management System (PeriWatch Tracings) includes the capability to record, store, and display fetal and maternal data from initial prenatal care and including antepartum testing, through full newborn care. These tests are done through labor, delivery, and discharge. Data from fetal monitoring and maternal vital signs monitoring equipment can be recorded, stored, and displayed in PeriWatch Surveillance.

PeriWatch Surveillance enables clinicians to simultaneously view a patient's fetal strip and medical data. Interaction with PeriWatch Surveillance is accomplished through a graphical user interface (GUI). Users can input data, select options and activate buttons on the screen by using a PC keyboard and mouse. In addition, a physician who has been granted access to the patient's PeriWatch Surveillance record by the clinical facility can use a PC to access the patient's records remotely from any location that has authorized access to the PeriWatch Surveillance server, and can remotely edit or enter remarks pertaining to the patient's fetal strip.

Intended Use

PeriWatch Surveillance is intended to be used as a complete Obstetrical Data Management System, which has the ability to record, store, and display data from fetal and maternal vital signs monitors. It manages patient information from the initial prenatal care to post-delivery discharge. PeriWatch Surveillance organizes clinical data that would normally be provided on paper records or other clinical systems and devices. This system also serves as a decision support tool and serves as an electronic medical record.

Indications for Use

PeriWatch Surveillance is indicated for use in a hospital/clinical environment.

CAUTION: Federal law restricts this device to be sold by or on the order of a licensed physician.

CAUTION: PeriWatch Surveillance is not intended to be a diagnostic device. You must follow good clinical practices, your hospital's guidelines and policies for patient care, and other recognized acceptable standards such as the Association of Women's Health Obstetrics and Neonatal Nurses (AWHONN) and American College of Obstetrics and Gynecology (ACOG), which prescribe patient assessment intervals. Use of PeriWatch Surveillance is not intended to replace clinical assessment and evaluation of the patient. Whenever there is any question of diagnosing fetal well-being, a review of the fetal monitor strip is appropriate.

Who Should Read This Manual

This manual is designed and prepared for System Administrators working with and administering PeriWatch Surveillance.

The System Administrator's role is important in the installation and maintenance of PeriWatch Surveillance. The System Administrator should understand the overall information systems strategy of for the unit and the hospital as well as must be available to consult with and to implement the process. The System Administrator is the hospital liaison with PeriGen Technical Support regarding decision- making for technical areas. Technical areas may include, but are not limited to, alert configuration, data storage, etc. During the training of staff, the System Administrator is responsible for coordinating classes, setting up the classroom, determining policies, and answering specific questions regarding final details of the software and implementation of the system.

Surveillance highly recommends that the System Administrator or a “Super User” be present in each training class.

Manual Organization

This manual is organized into the following chapters:

- Chapter 1, Description of Device, provides introductory information about PeriWatch Surveillance, including usage and navigation tips for System Administrators.
- Chapter 2, "System and User Maintenance", provides information about how to perform system maintenance on PeriWatch Surveillance.
- Chapter 3, "Patient Administration and Move/Delete Strip Functions", provides information about patient-specific administrative functions.
- Chapter 4, "Generating Reports", provides information about generating, viewing, saving and printing the various types of PeriWatch Surveillance reports available to System Administrators.
- Chapter 5, "System Parameters Configuration Overview", provides introductory and navigation information you will need to modify PeriWatch Surveillance configuration parameters.
- Chapter 6, "Configuring System Parameters", describes all PeriWatch Surveillance system configuration parameters, their values ranges (where applicable), default settings and other information to aid you in customizing your system.
- Chapter 7, "Troubleshooting Tips", provides information about the most frequently asked questions regarding how to diagnose and solve problems.
- Appendix A, List of Abbreviations, contains definitions of all abbreviations used on PeriWatch Surveillance screens.
- Index, contains an alphabetical listing of topics covered in this manual.

Related Documentation

For additional PeriWatch Surveillance information, refer to the following documentation:

- *PeriWatch Surveillance User Manual, (LAB00197)*
- *PeriWatch Surveillance Training Manual, (LAB00200)*
- *PeriWatch Surveillance HL7 Interface Specifications Manual, (LAB00241)*
- *PeriWatch Surveillance Release Notes (LAB00318)*
- *PeriWatch Surveillance Newborn Neonatal Data Management System User Manual, (LAB00691)*

Summary of Warning and Caution Statements

This section provides a summary of all the warning and caution statements included in this manual.

Chapter 1, “Description of Device”

CAUTION: Federal law restricts this device to be sold by or on the order of a licensed physician.

CAUTION: PeriWatch Surveillance is not intended to be a diagnostic device. You must follow good clinical practices, your hospital's guidelines and policies for patient care, and other recognized acceptable standards such as the Association of Women's Health Obstetrics and Neonatal Nurses (AWHONN) and American College of Obstetrics and Gynecology (ACOG), which prescribe patient assessment intervals. Use of PeriWatch Surveillance is not intended to replace clinical assessment and evaluation of the patient. Whenever there is any question of diagnosing fetal well-being, a review of the fetal monitor strip is appropriate.

Chapter 2, “System and User Maintenance”

CAUTION: Do not perform this procedure unless you alert all staff in advance that you will be forcing a password change for all system users.

Chapter 3, “Patient Administration and Move/Delete Strip Functions”

CAUTION: Moving or deleting strip data can result in valid patient data being over-written or deleted. Do not perform the procedure below unless you are absolutely certain that moved data will not overwrite valid data and that data being deleted is truly extraneous.

Chapter 4, “Generating Reports”

CAUTION: Always print from your defined default printer. Attempting to print a report from a non-default printer can cause a sudden closing of the PeriWatch Surveillance client. If the normal default printer is for any reason unavailable and you have other printers from which to choose, make one of the other printers the default before attempting to print a report.

Chapter 5, "System Parameters Configuration Overview"

CAUTION: Adding one or more beds or modifying bed information for an existing bed requires that you restart the PeriWatch Surveillance server before admitting any patients to the added or modified beds.

CAUTION: Do not modify a bed that is occupied by a patient who is currently being monitored by PeriWatch Surveillance.

CAUTION: When adding or renaming a bed in the system configuration, the alert counters for all active beds are reset to zero (0). This prevents errors on the Census and surveillance views when beds are added or renamed.

Chapter 6, "Configuring System Parameters"

CAUTION: Do not disable bed alerting to any workstation that may be used by a caregiver who is or may be responsible for a patient who is in that bed.

CAUTION: Do not disable bed alerting to any workstation that is used by or may be used by a caregiver who is responsible for that bed. Doing so will prevent the caregiver from knowing that there is a problem in that bed and acknowledging and responding to the alert. Alert annotations will still be placed on the bed's strip, but will show as unacknowledged alerts.

Chapter 7, "Troubleshooting Tips"

CAUTION: Data retention and recovery may not be possible during an interruption in service to PeriWatch Surveillance. To ensure that important medical record information is retained, always run fetal monitor paper when experiencing service delays or outages. Always revert to hospital standard practices for the completion and retention of patient medical data.

Conventions

Typographical

This guide uses the following typographic conventions:

Bold Type	Indicates a specific area within PeriWatch Surveillance, or a command or function.
Italic Type	Indicates a special term, emphasis, or the title of a book.
`Monotype`	Indicates the specific text to type into a field.
Blue text	Indicates a cross-reference hyperlink. When viewing this manual on a PC, clicking the blue cross-reference will take you to the referenced location in the manual.

Icons

The following Icon Key shows the icons you may find in the text of this manual. When an icon appears, it indicates the following:

NOTE: This icon denotes a tip or note for more efficient operation of the system.

CAUTION: This icon denotes a caution statement. Caution statements indicate a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury to the user or patient, or equipment damage.

WARNING: This icon denotes a warning statement. Warning statements indicate a potentially hazardous situation, which, if not avoided, may result in serious injury or death.

Cleaning PeriWatch Surveillance Components

To assure proper functioning of PeriWatch Surveillance, regular cleaning of the system components like keyboard, mouse, monitor, and so on, is necessary. It is advisable to keep fluids away from the workstation area to prevent possible spills that can damage the components.

Proper Disposal of Non-Functional Equipment

Follow the manufacturer's user manual for proper disposal of non-functional hardware components. For non-functional Data Acquisition Servers (DASs) and instructions on proper disposal, contact PeriGen Technical Support.

Usage Tips

Signatures

Several PeriWatch Surveillance screens have a Signature button and/or field that enables — and in some cases requires — you to certify that you have personally performed the procedures recorded on that screen. However, signatures entered on screens are for PeriWatch Surveillance accountability purposes only. Signatures in PeriWatch Surveillance are not considered electronic legal document signatures.

General Shortcuts

- Press Tab on the keyboard after entering data in each field instead of pressing Enter. To go back to the previous field, press Shift+Tab.
- Press Tab to automatically calculate any number of fields such as the EDD, Age, and Labor Stages. Pressing Tab after entering data into these types of fields will calculate the value for the associated field.
- The F3 key is the same as selecting **OK**.
- The F4 key is the same as selecting **Cancel**.
- Pressing the F6 key while the cursor is in a field enables you to see the history of changes to that field, which serves as an audit trail.
- The F10 key activates the numeric keypad or a pop-up window, depending on the field.
- To close PeriWatch Surveillance, go to the Census screen or to a Single- or Multi-Patient Surveillance screen and then press the keyboard Ctrl+T keys. Ctrl+T places the screen within a standard Windows frame with an X (close) box in the upper-right corner. Selecting the X closes PeriWatch Surveillance. (If you decide after pressing Ctrl+T that you do not want to close PeriWatch Surveillance, press Ctrl+T again to remove the Windows frame.). The system can also be closed by pressing Alt+F4. If the system is not on the census board, Alt+F4 will need to be pressed again. (Single Sign-On Surveillance screen has the standard Windows frame. Ctrl+T is not required for Single Sign-On.)
- To minimize the Single Sign-On Surveillance screen to the task bar, click the **Minimize** button on the standard Windows frame in the upper right corner (Figure 1-2), or click the menu button in the upper left corner (Figure 1-1) and select **Minimize**.
- To maximize the Single Sign-On Surveillance screen, click the **Maximize** button on the standard Windows frame in the upper right corner (Figure 1-2), or click the menu button in the upper left corner (Figure 1-1) and select **Maximize**.
- To restore the screen to the previously adjusted size and location, click the **Restore** button on the standard Windows frame in the upper right corner (Figure 1-2), or click the menu button in the upper left corner (Figure 1-1) and select **Restore**.

NOTE: If the Single Sign-On screen is currently displayed and the screen size and location have been modified, then if Single Sign-On is launched again the adjusted screen size and location are restored.

- The arrow on the end of the screen on the surveillance button row (Figure 1-3) returns the Single Sign-On Surveillance screen to its original size and location.
- Right-clicking the **Surveillance** buttons displays the full list of surveillance buttons available for that surveillance window (Figure 1-4).

Figure 1-1 *Menu button*

Figure 1-2 *Window buttons*

Minimize, Maximize, Close

Minimize, Restore, Close

Figure 1-3 *Restore screen to original size and location*

Figure 1-4 *Surveillance menu*

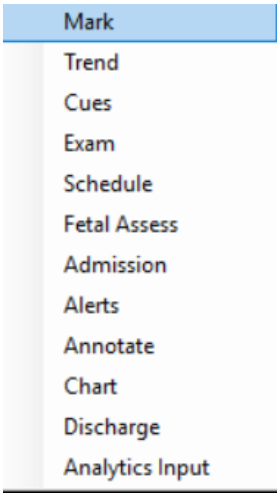

Screen Buttons

You will encounter the buttons shown at right on many PeriWatch Surveillance screens. While OK and Cancel appear on most screens, Next and the two arrow buttons appear only in context, as described below.

Next Appears on all screens where entered data is charted as a record in one or more flowsheets. Saves and charts data, clears the data entry fields and leaves the current screen up for charting another entry.

OK Saves screen data changes or authorizes an action and takes you out of the current screen. Only use this button if you have changed the screen data.

Cancel Deletes data that you have just entered but not yet saved and closes the current screen. Only use this button if you have not changed any screen data, or do not want to save any changes.

⇦ Appears only when a screen is part of a sequence of two or more related screens. The back arrow button takes you back to the previous screen in a sequence of related screens.

⇨ Appears only when a screen is part of a sequence of two or more related screens. The forward arrow button takes you to the next screen in a sequence of related screens.

System Function buttons, shown in Figure 1-5, are displayed across the bottom of the Census and Surveillance screens, above the status bar, and perform the functions described below:

Figure 1-5 *System Function Buttons and Status Bar*

Census	Displays the Census screen, which lists all unit beds and basic information about each occupied bed. Bed numbers are color coded to visually indicate each patient's status according to the hospital's policy.
Archive	Displays the Archive Retrieval screen, which provides access to archived patient records and enables the reverse discharge of a patient who has been discharged from PeriWatch Surveillance.
View Strips	Views selected single or multiple patient beds on a Surveillance screen.
Back	Takes you back to the previous Surveillance screen.
Maternal	Gives access to the Maternal Census screen, which shows the list of bed numbers and patient names with the most recent vital signs as captured from the Electronic Fetal Monitor or an approved Physiologic Monitor.
System	Provides access to system administrative functions such as generating reports, setting user authorizations and configuring system parameters.
Newborn	Opens the application to the PeriWatch Surveillance Neonatal Record. This is only accessible within the Comprehensive Chart. There are two options for the Newborn Record – the Classic option will be described in this manual. The separate Newborn Application has its own operating manual.
Logout	Logs a user off the system. The user's name is removed from the status box. The current screen remains displayed without patient identification, but the next user must log in before using the system.
Help	Displays online help (by linking to the manuals and release notes) and a phone number for PeriGen Technical Support.

The small gray status bar is located at the bottom of the screen below the System Function buttons, as shown in Figure 1-5. The status bar shows the following:

- Workstation IP address/Workstation MAC Address (displays in lower left corner; click the IP area to toggle between the IP and MAC Address)
- Username (to the right of the workstation number)
- Status Message/Locale (to the right of the username) (click the status message to toggle between Status Message and Locale)
- Current date and time (to the right of the status message)
- Number of alerts (to the right of the date and time). Click this number to manually open the Alert Management popup window to show all active alerts one by one (even alerts on hold at this workstation). For more information, see PeriWatch Surveillance *User Manual, (LAB00197)*.

Pop-up Fields

For drop-down fields with a single selection:

- While entering a doctor's or nurse's name, entering the first few letters of their last name brings up the correct name in the field if theirs is the only name beginning with those letters. If more than one name begins with the typed letters, all names starting with those letters are displayed.
- On any field with drop-down menu choices, entering the first letter of an option selects the option or takes you to the portion of the list with options that start with that letter unless it is a multi-select drop down.

Tool Tip

After values are selected on any field with drop-down menu choices, the values can be viewed by hovering over the field with the mouse. A tool tip is displayed with the selected values listed.

Figure 1-6 *Example of a tool tip*

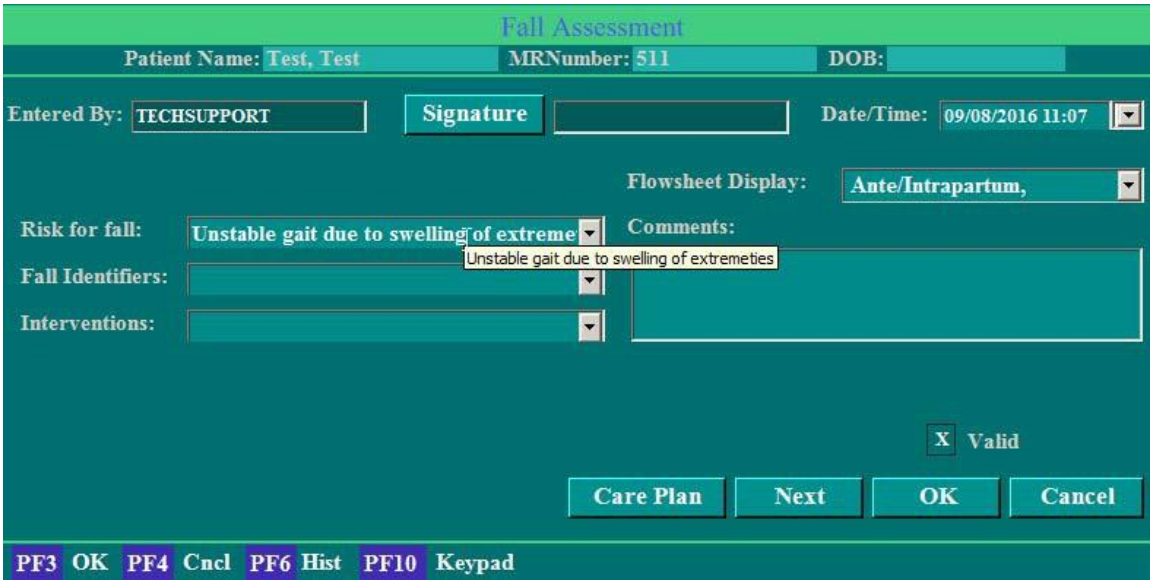

Check Boxes

Throughout PeriWatch Surveillance, you will encounter various screens with small check boxes filled with a question mark, as shown at right.

The question mark (?) in the check box indicates that you have either not answered the question or do not know the answer. An X (at right, top) indicates Yes and a blank check box (at right, bottom) indicates No.

To provide or change an answer, simply select the box to toggle it to the next state (**?** to blank, blank to **X**, or **X** to **?**). Select **Clear**, when available, to set all of the check boxes at once to blank. This indicates that the answer to all of the questions is No. You can then individually select the check boxes where you want to answer Yes.

Time and Date Fields

All PeriWatch Surveillance screens containing date fields where you can specify a date offer two ways to specify the dates: Using shortcut keys or using the drop-down calendar feature. Both are described below.

Shortcut Keys

You can use the following shortcut keys to enter time and date:

- Type `N` or `T` to insert the current date or the current date and time; `N` and `T` both generate the same values.
- Type `Y` to insert yesterday's date or yesterday's date and time 24 hours prior to the current time.

NOTE: The date format defaults to the long format of *mm/dd/yyyy* (for example, 06/01/2015), but your location may have been customized. For example, your date format can be configured to a long format of dd/mm/yyyy (for example, 01/06/2015), or to a short length (for example 6/1/15). The time should be entered using a 24-hour clock, for example, 2100 or 21:00 for 9 P.M. For midnight, enter 0000 or 00:00.

- If you enter only a time into a date/time field, PeriWatch Surveillance assumes the current date and inserts that date into the field.
- You may manually type the date in the field, with or without separators, and the format in the field will appear with configured separators. For example, typing 12062012 will look like 12/06/2012 in field. However, if configured to short length (i.e. 6/6/12) you must use separators.

Drop-Down Calendar

1. Select the ▼ arrowhead. The Calendar pop-up opens, as shown below.

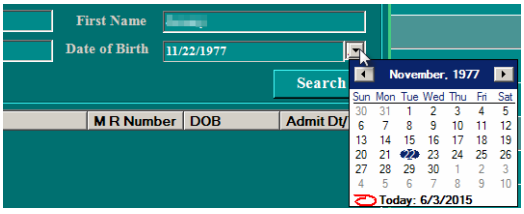

NOTE: The date on the dropdown calendar is always in a *dd/mm/yyyy* format despite the configured date format in the field.

2. To select the month, select the ◀ or ▶ arrowheads to navigate to previous or subsequent months in the same year, respectively, or select the *current* month to display a drop-down list of months, as shown at right.

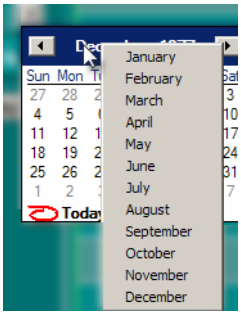

3. Select the month from the list.
4. To select the year, select the currently displayed year, for example, 2015 (the year shown below). Two buttons — ▲ and ▼ — appear next to the year, enabling you to increment up to the next or down to the previous year.

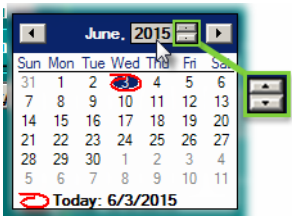

NOTE: The system allows future dates ONLY for Gestational Age, Expiration dates and Next-Appointment dates. Users are not allowed to enter future dates in any other date/time field.

Determining Your PeriWatch Surveillance Version

1. Select the **System** button. The System Functions Menu screen opens.
2. Select **About Surveillance**. The About PeriWatch Surveillance screen appears, similar to that shown in Figure 1-7.

Figure 1-7 *About PeriWatch Surveillance Screen*

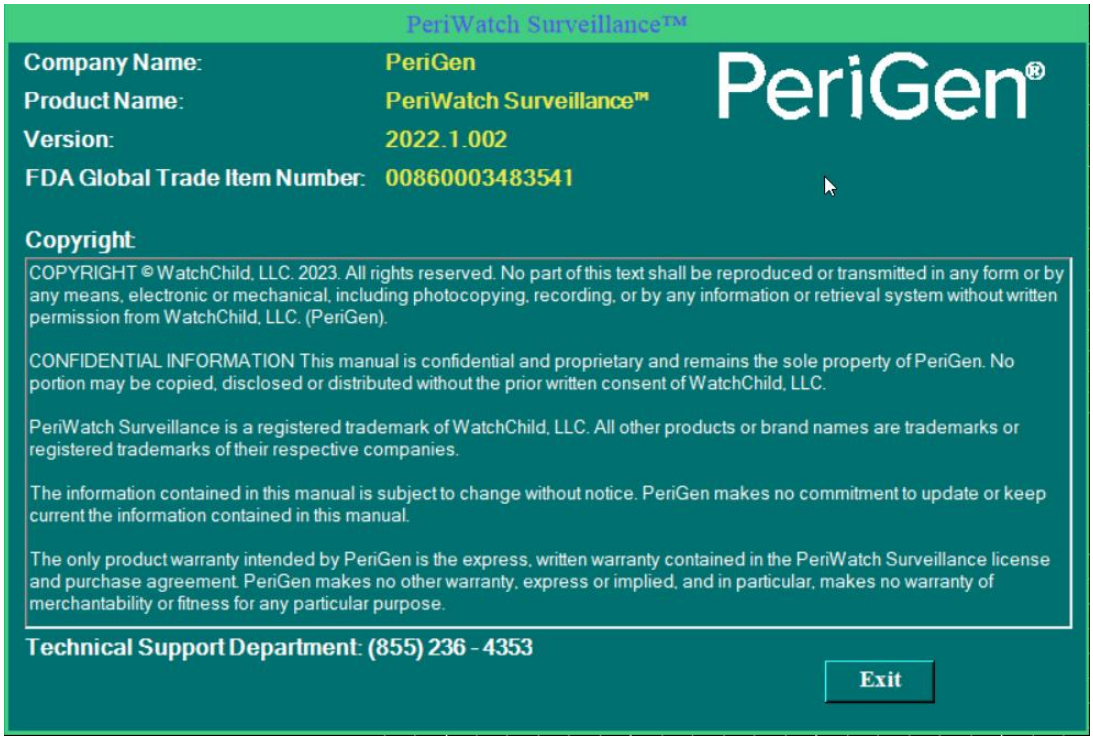

Chapter 2

System and User Maintenance

System Administrators use the System Functions menu to access and update system-level information such as passwords, activating and deactivating users, defining roles, and specifying various drop-down menu options.

This chapter describes the following procedures:

- User ID Security Maintenance
- User Access Restriction
- Hospital Information Contacts
- Role Maintenance
- Drop-Down Menus Reference Phrase Maintenance

User ID Security Maintenance

System Administrators perform all the tasks associated with user security maintenance. System Administrators can add new users and inactivate users who no longer use PeriWatch Surveillance.

Use this procedure to access the User Maintenance screen. You must have security privileges to access this screen.

1. From any screen, select the **System** button**.** The System Functions Menu screen appears, as shown in Figure 2-1.

Figure 2-1 *System Functions Menu Screen*

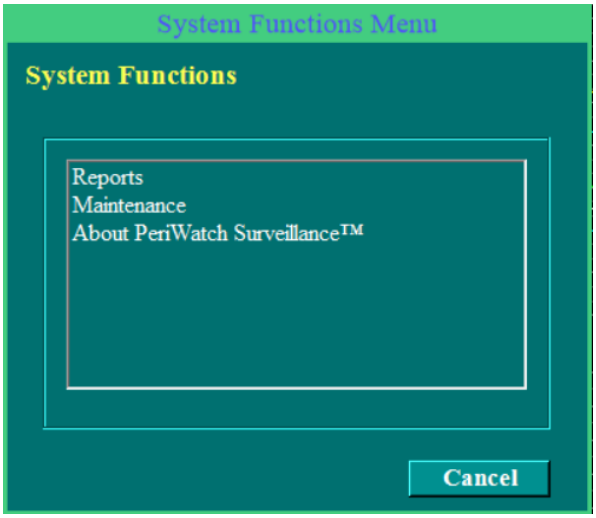

2. Select **Maintenance**. The System Functions Menu screen refreshes with a list of maintenance functions, as shown in Figure 2-2.

Figure 2-2 *System Functions Menu - Maintenance Screen*

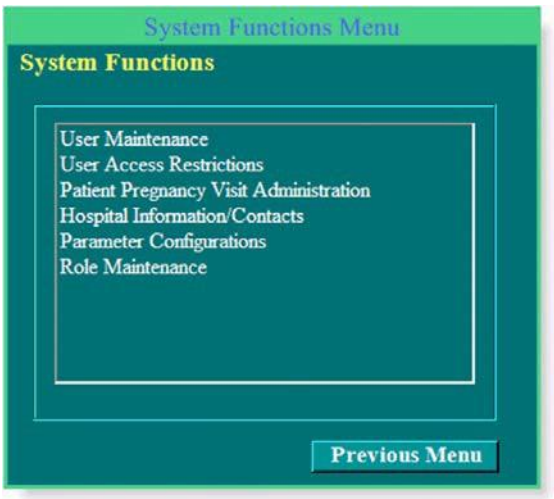

3. Select **User Maintenance**. The User Maintenance screen appears, as shown in Figure 2-3.

Figure 2-3 *User Maintenance Screen*

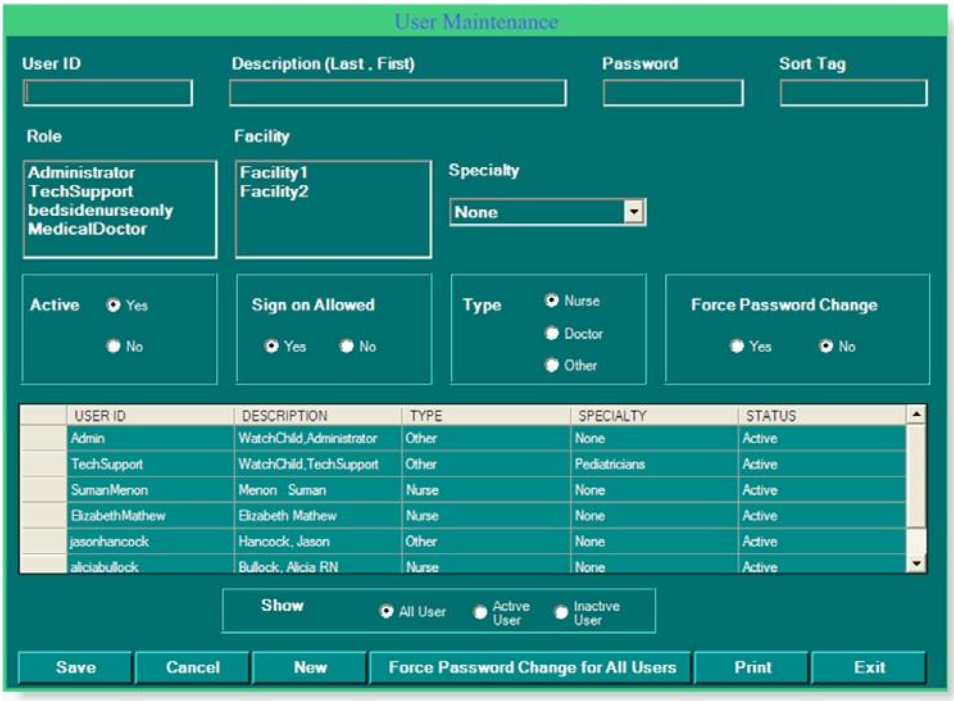

4. You can now make changes to an existing user's information or add a new user.

   To make changes to an existing user — except for changing the user ID itself, which cannot be changed — select a user from the list of users displayed in the lower half of the screen. The User Maintenance screen populates the user information fields and radio buttons with the selected user's previously defined data. Make any desired changes, then select the **Save** button to apply the changes.

To add a new user, select the **New** button and then fill in the fields and make other selections as needed for the new user. See "Adding New System Users" on page 2-5 for detailed information about adding new users.

Table 2-1 provides descriptions of all of the buttons on the bottom of the User Maintenance screen.

Table 2-1 *User Maintenance Screen Button Functions*

Save	Select to save any changes you make to the information on this screen without closing the screen.
Cancel	Select if you did not make an entry or to cancel your changes.
New	Select to clear the fields to record information about a new system user. For more information, See "Adding New System Users" on page 2-5
Force Password Change for All Users	Select to force all users to change their passwords the next time they log in to PeriWatch Surveillance. For more information, see "Forcing a Password Change for All System Users" on page 2-9
Print	Select to print the list of users. For more information, see "Printing the List of System Users" on page 2-8
Exit	Select to close the screen.

Searching for System Users

To search the PeriWatch Surveillance database for a system user:

1. Select **Maintenance** in the System Functions Menu, then select **User Maintenance**. The User Maintenance screen appears with all existing users shown in a scrollable list, as shown in Figure 2-4 on page 2-4.

Figure 2-4 *User Maintenance Screen*

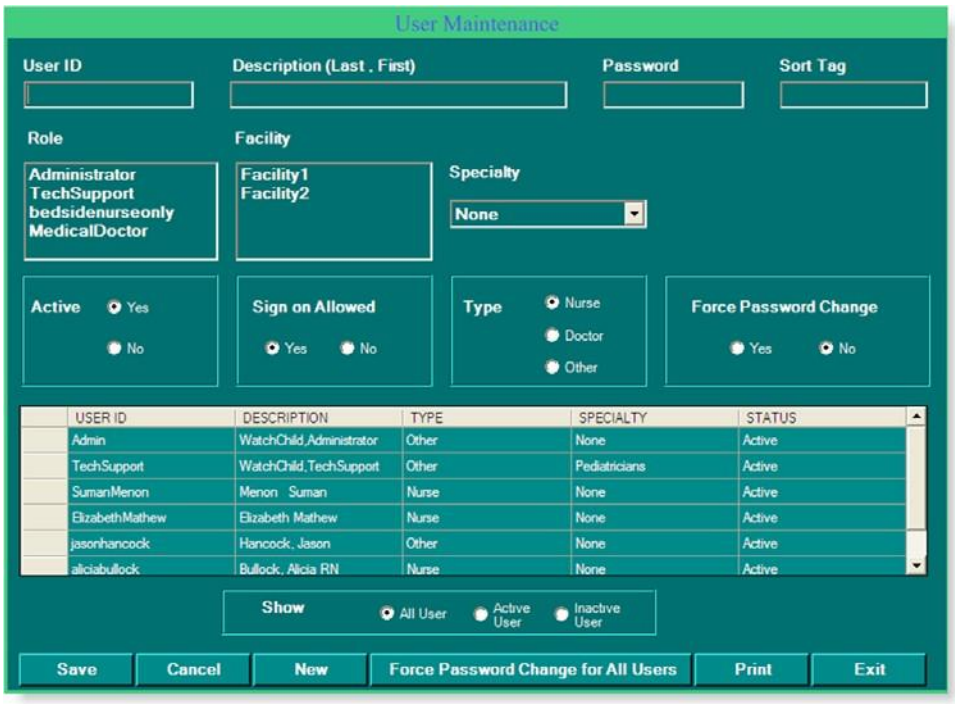

2. In the User ID field, type the user ID of the user you are seeking and then press the keyboard Tab key.

NOTE: You can also scroll the users list in the bottom half of the screen to locate the username and then select the name in the list. The user's information will then be displayed in the fields and radio buttons on this screen.

If the information entered matches an existing user ID, the required record will be displayed in the fields for you to edit.

Adding New System Users

To add new system users to PeriWatch Surveillance:

1. Select **User Maintenance** in the System Functions Menu. The User Maintenance screen appears, as shown in Figure 2-5.

   Figure 2-5 *User Maintenance Screen*

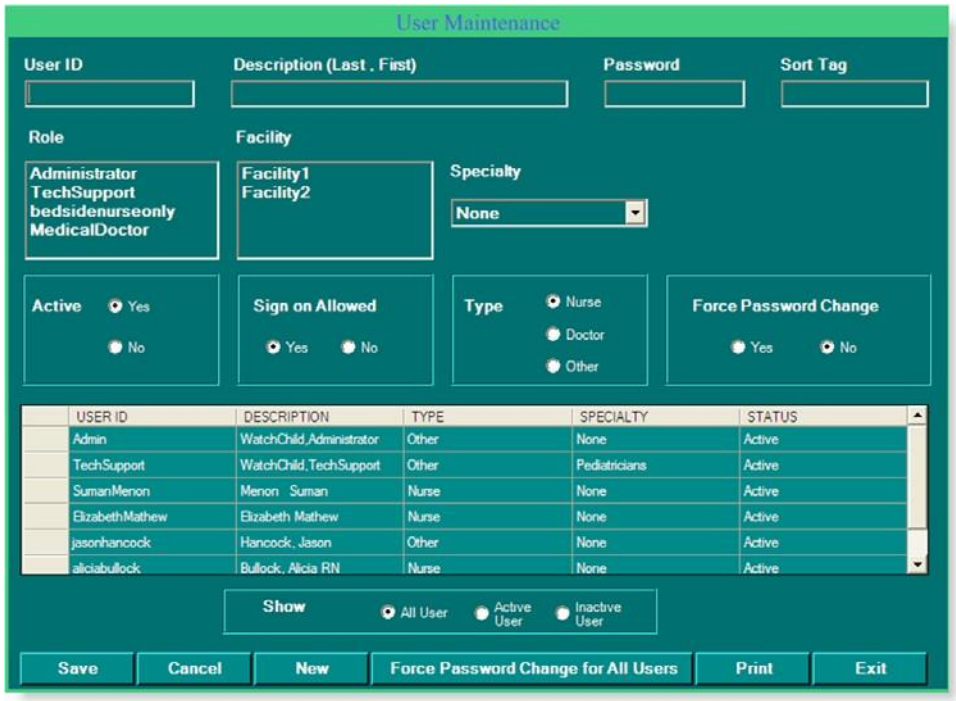

2. Select the **New** button. The cursor appears in the User ID field.

3. Enter a user ID for the new user. User IDs must have a minimum of 5 alpha-numeric characters, with no spaces or special characters allowed. User IDs are *not* case-sensitive. The user ID will serve as the user's electronic signature and will be considered a legal document. It is therefore useful to choose a user ID that contains the user's initials.

   After entering the new user ID, press the keyboard Tab key or use your mouse to move the cursor to the next field. (You may go back to any field to correct information at any time.)

4. Complete the following information:

   Description Enter the user's name in the order of last name, comma, space, then first name. This field is mandatory.

   Password Enter the user's password. The password must contain at least one letter and one number. Passwords are case sensitive. When the password is entered, the characters appear as asterisks (*) to prevent others from seeing the password as you type it.

   When you press the Tab key to go to the next field, a pop-up appears asking you to re-enter the password for verification. Enter the password. If the two passwords do not match, re-enter the password.

Sort Tag

This field governs the order in which names appear in drop-down selections lists, for example, in a list of physicians or nurses. By default, typing a last name into the **Description** field automatically replicates it in the **Sort Tag** field. The result is that a drop-down selection list of obstetricians, for example, would present the obstetricians in alphabetical order by last name. However, you can change what is in the **Sort Tag** field, which enables you to modify the order in which names will appear on drop-down menus.

For example, Nurse Jones and Nurse Smith might be the 7th and 12th nurses listed in the user ID list on the User Maintenance screen. On any drop-down menu of nurse names, Jones and Smith would be well down — 7th and 12th — in the menu selection list. But you want Nurse Smith to always be first in any drop-down menu lists on which she appears and you want Nurse Jones to be second in the lists.

To do that, enter an `A` or even `Aa` in the **Sort Tag** field for Nurse Smith. For Nurse Jones, enter a `B` or an `Ab`. Nurses Smith and Jones will now always be first and second in the list of any drop-down menu of nurses.

You can apply a sort tag to any user ID, either when you first create the ID or later on as a change. You can enter any combination and length of alphabetic characters to achieve the desired sort order for any type of user.

Role

Select the role assigned to the particular user from the **Role** scroll down menu. To specify multiple roles, simply select the desired roles; each selection will turn blue. If you specify a role by mistake, select it again to deselect it.

NOTE: If a new user is not a good fit for any of the existing roles, you may need to create a new role before adding the user. For more information about roles, see "Adding a New Role" on page 2-15.

Facility

Select from the list the Facility that the user will be authorized to access.

Usage Note: Only the facility that has been selected for a user will be available to the user at logon time.

Specialty

Select the drop-down menu to specify the applicable specialty for the user.

Active

If you select the radio button **Yes**, the user is displayed as active, can log in to the application and will appear in appropriate selection lists. If you select **No**, then the user is displayed as inactive in the table, cannot log in to the application and is not displayed in any selection lists. You cannot delete a user ID, but you can mark it as inactive.

Sign on Allowed

Select the radio buttons as **Yes** or **No** to control a user's permission to log in to PeriWatch Surveillance. A user without sign on privileges (**No** is specified) may still appear in appropriate selection lists as long as they are designated as active, but cannot log in to PeriWatch Surveillance.

Type

Select one of these radio buttons to define whether a user is a Nurse, a Doctor, or Other caregiver.

Force Password Change

Select **Yes** to force the new user to enter a new password at the first log in to PeriWatch Surveillance. This setting enables new users to set their own password the first time they log on.

Show

Optionally, select one of these radio buttons to choose the users that you want to display in the list. (This setting does not affect the new user definition in any way.) Select **All Users** to display information about all the users. Select **Active Users** to display only those users who are active in PeriWatch Surveillance. Select **Inactive Users** to display only those users who are inactive in the system.

5. Select **Save** to save your changes without closing the screen.
6. Select **Exit** to close the User Maintenance screen.

Modifying Existing System Users

To update the information of the current PeriWatch Surveillance users:

1. Select **User Maintenance** in the System Functions Menu. The User Maintenance screen appears, as shown in Figure 2-6.

Figure 2-6 *User Maintenance Screen*

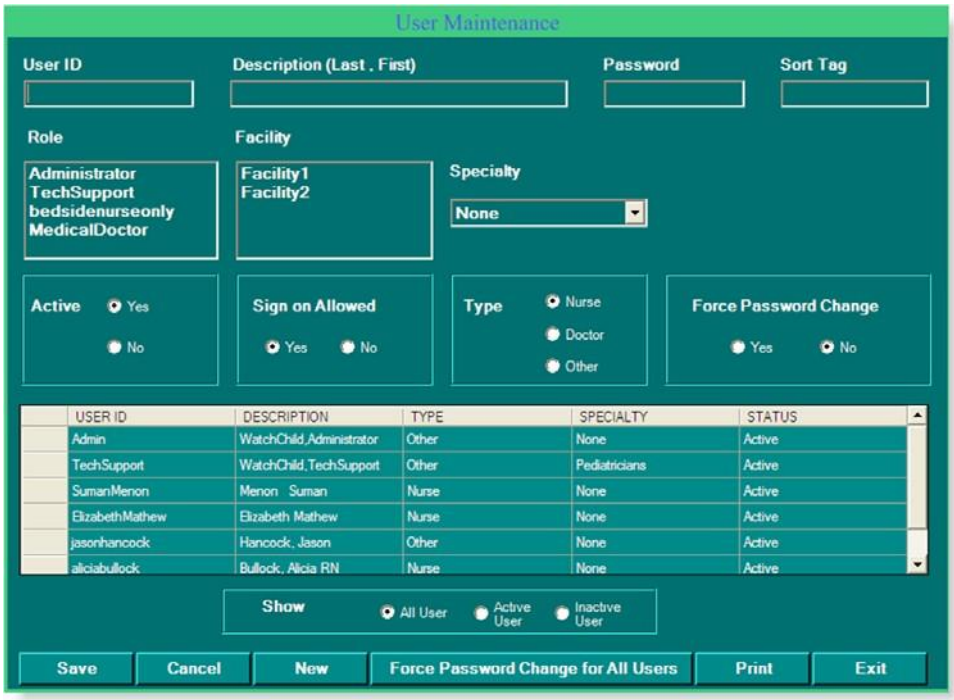

2. Select a user from the list. The selected user's current information is displayed in the various fields and settings.
3. Modify the information for the selected user in all the fields except User ID. A user ID cannot be edited. See "Adding New System Users" on page 2-5., for the field descriptions.

NOTE: Facility access is not automatic. Only the facility that has been selected for a user will be available to the user at logon time. If you want a user to be able to access a new facility that was added after the user's ID was configured, you must specifically select the facility for the user's ID.

NOTE: To disassociate all users from a Role so that you can then delete the Role, select each user in the list to see the role(s) to which each is associated. To disassociate a user from a role, simply select the role to remove its highlighting, then select **Save**. Do this for each user in the list who is associated with the Role you want to delete.

4. Select **Save** to save your changes without closing the screen.
5. Select **Cancel** if you did not make any entry or to cancel your changes.

NOTE: Click on the gray bar to display the column sorting arrows.

Printing the List of System Users

To print the list of active users, inactive users or all users:

1. Select **User Maintenance** in the System Functions Menu. The User Maintenance screen appears.
2. In the Show area, select the radio button corresponding to the list of users you want to display and print: **All User**, **Active User**, or **Inactive User**, described below:

All User	Displays a complete list of all users. This list includes both activated and inactivated PeriWatch Surveillance users.
Active User	Display only users who are active and allowed to use PeriWatch Surveillance.
Inactive User	Displays only users who are inactive and not allowed to use PeriWatch Surveillance.

3. Select **Print** to print the user information. A standard Windows Print dialog box opens, with your workstation's assigned default printer shown. If you want to print on another printer, select it from the drop-down list.
4. When the printer and any print properties you might want to change are as desired, select **OK** to begin printing the list of users and their information.

Forcing a Password Change for a Single User

The Force Password Change function is generally used in any of three situations:

- You have defined a new user and assigned a password of *your* choice and you want to enable the new user to create their own personally meaningful password the first time they log on.
- A user has forgotten his or her password and requested a reset. You assign a new one, then use Force Password Change to enable the user to create a personally meaningful (and hopefully, more memorable) password at the next logon.

- A security violation has occurred; someone other than the person authorized to use a specific user ID and password has been logging on as the authorized user.

In each case, the Force Password Change function automatically resets to **No** as soon as the user generates a new password.

To force a selected user to change their password:

1. Select **User Maintenance** in the System Functions Menu screen. The User Maintenance screen appears.
2. Select the user for whom you are forcing the password change.
3. Select the **Yes** radio button in the Force Password Change box.
4. Select **Save**. The next time that the selected user attempts to log onto PeriWatch Surveillance, the system generates a Security screen that prompts the user to change their password.
5. Select **Exit** to close the screen.

Forcing a Password Change for All System Users

CAUTION: Do not perform this procedure unless you alert all staff in advance that you will be forcing a password change for all system users.

To force all PeriWatch Surveillance users to change their passwords:

1. Select **User Maintenance** in the System Functions Menu screen. The User Maintenance screen appears.
2. Select the **Force Password Change for All Users** button to force the password change for all of the users. A message pop-up screen appears, as shown in Figure 2-7.

Figure 2-7 *Message Pop-up Screen for Force Password Change for All Users*

3. Select **OK** to force a password change for all users and close the message pop-up screen or select **Cancel** to cancel the process and exit the screen.

User Access Restriction

The User Access Restriction function allows administrators with proper security privileges to restrict a care giver or health care provider's access to a specific patient's records. By default, all care givers have access to all patients' records.

1. From any screen, select **System**. The System Functions Menu screen opens.
2. Select **Maintenance**. The System Functions Menu refreshes with a list of selectable Maintenance functions, as shown in Figure 2-8.

Figure 2-8 *System Functions Menu*

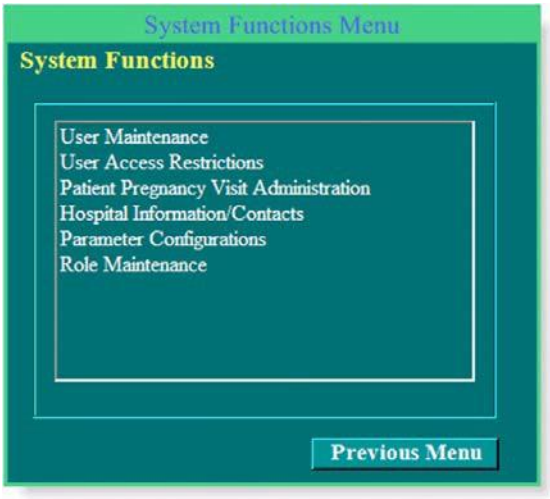

3. Select **User Access Restrictions**. The User Access Restriction screen displays a list of all admitted patients and appears as shown in Figure 2-9.

Figure 2-9 *User Access Restriction Screen with Admitted Patients List*

4. Select the patient from the Admitted Patients list for whom you want to either specify or undesignate restricted users. The screen will refresh to show any already-restricted users and users who are not restricted from viewing the selected patient's data, as shown in Figure 2-10.

Figure 2-10 *User Access Restriction Screen - Restricted Users Displayed*

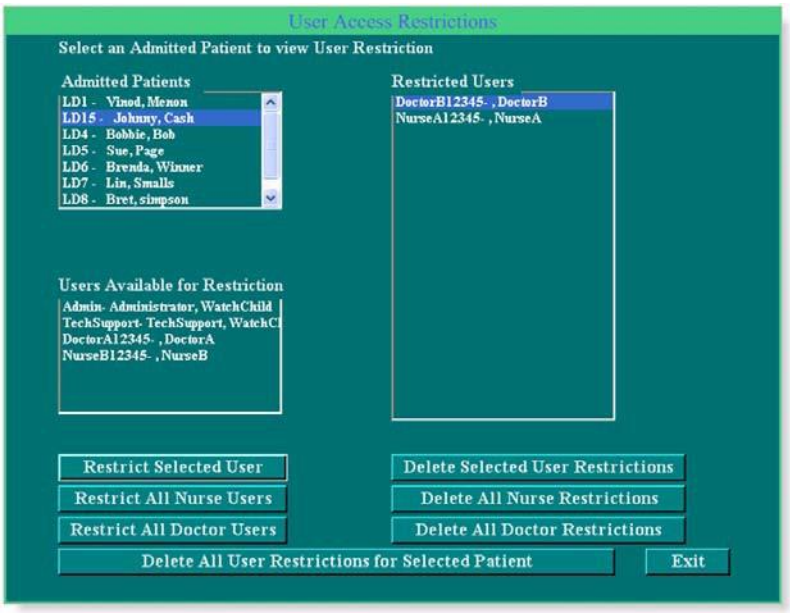

5. Use the buttons on this screen, described below, to accomplish what you want to do.

Restrict Selected Users	Select the users to be restricted in Users Available for Restriction, then select this button. The selected users will be moved to the Restricted Users field.
Restrict All Nurse Users	Select to restrict all Nurse Users from viewing the selected patient's data. All the Nurse Users names will be moved to the Restricted Users field.
Restrict All Doctor Users	Select to restrict all Doctor Users from viewing the selected patient's data. All the Doctor Users names will be moved to the Restricted Users field.
Delete Selected User Restrictions	Select any restricted user you wish to unrestrict, then select this button. The selected users are moved from Restricted Users to Users Available for Restriction.
Delete All Nurse Restrictions	Select to remove all Nurse Restrictions. All Nurse Users who were designated as restricted are moved from Restricted Users to Users available for Restriction.
Delete All Doctor Restrictions	Select to remove all Doctor Restrictions. All Doctor Users who were designated as restricted are moved from Restricted Users to Users Available for Restriction.
Delete All User Restrictions for Selected Patients	Select to delete all User Restrictions for the selected patient.
Exit	Select to save any changes and exit this screen.

Hospital Information Contacts

The Hospital Information Contacts function enables you to specify the personnel (including their contact information) who should contact or be contacted by PeriGen Technical Support in case of a system problem.

1. From any screen, select **System**. The System Functions Menu screen appears.
2. Select **Maintenance** from the System Functions Menu screen. The screen is refreshed to display all of the available maintenance functions, as shown in Figure 2-11.

Figure 2-11 *System Functions Menu Screen*

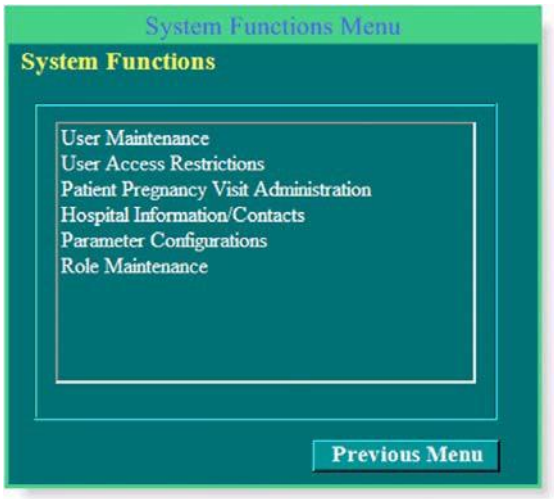

3. Select **Hospital Information Contacts**. The Hospital Information Contacts screen appears, as shown in Figure 2-12 on page 2-13.

Figure 2-12 *Hospital Information Contacts Screen*

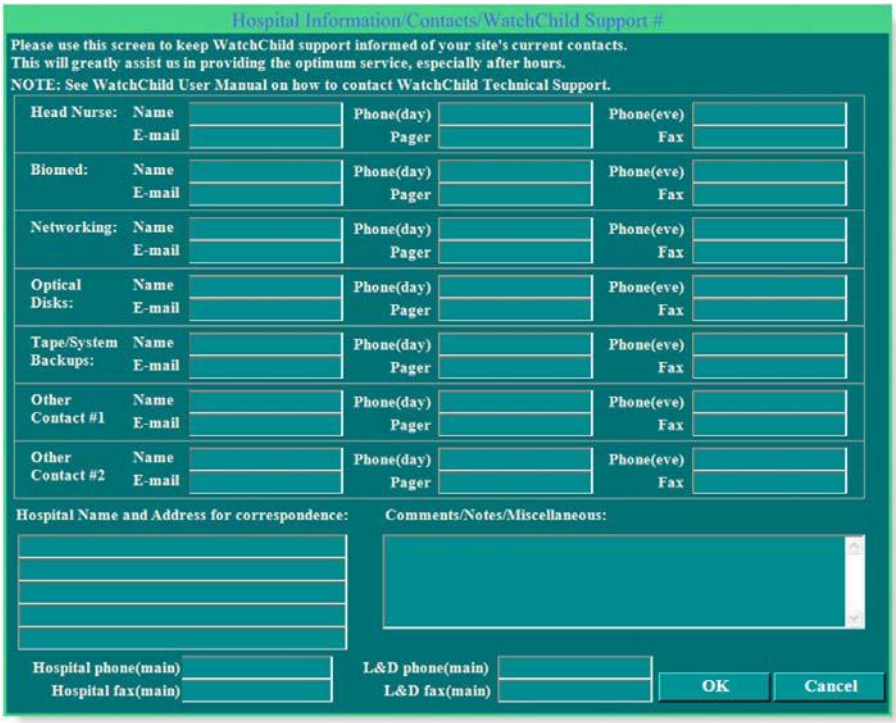

4. Enter name and contact information for as many of the contact types as possible. Also enter the hospital name and address information and the Labor & Delivery (L&D) unit's phone and fax numbers. Lastly, enter any comments, notes or other miscellaneous information that can assist with troubleshooting should the need arise.
5. When finished entering information, click **OK** to save the data and close the screen.

Role Maintenance

The Role Maintenance screen enables you to create predefined roles for the users of PeriWatch Surveillance, allowing you to assign or modify the functions that users can perform by simply assigning a user to a defined Role. This enables you to assign or change all of the needed functional authorizations to entire groups of users at once instead having to separately assign multiple functions to each individual user.

This section covers the following functions:

- Accessing Role Maintenance and Modifying Role Functions
- Adding a New Role
- Deleting Roles from Role Maintenance
- Defining Role Features for Role Maintenance

Accessing Role Maintenance and Modifying Role Functions

1. From any screen, select **System**. The System Functions Menu screen opens.

2. Select **Maintenance**. The System Functions Menu refreshes with a list of selectable Maintenance functions, as shown in Figure 2-13 on page 2-14.

Figure 2-13 *System Functions Menu Screen*

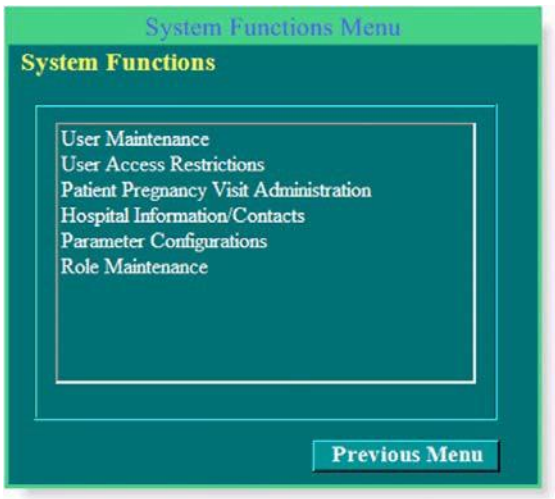

3. Select **Role Maintenance**. The Role Maintenance screen appears, as shown in Figure 2-14. See "Defining Role Features for Role Maintenance" on page 2-16 for descriptions of each role.

Figure 2-14 *Role Maintenance Screen*

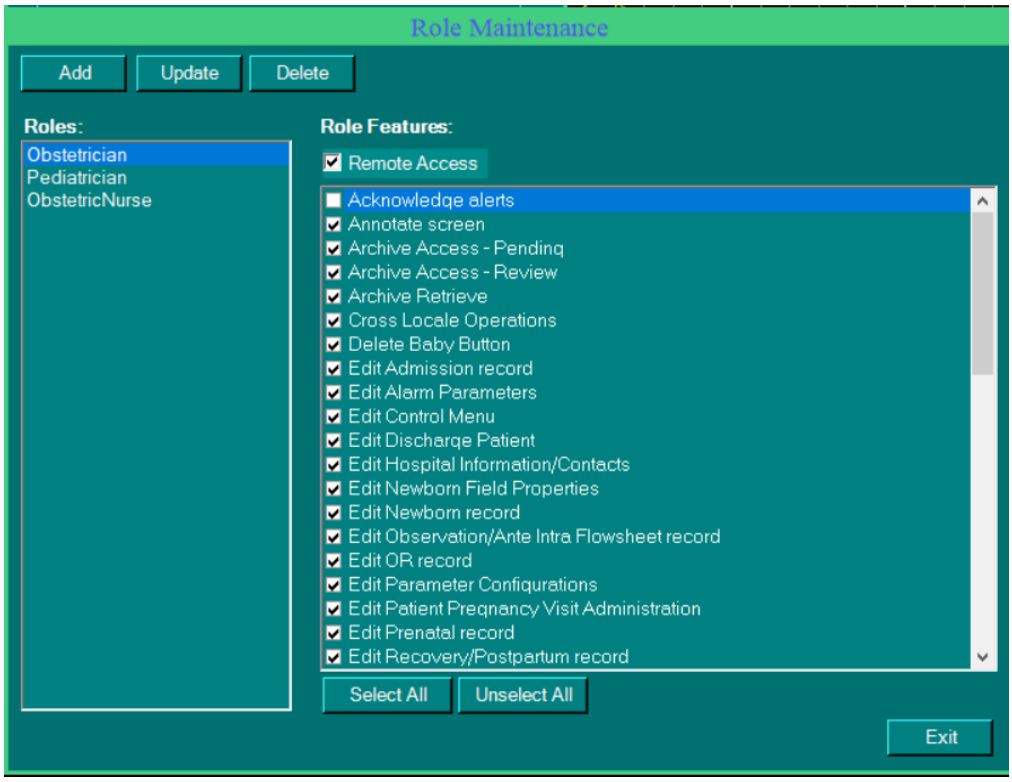

4. Select a role from the displayed **Roles** list.

5. To modify the authorized functions for the selected Role, select the desired functions from the list under **Role Features**. Selecting a checked function deselects (unchecks) it; selecting an unchecked function adds the check mark and selects the function.

6. Select the **Update** button. A message confirming the updating of the Role appears; select **OK** to close the message pop-up.
7. When you have finished performing tasks on the Role Maintenance screen, select **Exit** to close the screen.

Adding a New Role

1. Select **Role Maintenance** in the System Functions Menu screen. The Role Maintenance screen appears as shown in Figure 2-15.
2. Select the **Add** button.

Figure 2-15 *Adding a Role — Role Name Entry Box*

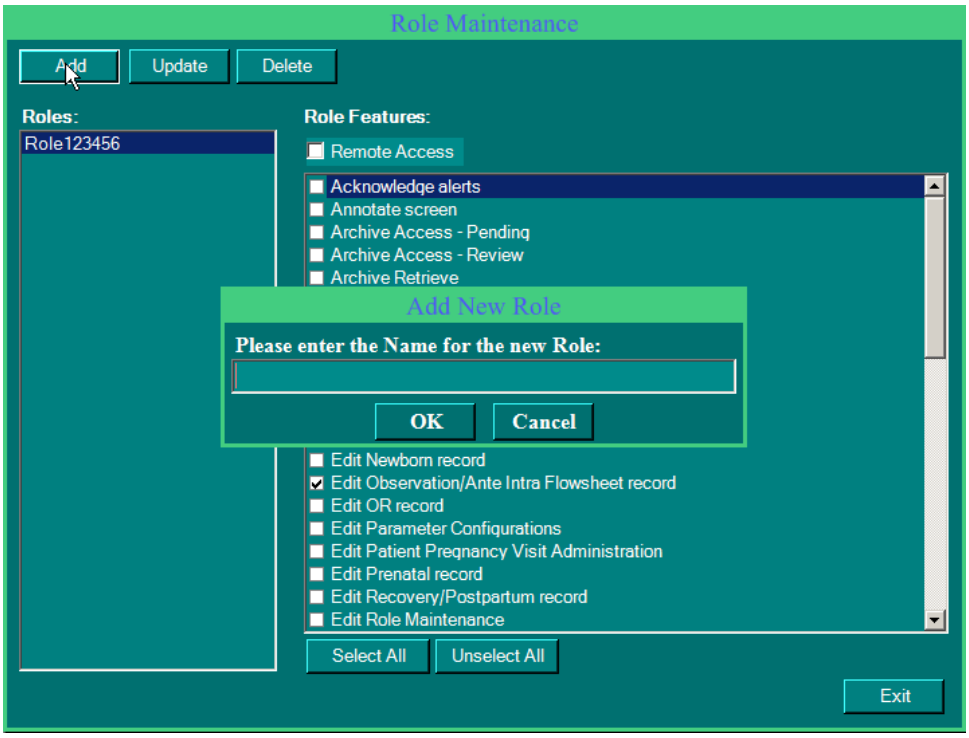

3. The Role Name must be unique and must have a minimum of 10 characters and no spaces. Type the name of the new role into the text entry field and then select **OK**. A message confirming that the new role name has been added appears; click **OK** to close the message pop-up.
4. If the new user will need to access PeriWatch Surveillance from outside of the facility, select the
Remote Access check box.
5. Select all of the features to be enabled for the new Role, then select the **Update** button. A confirmation pop-up message displays to confirm the update; select **OK** to close the pop-up.
6. When you have finished performing Role Maintenance tasks, select **Exit** to close the screen.

Deleting Roles from Role Maintenance

A Role cannot be deleted if there are any user IDs associated with the Role. Therefore, before performing this procedure, follow the procedure given in "Modifying Existing System Users" on page 2-7 to disassociate all users from the Role you want to delete.

1. From any screen, select **System**.
2. Select **Maintenance** from the System Functions Menu screen.
3. Select **Role Maintenance** in the System Functions Menu screen.
4. Select the Role that you want to delete.
5. Select **Delete.** A message confirming the deletion of the Role appears as shown in Figure 2-16.

Figure 2-16 *Role Delete Confirmation*

6. Select **OK**.
7. A message pop-up indicating successful deletion of the role appears. Select **OK** to close the message.
8. Select **Exit** in the Role Maintenance screen to close the screen.

Defining Role Features for Role Maintenance

Refer to Table 2-2 for Role Maintenance screen role descriptions.

Table 2-2 *Role Maintenance Screen Role Definitions (Part 1 of 5)*

Role	Description
Remote Access	Allows users remote access to workstations not directly configured on unit (such as a remote training room).
Acknowledge alerts	Allows users to acknowledge alerts.
Annotate screen	Allows users to annotate the fetal strip.
Archive Access - Pending	Allows users to archive and reverse discharge a patient for the configured number of days in the pending state- default is 7 days.

Table 2-2 *Role Maintenance Screen Role Definitions (Part 2 of 5)*

Role	Description
Archive Access - Review	Allows users to archive and reverse discharge a patient for the configured number of days in the review state- default is 30 days. This is a higher security level than the pending access.
Archive Retrieve	Allows users to retrieve a patient record for viewing only purposes.
Cross Locale Operations	Allows users to admit, transfer, and reverse discharge patients when more than one locale is configured to a workstation.
Delete Baby Button	Allows users to use the **Delete Baby** button on the Infant Data screen to eliminate a baby record that was created in error and no longer needed. This function is not reversible; if a user deletes a baby unintentionally, the information is permanently deleted, the user must re-enter the information.
Edit Admission record	Allows users to chart within the admission screens.
Edit Alarm Parameters	Allows users to adjust alarm parameters per patient as access from Surveillance Screen and **Alerts** button. Once the patient is discharged from the room, the alarm parameters return to default configuration (or configuration set by the facility).
Edit Control Menu	Allows users to right click and make fields mandatory, optional, disabled, or enabled; and to access the Edit Reference Screen to create dropdowns.
Edit Discharge Patient	Allows users to access the Discharge screen.
Edit Hospital Information/Contacts	Allows users to document contact information in the Contact screen accessed by clicking the **System** button and selecting *Maintenance.*
Edit Newborn Field Properties	Allows users to right click for options in the Newborn/NICU screens when this parameter is activated for a site by PeriGen Technical Support. Options include Mandatory, Mandatory at Discharge, Enable Check Box, Field Name Change Option, Description, Daily Sheet Display Options, Recall Last Values Option, and Allow Other Free Text Box to be active when user selects a dropdown menu.
Edit Newborn Record	Allows users to chart in Newborn/NICU screens.
Edit Observation/Ante Intra Flowsheet Record	Allows users to chart in Observation screens and Ante/Intrapartum Flowsheet Records.
Edit OR Record	Allows users to chart within OR screens.
Edit Parameter Configurations	Allows users to configure system, workstation, bed and alert parameters for entire system, as well as add beds and workstations.

Table 2-2 *Role Maintenance Screen Role Definitions (Part 3 of 5)*

Role	Description
Edit Patient Pregnancy Visit Administration	Allows users to move patient information from a visit to another pregnancy. Accessed by clicking the **System** button and selecting *Maintenance*.
Edit Prenatal Record	Allows users to click the **Prenatal** button to access and chart within Prenatal screens from the Chart screen.
Edit Recovery/Postpartum Record	Allows users to chart within Edit Recovery/Postpartum screens. **NOTE:** Users must have this privilege to document in the four Prenatal buttons (Past Med, Fam Hx, Genetics, & Past Preg) on the Initial Exam screen.
Edit Role Maintenance	Allows users to view, create, and update roles. • Role names must be at least 10 characters with no spaces or special characters. • The PeriGen administrator role exists by default on the User Maintenance screen which has the highest security level and can access all configuration changes, except those designated specifically for Technical Support. • If another administrator role is created, that user will not have access to patients that were retrieved by another user. To have access to those patients, the user must be assigned a PeriGen administrator role.
Edit Summary (Labor and Delivery) record	Allows users to chart in the Delivery and Infant Data Screens.
Edit Update record	Allows users to chart from the Update Button accessed via the Census Screen. This populates the Census values for Remarks, Nurse, On-Call MD, and Infant Care Provider as the default Census configurations.
Edit User Access Restrictions	Allows users to select specific persons to be restricted from viewing a patient record and log those restriction violations.
Edit User Maintenance	Allows users to enter new users, force password changes, select roles, specialties, types, and active or inactive statuses.
Extract Strip	Allows users to login to Strip Extractor tool. The Strip Extractor Tool will convert entire strips from PeriWatch Surveillance into an XML format.
Inactivate alerts	Allows users to set alerts active or inactive for an individual patient using the Set Up Patient Alerts popup.
Maternal	Allows users to view and print vital signs from the fetal monitor that automatically flow into the screen. The **Maternal** button is at the bottom of the application screen from any view.

Table 2-2 *Role Maintenance Screen Role Definitions (Part 4 of 5)*

Role	Description
Move or Delete Strip Data	Allows users to move or delete fetal strip tracing from the full surveillance view by selecting the **Trend** button. Select either the 14 min or 19 min view to see the **Move**, **Delete**, and **Reset** buttons.
Newborn Configuration	Allows users to access the configuration option on the Newborn Census through the "N" icon in the top left-hand corner. Users can hide or show records (newborn screens), configure Newborn **Status** buttons, and colors, add or delete Newborn Beds, and enter Newborn Discharge Instructions.
Newborn Retrieve	Allows users to retrieve a Newborn chart to view only.
Newborn Reverse Discharge	Allows users to reverse Discharge a Newborn chart.
Print Admission record	Allows users to print Maternal Admission Record.
Print Newborn record	Allows users to print newborn records.
Print Observation/Ante Intra Flowsheet record	Allows users to print the charted flowsheets from this screen.
Print OR record	Allows users to print the OR charting screens.
Print Prenatal record	Allows users to print prenatal charting screens.
Print Recovery/Postpartum record	Allows users to print charted flowsheets from Recovery/Postpartum screens.
Print Strip	Allows users to print a fetal strip from the full surveillance view by selecting the **Print** button. Select the **Start** button to display a screen which allows the option to choose multiple fetuses as well as maternal HR pattern to be printed separately or in combination.
Print Summary (Labor and Delivery) record	Allows users to print the delivery record.
Print Update record	Allows users to print from the **Update** button that is accessed via the Census Screen.
Reports	Allows users to view and run standard reports accessed via the **System** button.
Verify Note	Allows users to verify Notes on the Notes screen.
View Admission record	Allows users to view the Admission Screen.

Table 2-2 *Role Maintenance Screen Role Definitions (Part 5 of 5)*

Role	Description
View Alarm Parameters	Allows users to view alarm parameters per patient when accessed from the Surveillance Screen and **Alerts** button.
View Discharge Patient	Allows users to access the Discharge Screen via the **Discharge** button.
View Newborn record	Allows users to view the Newborn charting screens.
View Observation/Ante Intra Flowsheet record	Allows users to view flowsheet records on this screen.
View OR record	Allows users to view OR charting screens.
View Prenatal record	Allows users to view Prenatal charting screens.
View Recovery/Postpartum record	Allows users to view flowsheet records on this screen.
View Summary (Labor and Delivery) record	Allows users to view Delivery charting screens.
View Update record	Allows users to view Update Screen.

Drop-Down Menus Reference Phrase Maintenance

The Reference Maintenance screen is used for adding, modifying, deleting, resetting and arranging the phrases (selection options) in a drop-down menu reference list, and for disabling or enabling any data entry or data selection field, check box or radio button. You can edit the references phrases specified in the drop-down lists by right-clicking on the arrow boxes where the edit reference function is enabled.

The process for editing reference phrases and enabling or disabling fields is essentially the same for all phrases and fields. The example procedure given below illustrates how it is done. The example starts with the Census screen and has you select the **Admission** button to access the Obstetric Admitting Record screen, from where the Blood Type field is selected for editing the reference phrases. In this case, reference phrase list consists solely of blood types. However, reference phrases and field enablement/disablement for all other PeriWatch Surveillance screens can be accessed by selecting any button that brings up a screen containing data entry or selection fields, check boxes or radio buttons.

Accessing the Reference Maintenance Screen

1. Select **Census.** The Census screen appears, as shown in Figure 2-17.

Figure 2-17 *Census Screen with Admission*

2. Select any occupied bed (an occupied Out bed can also used) and then select **Admission**.

Figure 2-18 *Obstetric Admitting Record Screen*

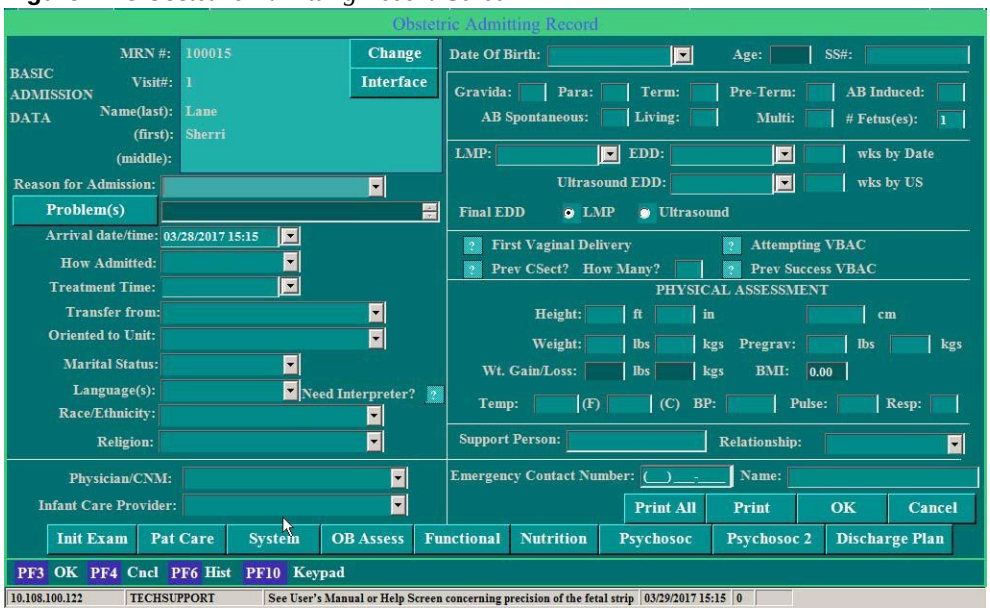

3. Right-click the **Blood Type** field. A drop-down list appears as shown in Figure 2-19.

Figure 2-19 *Blood Type Drop-down List*

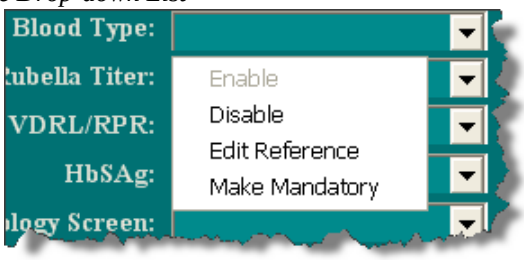

4. Select **Edit Reference** from the drop-down list and the Reference Maintenance Menu screen appears, as shown in Figure 2-20 on page 2-22.

Figure 2-20 *Reference Maintenance Menu Screen*

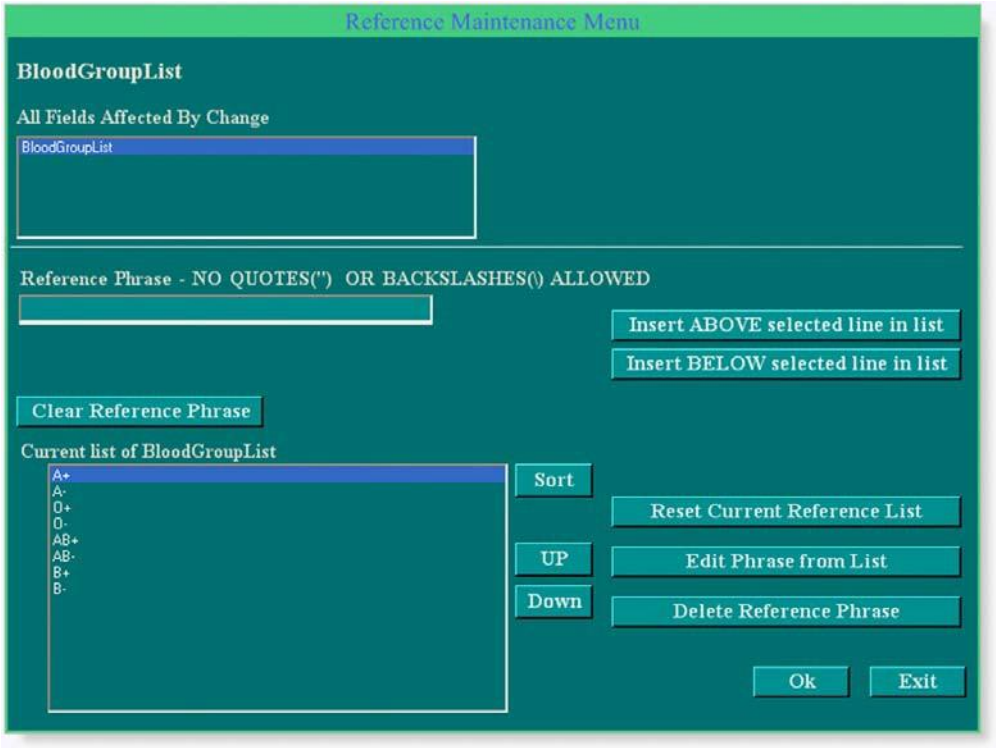

Table 2-3 describes the purpose of all of the fields and buttons on the Reference Maintenance Menu screen. They are the same regardless of which fields and references you are modifying, adding or deleting in PeriWatch Surveillance.

Table 2-3 *Reference Maintenance Menu Screen Field and Button Descriptions (Part 1 of 2)*

Field or Button	Function
All Fields Affected by Change field	Lists all fields in PeriWatch Surveillance that will be affected by changes to the selected field.
Reference Phrase field	If you are creating a new reference phrase, type the new phrase into this field. If you are editing an existing phrase, that phrase will appear in this field when you select the **Edit Phrase from List** button (described below).

Table 2-3 *Reference Maintenance Menu Screen Field and Button Descriptions (Part 2 of 2)*

Field or Button	Function
Insert ABOVE and **Insert BELOW selected line in list** buttons	After typing in a new phrase, select an *old* phrase next to which you want the new phrase to go, then select one of these buttons to insert the new phrase where you want it to be in the current list of phrases.
Clear Reference Phrase button	Erases whatever is in the Reference Phrase field. The action is the same as if you had highlighted what was in the field and then pressed the keyboard Delete key. No other fields are affected.
Current list of... field	Contains the current list of reference phrases, plus any new phrases you add during the maintenance session.
Sort	Select to sort the current list of blood groups in ascending alphabetical order.
UP and **Down** buttons	To change an item's location in the list, select the item and then select one of these buttons as often as necessary to position the selection where you want it.
Reset Current Reference List button	**Use with caution!** This button will revert the reference phrase list back to its initial default state when PeriWatch Surveillance was installed at your facility.
Edit Phrase from List button	Selecting an existing reference phrase and then selecting this button puts the selected phrase into the Reference Phrase field and changes the available buttons on the screen, as shown in Figure 2-21 on page 2-24.
Delete Reference Phrase button	Selecting an existing reference phrase and then selecting this button deletes the phrase from the current list.
OK button	Saves any changes you have made and closes the screen.
Exit button	Closes the screen if you have made no changes, or generates a pop-up message to give you the opportunity to save any changes or exit without saving.
Save Edited Phrase to List button	Visible only if you have chosen to edit an existing phrase, saves any changes you made to the phrase.
Cancel Edit Phrase button	Visible only if you have chosen to edit an existing phrase, cancels any changes you made to a phrase and refreshes the screen to what it was before you opted to edit a phrase.

Figure 2-21 *Reference Maintenance Menu Screen for Editing a Current Phrase*

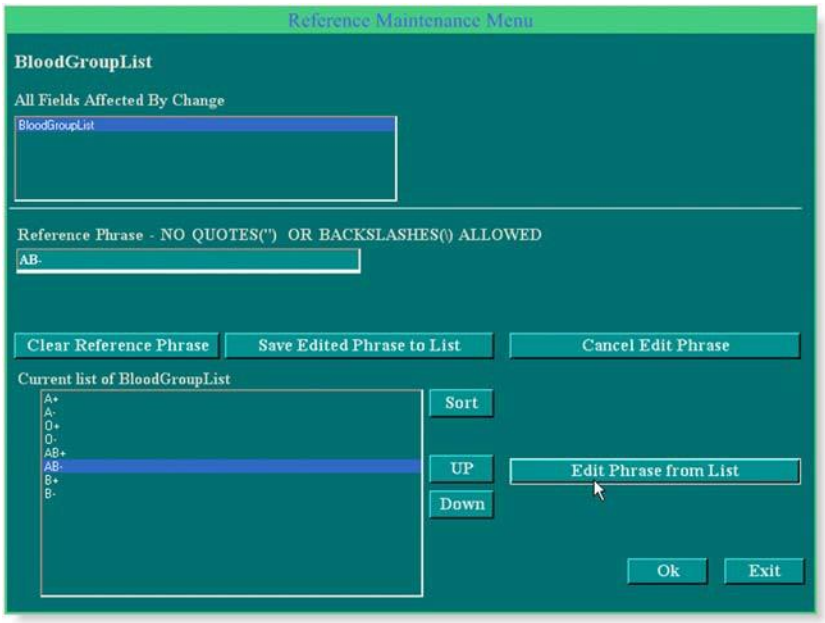

5. Make any desired reference phrase changes, then select **OK** to save your changes and close the screen.

Customizing the Annotate Strip Screen

When the Facility System parameter **Use Integrated Annotations** is set to True, the Annotate Strip screen displays categories that are customizable by administrators.

To open the Annotate Strip screen:

- On the Surveillance screen for any bed, click the **Annotate** button.

Figure 2-22 *Annotate Strip Screen*

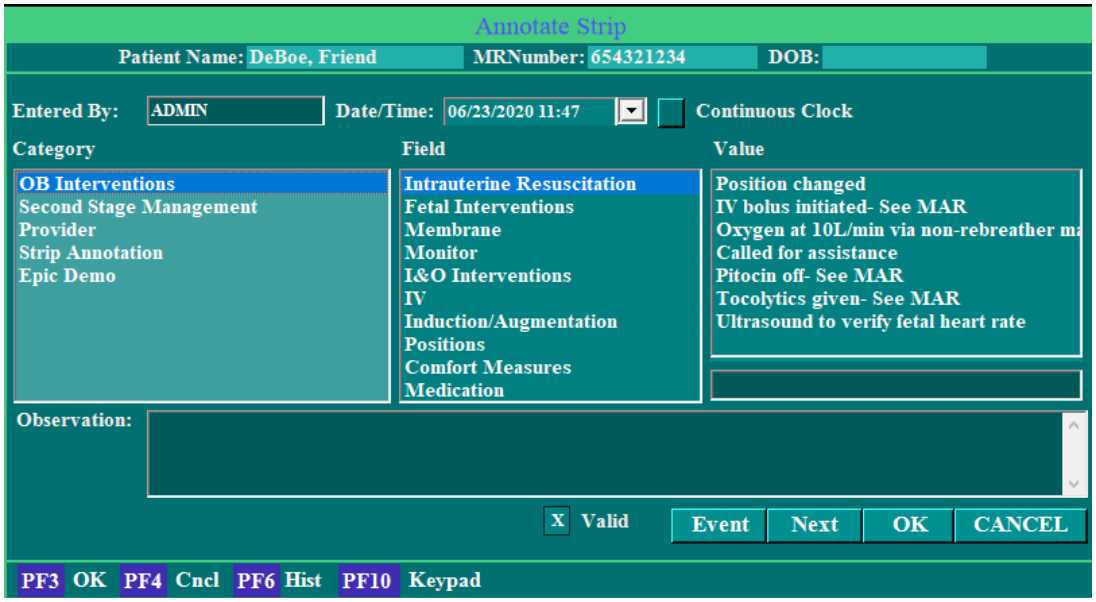

The Annotate Strip screen contains three list boxes, organizing annotations into main categories, subcategories, and values. The default labels for these boxes are **Category**, **Field**, and **Value**. (You can customize a box's label by right-clicking inside the box and selecting **Modify Label Text** on the context menu.)

To customize the items and settings for a box:

1. Select the context (category and sub-category) for your changes, as needed:
   - If you are customizing the sub-category (**Field**) box, select the category whose sub-category options you are modifying.
   - If you are customizing the **Value** box, select the category *and* sub-category whose values you are modifying.
2. Right-click inside the box and select **Edit Reference** on the context menu.

   The Reference Maintenance Menu screen opens. The example in Figure 2-23 shows the screen options available when you are customizing the sub-category (**Field**) box.

Figure 2-23 *Reference Maintenance Menu Screen*

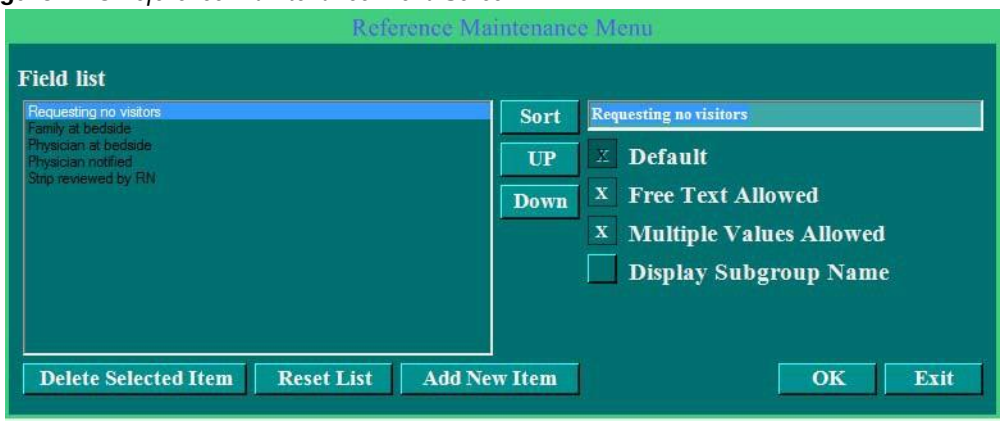

Table 2-4 provides descriptions of the controls and options appearing on the Reference Maintenance Menu screen.

Table 2-4 *Reference Maintenance Menu Screen Options*

Option	Description
Delete Selected Item	Removes the highlighted item so that it is no longer available for selection on the Annotate Strip screen.
Reset List	Restores the last-saved configuration. Any changes made in this editing session will be undone.
Add New Item	Adds an entry to the bottom of the list. Use the item name box on the right to change the placeholder item name to a more descriptive one.
Sort	Arranges the list items in alphabetical order.
Up	Moves the highlighted item one place higher in the list.

Table 2-4 *Reference Maintenance Menu Screen Options*

Option	Description
Down	Moves the highlighted item one place lower in the list.
Default	When selected, makes the highlighted item the default selection when the Annotate Strip screen opens. Only one item can be marked as default; selecting this check box for an item will clear the check mark from the item previously marked as default.
Multiple Allowed Per Minute (Category list option)	When selected, more than one annotation entry for fields in this category can be entered for each minute on the monitoring strip. When this option is ***not*** selected, users cannot add an annotation of this category within the same minute as an existing annotation. Attempting to add an annotation for the same minute as an existing annotation will result in the Annotate Strip screen opening the existing annotation for editing. **NOTE:** If your integrated EMR system limits annotations to one per minute, consider leaving this option unselected.
Free Text Allowed (Sub-category list option)	When selected, allows text to be entered in the box below the Value list. If this check box is cleared, only the predefined items in the Value list can be selected for annotations.
Multiple Values Allowed (Sub-category list option)	When selected, more than one item in the Value list can be selected. Clicking an item in the Value list will toggle it between selected and deselected.
Display Subgroup Name (Sub-category list option)	When selected, the annotation includes both the sub-category and the value selected.
OK	Save your changes and close the window.
Exit	Close the window without saving changes. You will be prompted to confirm whether you want to save your changes or not.

Customizing the Notes Screen

Administrators must set up options on the Notes screen, as well as user roles to authorize the appropriate users to verify Notes.

Set Up Categories and Phrases

When adding, updating, or deleting Note categories and phrases:

- Make sure the modifications are being done on the correct Notes screen for the desired flowsheet.
- Make sure the correct flowsheets are selected in the **Flowsheet Display** dropdown. Only one flowsheet can be selected to edit the options; each flowsheet is independent.

The changes made apply ONLY to the flowsheets selected in the **Flowsheet Display** dropdown on the Notes screen.

For more information on setting up reference phrases, see "Accessing the Reference Maintenance Screen" on page 2-20.

Case-Sensitivity

Categories are case-sensitive, so *Comfort* does not match *comfort* or *COMFORT*.

Phrases are not case sensitive, so *Comfort* will match *comfort* and *COMFORT*.

If matching categories names is desired, when merging, be sure the spelling is exactly the same with the same upper and lowercase letters.

Authorize Users to Verify Notes

Use the Role Maintenance screen to assign the **Verify Note** feature to the appropriate users or user groups.

For more information on setting up roles, see "Accessing Role Maintenance and Modifying Role Functions" on page 2-13.

Chapter 3

Patient Administration and Move/Delete Strip Functions

This chapter provides information about the following administrative functions:

- Patient Pregnancy Visit Administration
- You can move or delete selected strip data using the Trend button on the Single-Patient Surveillance screen.

Patient Pregnancy Visit Administration

The purpose of the Patient Pregnancy Visit Administration function is to move patient data from one patient to another. This function is normally used in either of two situations:

- Patient information was inadvertently entered for the wrong patient. This might happen, for example, if two patients having the same or nearly the same name are admitted on the same day and a caregiver accidentally selects the wrong one when updating the patient's information.
- A patient undergoes a name change between visits. Her information can be moved from her visit under her old name to her visit under her new name.

Move patient data from one patient to another patient

NOTE: If you need to move *only* patient strip data, use the procedure in "Move/Delete Strip Data" on page 3-4 instead of this one.

1. From any screen, select **System**. The System Functions Menu opens.
2. Select **Maintenance** from the Systems Functions Menu. The screen refreshes to show maintenance functions, as shown in Figure 3-1 on page 3-2.

Figure 3-1 *System Functions Menu - Maintenance Screen*

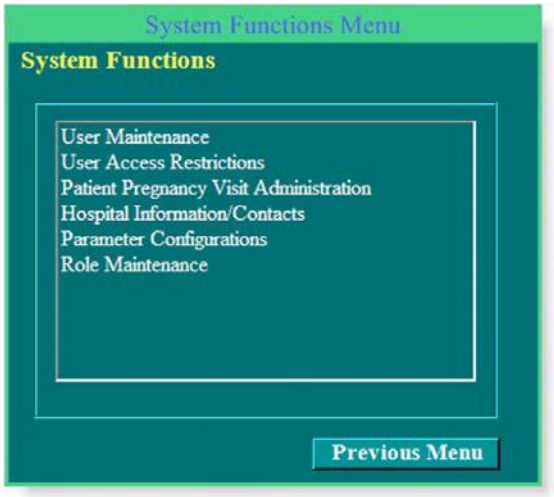

3. Select **Patient Pregnancy Visit Administration** from the System Function Menu. The Patient Pregnancy Visit Administration screen appears, as shown in Figure 3-2. Notice that the screen contains two sets of search fields and list blocks. The upper set is the **Move From** section of the screen and the bottom set is the **Move To** section.

Figure 3-2 *Patient Pregnancy Visit Administration Screen*

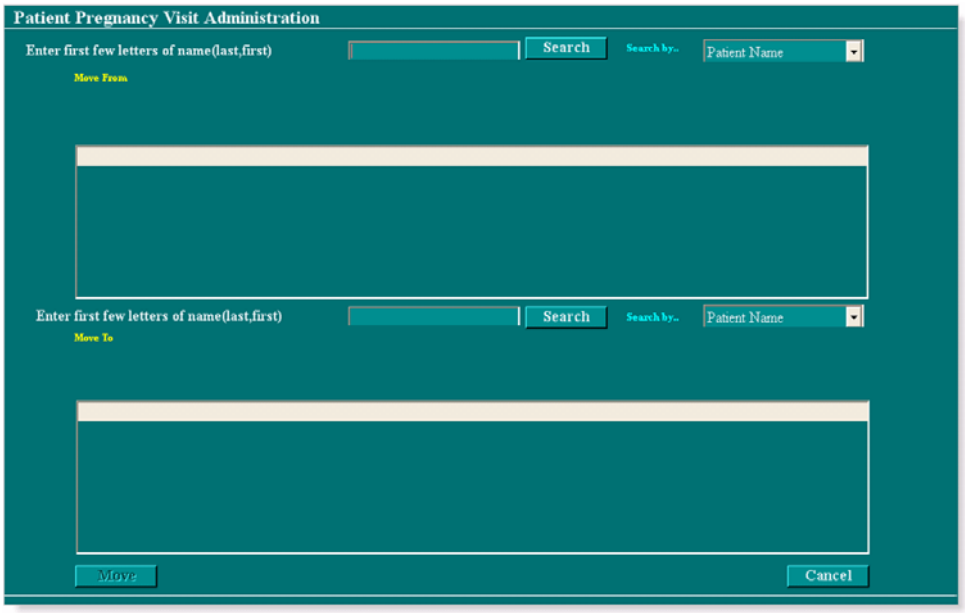

4. In the Move From section, select the down arrowhead at the end of the **Search by** field (upper right corner of the screen), then select the mode of search from the drop-down menu. Choices are: Patient Name, Prior Patient Name, Medical Record Number, Date of Birth, or Discharge Date. Notice that the description of what you should enter into the Search field changes to match your selection.
5. In the **Move From** search field, type the information specified by the search mode you selected.
6. Select **Search** to search for the patient associated with the information you specified. All patient names that match the search criteria are displayed in the list block.

7. Follow the same steps as above for the **Move To** section to search the names of the patients. The **Move From** and **Move To** list blocks will be populated as shown in Figure 3-3.

Figure 3-3 *Patient Pregnancy Visit Administration Screen with Patients List*

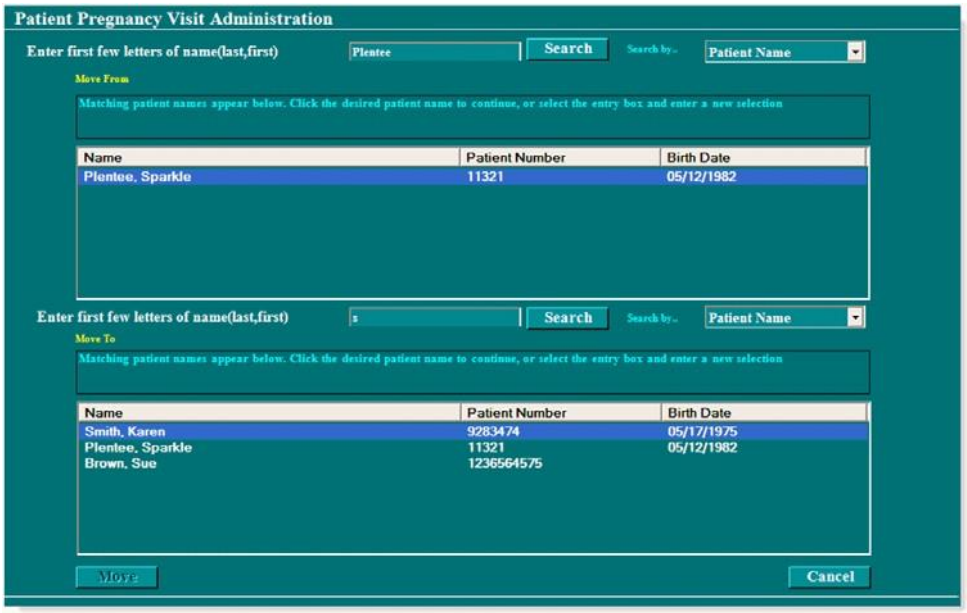

8. Select the patients to be moved from the **Move From** to **Move To** fields by pressing the down arrow on the keyboard. Each selected patient's information is displayed in the listing blocks.

9. In the Moved From block, select the data to be moved.

10. In the Moved To block, select the data into which moved data is to go, as shown in Figure 3-4. Notice that as soon as you select a valid Move To line, the **Move** button becomes active.

Figure 3-4 *Patient Pregnancy Visit Administration Screen with From and To Data Selected*

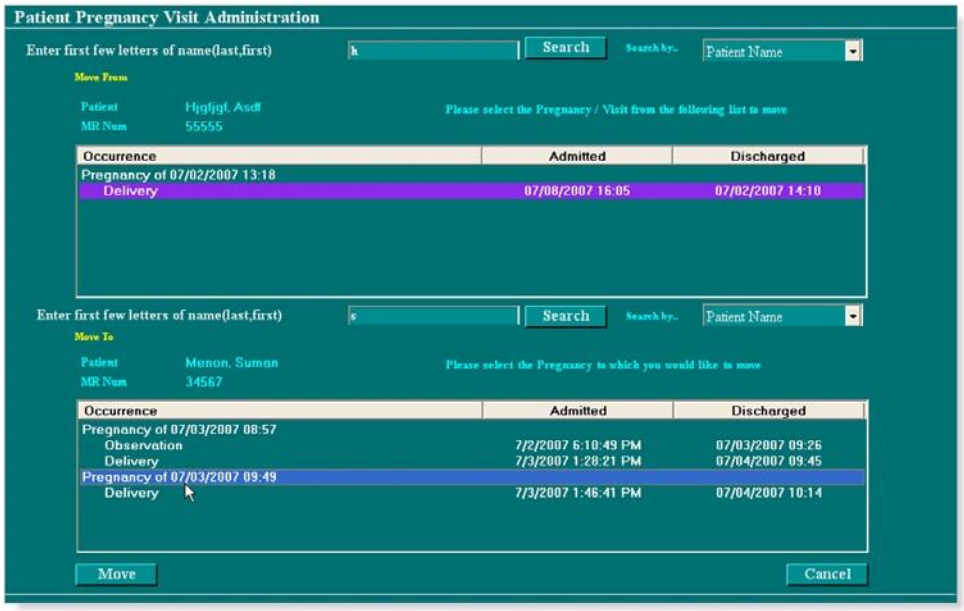

11. Select the **Move** button. A warning message indicating the move you have specified appears.

12. Select **OK** to continue the move process. A message indicating that the patient data will be modified permanently appears, as shown in Figure 3-5.

Figure 3-5 *Warning Message Screen for Permanent Modification*

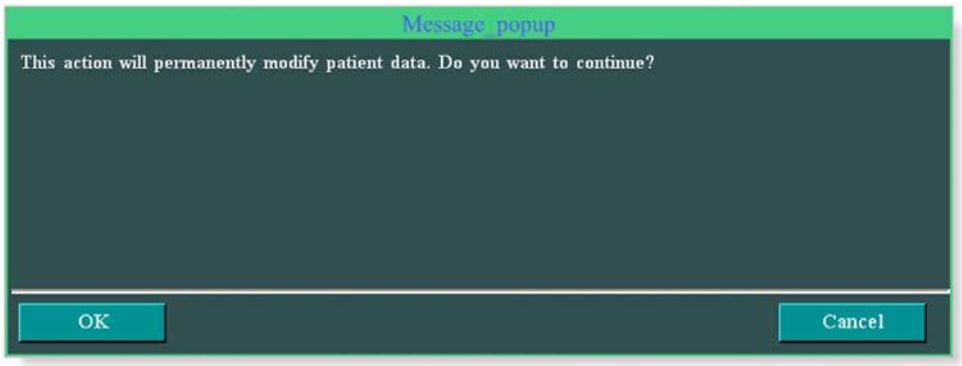

13. Select **OK** to continue the move process. A message indicating that the patient visit is moved to the selected patient appears.
14. Select **OK** to close the message.

Move/Delete Strip Data

You can move or delete selected strip data using the **Trend** button on the Single-Patient Surveillance screen.

NOTE: Moving or deleting strip data requires that the Role to which your user ID is associated is explicitly authorized to perform the function.

CAUTION: Moving or deleting strip data can result in valid patient data being overwritten or deleted. Do not perform the procedure below unless you are absolutely certain that moved data will not overwrite valid data and that data being deleted is truly erroneous or invalid.

NOTE: Charts affected by the Move/Delete function are automatically annotated to document the move/delete that was done.

NOTE: Move/Delete strip functions cannot be done in a 6-minute or 7-minute view. The functions can be performed in either the 9, 14, or 19 minute views.

Moving or Deleting Strip Data

1. In the Multi-Patient Surveillance screen, select the screen for the desired patient. The Single-Patient Surveillance screen appears, as shown in Figure 3-6.

Figure 3-6 *Single-Patient Surveillance Screen*

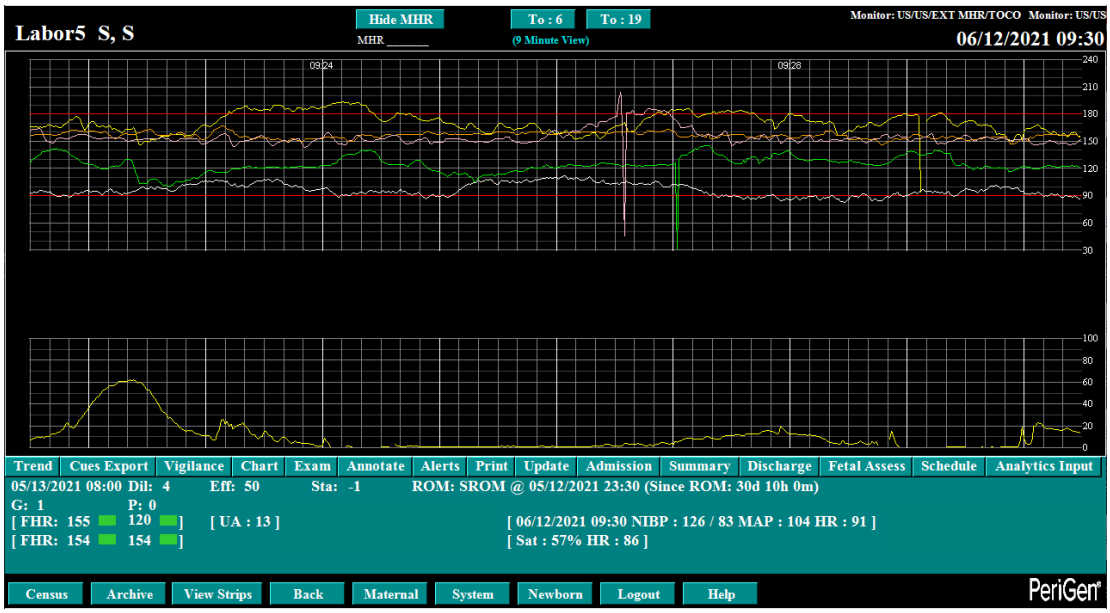

2. Set the time span view to 9, 14 or 19 minutes, depending on the choices on your screen.

3. Select the **Trend** button. The buttons set at the bottom of the strip changes, as shown in Figure 3-7 on page 3-5, which shows a 19-minute view.

Figure 3-7 *Single-Patient Surveillance Screen with Trend Buttons (19-minute view)*

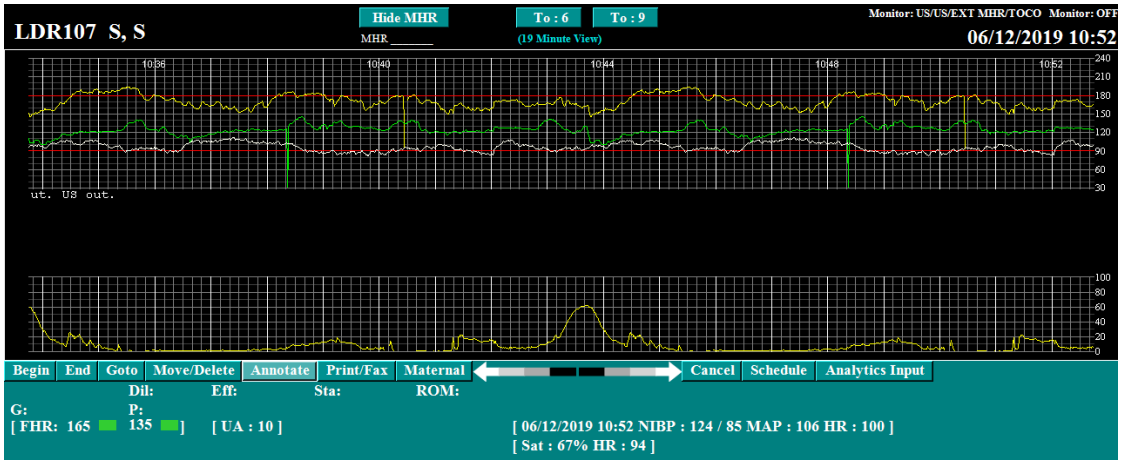

4. Select the strip at the highest and lowest points you desire to Move/Delete. This can be done by dragging and “sweeping” an area.

   The alternative way to select the entire monitoring strip is by selecting the **Begin** and **End** buttons.

   - **Begin** to move to the beginning of the monitoring strip.
   - **End** to move to the end of the monitoring strip.

5. Select **Move/Delete**. The Move/Delete screen appears as shown in Figure 3-8.

Figure 3-8 *Single-Patient Surveillance Screen with Move Delete*

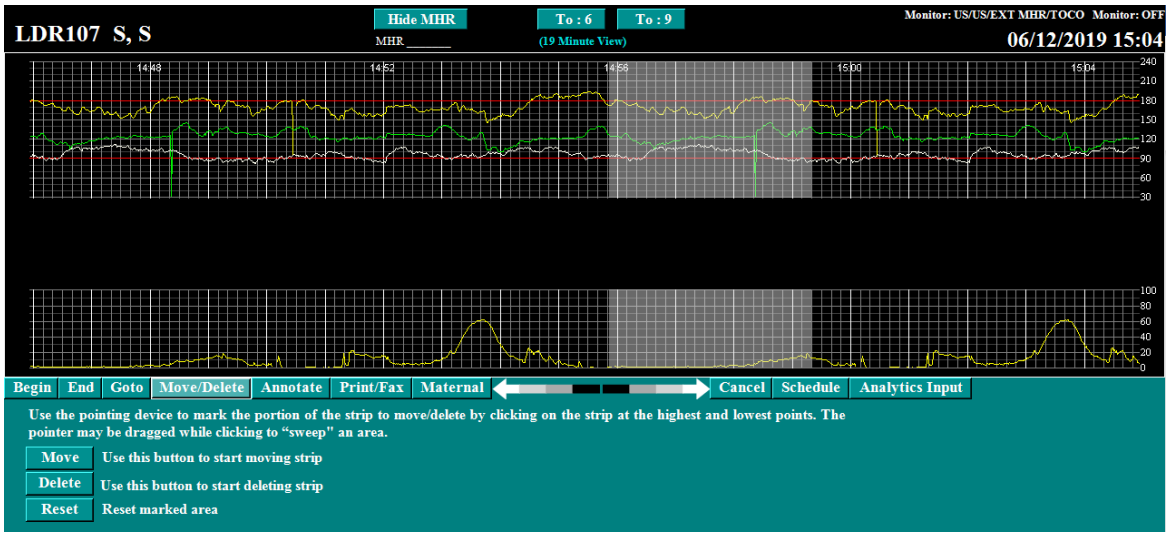

6. To **move** the strip data, proceed to the next step. To **delete** the strip data, go directly to step 11 on page 3-8.

7. Select the **Move** button at the left of the screen. The Move Strip and Annotations screen appears as shown in Figure 3-9 on page 3-7.

Figure 3-9 *Move Strip and Annotations Screen*

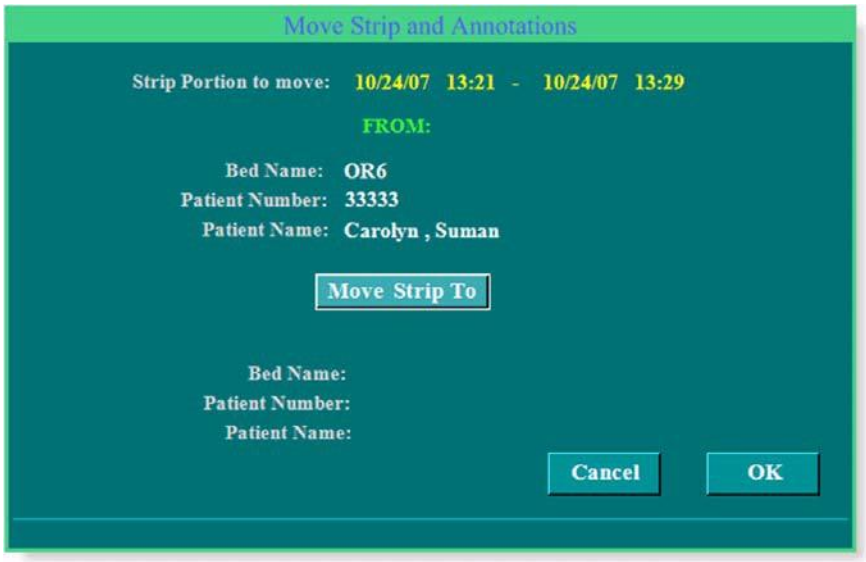

8. Select **Move Strip To**. The Bed Selection screen appears, as shown in Figure 3-10.

Figure 3-10 *Bed Selection Screen*

9. Select the bed to which you want to move the strip. The Bed Number, Patient Number and Patient Name fields in the Move Strip and Annotations screen become populated, as shown in Figure 3-11 on page 3-8.

Figure 3-11 *Move Strip and Annotations Screen with Patient Bed Details*

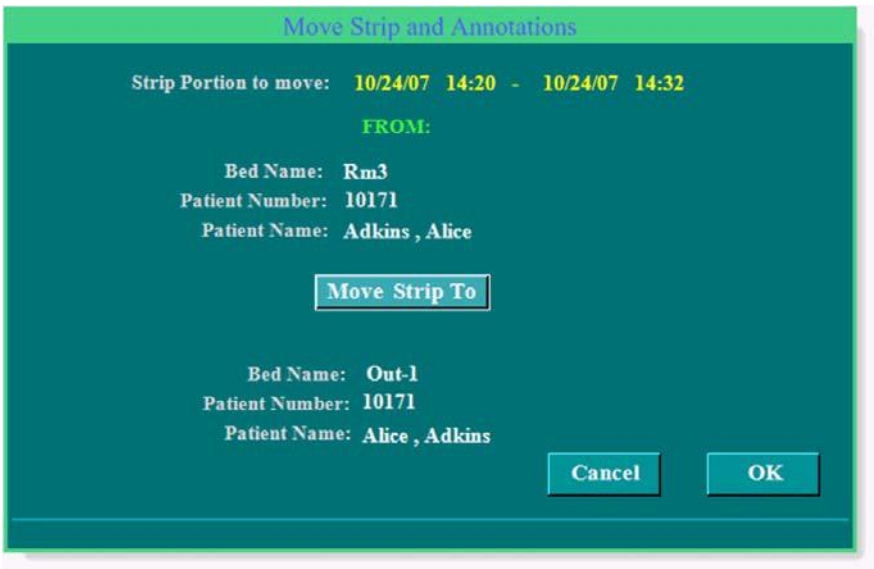

10. Select **OK** to move the strip. A message pop-up screen appears, informing you of what is about to happen and giving you the opportunity to cancel the move, as shown in Figure 3-12.

Figure 3-12 *Message Pop-up Screen for Moving Strip Annotations*

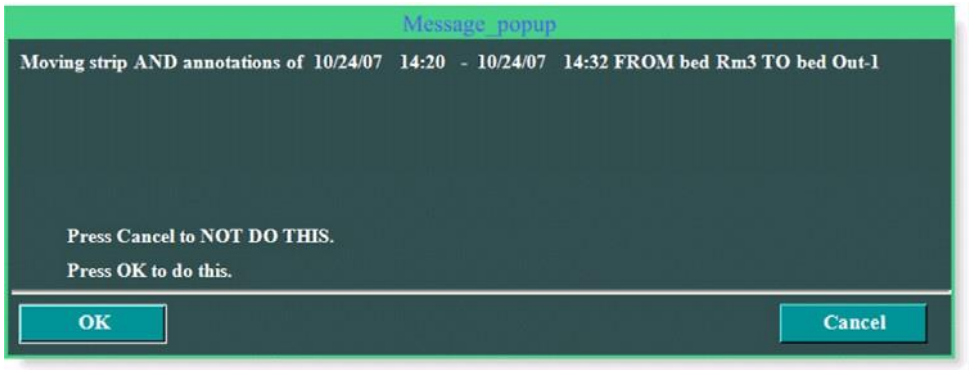

11. Select **OK** to complete the process and exit the screen.

12. To delete strip data, select the **Delete** button. A deletion warning message opens, as shown in Figure 3-13, informing you of what is about to happen and giving you the opportunity to cancel the move.

Figure 3-13 *Deletion Warning Message*

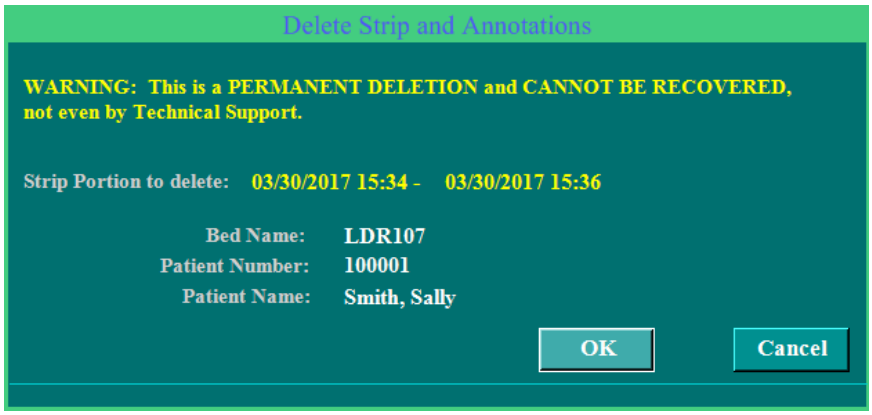

13. Select **OK** to complete the process and exit the screen.

Chapter 4

Generating Reports

System Administrators and others who are authorized to do so can run various PeriWatch Surveillance reports. Each report is originally displayed in the report viewer, from where it can then be sorted by column data, printed, and/or saved in any of several file formats.

This chapter describes the following procedures:

- Accessing, Printing and Saving Reports
- Reports Navigation

Accessing, Printing and Saving Reports

All PeriWatch Surveillance reports are accessed in the same manner:

1. Select the **System** button at the bottom of the base PeriWatch Surveillance screen. The System Functions Menu screen appears, as shown in Figure 4-1.

   Figure 4-1 *System Functions Menu Screen*

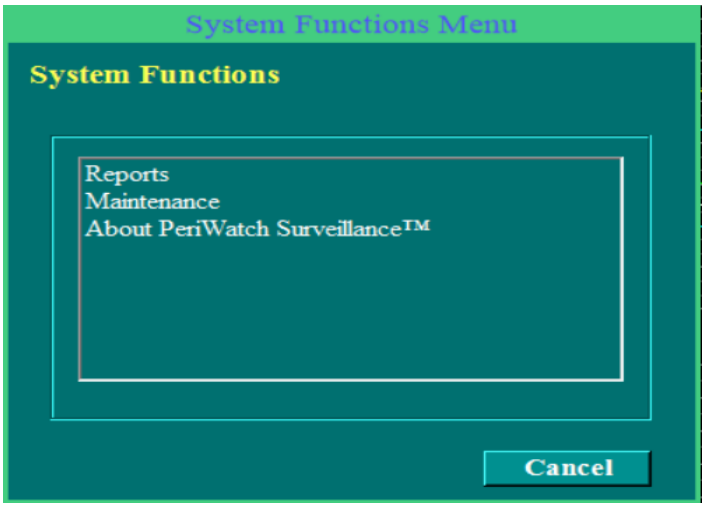

2. Select **Reports**. The screen refreshes with a list of the reports that you can run, as shown in Figure 4-2 on page 4-2 for a Basic Charting menu and Figure 4-3 for a Comprehensive menu.
3. Select the report you wish to view.

Figure 4-2 *System Functions Menu Reports Screens - Basic Charting*

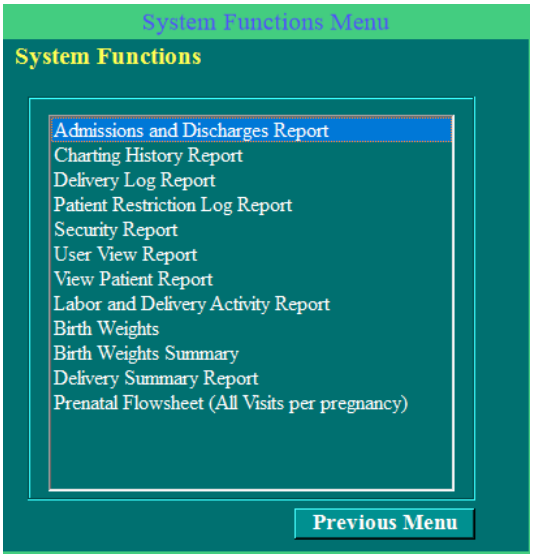

Figure 4-3 *System Functions Menu Reports Screens - Comprehensive*

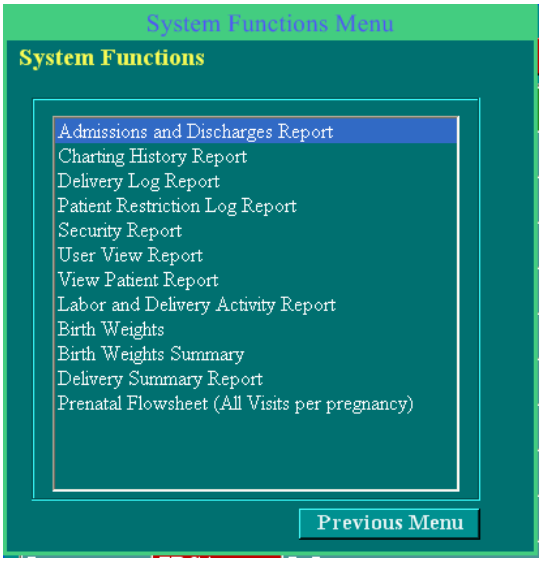

Printing Reports

All report printing is initiated from the Report Viewer by clicking the **Print** button on the Report Viewer toolbar.

CAUTION: Always print from your defined default printer. Attempting to print a report from a non-default printer can cause a sudden closing of the PeriWatch Surveillance client. If the normal default printer is for any reason unavailable and you have other printers from which to choose, make one of the other printers the default before attempting to print a report.

Saving/Exporting Reports

You can save reports as files on your hard-drive in a variety of formats by selecting the **Export** button on the Report Viewer toolbar. The available formats are:

- **XML file with report data** — Produces a file that can be utilized by any application that can process XML data.
- **CSV (comma delimited)** — A comma-separated-values file that can be used by many database applications.
- **TIFF file** — Tagged Image File Format, a graphical format. Best used for illustrations, as in this book. TIFFs are uncompressed, usually large files, not suitable for multi-page reports.
- **Acrobat (PDF) file** — Adobe Acrobat PDF format that can be both printed and viewed online. PDF files will look exactly like the displayed report and have searchable text when viewed online. Requires the intended audience to have Adobe Acrobat Reader version 5 or above or the Adobe Acrobat program version 5 or above installed on their workstation in order to open the file. Recommended for large, multi-page reports that will likely be printed.
- **Web archive** — An MHTML file format that can be viewed in Web browsers such as Internet Explorer and Firefox. As with a PDF file, a Web archive file will look exactly like the displayed report and has searchable text. Recommended for creating an e-mailable file intended for online or offline reading only on a workstation.
- **Excel** — A Microsoft Excel file. The Excel file of the report will look very similar to the displayed report. The file will be produced using the version of Excel installed on your workstation, which *must* be either Excel version 10 (from Office 2002) or version 11 (from Office 2003).

Reports Navigation

Reports Viewer Toolbar Buttons

Table 4-1 provides functional descriptions of the Reports Viewer toolbar buttons:

Table 4-1 *Reports Viewer Toolbar Buttons*

	Show Hide Document Map. Not currently used.
	Show Hide Parameter Area. Not currently used.
	First Page. Takes you to the first page of the report.
	Previous Page. Takes you to the page before the currently viewed page.
	Current Page/Page specify field. Shows you the page you are currently viewing and enables you to type in a specific page number to view.

Table 4-1 *Reports Viewer Toolbar Buttons*

	Next page. Takes you to the next page in the report.
	Last Page. Takes you to the last page of a report.
	Back to Parent Report. Not currently used.
	Stop Rendering. Not currently used.
	Refresh. Restores display of the report after an unsuccessful text search
	Print. Displays the Windows Print dialog box, enabling you to select the printer you wish to use and other printing parameters.
	Print Preview. Displays an example of what your printout will look like.
	Page Setup. Enables you to specify various print parameters such as portrait or landscape orientation, margin sizes, etc.
	Export. Saves the report in a user-specified location in the following selectable formats: XML, CSV, TIFF, Acrobat PDF, Web Archive, Excel
100%	**Zoom**. Enables you to vary the displayed report image size.
Find Next	**Search Text**. Enables you to search for specific text within the report. The Find button becomes active when you type something into the search field; the Next button becomes active if a search is successful.

Sorting Report Data

Most reports show data in columnar form, similar to the example Security report in Figure 4-4.

Figure 4-4 *Example of a Report in Columns Format*

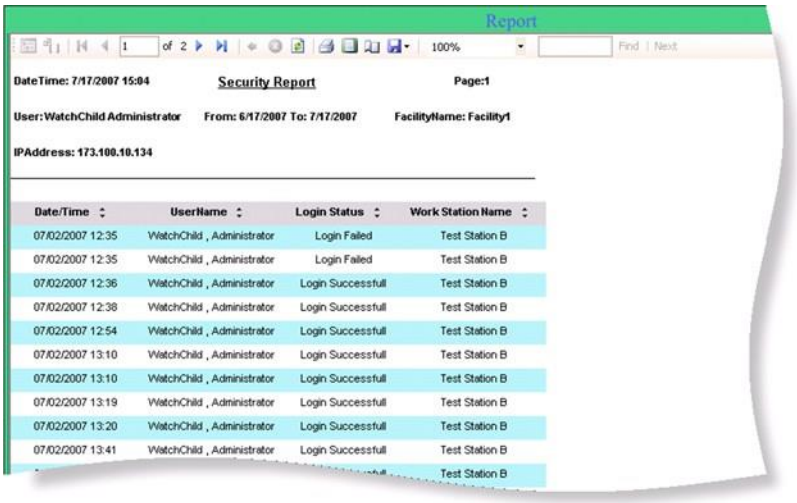

The column headings enable you to sort the report in ascending or descending order by any column, using the up and down arrowhead buttons adjacent to each heading. Figure 4-5 shows an enlargement of the Security Report headings with their sort buttons circled.

Figure 4-5 *Column Heading with Sort Buttons*

When you select an ascending (up arrowhead) or descending (down arrowhead) button, the buttons for that column change to a single, round arrowhead button to indicate both the sort order and the column by which you've sorted the report, as illustrated in Figure 4-6, which shows that the report is sorted on the Date/Time field in ascending order. Clicking the single-arrowhead button reverses the sort order of the column and toggles the button to show the new sorting order.

Figure 4-6 *Column Heading Showing Sort Column and Order*

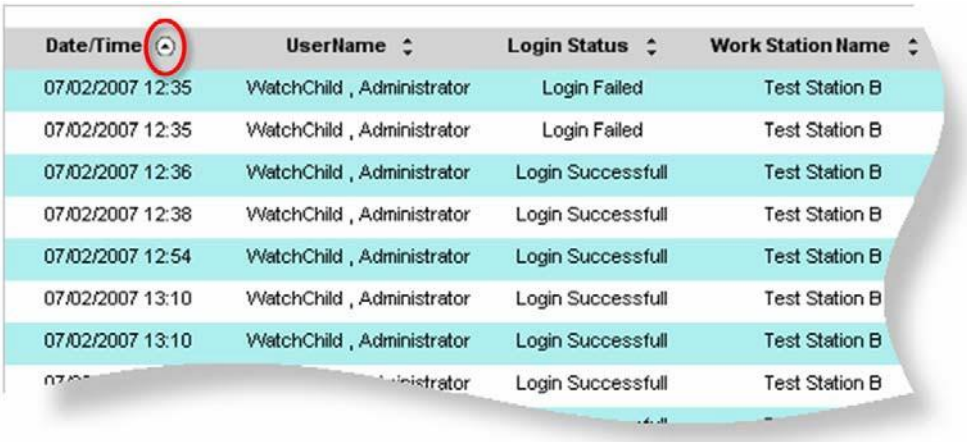

Chapter 5

System Parameters Configuration Overview

This chapter provides introductory information on PeriWatch Surveillance system parameters configuration, which enables you to set configuration values for system, workstation, bed and alert parameters. Its purpose is to show you how to navigate within the Configuration screen, utilize its components and make configuration parameter changes.

The following points, explained in detail within this chapter, are common to all of the nodes under the tree view:

- You can rename any node on the configuration tree by clicking on a node once, waiting for two seconds, then clicking a second time.
- You can right-click a node to add or delete sub-nodes.
- You can delete a particular node if it is without sub-nodes and is not active. An active workstation node cannot be deleted.
- Once you uncheck the Inherit check-box of a particular parameter, you are allowed to change the current value.
- When you check the Inherit check box for a particular parameter, the default value from the Parent level node will be inherited.

This chapter covers the following information:

- Accessing the Parameters Configuration Screen
- Configuration Screen Navigation
- Inheriting Parameters
- Setting and Changing Parameter Values
- Adding and Deleting Configuration Nodes

For descriptions of specific parameters, their default settings and — where appropriate — their minimum and maximum value range, see Chapter 6, “Configuring System Parameters” on page 6-1.

Accessing the Parameters Configuration Screen

1. From any screen, click **System**. The System Functions Menu appears, as shown in Figure 5-1.

   Figure 5-1 *System Functions Menu*

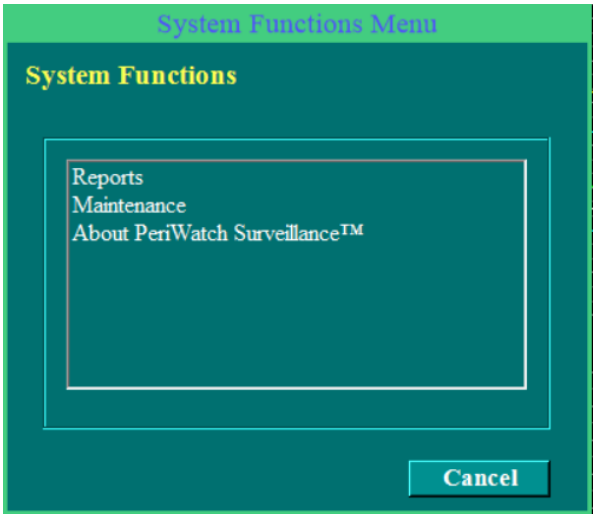

2. Select **Maintenance**. The screen refreshes to show a list of maintenance tasks, as shown in Figure 5-2.

   Figure 5-2 *System Functions Menu with Maintenance Tasks*

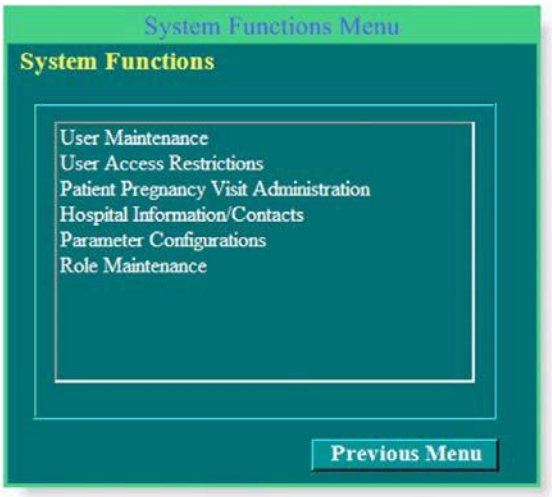

3. Select **Parameter Configurations**. The Configuration screen appears, as shown in Figure 5-3 on page 5-3.

4. See "Configuration Screen Navigation" on page 5-3 to learn how to navigate and use the Configuration screen to set parameters.

Figure 5-3 *Configuration Screen*

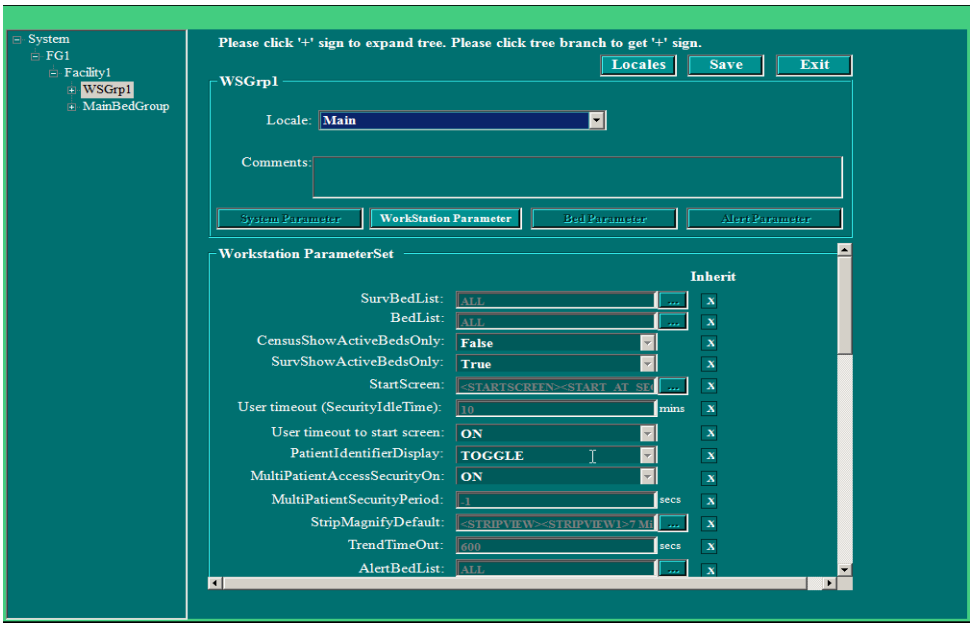

Configuration Screen Navigation

The Configuration screen initially appears with the configuration node tree pane on the left and the main screen area on the right, as shown above in Figure 5-3. The **System** node is in the upper left corner of the configuration node tree pane. A plus sign (+) just to the left of **System** indicates that you can expand the System node to show its sub-nodes and, in turn, their contents. The hierarchy of the system is illustrated in Figure 5-4. The figure below shows a system with a single Facility Group, Facility, Bed Group and Workstation Group.

Figure 5-4 *System Configuration - Graphical Representation*

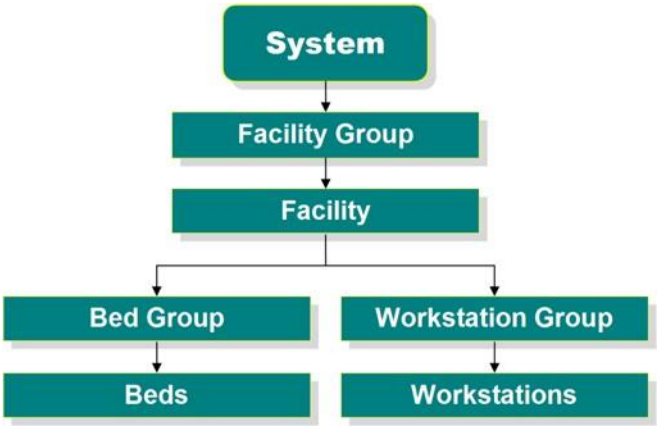

Clicking the plus sign next to the System node expands the tree to show all Facility Groups defined for the system. If a Facility Group has any facilities defined within it, there is a plus sign next to it, and clicking the plus sign will expand the group to show any defined facilities. Likewise, if a facility has any Bed or Workstation groups defined for it, there is a plus sign next to it and clicking the plus sign will expand the facility to show the Bed and Workstation groups. This node *drill-down* is how you navigate to the specific level, bed, or workstation for which you want to set the configuration parameters.

Figure 5-5 illustrates the drill-down concept, starting with the System node (1) to a Workstation Group (5) and Bed Group (6).

Figure 5-5 *Expanding Nodes and Sub-nodes*

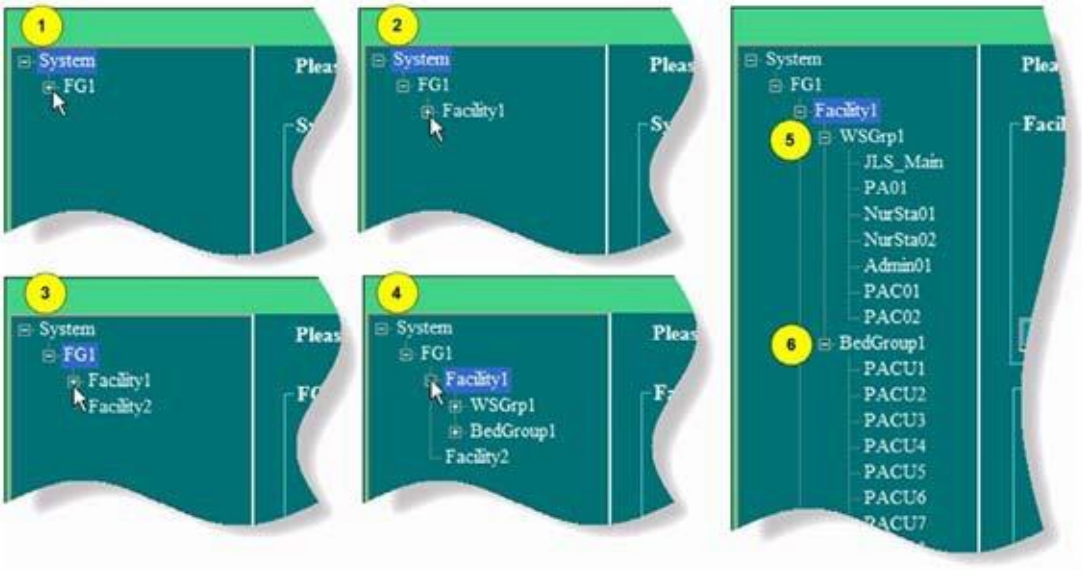

Each time that you select a node level, the right pane of the Configuration screen refreshes to show fields and configuration parameters that you can set or change for that specific node. The parameters for the selected node will apply to all of the sub-nodes within that node. (For exceptions, see "Inheriting Parameters" on page 5-6) Using Figure 5-5 as an example, if you set an alert parameter for Facility1, that parameter setting will apply to Workstation Group WSGrp1 and all of its workstations and to BedGroup1 and all of its beds. It will not, however, apply to Facility2.

Configuration Screen Buttons

All Configuration screen displays include the following buttons:

Figure 5-6 *Screen Buttons*

Locales	Use to specify, change, or delete locations for workstation groups. For example, create a locale name for all workstations in a facility. **Note:** Modifying the locale of a Workstation group will require that all workstations under that group be restarted.

Save	Saves any changes.
Exit	Performs one of the following actions, depending on whether the system detects unsaved changes: • If no system parameters were changed, or if any changes have already been saved, the screen closes. • If there are unsaved changes, the system asks if you want to save or discard the changes. Depending on your selection, the application either saves the changes and then exits, or exits without saving.

The buttons shown in Figure 5-7 appear at the middle of the Configuration screen. When selected, each button displays a set of parameters that can be changed for a given node. A button highlighting indicates which parameter set is displayed. Only those buttons whose associated parameters can be changed on the node being viewed will be active. See Table 5-1 for descriptions of each button function.

Figure 5-7 *Configuration Screen Parameter Sets Buttons*

Table 5-1 *Configuration Screen Parameter Sets Buttons Definitions (Part 1 of 2)*

Button	Purpose
System Parameter	When a Facility Group is selected, enables you to define global system parameters for all of the facilities within the Facility Group. When a Facility is selected, enables you to set system parameters for just the selected Facility.
Workstation Parameter	When a Facility Group is selected, enables you to set global workstation parameters for all Workstation Groups and workstations that are defined for all of the facilities within the selected Facility Group. When a Facility is selected, enables you to define workstation parameters for all Workstation Groups and workstations defined for the selected facility. When a Workstation Group is selected, enables you to set workstation parameters for all workstations within the selected group. When a workstation is selected, enables you to set workstation parameters for only the selected workstation.

Table 5-1 *Configuration Screen Parameter Sets Buttons Definitions (Part 2 of 2)*

Button	Purpose
Bed Parameter	When a Facility Group is selected, enables you to set global bed parameters for all Bed Groups and beds that are defined for all of the facilities within the selected Facility Group. When a Facility is selected, enables you to define global bed parameters for all Bed Groups and beds defined for the selected facility. When a Bed Group is selected, enables you to set global bed parameters for all beds within the selected group. When a bed is selected, enables you to set bed parameters for only the selected bed.
Alert Parameter	When a Facility Group is selected, enables you to set global alert parameters for all Bed Groups and beds that are defined for all of the facilities within the selected Facility Group. When a Facility is selected, enables you to define global alert parameters for all Bed Groups and beds defined for the selected facility. When a Bed Group is selected, enables you to set global alert parameters for all beds within the selected group. When a bed is selected, enables you to set alert parameters for only the selected bed.

Inheriting Parameters

With the exception of the System node, all right-pane renditions of the Configuration screen have a column of check boxes labeled **Inherit**. There is a check box for each parameter listed on the screen. When a check box is filled with an X, it indicates that the associated configuration parameter is inherited from the higher-level node.

The example in Figure 5-8 shows that the alert parameters for bed 211-2 are inherited from node DevBedGroup. (DevBedGroup may in turn inherit its bed parameters from Facility1.) If you wanted to set custom parameters for just bed 211-2, you would uncheck the box (click it to remove the X), which then enables you to change the associated parameter for that bed only.

Figure 5-8 *Example of Inheriting Parameters*

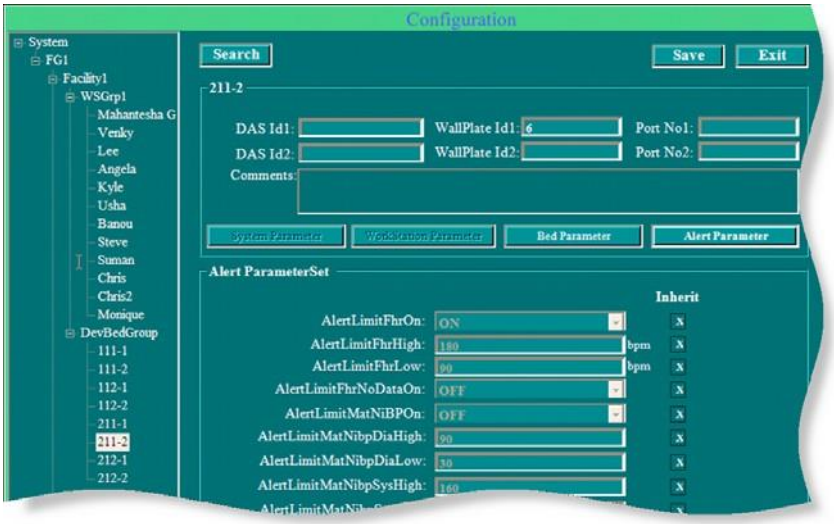

By default, System-level global parameter values are not highlighted and cannot be changed.

Setting and Changing Parameter Values

There are two types of configuration parameters:

- **Inheritable** parameters. These have an associated Inherit check box, which indicates that the parameter value can be inherited from the higher-level (Parent) node or, if the check box is blank, can be changed for the selected node and the Child sub-nodes below it. For instructions on how to change this type of parameter, see "Parameters with an Inherit Check Box" (below).
- **Device-specific** parameters. These are parameters that are unique to a particular workstation or bed. The fields for entering these parameters appear only when an individual workstation or bed is selected. Parameters entered into the fields cannot be inherited by or passed to another device or node. For instructions on how to change this type of parameter, see "Device-Specific Parameters" on page 5-9.

Parameters with an Inherit Check Box

A configuration parameter value having an Inherit check box can be changed any time that:

- Its associated Inherit check box is blank, *and*
- Its field label is *not* grayed out

For example, in Figure 5-9, only the **FaxFooter** parameter can be immediately modified because it is the only parameter with an empty Inherit check box. All of the other fields have either a white or grayed out X in their Inherit box. However, you can clear a white X so that you can change its associated parameter.

Figure 5-9 *Example of a Modifiable Parameter*

A number of Workstation Group and Workstation parameters cannot be changed directly by simply unchecking the Inherit check box and typing a new value into the parameter field. This type of field is indicated by a More button (shown at right) between the field and the Inherit check box. The button is green out if the Inherit check box contains an X and it becomes active when the check box is blank, as shown in Figure 5-10 on page 5-8.

Figure 5-10 *Examples of the More button inactive and active*

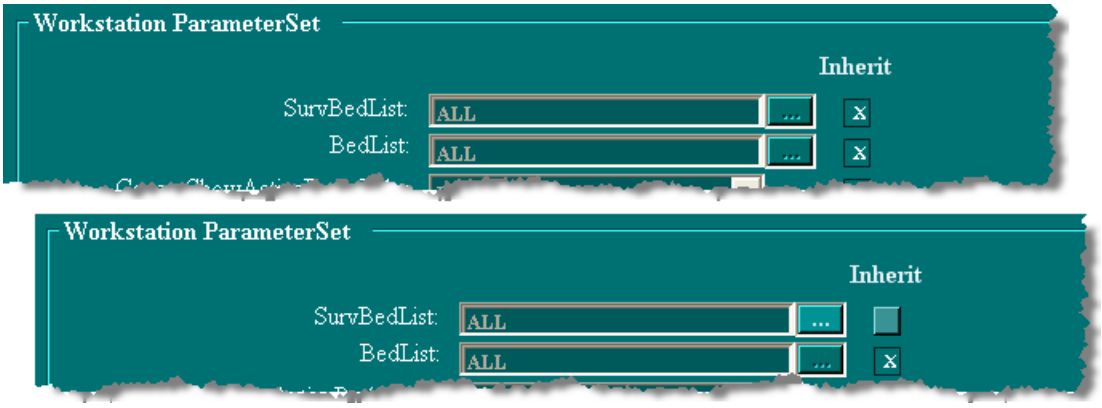

To change an inherited parameter with an associated More button:

1. Uncheck (select to *blank*) the Inherit check box.
2. Click the More button. A utility is invoked to enable you to change the parameter, normally by selecting from a series of options.
3. When the appropriate selections have been made from within the parameter utility, close the utility screen to return to the Configuration screen.
4. Click **Save**.

To modify a configuration parameter having a white X in the Inherit box and *no* More button:

1. Click the **X** to clear the check box.
2. Modify the associated field as necessary.
3. Click **Save**.
4. Repeat this procedure for as many configuration changes as you need to make, saving each change; then click **Exit** when you are done with all changes.

To change a non-inherited (no X in the Inherit check box) custom parameter setting to an inherited setting:

1. Click the parameter's blank check box. A white X will fill the check box and the parameter value will change to that of the Parent (higher level) node and become grayed out.
2. Click **Save**.
3. Repeat this procedure for as many configuration changes as you need to make, saving each change; then click **Exit** when you are done with all changes.

Device-Specific Parameters

Device-specific parameter fields appear in the upper section of the right pane only when a workstation group, workstation, or bed is selected. The parameters apply only to the selected device. Figure 5-11 shows an example of workstation group, workstation, and bed device-specific parameter fields for a selected workstation group (top), workstation (middle), and bed (bottom).

Figure 5-11 *Examples of Workstation Group, Workstation, and Bed Device-Specific Parameters*

To modify device-specific parameters, simply type the needed information into the fields or click on the item in the dropdown selection and then click **Save**.

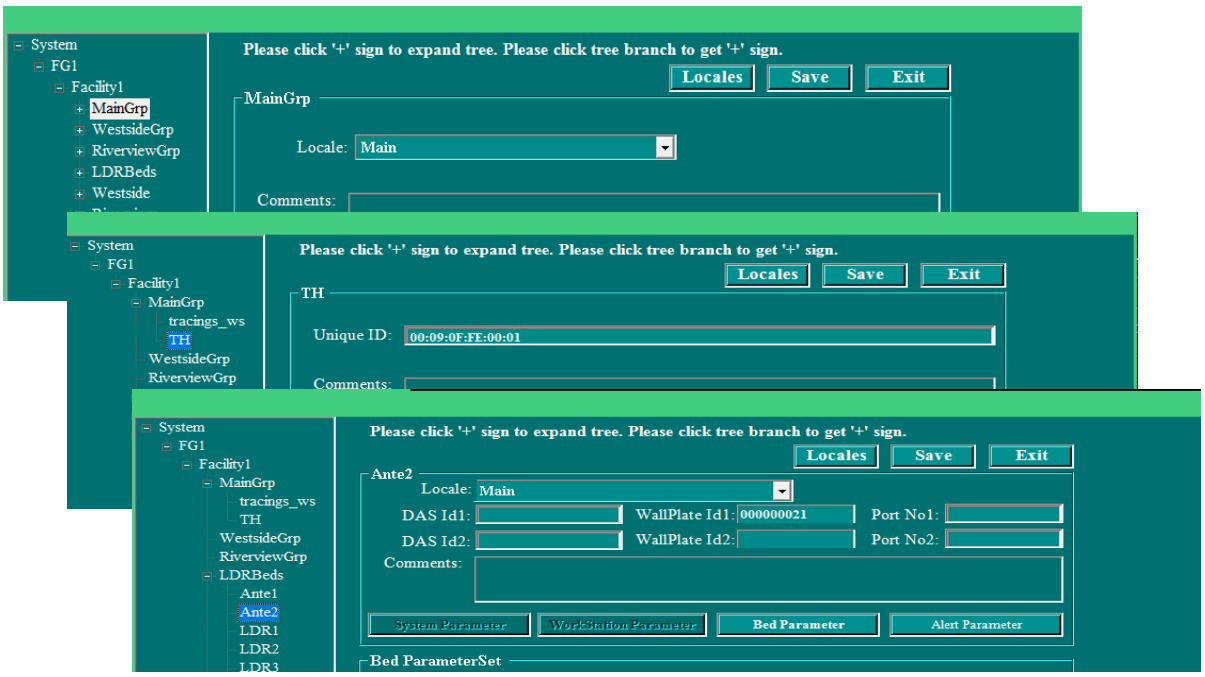

For information about what to enter into Workstation Group or Workstation parameter fields, see "Workstation Group and Workstation Parameters" on page 6-18. For information about what to enter into Bed parameter fields, see "Bed Group and Bed Parameters" on page 6-40.

Adding and Deleting Configuration Nodes

In the Configuration screen, you can add and delete nodes in the tree view. Adding a node will add a new lower-level (child) sub-node to the selected node. Deleting a node will delete the selected node from the tree view.

To add or delete a node or sub-node, right-click the node or its parent to display a pop-up menu of functions from which to select the desired action. Figure 5-12 summarizes what you can do:

Figure 5-12 *Add/Delete Nodes Summary*

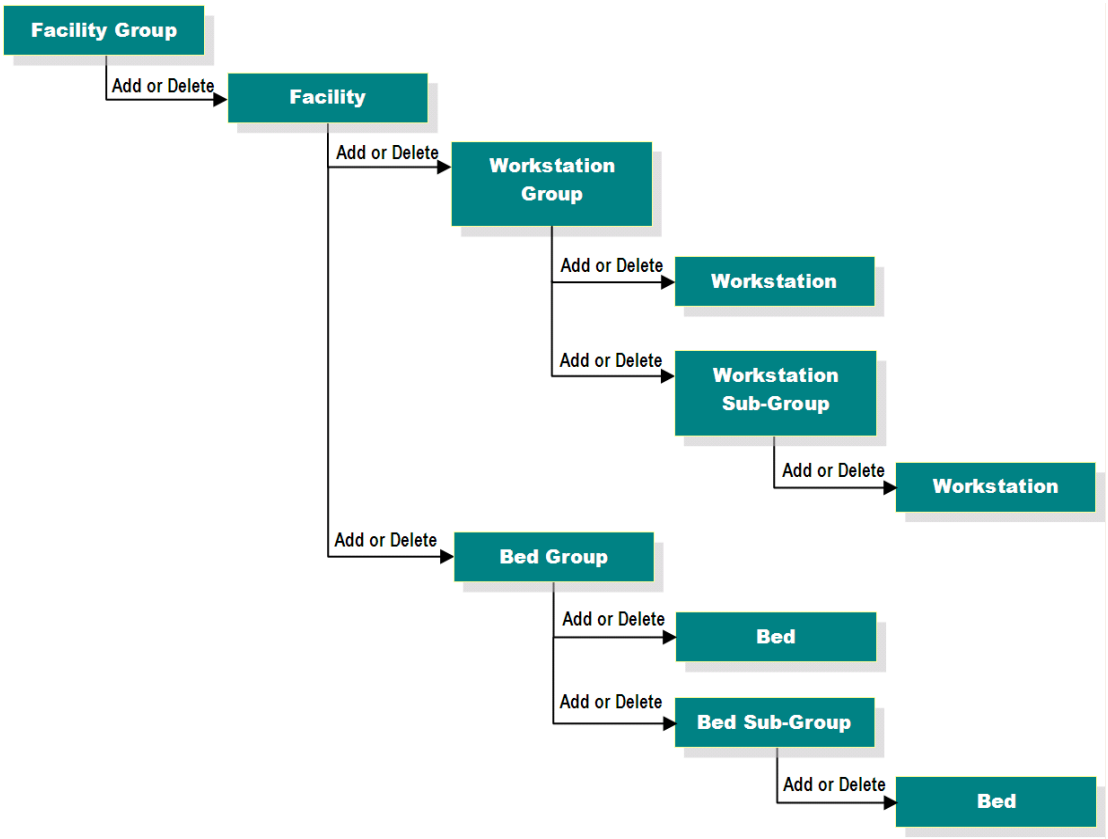

NOTE:

- Users cannot log into a Facility unless the Facility has been specified as accessible to their user ID. See "Adding New System Users" on page 2-5 or "Modifying Existing System Users" on page 2-7 for information on enabling user access to a facility.
- Users cannot delete:
  - any bed that is in use or considered active
  - any node that contains sub-nodes, beds or workstations
  - any Locale that is in use or considered active by a workstation group
- Do not delete a workstation without first verifying that it will no longer be used with PeriWatch Surveillance.

Adding a Facility Group, Facility, or Bed Group

The procedure for adding a new Facility Group, Facility, Bed Group is the same, regardless of which type of node you are adding. This procedure uses the example of how to add a new Bed Group, but is applicable to all node additions except workstations and beds.

1. Display the Configuration screen (see "Accessing the Parameters Configuration Screen" on page 5-2).
2. Expand the nodes until you have expanded that node to which you want to add a sub-node. For example, in the figure to the right, the Facility1 node has been expanded to facilitate adding a new Bed Group.

   Although expanding the node is not required to add a sub-node, seeing the existing sub-nodes ensures that you will not accidentally try to add a sub-node with a name that already exists.
3. Right-click the node to which you want to add a sub-node. In this example, the intent is to add a new Bed Group to Facility1, so the node to right-click is the Facility1 node, which opens the pop-up menu shown at right.

   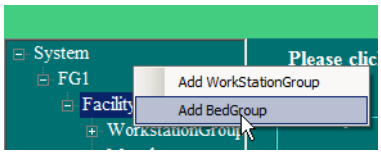

4. Select the type of sub-node you want to add, in this case the selection is **Add BedGroup**. A new sub-node is added with a default name of New*NodeType* and highlighted in blue, as shown at right.

   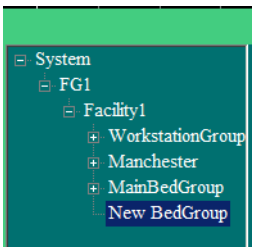

5. Select the blue-highlighted new sub-node. If you click on a different node while the blue-highlighted item is displayed, a pop-up message prompts you to rename the new item and then press **Enter**. Click **OK** to close the message popup, then select the new sub-node again, type in the new name and press the keyboard **Enter** key.

   The new sub-node is now added to its parent node. Although the new sub-node currently appears on the node tree where it was added, the next time that you open the Configuration screen, the new sub-node will appear in the proper order on the nodes tree, depending on its type.

6. Type any needed descriptive information about the new node into the **Comments** field. If you have no other configuration changes to make at this time, select **Exit** to close the Configuration screen.

Adding a Workstation Group

Adding a PeriWatch Surveillance Workstation Group allows all workstations configured under the group to inherit the same specific workstation parameters. To add a workstation group, follow these steps.

1. Expand the nodes tree to show the Facility node to which you will add the workstation group. Right-click on the Facility node name to display the pop-up menu shown below.

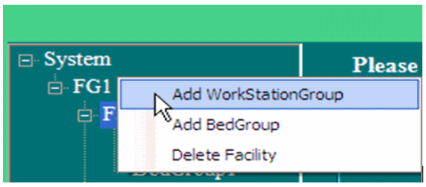

2. Select *Add WorkStationGroup*. A new sub-node is added with the default name *NewWorkstationGroup* and highlighted in blue as shown below.

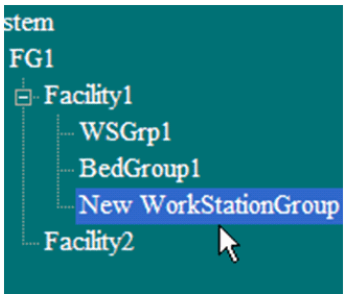

3. Every workstation group must have a Locale previously defined (see "Adding Locales" on page 5-16.) Select a defined locale from the Locale selection dropdown list as shown below.

4. Type in a workstation group name and then click **Save**.
5. In the Comments field, enter any helpful remarks to describe the workstation group. For example, any special functions for which it might be used.
6. To make any workstation group parameter changes, see "Workstation Group and Workstation Parameters" on page 6-18.
7. Click **Save** to save all changes.

Note: When any workstation group locales are modified, **all** clients in the workstation group need to be restarted.

Adding a Workstation

Defining (adding) a workstation PC to PeriWatch Surveillance enables you to set configuration parameters that are specific to just that workstation rather than inheriting all parameter settings from the parent Workstation Group. In addition, when the PeriWatch Surveillance client is started on a defined workstation, the facility choice screen is automatically bypassed because the workstation is already associated with a specific facility.

1. An individual workstation can be registered in PeriWatch Surveillance through unique workstation identifier. Customer IT configured unique Identifier for workstation (i.e. Hostname or MAC address etc.).
   a. On the unconfigured workstation, log into the PeriWatch Surveillance application.
   b. In the lower left corner, click on the IP address of the workstation. The IP address changes to the unique identifier for that workstation.
2. Display the PeriWatch Surveillance Configuration screen (see "Accessing the Parameters Configuration Screen" on page 5-2).
3. Expand the nodes tree to show the Workstation Group to which you will add the workstation, as shown at right.

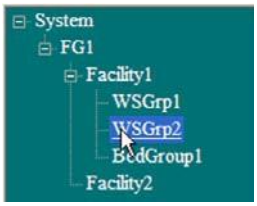

4. Right-click the Workstation Group to display the pop-up menu.
5. Select **Add Workstation**. A message pop-up displays, prompting you to enter the unique Identifier, rename the new workstation and press Enter to save the addition. Select **OK** to close the message.

6. Place the cursor in the unique Identifier, click in it, and type in the unique Identifier displayed in the lower left corner of the PeriWatch Surveillance application.
7. Select **OK** to close the message.
8. Select the New Workstation label, as shown at right. When the label turns blue, type in the name of the new workstation. The name can be any combination of letters and/or numbers but cannot contain spaces or non-alphanumeric characters. When you have finished typing in the workstation name, press Enter. A pop-up confirmation message displays to inform you that the change was successful. Click **OK** to close the pop-up.

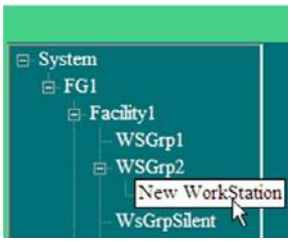

9. In the **Comments** field, enter any remarks that might be needed to describe the workstation (for example, where it is located or any special functions for which it might be used).
10. To make any workstation parameter configuration changes at this time, see "Workstation Group and Workstation Parameters" on page 6-18. Otherwise, select the **Save** button to save all changes.
11. Did you add a workstation that has multiple MAC addresses (if applicable)?

    If Yes, click the **Exit** button to close the Configuration screen and proceed to "Verifying the Validity of a Workstation MAC Address" below.

    If No, you have completed this procedure. You can either perform other configuration tasks at this time or click the **Exit** button to close the Configuration screen.

Verifying the Validity of a Workstation MAC Address

This procedure enables you to verify that you have entered a valid MAC address for a newly added workstation. The validation must be performed from the added workstation.

1. Start PeriWatch Surveillance on the newly added workstation. (If the PeriWatch Surveillance client was already running when you arrived at the workstation, close the client and then restart it.)
2. Does PeriWatch Surveillance do either of the following:
   - Bypass the Security Screen (the login screen) and open directly to the default Multi-Patient Surveillance or Census screen?
   - After requiring you to enter your user ID and password, does PeriWatch Surveillance *bypass* (not display) the Remote Login screen that would otherwise require you to select a Facility and Workstation Group?

   If Yes, the workstation MAC address is valid and PeriWatch Surveillance will treat the workstation as a locally-attached machine. *End of this procedure.*

   If No, the MAC address for this workstation is *not* valid and PeriWatch Surveillance will treat the workstation as a remote machine. Proceed to step 3.
3. Possible causes are:
   - The PC has multiple MAC addresses and you have not entered the MAC address used for connection to the PeriWatch Surveillance server.
   - The MAC address was entered in the wrong format, using hyphens instead of colons.
   - The MAC address was not typed into the MAC Address field accurately.

To correct the error:

a. Return to the Configuration screen.

b. Locate and select the workstation.

c. Change the MAC address as necessary and then select **Save**.

d. Exit the Configuration screen.

e. Return to step 1 on page 5-14 and repeat this procedure to verify that the modified MAC address is correct.

Adding a Bed

Before PeriWatch Surveillance can begin receiving and processing fetal and maternal monitor data for a patient in a bed, you must associate each attached fetal/maternal monitor to a specific physical bed. The procedure for doing that is called *adding a bed*. A bed can only be added to a Bed Group, so if you have not already created the needed Bed Group, do so before attempting to add a bed (see "Adding a Facility Group, Facility, or Bed Group" on page 5-11).

CAUTION: Adding one or more beds or modifying bed information for an existing bed requires that you restart the PeriWatch Surveillance server before admitting any patients to the added or modified beds.

CAUTION: Do not modify a bed that is occupied by a patient who is currently being monitored by PeriWatch Surveillance.

CAUTION: When adding or renaming a bed in the system configuration, the alert counters for all active beds are reset to zero (0). This prevents errors on the Census and Surveillance views when beds are added or renamed.

Before beginning this procedure, ensure that you have the following information at hand for each bed you are going to add:

- ID of the DAS (Data Acquisition Server) that will receive data from the fetal/maternal monitor(s) in the room. If the bed's wall plates are attached to different DASs, you will need both DAS IDs.
- Wall plate ID for the primary and, if installed in the room, the secondary wall plate.
- Port number on the DAS to which each wallplate is attached.

To add a bed to a Bed Group:

1. Access the Configuration screen (see "Accessing the Parameters Configuration Screen" on page 5-2).
2. In the tree pane (left side of the screen), locate the Bed Group to which you will add the bed.
3. Right-click the Bed Group to display the pop-up menu, then select **Add a Bed**. A pop-up message box opens, prompting you to enter the bed details, rename the new bed and press Enter to save the information.
4. Click **OK** to close the message.

5. Every workstation group must have a Locale previously defined (see "Adding Locales" on page 5-16.) Select a defined locale from the Locale selection dropdown list.

6. Type the ID of the first (or only) DAS into the **DAS Id1** field. If a second DAS will be used for this bed — for example, when the primary[1] and secondary wall plates will be attached to separate DASs — type that DAS ID into the **DAS Id2** field.

7. Place the cursor into the **WallPlate Id1** field and type in the ID of the primary wallplate.

8. Place the cursor into **Port No1** field and type in the DAS port number to which the primary wallplate is attached.

9. If a second wallplate is installed in the room, place the cursor into the **WallPlate Id2** field and type in that wallplate ID.

10. Place the cursor on the **New Bed** label in the tree pane. When the label turns blue, type in the bed name and then press the keyboard Enter key. A confirmation pop-up message appears, letting you know that the addition was successful. Click **OK** to close the message box.

11. If you are finished adding beds, click the **Exit** button to close the Configuration screen.

Adding Locales

In the Newborn application, the *locale* functions to allow a site to see only the active beds and the un-bedded babies for that location. In the Maternal application, sites with multiple facilities can set up multiple locales to separate the sites' beds and patients.

Locales must be defined before they can be selected on the Workstation Group Parameter Configuration screen. Users will need the *Edit Parameter Configurations* role to add locales.

To add locales:

1. On the system parameter screen click the **Locales** button.

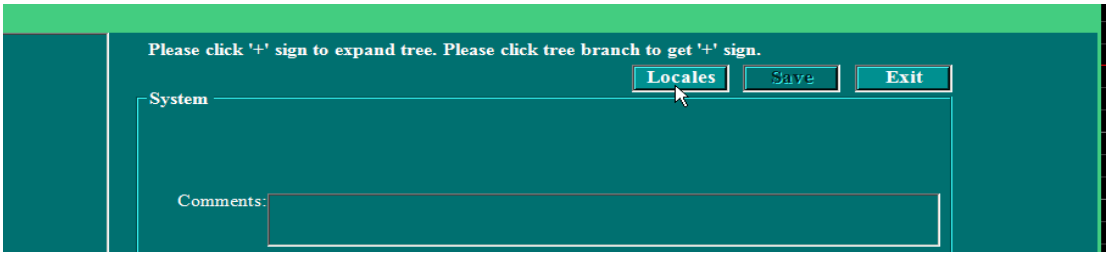

[1] When both a primary and secondary wall plate are installed, only the primary wall plate transmits both fetal and maternal sensor data. Secondary wall plates transmit only fetal sensor data.

2. The Locale Maintenance screen shown below displays. Click **Add**.

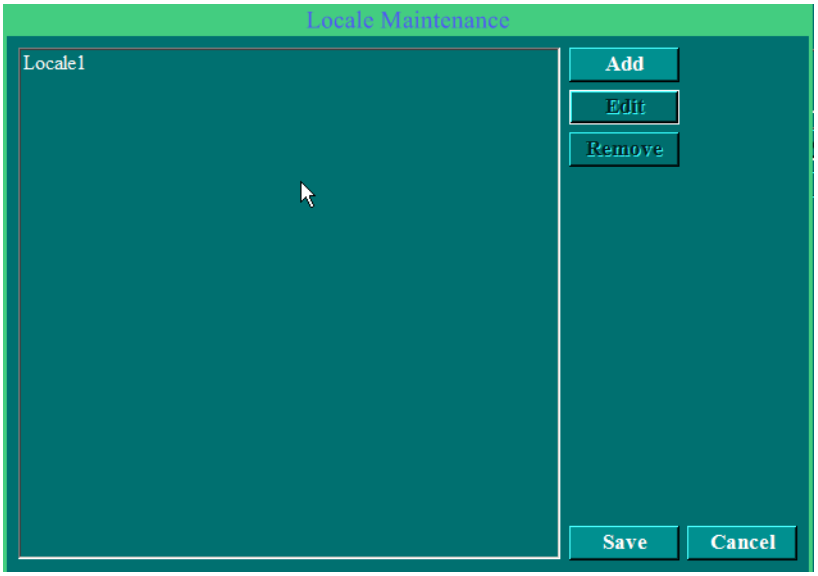

3. The Text Entry screen displays. Enter in the name of the locale, and then click **Enter** to write

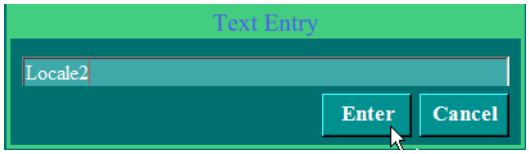

the name into the Locale Maintenance window.

4. Repeat step 2 and 3 to enter multiple locales if needed.
   - To change a locale name, select the name on the Locale Maintenance screen, and then click **Edit**. Make your change, and then click **Enter**.
   - To delete a locale from the list, select the name and then click **Remove**.
5. When all the locale names are complete, click **Save** at the bottom of the Locale Maintenance screen to save all names and close the Locale Maintenance screen. Click **Cancel** to discard all changes since the last save was performed.

Chapter 6

Configuring System Parameters

This chapter describes PeriWatch Surveillance configuration parameters, specifies the minimum, maximum, and default values where applicable and includes procedures for modifying values that involve more than simply changing a number on the Configuration screen.

The topics covered in this chapter are:

- Facility Group and Facility Parameters
- Workstation Group and Workstation Parameters
- Bed Group and Bed Parameters
- Alert Parameters
- Upgrading to version 1.6.000 from a previous version
- List of Parameters requiring restart

NOTE: This chapter assumes that you are familiar with how to access, navigate and use the Configuration screen, as described in Chapter 5, "System Parameters Configuration Overview" on page 5-1.

Facility Group and Facility Parameters

This section explains the System Configuration Parameters for a Facility Group and individual facilities. The information below describes some of the functionality of the parameters.

- The basic settings required to represent the Fetal Heart Rate (FHR[1]) and the Uterine Activity (UA) Graph use parameters UAAspectRatio, FHRAspectRatio, FHR/UAVerticalRatio and FHRTimeDisplayInterval. They can be customized.
- Configure the standard headers and footers for fax and print.
- Record the user logins and the name or type of the screen accessed by using the AuditLogin and AuditUserViewType parameters.
- Record the logins occurring during a particular period.
- You can set different Alert Window Periods, Alert FHR %, and Re-Alert Delays for FHR Low, No Data, and FHR High alerts. You can also set specific Maternal Re-Alert Delays.
- Customize the archive process and export the archived data to an external media using parameters ExportPendingPeriod, ExportReviewPeriod and ExportArchivedPeriod.
- The time period to purge the data from the data base can be set in the ExportUnloadPeriod parameter. This archive process can also be scheduled to occur regularly using the ArchiveScheduling parameter.

Table 6-1 provides the configuration parameter definitions for both Facility Group and Facility parameters. Parameters are listed in the order in which they appear on the Configuration screen. Wherever a parameter is not set directly on the Configuration screen, the parameter description points you to the procedure for setting that parameter.

Except where noted in the table, the parameters for a Facility can be either inherited from the Facility Group or set independently, as described in "Inheriting Parameters" on page 5-6.

NOTE: If you are upgrading from version 1.5.200 or earlier to version 1.6.000 or later and the present alert wait period (AlertWait or Maternal Alert Wait) is less than 60 seconds, any upgrade automatically changes the **Fetal Re-Alert Delay** and **Maternal Re-Alert Delay** periods to 60 seconds. Other Custom alert settings do not change with the upgrade. See QS15347 and "Upgrading to version 1.6.000 from a previous version" on page 6-48 for details.

NOTE: Customers upgrading to 1.6.000 from a previous version can keep the current System-level defaults or update to the new System-level defaults. See "Upgrading to version 1.6.000 from a previous version" on page 6-48 and QS15347 for details

[1]Both "FHR" and "Fhr" indicate **fetal heart rate**.

Table 6-1 *Facility System Parameter Definitions (Part 1 of 15)*

Parameter	Description
FaxHeader	Specifies the fax header text in the fax of a fetal strip.
FaxFooter	Specifies the fax footer text in the fax of a fetal strip.
PrintHeader	Specifies the print header text to appear on a printed fetal strip.
PrintFooter	Specifies the print footer text to appear on a printed fetal strip.
FetalStripFaxDisclaimer	Specifies the disclaimer text that appears on the cover sheet of a faxed fetal strip.
SurvDisclaimer	Specifies the disclaimer text in the surveillance printout of a fetal strip.
FHRAspectRatio	The ratio of FHR bpm (fetal heart rate beats per minute) along the vertical axis and time along the Horizontal axis of the FHR Graph for effective viewing of the FHR values in the graph on a Surveillance screen. The aspect ratio is measured with bpm and time. In the Multi-Patient Surveillance screen, FHRAspectRatio is maintained for a maximum of four beds. This parameter is set at system installation time and cannot be edited. **Default Setting:** 2:3 (20 Seconds to 30 beats per minute)
UAAspectRatio	The ratio of bpm along the vertical axis and time along the horizontal axis for effective viewing of Uterine Activity (UA) values in the UA graph on the Single-Patient Surveillance screen. The aspect ratio is measured with bpm and time. In the Multi-Patient Surveillance screen, the UAAspectRatio will be maintained for a maximum of four beds. This parameter is set at system installation time and cannot be edited. **Default Setting:** 60:75 (60 Seconds to 75 mm Hg)

Table 6-1 *Facility System Parameter Definitions (Part 2 of 15)*

Parameter	Description
FHR/UAVerticalRatio	The ratio of FHR bpm and UA bpm along the vertical axis for effective representation of the FHR and UA values in the Single-Patient Surveillance screen graph. In the Multi-Patient Surveillance screen, the FHR/UAVerticalRatio will be maintained for a maximum of four beds. This parameter is set at system installation time and cannot be edited. **Default Setting:** 7:4
FHRTimeDisplayInterval	The time along the horizontal axis for both FHR and UA Graph for effective representation of the FHR and UA graph along with time. This parameter is set at system installation time and cannot be edited. **Default Setting:** 4 minutes
AuditUserViewPeriod	Specifies 24-hr setting to configure how much logging occurs for auditing viewing of records. Configures how often to record a user's login time, date and the number of times a user logs into the system. Drop-down setting options are: • **No Logging** — Will not record any of the data in the database when a user logs into the system. • **Once a Day** — Record login data only once a day in the database, the first time a user logs into the system. • **Every Access** — Record the data of each login to the database.
AuditUserViewType	Specifies whether the screen name or type is logged when auditing access of patient records. Drop-down setting options are: • **Screen Name** — Name of the screen (i.e.: Admission screen, Exam screen, etc.) • **Screen Type** — Type of the screen viewed (i.e.: Census, Maternal, Surveillance, etc.) **Default Setting:** Screen Name.

Table 6-1 *Facility System Parameter Definitions (Part 3 of 15)*

Parameter	Description
Gap Tolerance	The Gap Tolerance is the maximum number of seconds of bad or missing data that is allowed during the Alert Window Period. This is a system-level setting that you cannot change. A break in data will be considered for a No Data alert if it comes after the out-of-limit second and its duration is greater than the Gap Tolerance. **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
Maternal Re-Alert Delay	This parameter specifies the amount of time after an alert is acknowledged before the same alert (same event for the same patient) can occur again. **Default setting:** 1,800 seconds (30 minutes) **Range:** 60 seconds to 3,600 seconds (1 minute to 60 minutes) **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
FHR Low:	
Alert Window Period	This parameter specifies the time period for measuring the alert condition (it specifies the number of seconds for use, alert limit and FHR detection algorithms). **Versions 1.6.000 and later:** Default value: 120 seconds (2 minutes) Range: 60-300 seconds (5 minutes) **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.

Table 6-1 *Facility System Parameter Definitions (Part 4 of 15)*

Parameter	Description
Alert FHR %	This parameter specifies the percentage of time during the Alert Window Period in which the out of limit alert condition must occur to trigger an alert. (Enabled when **AlertLimitFHROn** set to On.Computed independently from the data for each FHR alert type.) **Versions 1.6.000 and later:** Default value: 50% Range: 1%-100% **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
Re-Alert Delay	This parameter specifies the amount of time after an alert is acknowledged before the same alert can occur again for the same patient. **Versions 1.6.000 and later:** Default value: 240 seconds (4 minutes) Range: 60-300 seconds (1-5 minutes) **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
FHR No Data:	
Alert Window Period	This parameter specifies the time period for measuring the alert condition (it specifies the number of seconds for use, alert limit and FHR detection algorithms). **Versions 1.6.000 and later:** Default value: 300 seconds (5 minutes) Range: 60-300 seconds (1-5 minutes) **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.

Table 6-1 *Facility System Parameter Definitions (Part 5 of 15)*

Parameter	Description
Alert FHR %	This parameter specifies the percentage of FHR data within the Alert Window Period that defines the minimum % of no data values that will cause a No Data alert condition. (Enabled when **AlertLimitFhrNoDataOn** set to On.Computed independently from the data for each FHR alert type.) **Versions 1.6.000 and later:** Default value: 50% Range: 1%-100% **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds
Re-Alert Delay	This parameter specifies the amount of time after an alert is acknowledged before the same alert can occur again for the same patient. **Versions 1.6.000 and later:** Default value: 300 seconds (5 minutes) Range: 60-300 seconds (1-5 minutes) **NOTE**: Changing and saving this system parameter also resets alert counters for all active beds.
FHR High	
Alert Window Period	This parameter specifies the time period for measuring the alert condition (it specifies the number of seconds for use, alert limit and FHR detection algorithms). **Versions 1.6.000 and later:** Default value: 600 seconds (10 minutes) Range: 60-600 seconds (1-10 minutes) **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.

Table 6-1 *Facility System Parameter Definitions (Part 6 of 15)*

Parameter	Description
Alert FHR %	This parameter specifies the percentage of time during the Alert Window Period in which the out of limit alert condition must occur to trigger an alert. (Enabled when **AlertLimitFHROn** set to On.Computed independently from the data for each FHR alert type.) **Versions 1.6.000 and later:** Default value: 50% Range: 1%-100% **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
Re-Alert Delay	This parameter specifies the amount of time after an alert is acknowledged before the same alert can occur again for the same patient. **Versions 1.6.000 and later:** Default value: 600 seconds (10 minutes) Range: 60-600 seconds (1-10 minutes) **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
AuditLogin	Specifieshow to record successful and failed user logins. Drop-down setting options are: • **Successful Login** — Records only successful logins • **Failed Login** — Records only unsuccessful logins • **Both** — Records all logins, successful or not • **None** — No user logins are recorded **Default Setting:** Both

Table 6-1 *Facility System Parameter Definitions (Part 7 of 15)*

Parameter	Description
LateAnnotationTime	Specifies the length of the grace period in which users can go back in time to annotate without it being labeled a late entry. When this configuration option is set to > 0 the system checks to see if the difference in the display date/time and the entered date/time is less than the amount of time this option is set. If the difference is less than the amount of time configured, the entered date/time becomes the same as the display date/time. **Minimum Allowed:** 0 hours **Maximum Allowed:** 3 hours **Default Setting:** 1 hour
MedicalRecordNumberFormat	Defines the correct format for the Medical Record Number (MRN) at hospital locations, based on hospital policy. This is a string format that allows field validation, and values not matching will be rejected. The format, including brackets, is: \b[*char1*][*char2*][*char3*][*char4*][*char5*][*etc.*]\b Numeric character specification format is: [0-9] Alphabetic character specification format is: [a-z] for lower case or [A-Z] for upper case Characters can be mixed alphabetic and numeric, and the total number of characters can be facility specific. For example, specifying **\b[a-z][a-z][0-9][0-9][0-9][0-9]\b** would require an MRN of two lower-case letters followed by four numbers. An open-ended length MRN is specified with a plus sign (+) following the last required character type. For example, **\b[0-9]+\b** specifies an all-numeric string of any length. **Minimum Allowed:** 1 character **Maximum Allowed:** 100 characters **Default Setting:** Numeric of any length

Table 6-1 *Facility System Parameter Definitions (Part 8 of 15)*

Parameter	Description
VisitNumberFormat	Specifies the correct format for the Visit Number at the facility, based on facility policy. This is a string format that allows field validation, and values not matching will be rejected. Format specification is the same as for an MRN (see above). **Default Setting:** Numeric of any length
ExportPendingPeriod	Specifies the number of days from the most recently edited discharge date during which the patient visit can be reverse discharged. After this period the patient visit enters the Review state. Note that reverse discharge followed by a discharge resets the start time for this period for a patient visit. **Minimum Allowed:** 1 day **Note:** Although the minimum allowed value for this field is 1 day, it should not be set lower than 2 days. This prevents the *Pending* state from being skipped if a patient discharge is entered into PeriWatch Surveillance the day after the discharge actually occurred. **Maximum Allowed:** 30 days **Default Setting:** 7 days
ExportReviewPeriod	Specifies the number of days after the patient enters the *Review* state during which the patient visit can be edited by a user with adequate privileges (typically a records department user, manager, etc.) After this period, the record enters the *Closed* state and data is written to the ExportDirectory. **Minimum Allowed:** 1 day **Note:** Although the minimum allowed value for this field is 1 day, it should not be set lower than 2 days. This prevents the *Review* state from being skipped if a patient discharge is entered into PeriWatch Surveillance the day after the discharge actually occurred. **Maximum Allowed:** 365 days **Default Setting:** 30 days

Table 6-1 *Facility System Parameter Definitions (Part 9 of 15)*

Parameter	Description
ExportClosedPeriod	Specifies the number of days after the patient enters *Closed* state before the patient records are editable only by PeriGen Technical Support. **Minimum Allowed:** 40 weeks **NOTE:** Although the minimum allowed value for this field is 40 weeks and it is the default setting, it must not be set lower than 42 weeks. This ensures that patient record data is not archived before HL7 Laboratory data, which must be stored in the PeriWatch Surveillance database for a minimum of 42 weeks. **Maximum Allowed:** 1600 weeks **Default Setting:** 42 weeks
ArchiveOnState	Specifies the Patient Visit Data State on entering which Patient Visit data record can be initially written to disk. Modifiable only at the Facility Group level. This is an Inherit-only parameter for an individual facility. Drop-down setting options are: • **Review** — Patient Visit Data in the Review state will be written to the archiving media. • **Pending** — Patient Visit Data in the Pending state will be written to the archiving media. • **Closed —** Patient Visit Data in the Archived state will be written to the archiving media. **Default Setting:** Review

Table 6-1 *Facility System Parameter Definitions (Part 10 of 15)*

Parameter	Description
ExportMediaType	Specifies the media type or media device used in exporting software. PeriWatch Surveillance only support a network folder (SAN). Modifiable only at the Facility Group level. This is an Inherit-Only parameter for an individual facility. Drop-down setting option: • **NetworkFolder —** Storage location of the folder found on the network.
ExportMediaWriteOn	Flag to turn On archival of patient visits to other media. This can be disabled if sites do not wish to keep long term legal records for patient visits. Modifiable only at the Facility Group level. This is an Inherit- Only parameter for an individual facility. Drop-down setting options are: • **True** — Export the data to an external archiving media. Use this setting only if you have an archive media installed. • **False** — Do not allow export of any data to external media. **Default Setting:** False
ExportDirectory	Directory where database files are exported. The software will get data to write to the disks from this directory. The software will likely move files to a different name when the software completes writes to the disk(s). Modifiable only at the Facility Group level. This is an Inherit- Only parameter for an individual facility. **Default Setting:** InstallationPath/Archive Interimfolder/PDF
ArchivePath	Specifies where the system will move the patient data during archive. Modifiable only at the Facility Group level. This is an Inherit- Only parameter for an individual facility. **Default Setting: \\127.0.0.1\UntitledShare** Installation-path/ArchiveDevicefolder

Table 6-1 *Facility System Parameter Definitions (Part 11 of 15)*

Parameter	Description
Archive Start Time	Specifies the time the archiving daily task will start.
Enable Within Normal Limits	Specifies whether or not the **Within Normal Limits** button turns on the Within Normal Limits button on the following screens: *Obstetric Admitting Record - Systems Assessment Prenatal Antepartum Record - Initial Physical Examination Initial Newborn Profile - Physical Examination Newborn System Assessment Newborn Discharge Summary*. Drop-down setting options are: • **True** — The button is enabled for use. • **False** — The button is disabled. **Default Setting:** True
Gray out Lab and Blood Glucose Data (Infant Data Page-2)	Specifies whether or not to enable editing of infant lab and blood glucose information on the Infant Data screen. Drop-down setting options are: • **True** — Gray out the data so that it cannot be edited. • **False** — Do not disable editing of the infant lab and blood glucose levels. **Default Setting:** False
Braden Skin Assessment	Specifies whether a **Skin Assess** button will display the Braden Skin Risk Assessment screen or the PeriWatch Surveillance Skin Assessment screen. Drop-down setting options are: • **True** — Display the Braden Skin Risk Assessment screen. • **False** — Display the PeriWatch Surveillance Skin Assessment screen. **Default Setting:** False
Expand G and P on Surveillance	Specifies whether or not to expand the Gravida (G) and Para (P) information line on Single-Patient Surveillance screens to include the Term, Pre-Term, EAB, SAB, Living and Multi values that were previously entered on other screens. Drop-down setting options are: • **True** — Show the expanded list of information. • **False** — Show only Gravida and Para information. **Default Setting:** False

Table 6-1 *Facility System Parameter Definitions (Part 12 of 15)*

Parameter	Description
Password Settings	**Password Expiration Period:** Specifies to configure password expiration to be 30, 60, or 90 days. Default Setting: 60 days. **Minimum Password Length:** Specifies to configure password length between 2 to 50 characters. Default Setting: 2 characters. Passwords are case sensitive. **Password Strength:** Specifies to configure password strength: • **Weak** — Must have both letters and numbers. The password length may be between the range 2 and 50. • **Moderate** — Must have numbers, lower-case letters, and upper-case letters. Characters cannot be used in repetition. A minimum password length of 6 characters is required. The password length may be between the range 6 and 50. • **Strong** — Must have numbers, lower-case letters, upper-case letters, and symbols. Characters and segments cannot be used in repetition. All numeric characters cannot be at the beginning or end of the password. The password must not contain common words (“user,” “password,” etc.) or sequences (“asdf,” “123,” etc.) A minimum password length of 8 characters is required. The password length may be between the range 8 and 50. **Default Setting:** Weak
User Has NICU	Configures the Newborn module on the system. The following options can only be configured by PeriGen Technical Support: • **True** — Configures to run a separate PeriWatch Surveillance Newborn application. • **False** — Configures the Chart screen to display a **Newborn** button that links to the traditional newborn charting package. **Default Setting:** False

Table 6-1 *Facility System Parameter Definitions (Part 13 of 15)*

Parameter	Description
Clinical Decision Support	Enables or disables Vigilance features in the Surveillance mode. This will display the Vigilance button on the Chart Floating Window and the Surveillance screens (Single Surveillance, Integrated Surveillance and Multi Surveillance screens). It will also add the Vigilance column on the Census, providing access to Single Patient View and Cues export. Vigilance includes FHR pattern recognition, long term condensed strip display, maternal vitals and labor progression curve. This parameter can only be configured by PeriGen Technical Support. • **On** — Enables Clinical Decision Support. • **Off** — Disables Clinical Decision Support. **Default Setting:** Off
Strip Analysis	Analysis of fetal heart rate data and uterine activity. This parameter can only be configured by PeriGen Technical Support.
Strip Analysis Enabled	Enables or disables the **Strip Analysis** button on the Single-Patient Surveillance screen. The strip analysis is performed manually by the user. The following options can only be configured by PeriGen Technical Support: • **On** — Enables strip analysis. • **Off** — Disables strip analysis. **Default Setting:** Off
Strip Auto-Analysis Enabled	Enables or disables the **Analyze** button on the Strip Analysis window. The strip analysis is automatically performed by the system or manually by the user. The following options can only be configured by PeriGen Technical Support: • **On** — Enables strip auto-analysis. • **Off** — Disables strip auto-analysis. **Default Setting:** Off
Date/Time Format	Enables Technical Support to configure the maternal date and time format. For example, “short” format (9-7-12), “long” format (09-07-2012), the order format, and the separators (. - /). The default format is: <long day> – <long month> – <long year>. **NOTE:** To modify the date/time format for the PeriGen Newborn module, contact PeriGen Technical Support.

Table 6-1 *Facility System Parameter Definitions (Part 14 of 15)*

Parameter	Description
Seconds on Flowsheets	Enable flowsheets to display the date/time field to the seconds precision level on records. **Default Setting:** None
One valid FS record type per user	Enables ONLY one valid flowsheet record type per user to be configured for EMR's that required one record per user per time period. **Default Setting:** None
Open Charting Defers Discharge	Enables or disables open charts to defer discharges until the charting is completed using the following options: • **On** — Enables the feature. • **Off** — Disables the feature. **Default Setting:** Off
Use Integrated Annotations	Enables or disables the enhanced Annotate Strip screen, which features customizable categories and options for annotations. The following options can only be configured by PeriGen Technical Support: • **True** — The enhanced Annotate Strip screen is used. • **False** — The standard Annotate Strip screen is used. **Default Setting:** False
Disregard MHR from MECG	Enables a Maximum Heart Rate (MHR) alert when a Maternal Electrocardiogram (MECG) is on the patient. **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds
Disregard INOP data	Enables or disables the display of the tracings and data for alert calculations when the fetal monitor probe status is using INOP (inoperable data) for the following options: • **On** — Enables the utilization of INOP data. • **Off** — Disables the utilization of INOP data. **Default Setting:** On
Auto ADT	Configure Auto ADT interface to either a restricted or unrestricted mode. Restricted requires user intervention to move patient visits in the system. Unrestricted allows the system to automatically move patient visits throughout the system with minimum conflicts. • **Restricted** — Requires user intervention to move patient visits in the system (alerts, verify state, and active tracings). • **Unrestricted** — Allows the system to automatically move patient visits with minimum conflicts (acknowledge alerts, verify state, and fetal monitor left on).

Table 6-1 *Facility System Parameter Definitions (Part 15 of 15)*

Parameter	Description
Actively Monitored Short Period (seconds)	Specifies the minimum time in seconds where continuous vital data on a bed is considered actively monitored. • Minimum Allowed: 1 second • Maximum Allowed: 600 seconds **Default Setting:** 5 seconds
Actively Monitored Long Period (seconds)	Specifies the minimum time in seconds when any vital data within the last seconds on a bed is considered actively monitored for a long period. This configuration is related to the % of Long Period Data configuration. (When there is at least X% (% of Long Period) of Y seconds (Actively monitored Long Period)). For example, if there is vital data for at least 50% (% of Long Period) of 60 seconds (Actively monitored Long Period), a bed is considered actively monitored when the ADT messages are received. • Minimum Allowed: 1 second • Maximum Allowed: 600 seconds **Default Setting:** 60 seconds
% of Long Period Data	Specifies the minimum percentage of vital data received during the Long Period configuration for a bed to be considered as actively monitored. This configuration is related to the Actively Monitored Long Period configuration. (When there is at least X% of Y seconds). For example, if there is vital data for at least 50% (% of Long Period) of 60 seconds (Actively monitored Long Period), a bed is considered actively monitored when ADT messages are received. • Minimum Allowed: 1% • Maximum Allowed: 100% **Default Setting:** 50%
Acknowledge Alert Older Than (seconds)	Specifies the minimum time in seconds an alert can be acknowledged by the Surveillance system when ADT messages are received for that patient . • Minimum Allowed: 0 seconds • Maximum Allowed: 1800 seconds **Default Setting:** 300 seconds

Workstation Group and Workstation Parameters

This section explains the functionalities involved in configuring the Workstation Group and individual Workstation parameters. The parameters are used to configure the parameters at the Workstation Group level and at specific Workstation levels.

The information below describes some of the functionality of the Workstation parameters.

Table 6-2 provides the configuration parameter definitions for both Workstation Group and Workstation parameters. Parameters are listed in the order in which they appear on the Configuration screen. Wherever a parameter is not set directly on the Configuration screen, the parameter description points you to the procedure for setting that parameter.

Except where noted in the table, the parameters for a Workstation can be either inherited from the Workstation Group or set independently, as described in "Inheriting Parameters" on page 5-6.

Table 6-2 *Workstation Group & Workstation Parameter Definitions (Part 1 of 12)*

Parameter	Definition
SurvBedList	Defines the beds that are to be viewed by a particular Workstation Group or Workstation in the Multi-Patient Surveillance screen. For instructions on setting this parameter, see "SurvBed- List Parameter Configuration Procedure".
BedList	Ordered list of bed identifiers which provides the beds which will be listed on the Census, Maternal Screen, and bed selection lists and the order in which they will appear. Defines the beds that are to be viewed by a particular Workstation Group or Workstation in the Census view. For instructions on setting this parameter, see "Census Bedlist Parameter Configuration Procedure". **Default Setting:** All beds listed alphabetically. OUT beds are always at the bottom.

Table 6-2 *Workstation Group & Workstation Parameter Definitions (Part 2 of 12)*

Parameter	Definition
CensusShowActiveBedsOnly	Specifies whether to show active beds only or all beds on the Census screen. Drop-down setting options are: • **True** — The Census screen displays only occupied beds and beds containing strip data, plus one empty OUT bed. • **False** — The system displays all beds in the Census screen. **Default Setting:** False
SurvShowActiveBedsOnly	Specifies whether to show only active beds on a Multi-Patient Surveillance screen. **NOTE:** Changing this parameter requires restarting the PeriWatch Surveillance client on all affected workstations. Drop-down setting options are: • **True** — The Multi-Patient Surveillance screen displays only displays active beds with strip within the "Active Beds Strip View Period". • **False** — The system displays all beds on the Multi-Patient Surveillance screen. **Default Setting:** True

Table 6-2 *Workstation Group & Workstation Parameter Definitions (Part 3 of 12)*

Parameter	Definition
StartScreen	Determines the screen that initially displays when PeriWatch Surveillance is started. For instructions on setting this parameter, see "Start Screen Parameter Configuration Procedure" on page 6-30. **NOTE:** Changing this parameter requires restarting the PeriWatch Surveillance client on all affected workstations. Drop-down setting options for the StartScreen parameter are: • **Census** — Shows you a list of all beds in your unit, a color-coded status of each bed, and columns of quick-reference information. • **Maternal Census** — Shows only occupied beds and recent values recorded by the maternal monitors attached to all patients. • **Surveillance** — Shows fetal heartbeat (top) and uterine activity (bottom) monitoring strips. **Default Setting:** Surveillance When setting the start screen for Surveillance with an integrating EMR partner for Single Sign-On, set the Start Screen Integration Start Screen parameter. The Integration Start Screen parameter specifies whether to display the Single Sign-On screen as Independent Surveillance or Single Surveillance. Drop-down setting options for the Integration Start Screen parameter are: • **Independent Surveillance** • **Single Surveillance** **Default Setting:** Independent Surveillance
User timeout (SecurityIdleTime)	Defines the amount of time that a workstation is idle for this number of seconds, the user is logged off and must re-enter their security ID to unlock the Workstation before the user can perform an action. **NOTE:** Changing this parameter requires restarting the PeriWatch Surveillance client on all affected workstations. **Minimum:** 1 minute **Maximum:** 60 minutes **Default Setting:** 10 minutes

Table 6-2 *Workstation Group & Workstation Parameter Definitions (Part 4 of 12)*

Parameter	Definition
User timeout to start screen	Determines whether to navigate to the start screen when the user times out or stay on the current screen that is open. • **ON** — User navigates to the start screen when the user times out. • **OFF** — User stays on the current opened screen. **Default Setting:** ON
PatientIdentifierDisplay	Adjusts the display of patient full names or initials for the Census Board, Maternal Census Screen, Single-Patient Surveillance, Single Sign-On Surveillance and Patient Lists. NOTE: Changing this parameter requires restarting the PeriWatch Surveillance client on all affected workstations. Drop-down setting options are: • NAMES — The full name of the patient will appear in the Names field. • INITIALS — The first, middle and last name initials of the patient will appear. • TOGGLE — You can toggle between the buttons Hide Name and Show Name. **Default Setting:** TOGGLE
MultiPatientAccessSecurityOn	Defines whether a user is required to login before being allowed to view multiple patient screens like the Census and Maternal screens. **NOTE:** Changing this parameter requires restarting the PeriWatch Surveillance client on all affected workstations. Drop-down setting options are: • **ON** — Users must re-validate through the Security screen before viewing a multiple-patient screen. • OFF — Users can view multiple-patient screens without re validating. **Default Setting:** ON

Table 6-2 *Workstation Group & Workstation Parameter Definitions (Part 5 of 12)*

Parameter	Definition
MultiPatientSecurityPeriod	Defines the minimum period between authentication requests for Multiple Patient Security access. This prevents repeated authentication of a user if the user has recently authenticated. When set to the default value -1 (minus 1), this feature is disabled. **NOTE:** Changing this parameter requires restarting the PeriWatch Surveillance client on all affected workstations. **Minimum Allowed:** -1 seconds **Maximum Allowed:** 3600 seconds **Default Setting:** -1 second
StripMagnifyDefault	Specifies the amount of strip time that can be displayed on a Single-Patient Surveillance screen for either of the two screen resolutions supported by the system (1024x768 and 1280x1024). For instructions on setting this parameter, see "StripMagnifyDefault Parameter Configuration Procedure" on page 6-25. **Default Setting:** • 1024 x 768 = 7 min view • 1280 x 1024 = 6 min view
TrendTimeOut	Specifies the time for viewing the annotation strip using the Trend functions in the Single-Patient Surveillance screen and Single Sign-On Surveillance screen. If the user is in Trend mode beyond the specified time, the annotation strip automatically exits Trend mode and begins to run in real time mode. **Minimum Allowed:** 60 seconds **Maximum Allowed:** 3600 seconds **Default Setting:** 600 seconds
AlertBedList	Specifies which beds can trigger an alert signal at specific Workstations. For instructions on setting this parameter, see "AlertBedList Parameter Configuration Procedure" on page 6-31. **NOTE:** Changing this parameter requires restarting both the *PeriWatch Surveillance* server and the *PeriWatch Tracings* client on all affected workstations. **Default Setting:** All beds **CAUTION:** Do not disable bed alerting to any workstation that may be used by a caregiver who is or may be responsible for a patient who is in that bed.

Table 6-2 *Workstation Group & Workstation Parameter Definitions (Part 6 of 12)*

Parameter	Definition
AlertPresentation	Defines the type of alert signals that will be generated for beds defined by the AlertBedList parameter. Selectable options are: • **Audible** • **PopUp** For information on setting this parameter, see "AlertPresentation Parameter Configuration Procedure" on page 6-32. **Default Setting:** Audible and PopUp **NOTE:** If audible and PopUp are not active, visual will always be on.
AlertDisplayOnCensus	Specifies whether or not an alert will be shown on the Census or Maternal displays to allow quick navigation to the Single Patient Surveillance screen for acknowledgement. Changing this parameter requires restarting the PeriWatch Surveillance client on all affected workstations. Drop-down setting options are: • ON — Display the alerts on the Census screen. • OFF — Do not display the alerts on the Census screen. Default Setting: ON
AlertShowPatientId	Determines whether a patient identifier will be shown on the alert popup window. Note that the patient identifier format will be dependent on the **PatientIdentifierDisplay** setting and the user access privileges as well. Drop-down setting options are: • **ON** — Display the patient ID in alert popups. • **OFF** — Do not display the patient ID in alert popups. Only the bed number will be displayed. **Default Setting:** OFF

Table 6-2 *Workstation Group & Workstation Parameter Definitions (Part 7 of 12)*

Parameter	Definition
AlertAllowAcknowledge	Determines if users with adequate privileges can acknowledge an alert on the configured Workstation. This parameter can be set at any node level from as high up as the Facility Group level, to allow all workstations in all facilities and workstation groups to be used for alert acknowledgment, or as low as individual workstations to allow or prevent alert acknowledgment from specific workstations. Drop-down setting options are: • **ON** — Allow acknowledgment of alerts from the designated workstation(s). • **OFF** — Do not allow acknowledgment of alerts from the designated workstation(s). **Default Setting:** ON
AlertMinDisplayTime	Specifies the minimum time in seconds an alert can be presented on screen before it is acknowledged (and therefore can be turned off). • Minimum Allowed: 5 seconds • Maximum Allowed: 30 seconds **Default Setting:** 5 seconds
AlertHoldPeriod	Specifies the period of time after which popup and/or audible alerts will come back on the Workstation after alerts are put on hold. After this period, the alert will reappear. • Minimum Allowed: 0 seconds • Maximum Allowed: 900 seconds **Default Setting:** 300 seconds
GraphHeartBase	Specifies the starting point of the base line of the FHR or MHR in the Single-Patient Surveillance screen and Single Sign-On Surveillance screen. This parameter is set at system installation time and cannot be edited. **Default Setting:** 30 bpm (beats per minute)

Table 6-2 *Workstation Group & Workstation Parameter Definitions (Part 8 of 12)*

Parameter	Definition
GraphHeartRange	Specifies the range of FHR or MHR from GraphHeartBase in the Single-Patient Surveillance screen and Single Sign-On Surveillance screen. This parameter is set at system installation and cannot be edited. Default Setting: 240 bpm (beats per minute)
GraphHeartMinorGridLineBase	Specifies the base value of the minor gridline. The base line is a horizontal line that comes at 10 second intervals in the Single-Patient Surveillance screen and Single Sign-On Surveillance screen. This parameter is set at system installation and cannot be edited. **Default Setting:** 30 bpm (beats per minute)
GraphHeartMinorGridlineInterval	Specifies the period between the horizontal minor grid lines in the maternal and fetal heart rate at graph level in the Single-Patient Surveillance screen and Single Sign-On Surveillance screen. This parameter is set at system installation and cannot be edited. **Default Setting:** 10 bpm (beats per minute)
GraphHeartMajorGridlineBase	Specifies the base value of the major grid line. The major grid line is a horizontal dark line that comes at 30 second intervals in the Single-Patient Surveillance screen and Single Sign-On Surveillance screen. This parameter is set at system installation time and cannot be edited. **Default Setting:** 30 bpm (beats per minute)
GraphHeartMajorGridlineInterval	Specifies the period between the horizontal major grid lines in the maternal or fetal heart rate at the graph level in the Single-Patient Surveillance screen and Single Sign-On Surveillance screen. This parameter is set at system installation time and cannot be edited. **Default Setting:** 30 bpm (beats per minute)
GraphUaBase	Specifies the starting point of the base line of the uterine activity (Ua) at the graph level in the Single-Patient Surveillance screen and Single Sign-On Surveillance screen. This parameter is set at system installation time and cannot be edited. **Default Setting:** 0 mm Hg (millimeter of mercury)

Table 6-2 *Workstation Group & Workstation Parameter Definitions (Part 9 of 12)*

Parameter	Definition
GraphUaRange	Specifies the range of uterine activity from the GraphUaBase parameter in the Single-Patient Surveillance screen and Single Sign-On Surveillance screen. This parameter is set at system installation time and cannot be edited. **Default Setting:** 0 mm Hg (millimeter of mercury)
GraphUaMinorGridLineBase	Specifies the base value of the minor grid line. The base line is a horizontal sleek line that comes at 10 second intervals at the graph level in the Single-Patient Surveillance screen and Single Sign-On Surveillance screen. This parameter is set at system installation time and cannot be edited. **Default Setting:** 0 mm Hg (millimeter of mercury)
GraphUaMinorGridLineInterval	Specifies the period between the horizontal minor grid lines in Uterine Activity graph level in the Single-Patient Surveillance screen. and Single Sign-On Surveillance screen This parameter is set at system installation time and cannot be edited. **Default Setting:** 10 mm Hg (millimeter of mercury)
GraphUaMajorGridLineBase	Specifies the base value of the major grid line. The major grid line is a horizontal dark line that comes at 20 mm Hg intervals at the graph level in the Single-Patient Surveillance screen and Single Sign-On Surveillance screen. This parameter is set at system installation time and cannot be edited. **Default Setting:** 0 mm Hg (millimeter of mercury)
GraphUaMajorGridLineInterval	Specifies the period between the horizontal major grid lines in Uterine Activity graph level in the Single-Patient Surveillance screen and Single Sign-On Surveillance screen. This parameter is set at system installation time and cannot be edited. **Default Setting:** 20 mm Hg (millimeter of mercury)
GraphTimeMajorLineInterval	Specifies the period in seconds between the vertical major grid lines on the fetal strip of the Single-Patient Surveillance screen and Single Sign-On Surveillance screen. This parameter is set at system installation time and cannot be edited. **Default Setting:** 60 seconds

Table 6-2 *Workstation Group & Workstation Parameter Definitions (Part 10 of 12)*

Parameter	Definition
GraphTimeMinorLineInterval	Specifies the period in seconds between the vertical minor grid lines on the fetal strip in the Single-Patient Surveillance screen and Single Sign-On Surveillance screen. This parameter is set at system installation time and cannot be edited. **Default Setting:** 10 seconds
Census Patient Columns	Ordered list of basic fields that can be removed but not reordered unless also located in the Comprehensive charting. **Default Setting:** OnCallMD, Nurse, Pedi, and Remarks
CensusFieldList	Ordered list of fields with selected field size and field label to display on the Census screen. This will likely be a collection of objects representing data for each field. For instructions on setting this parameter, see "CensusFieldList Parameter Configuration Procedure" on page 6-33. Up to 20 columns are allowed. **Default Setting:** Gest, G/P, Time of Exam, Dil/Sta, and Membrane.
CensusStatusColors	Specifies the colors for the status bar buttons on the Census screen. For instructions on setting this parameter, see "CensusStatusColors Parameter Configuration Procedure" on page 6-37.
CensusStatusLabels	Specifies the labels for the Status buttons on the Census screen. For instructions on setting this parameter, see "CensusStatusLabels Parameter Configuration Procedure" on page 6-38. **Default Setting:** Observation, Antepartum, Labor, Postpartum, NoStatus, and Retrieved. (All labels can be modified except Retrieved.).
Flowsheet Display	Configures the ability to display flowsheet records on multiple flowsheets (Outpatient/Triage, Ante/Intrapartum, and Recovery/Postpartum). **Default Setting:** Outpatient/Triage and Ante/Intrapartum share a display for all flowsheet records. Any flowsheet accessed by a non-flowsheet path defaults to Outpatient/Triage and Ante/Intrapartum.
PC Monitor Display	Determines PC display based on selection of single (1) or dual (2) monitors. **Default Setting:** One

Table 6-2 *Workstation Group & Workstation Parameter Definitions (Part 11 of 12)*

Parameter	Definition
FHR Category Colors	Configures the colors representing the NICHD-defined FHR categories I, II, and III.
Strip Analysis Periods	The time ranges available for assessment in the assessment schedule. The time range can be edited to the desired range(s). **Default Setting:** 10, 20, and 30
Show Flowsheet Display Field	Enables or disables the Flowsheet Display field to display on the flowsheet record. Drop-down setting options are: • **True** — Enables the Flowsheet Display field to display on the flowsheet record. • **False** — Disables the Flowsheet Display field from displaying on the flowsheet record. **Default Setting:** True
Active Beds Strip View Period	The time in minutes of no active tracing, after which the bed will cease to display on the surveillance screens when multi-surveillance views display bed(s) within the configured amount time. This is effective only if SurvShowActiveBedsOnly configuration is true and will only display bed in the SurvBedList. **Minimum Allowed:** 1 minute **Maximum Allowed:** 1440 minutes **Default Setting:** 5 minutes
Notification Agent Location	Specifies the location on the workstation where the Notification Agent will popup. The setting options are: • **Left** – The Notification Agent will appear at the lower left side of the screen. • **Right** – The Notification Agent will appear at the right side of the screen. **Default Setting:** Left
Popup VNA on Disconnect State	Enables and disables the VNA (Vigilance Notification Agent) to popup on workstation when the VNA is in a disconnect/error state. • **On** — Popup on workstation when the VNA is in a disconnect/error state. • **Off** — Does not popup on workstation when the VNA is in disconnect/error state. **Default Setting:** Off.

Table 6-2 *Workstation Group & Workstation Parameter Definitions (Part 12 of 12)*

Parameter	Definition
Show Annotations Always	If it is "On" • Single Surveillance will show all annotations irrespective of the user being logged or not and Multiple/Floating surveillance will show all annotations on the tooltip. If it is "Off" • When user is logged in, all annotations will be visible in Single Surveillance and available in tooltip from Multiple/Floating surveillance. • No user logged in, only system annotations are visible in Single Surveillance ("A" displayed for user annotations) and in Multiple/Floating Surveillance only System Annotations can be viewed using the tool tip. **Default Setting**: On
Single Patient View Auth	Ability to launch SPV (Single Patient View) with or without authentication. • **On** — Open the SPV in an authenticated view. • **Off** — Open the SPV in an unauthenticated view **Default Setting:** Off (open unauthenticated).
Display Vigilance Tools	Enable CDS (Clinical Decision Support) displays on the census, Single Surveillance, Multiple Surveillance, Floating Surveillance, and Single Sign on Surveillance windows, on a per workstation basis. Users with "Edit Parameter Configurations" will have to ability to modify this configuration. • **On** — Enables the Tools. • **Off** — Disables the Tools. **Default Setting:** On
Always Show Title Bar	Minimize/Close Buttons displayed on the Start Screen always. The title bar will always be present on the “Start Screens”. • **On** — Enables the Tools. • **Off** — Disables the Tools. **Default Setting:** Off

SurvBedList Parameter Configuration Procedure

1. Uncheck the **Inherit** box next to SurvBedList then click "…". The Surveillance BedList screen appears as shown in Figure 6-1. If beds had previously been moved to the Available Beds list, those also would be shown when the screen appears.

Figure 6-1 *Surveillance BedList Screen*

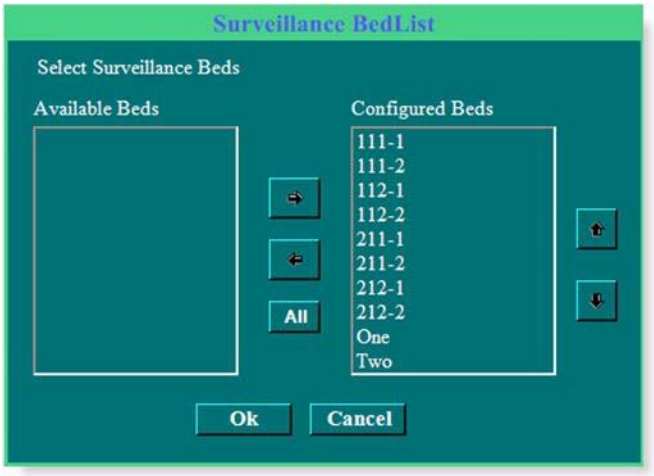

2. Go to any of the following procedures, depending on what you want to do. When you are finished making changes, click **OK** to save the changes and return to the Configuration screen.
   - Move Specific Beds from Configured to Available and Vice Versa below.
   - Move All Beds At Once from Available to Configured
   - Changing the Order of the Configured Beds List

Move Specific Beds from Configured to Available and Vice Versa

1. Select the bed or beds to be moved from either the **Configured Beds** or **Available Beds** field. You can use standard Windows Shift-click and Ctrl-click to select more than one bed.
2. Click the left arrow (lower) button to move beds from **Configured** to **Available** or click the right arrow (upper) button to move beds from **Available** to **Configured**.

Move All Beds At Once from Available to Configured

The **All** button moves *all* beds from Available Beds to Configured Beds without your needing to first select the beds. To move all available beds back to Configured beds, simply click the **All** button.

Changing the Order of the Configured Beds List

You can change the order in which beds appear in the Configured Beds list. To do that:

1. Select the bed whose position in the list you want to change.
2. Click the up or down button to the right of the list, depending on which direction you want to move the bed.

Census Bedlist Parameter Configuration Procedure

Uncheck the **Inherit** box next to BedList then click "…". The Census BedList screen appears as shown in Figure 6-2.

Figure 6-2 *Census BedList Screen*

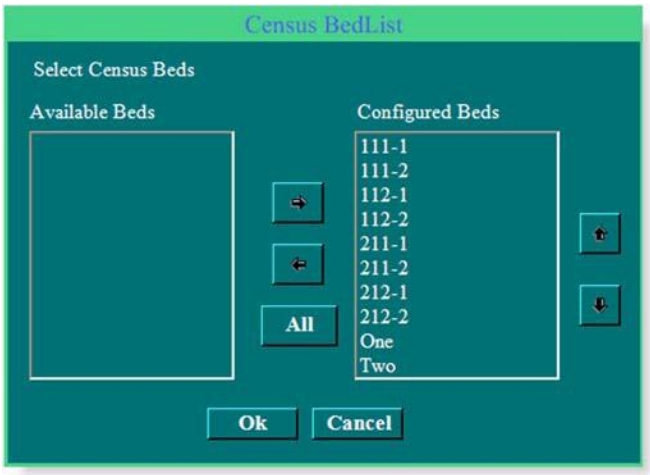

Using this screen is identical to using the Surveillance Bedlist screen. For details, see "SurvBedList Parameter Configuration Procedure" on page 6-29.

Start Screen Parameter Configuration Procedure

1. Uncheck the Inherit box next to StartScreen then click "…". The Start Screen appears as shown in Figure 6-3.

Figure 6-3 *Start Screen*

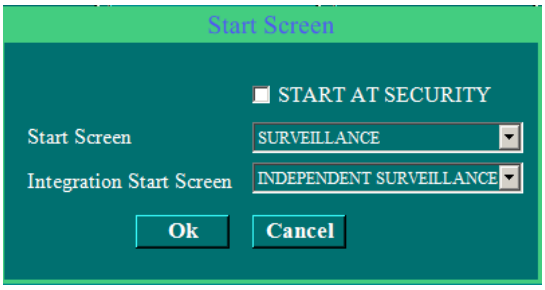

2. Check the **START AT SECURITY** box to enable the Security Verification screen as the login screen when PeriWatch Surveillance is started. This will prompt for the user's ID and password at system startup. Passwords are case sensitive. The Security screen will be followed by the selected Start screen.
3. Select **CENSUS**, **SURVEILLANCE** or **MATERNAL CENSUS** from the drop-down list next to Start screen.
4. Select **INDEPENDENT SURVEILLANCE** or **SINGLE SURVEILLANCE** for the Integration Start Screen selection. This setting is usually used with Surveillance EMR partners.

5. Click **OK** to record the change and return to the Configuration screen. Be sure to click **Save** before exiting the Configuration screen.

StripMagnifyDefault Parameter Configuration Procedure

1. Uncheck the **Inherit** box next to the StripMagnifyDefault parameter then click "…" on the Configuration screen to change the default settings of the parameter. The StripMagnifyDefault screen appears, as shown in Figure 6-4.

   Figure 6-4 *StripMagnifyDefault Screen*

   The screen shows the magnification levels available for the two screen resolutions supported by PeriWatch Surveillance.

2. Select the desired magnification level for each resolution, then click OK to record any changes and return to the Configuration screen.

AlertBedList Parameter Configuration Procedure

1. Uncheck the **Inherit** box next to the AlertBedList parameter then click "…" to change the default settings. The AlertBedList screen appears, as shown in Figure 6-5 on page 6-32.

   All beds listed in the Configured Beds section of the screen can send alerts to the workstation and workstation group for which the parameter is configured. Beds listed in the Configured Beds section will *not* be allowed to be rename or delete. Beds listed in the Available Beds section *cannot* send alerts to the workstation or workstation group for which the parameter is configured.

CAUTION: Do not disable bed alerting to any workstation that is used by or *may be* used by a caregiver who is responsible for that bed. Doing so will prevent the caregiver from knowing that there is a problem in that bed and acknowledging and responding to the alert. Alert annotations will still be placed on the bed's strip, but will show as unacknowledged alerts.

Figure 6-5 *Alert BedList Screen with Beds Moved Right*

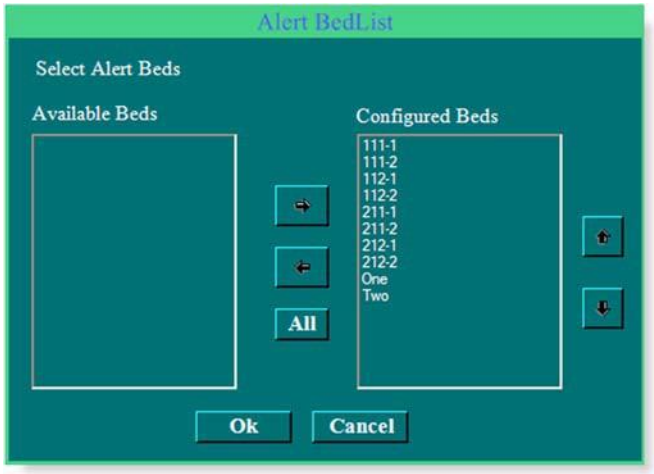

2. Using this screen is identical to using the Surveillance Bedlist screen. See "SurvBedList Parameter Configuration Procedure" on page 6-29.

AlertPresentation Parameter Configuration Procedure

Although PeriWatch Surveillance does not require it, all three alert types — visual (which is the default and cannot be disabled), popup and audible — are available.

To set or change the parameters:

1. Uncheck the **Inherit** box next to the AlertPresentation parameter then click "…" to change the default settings. The Alert Presentation screen appears, as shown in Figure 6-6.

Figure 6-6 *Alert Presentation Popup*

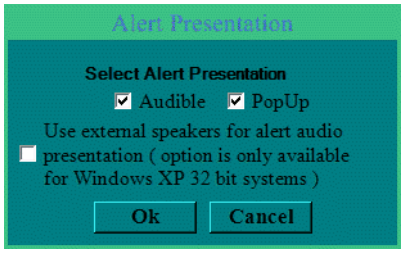

You can check or uncheck **Audible**, **PopUp**, and use of external speakers as needed.

2. When selections are as desired, click **OK** to record the changes and return to the Configuration screen. If you are not changing any other configurations, select **Save** on the Configuration screen and then select **Exit** to close the screen.

CensusPatientColumns Procedure

1. Uncheck the **Inherit** box next to the Census Patient Columns parameter in the Configuration Workstation Parameter Set screen; then click the **More** (…) button. A Census Field screen appears as shown in Figure 6-7.

Figure 6-7 *Census Field Screen*

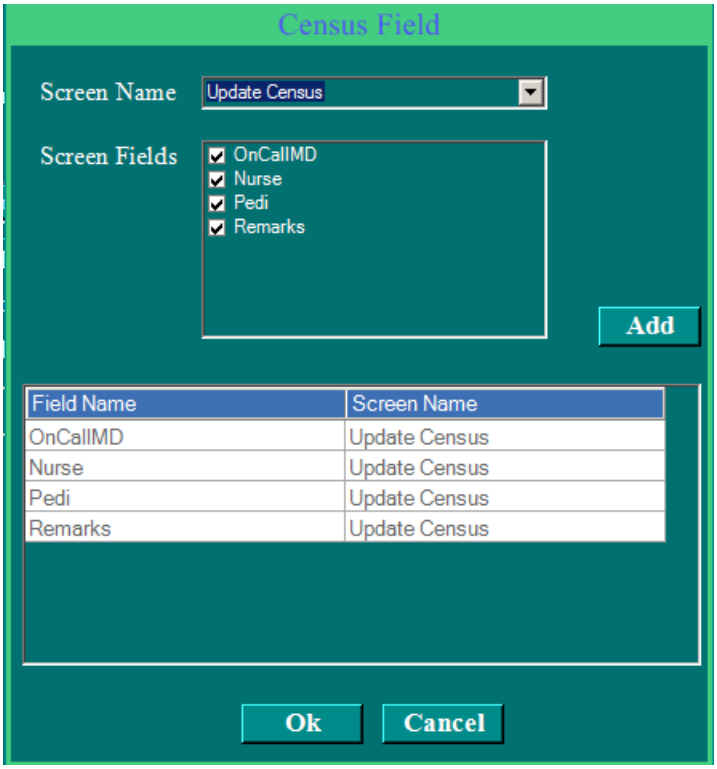

2. To add or remove fields on the Census screen, select or deselect the corresponding check boxes.
3. Click **Add** to configure the selected field to display in the Census screen. A confirmation message pops up, prompting you to click **OK** to record the update or **Cancel** to discard your changes. If you click **OK**, the box in the lower half of the Census Field screen refreshes to show you all of the field names that will display on the Census screen, along with their source screens.
4. Click **OK** to save and close the Census Field screen.

CensusFieldList Parameter Configuration Procedure

1. Uncheck the **Inherit** box next to the CensusFieldList parameter in the Configuration Workstation ParameterSet screen; then click the **More** button. The Census Field screen appears, as shown in Figure 6-8.

Figure 6-8 *Census Field Screen*

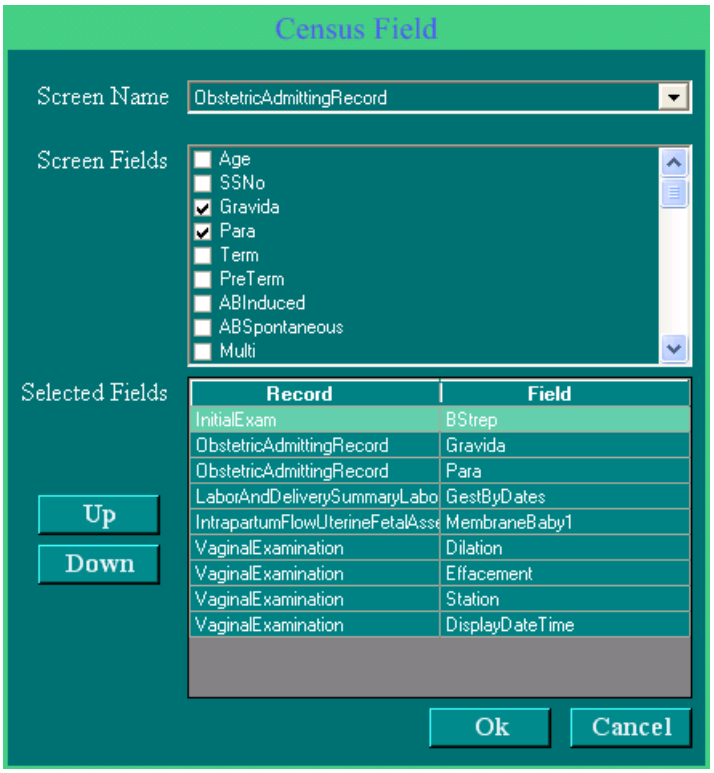

2. Click the down arrowhead at the end of the Screen Name field and select the screen from which you wish to add fields for the Census screen. Figure 6-8 shows the fields available by selecting the **ObstetricAdmittingRecord** screen from the drop-down list. Checked fields already appear on the Census screen.

3. To add or subtract columns, select or deselect the fields to be added or removed as columns on the Census screen. You can select up to 20 fields for addition to the Census screen, but keep in mind that the more fields you add, the more horizontal scrolling of the Census screen will be necessary to actually see the information.

4. Click **Add** to configure the selected field to display in the Census screen. A confirmation message pops up, prompting you to click **OK** to record the update or **Cancel** to discard your changes. If you click **OK**, the box in the lower half of the Census Field screen refreshes to show you all of the field names that will display on the Census screen, along with their source screens, after the next system restart, as highlighted in the example in Figure 6-9. If you wish to add additional fields from other screens, return to step 2 on page 6-34. If you are finished adding fields, proceed to the next step.

Figure 6-9 *Census Field Screen with All Fields Shown*

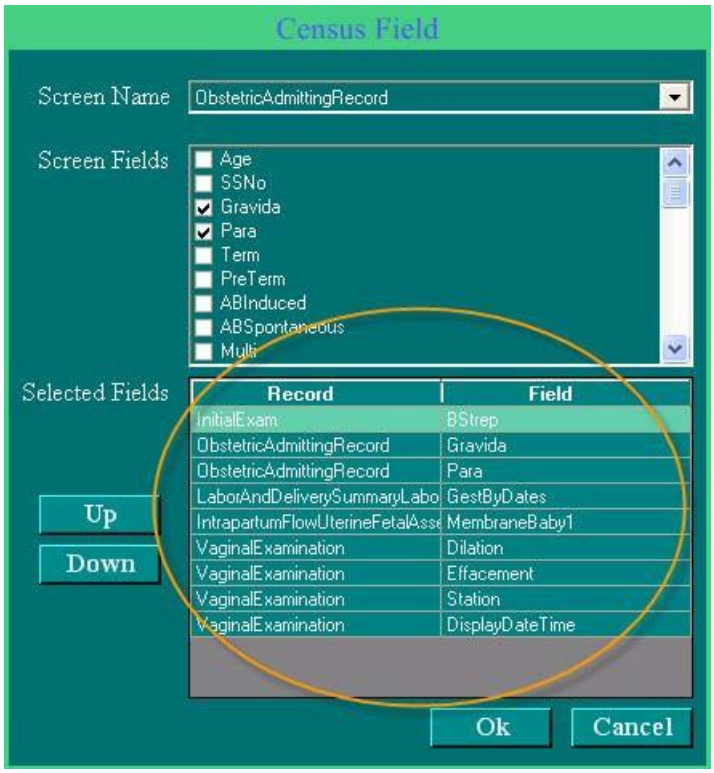

5. Repeat steps for each desired screen name.
6. Click **OK** to record the changes and close the Census Field screen.

CensusStatusColors Parameter Configuration Procedure

1. Uncheck the **Inherit** box next to the CensusStatusColors parameter, then click the **More** button. The Census Status Labels screen appears with the currently defined button colors, as shown in Figure 6-11.

   The five colors shown vertically correspond to the five horizontal status buttons at the top of the Census screen, with top-to-bottom colors corresponding to left-to-right buttons. For example, the top color on the Census Status Labels screen corresponds to the left-most status button (normally Observation) on the Census screen; the bottom color corresponds to the right-most status button (normally NoStatus) on the Census screen.

   Figure 6-11 *Census Status Labels Screen for Colors*

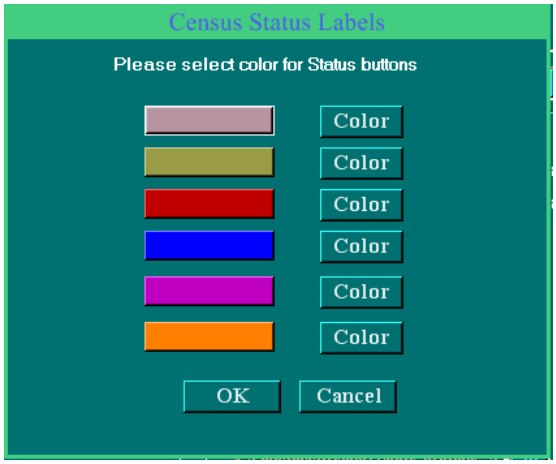

NOTE: Purple is the default if you do not specify a color.

2. To select a different color for a Status button, select its corresponding **Color** button. The Color screen appears with Basic colors. If you want to define custom colors, click the Define Custom Colors button to expand the Color screen. Figure 6-12 shows both the initial basic Color screen (left) and the expanded screen (right).

   Figure 6-12 *Color Screen*

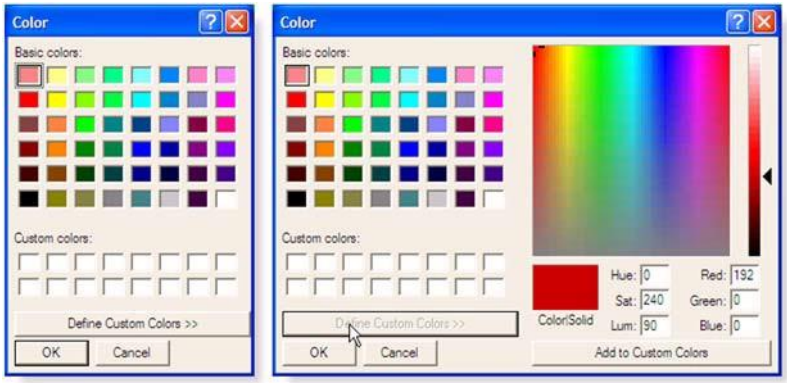

3. To change a button color to one of the basic colors, simply select the color on the basic Color screen and then click **OK** to record the change and close the Color screen. To create a custom color for a status button:
   a. Click the button's corresponding **Color** button to display the basic Color screen.
   b. Click **Define Custom Color** to expand the Color screen.
   c. Define your custom color by either entering its Red, Green, Blue, Hue, Saturation and Luminosity values directly into their respective fields, or by click-dragging within the "rainbow" box until the Color|Solid box contains the color you want. When your custom color is ready, click **Add to Custom Colors**, which adds your new color to the first blank box in the Custom colors area of the color screen.
   d. Click **OK** to apply your new color to the button and close the Color screen.
4. Click **OK** on the Census Status Labels screen to save any changes and close the screen. Be sure to click **Save** to close the Configuration screen.

CensusStatusLabels Parameter Configuration Procedure

1. Uncheck the **Inherit** box next to CensusStatusLabels. The Census Status Labels screen appears, as shown in Figure 6-13. The top-to-bottom list of labels corresponds to the left-to-right buttons on the Census screen.

Figure 6-13 *Census Status Labels Screen for Labels*

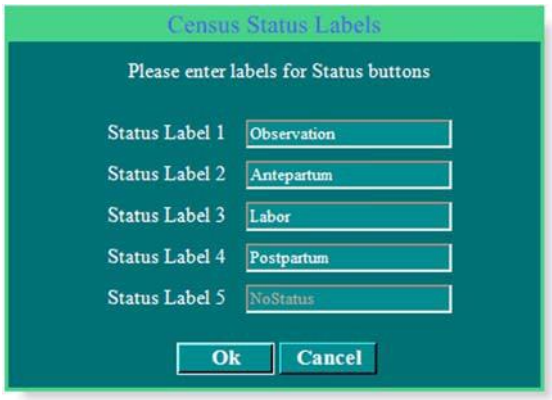

2. To change a label, simply highlight the existing label text and type over it.
3. Click **OK** to save the changes and return to the Configuration screen.

Flowsheet Parameter Configuration Procedure

1. Uncheck the Inherit box next to FlowsheetDisplay. Click on the "…" and the Flowsheet Display Configuration screen appears, as shown in Figure 6-14.

Figure 6-14 *Flowsheet Display Configuration*

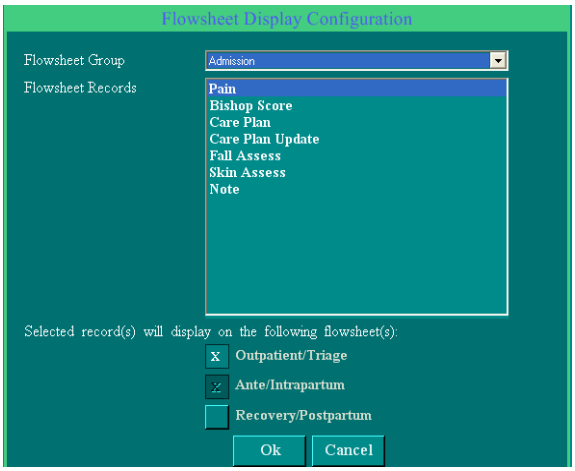

2. Click to select a flowsheet group from the drop-down menu, then click on the desired data.
3. Select the flowsheet you wish data to appear in by clicking the box and marking it with an **X**.

NOTE: Outpatient/Triage is marked with an "X" by default. Click **X** again if you wish to remove the "X." Ante/Intrapartum is selected by default and is not configurable.

4. Click **OK** to save the changes and then click **Save**.

FHR Category Colors Configuration Procedure

1. Uncheck the Inherit box next to the FHR Category Colors button. Click on the button and the screen appears, as shown in Figure 6-15.

Figure 6-15 *FHR Category Colors*

2. Change each category color to the desired color by clicking the edit button. Choose color as previously described (See "CensusStatusColors Parameter Configuration Procedure" on page 6-37.)
3. Use the scroll bar on the right side to choose a Category III Color.
4. Click **OK** to save the changes and then click **Save**.

Strip Analysis Configuration Procedure

1. Uncheck the Inherit box next to the **Strip Analysis Periods** button. Click the button and the screen appears, as shown in Figure 6-16.

   Figure 6-16 *Strip Analysis Periods*

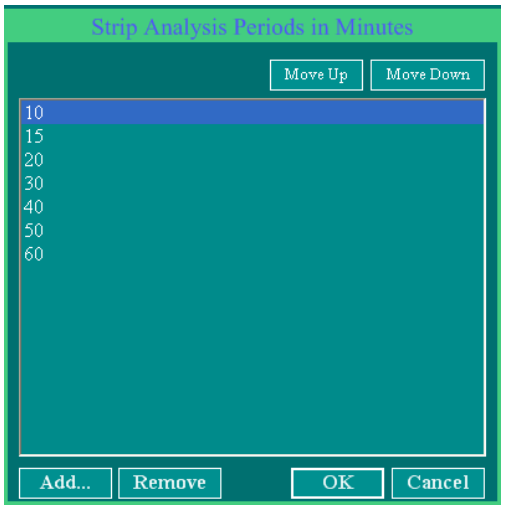

2. You may use defaulted values of 10, 20, or 30 minutes, or you may add your own customized times by clicking the **Add** button on screen.

   A text entry box will pop up. Type the desired minute value, select **Enter**, and your entry will appear in the list. You may then rearrange the order of choices by highlighting an entry and choosing **Move Up** or **Move Down** to a desired position and click **OK**. Also, you may delete an entry by highlighting it, then selecting **Remove**.

3. Click **OK** to save the changes and then click **Save**.

Bed Group and Bed Parameters

This section describes Bed parameters configuration. The Bed parameters are used to configure the beds in the Single-Patient Surveillance screen and Single Sign-On Surveillance screen or the Census screen.

You can configure the Bed parameters to:

- Annotate the oxygen saturation value, maternal heart rate (MHR[1]) value and vaginal exam values automatically on the patient's strip in the Single-Patient Surveillance screen and Single Sign-On Surveillance screen.
- You can also configure the period during which “no data” appears and the bed goes to verify state.

Table 6-3 provides the configuration parameter definitions for both Bed Group and Bed parameters. Parameters are listed in the order in which they appear on the Configuration screen.

[1]MHR and Mhr are both equivalent to: maternal heart rate.

Except where noted in the table, the parameters for a bed can be either inherited from the Bed Group or set independently, as described in "Inheriting Parameters" on page 5-6.

Table 6-3 *Bed Parameter Definitions (Part 1 of 4)*

Parameter	Definition
AutoAnnotateMaternalVitalOn	This parameter turns ON or OFF automatic annotation of Maternal Heart Rate (MHR), Non-invasive Blood Pressure (NiBP), and Oxygen Saturation values in the strip. Drop-down setting options are: **ON** — Enable automatic maternal strip annotation. **OFF** — Disable automatic maternal strip annotation. **Default Setting:** ON **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
AutoAnnotatePulseOxyPeriod	Specifies the frequency of automatic oxygen saturation annotations to the maternal strip on the Single-Patient Surveillance screen. **Minimum Allowed:** 1 second **Maximum Allowed:** 3600 seconds (60 minutes) **Default Setting:** 240 seconds (4 minutes) **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
AutoAnnotateMHRPeriod	Specifies the frequency of automatic MHR annotations to the maternal strip on the Single-Patient Surveillance screen. **Minimum Allowed:** 1 second **Maximum Allowed:** 3600 seconds (60 minutes) **Default Setting:** 240 seconds (4 minutes) **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.

Table 6-3 *Bed Parameter Definitions (Part 2 of 4)*

Parameter	Definition
AutoAnnotateExamOn	Specifies whether or not to automatically annotate the patient's strip in the Single-Patient Surveillance screen with Dilation, Effacement and Station information when these values are entered on the Vaginal Exam screen. Drop-down setting options are: **ON** — Enable automatic maternal strip annotation. **OFF** — Disable automatic maternal strip annotation. **Default Setting:** ON **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
VerifyPeriod	Specifies time period during which a "no data" gap can appear in the Single-Patient Surveillance screen before users are prompted to confirm whether the admitted patient is the same patient or a new patient. **Minimum Allowed:** 60 seconds **Maximum Allowed:** 3600 seconds **Default Setting:** 600 seconds **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
BedTransferAutoAnnotateOn	Specifies whether or not beds will be automatically annotated when a patient is transferred from one bed to another bed. Drop-down setting options are: **ON** — Both the bed number *from* which the patient is transferred and the bed number *to* which the patient is transferred will be annotated on the Single-Patient Surveillance screen. **OFF** — No automatic annotation. **Default Setting:** ON

Table 6-3 *Bed Parameter Definitions (Part 3 of 4)*

Parameter	Definition
MoveDeleteStripAutoAnnotateOn	Specifies whether or not to annotate (display) the bed number, patient name and bed name on the Single-Patient Surveillance screen when a portion of a patient's strip is deleted or moved to another bed. **NOTE:** Changing this parameter requires restarting the PeriWatch Surveillance client on all workstations that can view the BedGroup beds to which the change applies. Turn ON or OFF automatic annotation of strip removal and deletion using the drop-down menu. Drop-down setting options are: **ON** — The Single-Patient Surveillance screen displays the annotation. **OFF** — No automatic annotation. **Default Setting:** OFF
AlertAutoAnnotateOn	Specifies whether or not to automatically annotate the strip with the reason for an alert. For example, if the MHR goes below the configured value, an alert will be raised. If this parameter is set to ON, the annotation strip in the Single-Patient Surveillance screen will show “MHR Low” as the reason for the alert. Turn ON to create an annotation to the patient fetal strip for each alert received using the drop-down menu. Drop-down setting options are: **ON** — The Single-Patient Surveillance screen displays the alert reason annotation. **OFF** — No automatic annotation. **Default Setting:** OFF **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
Consolidate System Vitals	Specifies whether or not to consolidate all like vitals automatically within one minute to send to external system(s). **ON** — All like vitals are consolidated within one minute to send to external system(s). **OFF** — No consolidation of vitals. **Default Setting:** OFF

Table 6-3 *Bed Parameter Definitions (Part 4 of 4)*

Parameter	Definition
Verify Patient	Specifies whether or not a patient gets into verify state. **ON** — Patient will be set to verify state, if there is no data for configured verify period **OFF** — No patients are set to verify state. **Default Setting:** ON

Alert Parameters

This section covers Alert parameters configuration. The Alert parameters allow you to configure alerts that inform caregivers when patients' monitored data is outside of the specified limits. The following describes some of the functionality of the Alert parameters:

- Audible and Visual alerts can be configured individually for patients for MHR, Maternal Oxygen Saturation, Maternal Non-invasive Blood Pressure and Fetal Heart Rate.
- Alert parameters are customized to meet hospital needs. A default value can be configured or specific values can be set for individual patients.
- Alert parameters can be customized to activate an alert at specific high or low alert limits for the fetal and maternal monitors.

Table 6-4 provides the alerts configuration parameter definitions for both Bed Groups and individual beds. Parameters are listed in the order in which they appear on the Configuration screen.

Except where noted in the table, the parameters for an alert can be either inherited from the Bed Group or set independently for any given bed, as described in "Inheriting Parameters" on page 5-6.

Table 6-4 *Alert Parameters Definitions (Part 1 of 5)*

Parameter	Definition
AlertLimitFhrOn	Specifies whether or not an alert will be generated when the FHR (fetal heart rate) value goes outside of the configured values in AlertLimitFhrHigh and AlertLimitFhrLow. Drop-down setting options are: **ON** — An alert will be generated for the bed if FHR goes outside of the defined high or low FHR limits. **OFF** — No FHR alert will be generated. **Default Setting:** ON **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
AlertLimitFhrHigh	Specifies the upper limit for the FHR alert in the Single-Patient Surveillance screen. If the FHR goes above the specified limit, an alert will be generated if AlertLimitFhrOn is set to ON. **Minimum Allowed:** 150 bpm **Maximum Allowed:** 240 bpm **Default Setting:** 160 bpm **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.

Table 6-4 *Alert Parameters Definitions (Part 2 of 5)*

Parameter	Definition
AlertLimitFhrLow	Specifies the lower limit of the FHR in the Single-Patient Surveillance screen. If the FHR goes below the specified limit, an alert will be generated if AlertLimitFhrOn is set to ON. **Minimum Allowed:** 60 bpm **Maximum Allowed:** 120 bpm **Default Setting:** 110 bpm **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds
AlertLimitFhrNoDataOn	Specifies whether or not a "no data" alert is generated when no FHR data is sensed for more time than is defined by the **No Data: Alert FHR %** parameter (see Table 6-1, page 6-3). Drop-down setting options are: **ON** — An alert will be generated for the bed if no FHR data is sensed by PeriWatch Surveillance for more time than is defined by the **No Data: Alert FHR %** parameter. **OFF** — FHR "no data" alert will not be generated. **Default Setting:** On **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
AlertLimitMatNiBPOn	Specifies whether or not Maternal Non-invasive Systolic or Diastolic blood pressure alerts will be automatically generated if the readings exceed the limits set with the AlertLimitMatNibpDiaHigh, AlertLimitMatNibpDiaLow, AlertLimitMatNibpSysHigh and AlertLimitMatNibpSysLow parameters. Drop-down setting options are: **ON** — An alert will be generated if Maternal Non-invasive blood pressures exceed high or low parameters. **OFF** — No alert will be generated. **Default Setting:** OFF **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.

Table 6-4 *Alert Parameters Definitions (Part 3 of 5)*

Parameter	Definition
AlertLimitMatNibpDia-High	Defines the upper limit of the Maternal Non-invasive Blood Pressure Diastolic level, above which an alert will be generated if AlertLimitMatNiBPOn is set to ON. **Minimum Allowed:** 80 **Maximum Allowed:** 120 **Default Setting:** 90 **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds
AlertLimitMatNibpDia-Low	Defines the lower limit of the Maternal Non-invasive Blood Pressure Diastolic level, below which an alert will be generated if AlertLimitMatNiBPOn is set to ON. **Minimum Allowed:** 60 **Maximum Allowed:** 30 **Default Setting:** 30 **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
AlertLimitMatNibpSys-High	Defines the upper limit of the Maternal Non-invasive Blood Pressure Systolic level, above which an alert will be generated if AlertLimitMatNiBPOn is set to ON. **Minimum Allowed:** 100 **Maximum Allowed:** 190 **Default Setting:** 160 **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
AlertLimitMatNibpSys-Low	Defines the lower limit of the Maternal Non-invasive Blood Pressure Systolic level, below which an alert will be generated if AlertLimitMatNiBPOn is set to ON. **Minimum Allowed:** 50 **Maximum Allowed:** 110 **Default Setting:** 80 **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.

Table 6-4 *Alert Parameters Definitions (Part 4 of 5)*

Parameter	Definition
AlertLimitMhrOn	Specifies whether or not an alert will be generated when the MHR value goes outside of the configured values in AlertLimitMhrHigh and AlertLimitMhrLow. Drop-down setting options are: **ON** — An alert will be generated for the bed if MHR goes outside of the defined high or low MHR limits. **OFF** — MHR alert will not be generated. **Default Setting:** Off **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
AlertLimitMatMhrHigh	Specifies the upper limit for the MHR alert in the Single-Patient Surveillance screen. If the MHR goes above the specified limit, an alert will be generated if AlertLimitMhrOn is set to ON. **Minimum Allowed:** 100 bpm **Maximum Allowed:** 160 bpm **Default Setting:** 120 bpm **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
AlertLimitMatMhrLow	Specifies the lower limit of the MHR in the Single-Patient Surveillance screen. If the MHR goes below the specified limit, an alert will be generated if AlertLimitMhrOn is set to ON. **Minimum Allowed:** 40 bpm **Maximum Allowed:** 80 bpm **Default Setting:** 60 bpm **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.

Table 6-4 *Alert Parameters Definitions (Part 5 of 5)*

Parameter	Definition
AlertLimitMatSao2On	Determines whether or not an alert will be automatically generated if the maternal oxygen saturation level drops below the per- centage defined with the AlertLimitMatSao2Low parameter. Drop-down setting options are: **ON** — An alert will be generated if maternal oxygen saturation drops below the defined limit. **OFF** — No alert will be generated. **Default Setting:** OFF **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.
AlertLimitMatSao2Low	Defines the minimum acceptable maternal oxygen saturation level, below which an alert will be generated if the AlertLimitMatMhrLow parameter is set to ON. **Minimum Allowed:** 85% **Maximum Allowed:** 98% **Default Setting:** 92% **NOTE:** Changing and saving this system parameter also resets alert counters for all active beds.

Upgrading to version 1.6.000 from a previous version

This section details the System Configuration Parameters for a Facility Group and individual facilities changes when upgrading to version 1.6.000.

System parameter defaults for some alert settings were updated in version 1.6.000 to better match clinical expectations.

When you upgrade to 1.6.000 from a previous version, any custom alert settings will not be changed. However, alert settings that are currently “inherited” from the System level will update if the System default value changes.

At the time of upgrade, your facility can choose to:

- Preserve the current System defaults (shown below as NOT UPDATED).
- Switch to the 1.6.000 System defaults (shown below as UPDATED).

Refer to Figure 6-5, “Upgrade settings matrix,” for details.

Table 6-5 *Upgrade settings matrix*

Parameter Name	NWC 1.5.200 and previous versions		NWC 1.6.000 and future versions		
	System Default Setting	Range	System Default Setting NOT UPDATED	System Default Setting UPDATED	Updated Range
FHR Low Alert					
Alert Window Period	60 sec	Not configurable	60 sec	120 sec	60-300 sec
Alert FHR %	50%	15%-100%	50%	50%	1%-100%
Re-Alert Delay	120 sec	30-240 sec	120 sec	240 sec	60-300 sec
FHR No Data Alert					
Alert Window Period	60 sec	Not configurable	60 sec	300 sec	60-300 sec
Alert FHR %	50%	15%-100%	50%	50%	1%-100%
Re-Alert Delay	120 sec	30-240 sec	120 sec	300 sec	60-300 sec
FHR High Alert					
Alert Window Period	60 sec	Not configurable	60 sec	600 sec	60-600 sec
Alert FHR %	50%	15%-100%	50%	50%	1%-100%
Re-Alert Delay	120 sec	30-240 sec	120 sec	600 sec	60-600 sec
Maternal Alerts					
Maternal Re-Alert Delay	120 sec	30-240 sec	120 sec	1800 sec	60-3600 sec

List of Parameters requiring restart

		Restart	
Parameter	**Change in Node**	**Client** application	**Server** application
AlertBedList	Workstation Group/Workstation (Workstation Parameter)	✓	✓
AlertDisplayOnCensus	Workstation Group/Workstation (Workstation Parameter)	✓	
MoveDeleteStripAutoAnnotateOn	Bed Group/Bed (Bed Parameter)	✓	
MultiPatientAccessSecurityOn	Workstation Group/Workstation (Workstation Parameter)	✓	
MultiPatientSecurityPeriod	Workstation Group/Workstation (Workstation Parameter)	✓	
PatientIdentifierDisplay	Workstation Group/Workstation (Workstation Parameter)	✓	
• User timeout (SecurityIdleTime) • User timeout to start screen	Workstation Group/Workstation (Workstation Parameter)	✓	
StartScreen	Workstation Group/Workstation (Workstation Parameter)	✓	
SurvShowActiveBedsOnly	Workstation Group/Workstation (Workstation Parameter)	✓	
Locale	Workstation Group	✓	
Seconds on Flowsheets	System Parameters Group	✓	✓
Consolidate System Vitals	Bed Group; Bed	✓	✓
Verify Patient	Bed Group; Bed	✓	✓
Disregard INOP data	Facility Group/Facility (System Parameters)	✓	✓
• AutoADT • Actively Monitored Short Period • Actively Monitored Long Period • % of Long Period Data • Acknowledge Alert Older Than	Facility Group/Facility (System Parameters)	✓	✓
Popup VNA on Disconnect		*VNA restart*	
Display Vigilance Tools		✓	
Always Show Title Bar		✓	

Chapter 7

Troubleshooting Tips

How do I reset my workstation? What if my screen is frozen?

The answers to these and other questions are found in this chapter.

If there is an issue with the DAS endpoints or when a procedure refers you to Technical Support, call PeriGen Technical Support.

PeriGen **Technical Support phone number: 855.236.4353**

Resetting the Workstation

1. To close or minimize the PeriWatch Surveillance application using the icons in the upper right corner of the screen (Census or Surveillance views), bring the cursor to the upper right corner to select the option from the drop down.
2. Press the keyboard **Ctrl+T** keys to change the PeriWatch Surveillance display from fullscreen to a window.
3. Select the **X** in the top-right corner of the window to close the window and exit PeriWatch Surveillance.
4. Select the Windows **Start** button and then select **Shutdown,** then **Restart**. You can also use predefined Windows functionality Alt+F4 and then select Restart.

Workstation Seems to Have No Power

1. Ensure the workstation power cord is securely plugged into the electrical outlet.
2. Ensure that the workstation monitor is turned on.
3. Ensure that the monitor Contrast and Brightness settings are appropriately set.
4. Ensure that the main power cord is plugged into the line conditioner, which must be turned **ON**.
5. If none of the above work, call your hospital support staff.

PeriWatch Surveillance Displays the Login Screen but You Cannot Log In

1. Make sure the keyboard **Caps Lock** is off. The **Caps Lock** light is normally located on the upper- right corner of the keyboard and should be off.
2. Type your user ID and password and then press Enter on the keyboard or select the **OK** button. Passwords are case sensitive.

3. If the screen displays a *Login Failed* message, call your PeriWatch Surveillance System Administrator.
4. Check the network.

Screen is Frozen

1. Check to make sure all cables are plugged into the wall outlets.
2. Press **Alt+Tab**.
3. Press **Ctrl+Alt+Del** to bring up the Windows task manager screen, then select the **Applications** tab.
4. Select the PeriWatch Surveillance application from the list of programs working in your system and select the **End Task** button to end the program.
5. Select the Windows **Start** button and then select **Shutdown,** then **Restart**.
6. If none of the above work, call your hospital IS staff or PeriWatch Surveillance System Administrator.
7. Check your facility network.

Blank Entry on a Flowsheet

A user selected **OK** on an examination, Pain, Care Plan, Meds/IVs, System Assessment or Time Out screen without filling in any information. This will chart a blank entry on the flowsheet. Add an annotation explaining the error to the strip, or use the appropriate flowsheet to display and edit the blank entry and fill in the needed information or uncheck the **Valid** check box.

Audible Alert Does Not Sound

If the visual alert is flashing, but you hear no alerting sound, check the following:

1. Verify the audible alert configuration for that workstation.
2. Check the volume control to verify that it has not been decreased.
3. If your system has external speakers, confirm that they are properly connected and turned on.
4. Contact your hospital IS or Biomed Department to determine if a sound card is present and properly configured in the workstation.
5. If the problem persists, contact PeriGen Technical Support: **855.236.4353**

NIBP and SpO2 Sensor Data is Not Being Received

When a Corometrics® 120 Series monitor is used for NIBP (non-invasive blood pressure) and SpO2 (oxygen saturation) sensing, the sensor data may not be sent to PeriWatch Surveillance even though the data is displaying on the Corometrics 120 Series monitor.

This problem occurs only when the Corometrics 120 Series monitor is run in communications mode *115*. To enable NIBP and SpO2 data to be sent to PeriWatch Surveillance, set the Corometrics 120 Series monitor to run in communications mode *1371/NOTES*.

Fetal ECG Label Displays, Maternal Does Not

When using a Corometrics® 120 Series monitor with only fetal ECG (FECG) and maternal ECG (MECG) probes, the MECG label does not appear on the monitoring strip even though the maternal data displays as it should.

This problem occurs only when the Corometrics 120 Series monitor is running in communications mode *115*. To show both the FECG and MECG labels correctly, run the Corometrics 120 Series monitor in communications mode *1371/NOTES.*

Only First Mark Button Press Puts Mark on Strip

When a Corometrics® 120 Series monitor runs out of paper, pressing the **Mark** button puts a mark on the PeriWatch Surveillance patient strip only the first time that the button is pressed. Subsequent pressings of the button do not mark the patient strip. This problem also occurs with *137/NOTES*. To solve this problem, load paper. Press the mark with more than one minute interval.

Server Not Recognizing Newly Attached Fetal/Maternal Monitor

When you disconnect one brand or model of fetal/maternal monitor and immediately connect another brand or model, the PeriWatch Surveillance server is unable to determine which type of monitor is attached. This is caused by too short a time interval between disconnecting one monitor and connecting the other one. The server needs 5 to 8 seconds to fully process a monitor disconnection and be ready to accept a new connection.

To avoid the problem in the future, wait 10 seconds between disconnecting a fetal/maternal monitor and connecting another monitor. To clear a current “not recognized” problem, disconnect the unrecognized monitor, wait 10 seconds, then reconnect it.

Maternal Monitor Data is Not Getting to PeriWatch Surveillance

After plugging in a new fetal/maternal monitor to a PeriWatch Surveillance wall plate, maternal monitor data is not being received from the monitor by PeriWatch Surveillance even though fetal data is getting through just fine and both fetal and maternal data is being displayed and recorded on the monitor.

This problem can be caused by plugging the fetal/maternal monitor into the secondary wall jack instead of the primary wall jack when a dual gang wall plate is used. Only the primary wall jack (left side) can transmit both fetal and maternal data. The secondary wall jack (right side) transmits only fetal data and is used for multiple gestation patients where a second EFM for triplets or quadruplets is in use. There can also be an arrangement for semi-private rooms where the dual gang wall plate can be used for two patients if PWS is configured for semi-private rooms.

Monitor Strip Display is Unevenly Distributed on Surveillance Screens

The maximum number of beds that can be simultaneously monitored by PeriWatch Surveillance with optimal performance and accurate display of surveillance strips is 66. While PeriWatch Surveillance can monitor more than 66 beds simultaneously, strip data may appear choppy and contain gaps. No data is actually lost when more than 66 beds are monitored simultaneously, but it may *appear* that data is missing on the displayed strips.

Monitor Strip Changes Colors

If moving a fetal monitor cable from the primary to the secondary monitor port, the FHR tracing on the strip is green. With a dual gang wall plate, a cable plugged into the primary port will trace the baby in orange and the secondary will trace the baby in pink.

NOTE: If using a triplet monitor with all three cables plugged in, ports 1, 2, and 3 will produce yellow, green, and orange Surveillance respectively. However, if only 2 cables are plugged in to any combination of ports, the order of colors will be yellow first followed by green. If only one cable is plugged in to any port, the tracing will be yellow.

Downtime and Data Recovery

CAUTION: Data retention and recovery may not be possible during an interruption in service to PeriWatch Surveillance. To ensure that important medical record information is retained, always run fetal monitor paper when experiencing service delays or outages. Always revert to hospital standard practices for the completion and retention of patient medical data.

PeriWatch Surveillance should run continuously without interruption of service. However, should service be interrupted and downtime occurs, refer to your hospital's procedure for the specific steps to take.

Loss of Data Collection and Display

If your monitor does not display any data, this may be due to a DAS or workstation problem.

1. Ensure that the fetal monitor is plugged in and selected in the PeriWatch Surveillance wall plate.
2. Ensure that the maternal monitor cable is properly plugged into the wall plate.
3. If the monitoring strip still does not receive data, call your hospital IS staff or PeriWatch Surveillance System Administrator.
4. Contact PeriGen Technical Support: **855.236.4353**

Hospital Network Goes Down

If the hospital network (which is between PeriWatch Surveillance–DAS) goes down, PeriWatch Surveillance loses the monitor tracing and responds as if the fetal monitor was turned off.

When the system is restored, the Census screen bed line for the patient's name will display a *Verify Patient* message. For further information on verifying a patient, refer to "Verifying Patient Information" in the PeriWatch Surveillance *User Manual.*

If it is the same patient, the name will remain on the monitoring strip. If it is a new patient, then leave the name of the previous patient in the OUT bed or discharge that patient if documentation was completed prior to the network going down, then admit the current patient's name on the Census screen.

PeriWatch Surveillance Server Goes Down

When the system comes up, leave the patient's name on the Census screen if that patient is still in the room. If the patient has been transferred to another area or has been physically discharged, move the patient to an OUT bed or discharge that patient in PeriWatch Surveillance if documentation was completed prior to the network going down. Then admit the patient who is currently in the actual bed.

Contact PeriGen Technical Support and inform them of the downtime for further troubleshooting and to discuss the possibility of data recovery. PeriGen Technical Support may recall the information saved in the Data Acquisition Server and apply it to the proper data storage conditions.

Data Restoration Delay After DAS-to-Server Connection Downtime

The DAS continues to collect monitor data when the PeriWatch Surveillance server or connection to the server goes down. In the event of an extended downtime (roughly defined as more than 20 minutes) the amount of data collected can be quite large, especially so if the patient load is high during the downtime. When the server or server connection is back up, the DAS sends the stored data in incremental bursts rather than in one continuous feed in order to maintain system performance and prevent overloading the server or network. This burst mode restoration can result in data gaps in the monitoring strips until all restoration data has been transferred.

Application Downtime and Data Recovery Recommendations

PeriGen recommends the following steps if PeriWatch Surveillance downtime occurs:

- Notify appropriate hospital personnel to determine the cause of downtime.
- The System Administrator or designated personnel should contact PeriGen Technical Support to report the system is down.
- Start running fetal monitor paper immediately for record keeping. (PeriGen recommends keeping fetal monitoring paper in the fetal monitors at all times to decrease risk of lost data should a system crash occur.)
- Save the fetal monitor strip generated during downtime until the data is recovered, restored and verified with the electronic record.
- Paper charting forms should be kept for documentation purposes during downtime. These records may be kept or the information may be keyed into PeriWatch Surveillance after the system is back up and running. This will be defined by the hospital policy.
- The System Administrator or designated personnel should provide PeriGen Technical Support with a list of current patients with room numbers, time of admission to room, and time of discharge to assist with restoring of records when the system is back up.

  A specific form is required to report the information: PeriWatch Surveillance *System Data Recovery/Correction Form CS-F-003*, an example[2] of which is shown in Figure 7-1. The current version of the form must be used and it can be obtained from PeriGen Technical Support.

[2]The example shown is Revision level 1 and was current as of the publication date of this manual.

Figure 7-1 *Example PeriWatch Surveillance System Data Recovery Form*

PeriGen
Advanced Perinatal Systems

Chapter: Customer Support and Complaint Handling		
Topic: **PeriWatch Surveillance Data Recovery/Correction Form**		
Document No.: CS-F-003	Revision: 04.00	Page: 2 of 2

PeriWatch Surveillance™ Data Recovery/Correction Form

TO RECOVER DATA THIS FORM MUST BE COMPLETED AND BE RECEIVED BY TECHNICAL SUPPORT WITHIN 48 HOURS OF THE START OF DOWNTIME.

HOSPITAL NAME: _____

		DATE & TIME SYSTEM WENT DOWN	DATE & TIME SYSTEM BACK UP
☐ DATA RECOVERY	☐ REMOVE EXTRA PREGNANCY		
☐ MOVE STRIP DATA	☐ REMOVE EXTRA VISIT		
☐ MERGE TWO PATIENTS	☐ REMOVE EXTRA DELIVERY		

PROBLEM DESCRIPTION (other than data recovery)

For **Date & Time Admitted to Bed** column: Use **IN** if the patient was admitted prior to the outage.
For **Date & Time Discharged from Bed** column: Use **STILL** if the patient was still in the bed when the system came back up.

Patient Name	Medical Record Number	Bed Name on Census screen	Date & Time Admitted To Bed	Date & Time Discharged From Bed	Tech Support Use Only	
					Episode ID	Patient ID
Example: Smith, Jane	00123456789	LDR304	03/12/2008 13:23	STILL		
Example: Doe, Jane	00987654321	BS312E	IN	03/12/2008 14:19		

SIGNATURE: _____ **DATE:** _____

PRINTED NAME: _____ **CONTACT PHONE:** (____) _____

Note: By signing this form you are authorizing PeriWatch Surveillance™ Technical Support to make the changes to patient data requested above. Please fax the signed and completed form to: 1-888-840-4085. Then call Technical Support at 1-855-236-4353 and confirm that the fax was received.

Please record the name of the Support Specialist with whom you spoke: _____

Page _____ **of** _____

PeriGen
Advanced Perinatal Systems

PeriWatch Surveillance™ Data Recovery/Correction Form

TO RECOVER DATA THIS FORM MUST BE COMPLETED AND BE RECEIVED BY TECHNICAL SUPPORT WITHIN 48 HOURS OF THE START OF DOWNTIME.

HOSPITAL NAME: _____

		DATE & TIME SYSTEM WENT DOWN	DATE & TIME SYSTEM BACK UP
☐ DATA RECOVERY	☐ REMOVE EXTRA PREGNANCY		
☐ MOVE STRIP DATA	☐ REMOVE EXTRA VISIT		
☐ MERGE TWO PATIENTS	☐ REMOVE EXTRA DELIVERY		

PROBLEM DESCRIPTION (other than data recovery)

For **Date & Time Admitted to Bed** column: Use **IN** if the patient was admitted prior to the outage.
For **Date & Time Discharged from Bed** column: Use **STILL** if the patient was still in the bed when the system came back up.

Patient Name	Medical Record Number	Bed Name on Census screen	Date & Time Admitted To Bed	Date & Time Discharged From Bed	Tech Support Use Only	
					Episode ID	Patient ID
Example: Smith, Jane	00123456789	LDR304	03/12/2008 13:23	STILL		
Example: Doe, Jane	00987654321	BS312E	IN	03/12/2008 14:19		

SIGNATURE: _____ **DATE:** _____

PRINTED NAME: _____ **CONTACT PHONE:** ( ) _____

Note: By signing this form you are authorizing PeriWatch Surveillance™ Technical Support to make the changes to patient data requested above. Please fax the signed and completed form to: 1-888-840-4085. Then call Technical Support at 1-855-236-4353 and confirm that the fax was received.

Please record the name of the Support Specialist with whom you spoke: _____

Page _____ **of** _____

Form: QS12550

Appendix A

List of Abbreviations

Table A 1 *PeriWatch Surveillance On-Screen Abbreviations (Part 1 of 5)*

Abbreviation	Meaning
AB	Abortion
Acct#	Account number
ADL	Activities of Daily Living
AFDC	Aid to Families with Dependent Children
B Strep	Beta Strep
BedNo	Bed number
BM	Bowel movement
BP or B/P	Blood pressure
BPP	Biophysical profile
cc	centimeters
cncl	cancel
CNM	Certified Nurse Midwife
CON'T	Continue
CS	Cesarean Section
CST	Contraction stress test
CXR	Chest X-ray
DC	Discharge
DES	Diethylstilbestrol
Dia	Diastolic
Dil	Dilation
Dil/Sta/Eff	Dilation/Station/Effacement

Table A 1 *PeriWatch Surveillance On-Screen Abbreviations (Part 2 of 5)*

Abbreviation	Meaning
DOB	Date of birth
dt	date
DTR	Deep tendon reflexes
EAB	Elective abortion (induced)
Ed or **ED**	Education
EDD	Estimated Date of Delivery
Eff	Effacement
EKG	Electrocardiogram
EMR	Electronic Medical Record
Est	Estimated
Fam	Family
FHR or **Fhr**	Fetal heart rate
FM	Fetal Monitor
FOB	Father of baby
ft	feet
G/P	Gravida/Para
ga or **GA**	gauge (this meaning is contextual; see below)
GA	Gestational Age (this meaning is contextual; see above)
GBS	Group Beta Strep
Gest	Gestation
gms	Grams
HbSAg	Hepatitis B Surface Antigen
HCG	Human chorionic gonadotropin, a pregnancy indicator
Hct	Hematocrit
HEENT	Head, ears, eyes, nose and throat
HELLP	Hemolysis, elevated liver enzymes, low platelet count

Table A 1 *PeriWatch Surveillance On-Screen Abbreviations (Part 3 of 5)*

Abbreviation	Meaning
HIV	Human immunodeficiency virus
Hgb	hemoglobin
HR	Heart rate
Hx	history
in	inches
info	information
Init	Initial or initials, depending on context
INOP	Inoperable strip data
Interp	Interpreted by
IP	Internet protocol
kgs	kilograms
lbs	pounds
LMP	Last menstrual period
MAC	Media Access Control
MD	Medical Doctor
Med	Medication(s)
Med#	Medical record number (a.k.a. patient ID)
Meds/IV	Medications/Intravenous
Mem.Stat	Membrane Status
MGF	Maternal grandfather
MGM	Maternal grandmother
MHR or **Mhr**	Maternal heart rate
MI	Medicaid Insurance
MRN	Medical record number (a.k.a. patient ID)
Multi	Multiple
MVP	Mitral valve prolapse
MVU	Montevideo units

Table A 1 *PeriWatch Surveillance On-Screen Abbreviations (Part 4 of 5)*

Abbreviation	Meaning
NBP or **NiBP**	Non-invasive Blood Pressure
NPO	Nothing by mouth
NST	Non-stress test
NSVD	Normal spontaneous vaginal delivery
NWC	NaviCare WatchChild
OB	Obstetric
Pt	Patient
Pedi	Pediatrician
PGF	Paternal grandfather
PGM	Paternal grandmother
Phys	Physician
PIH	Pregnancy-induced hypertension
PO	By mouth
Pregrav	Pregravid
Prev	Previous
Psych	Pyschological
Pt	Patient
PUBS	Percutaneous umbilical blood sampling
PWN	PeriWatch Newborn
PWS	PeriWatch Surveillance
Qty	Quantity
R or **Resp**	Respirations
RPR/VDRL	Syphillis
SAB	Spontaneous abortion
Sat	Saturation
SOB	Shortness of breath

Table A 1 *PeriWatch Surveillance On-Screen Abbreviations (Part 5 of 5)*

Abbreviation	Meaning
SpO2	Oxygen saturation
SS or **SSNo**	Social Security Number
Sta	Station
STI or STD	Sexually transmitted infections
Sys	System or systolic (contextual)
TB	Tuberculosis
toco	tocotransducer
UA	Uterine Activity
UC	Uterine contraction
US	Ultrasound
UTI	Urinary tract infection
Vag	Vaginal
VBAC	Vaginal Birth After Cesarean Section
WIC	Women, Infants & Children
wks	weeks
Wt	Weight

Index

A

abbreviations, list of definitions A-1
Accessing
    reports 4-1
    User Maintenance Screen 2-1
Active field 2-6
Active User field 2-8
Adding
    configuration nodes 5-10
    new system users 2-5
    new users 2-5
    nodes 5-10
    users 2-5
Alert BedList parameter, setting 6-31
Alert does not sound 7-2
Alert FHR % parameter 6-6, 6-7, 6-8
Alert Parameters 6-43
Alert Window Period parameter 6-5, 6-6, 6-8
AlertAllowAcknowledge parameter 6-24
AlertAutoAnnotateOn parameter 6-43
AlertBedList parameter 6-22
AlertDisplayOnCensus parameter 6-23
AlertHoldDisplay parameter 6-24
AlertHoldPeriod parameter 6-24
AlertLimitFhrHigh parameter 6-44
AlertLimitFhrLow parameter 6-45
AlertLimitFhrNoDataOn parameter 6-45
AlertLimitFhrOn parameter 6-44
AlertLimitMatMhrHigh parameter 6-47
AlertLimitMatMhrLow parameter 6-47
AlertLimitMatNibpDiaHigh parameter 6-46
AlertLimitMatNibpDiaLow parameter 6-46
AlertLimitMatNiBPOn parameter 6-45
AlertLimitMatNibpSysHigh parameter 6-46
AlertLimitMatNibpSysLow parameter 6-46
AlertLimitMatSao2Low parameter 6-48
AlertLimitMatSao2On parameter 6-48
AlertLimitMhrOn parameter 6-47
AlertMinDisplayTime parameter 6-24
AlertPresentation parameter 6-23
AlertShowPatientId parameter 6-23
All User field 2-8
Annotate Strip Screen, customizing 2-24
Archive Schedule parameter 6-13
ArchiveOnState parameter 6-12
ArchivePath parameter 6-13
Audible Alert Does Not Sound 7-2
audible alert is silent 7-2
AuditLogin parameter 6-9
AuditUserViewPeriod parameter 6-4
AuditUserViewType parameter 6-4
AutoAnnotateExamOn parameter 6-42
AutoAnnotateMaternalVitalOn
    parameter 6-41
AutoAnnotateMHRPeriod parameter 6-41
AutoAnnotatePulseOxyPeriod parameter 6-41

B

Bed Group and Bed parameters 6-40
BedList parameter 6-18
beds, move all from available to
    configured 6-29
beds, move from configured to available and
    vice versa 6-29
BedTransferAutoAnnotateOn parameter 6-42
Buttons
    Cancel, description of 1-8
    Configuration screen 5-4
    Next, description of 1-8
    OK, description of 1-8
    reports viewer toolbar 4-3
    Screen 1-8

C

calendars, usage 1-11
Cancel button, description of 1-8
Census Bedlist parameter, setting 6-30
Census Patient Columns 6-27
CensusFieldList parameter 6-27
CensusFieldList parameter, setting 6-33
CensusFieldListSC, setting procedure 6-35

CensusShowActiveBedsOnly parameter 6-19
CensusStatusColors parameter 6-27
CensusStatusColors parameter, setting 6-37
CensusStatusLabels parameter 6-28
CensusStatusLabels parameter, setting 6-38
change history, show for field 1-7
change order of configured beds list 6-29
Check Boxes 1-10
cleaning 1-6
cleaning system components 1-6
close PeriWatch Surveillance 1-7
colors, setting for Census screen status 6-37
Configuration screen
    accessing 5-2
    add and delete nodes 5-10
    navigation 5-3
configured beds, change order of 6-29
contacts, hospital information 2-12
Conventions
    Icons 1-6
    Typographical 1-5
Ctrl+T keys, usage tip 1-7

D

Data Collection and Display
    loss of 7-5
data loss 7-5
Data Recovery 7-6
date fields, usage 1-11
Delete strip data 3-4
Deleting
    configuration nodes 5-10
    nodes 5-10
Description of Device 1-1
device-specific parameters 5-9
Disposal of Non-Functional Equipment 1-6
Downtime
    recommended steps 7-6
Downtime and Data Recovery 7-6
drop-down calendars, usage 1-11

E

electronic signatures 1-6
Enable Within Normal Limits parameter 6-13
ExportClosedPeriod parameter 6-12
ExportDirectory parameter 6-13
exporting reports 4-3
ExportMediaType parameter 6-12
ExportMediaWriteOn parameter 6-13
ExportPendingPeriod parameter 6-11
ExportReviewPeriod parameter 6-11

F

F10 key, usage tip 1-7
F3 key, usage tip 1-7
F4 key, usage tip 1-7
F6 key, usage tip 1-7
Facility field 2-6
Facility Group and Facility parameters 6-2
FaxFooter parameter 6-3
FaxHeader parameter 6-3
FetalStripFaxDisclaimer parameter 6-3
FHR/UAVerticalRatio parameter 6-4
FHRAspectRatio parameter 6-3
FHRTimeDisplayInterval parameter 6-4
field change history, show 1-7
fields on Census screen, setting display of 6-33
flowsheet, blank entry 7-2
Force Password Change field 2-7

G

Gap Tolerance 6-5
GraphHeartBase parameter 6-24
GraphHeartMajorGridlineBase parameter 6-25
GraphHeartMajorGridlineInterval
    parameter 6-25
GraphHeartMinorGridLineBase
    parameter 6-25
GraphHeartMinorGridlineInterval
    parameter 6-25
GraphHeartRange parameter 6-25
GraphTimeMajorLineInterval parameter 6-27
GraphTimeMinorLineInterval parameter 6-27
GraphUaBase parameter 6-26
GraphUaMajorGridLineBase parameter 6-26
GraphUaMajorGridLineInterval
    parameter 6-27
GraphUaMinorGridLineBase parameter 6-26
GraphUaMinorGridLineInterval
    parameter 6-26
GraphUaRange parameter 6-26
Gray out Lab and Blood Glucose Data (Infant
    Data Page-2) parameter 6-14

H

Hospital Information Contacts 2-12

I

Icons 1-6
Inactive User field 2-8
Indications For Use 1-1
inheriting parameters 5-6

K

keyboard shortcuts 1-11

L

labeling Census status buttons 6-38
LateAnnotationTime parameter 6-9
Loss of Data Collection and Display 7-5
lost power 7-2

M

Maintenance, User 2-1
Manual Organization 1-3
Maternal Re-Alert Delay 6-5
MedicalRecordNumberFormat parameter 6-10
Modifying Existing System Users 2-7
move all beds from available
    to configured 6-29
move beds from configured to available and
    vice versa 6-29
Move/Delete Strip Functions 3-1
MoveDeleteStripAutoAnnotateOn
    parameter 6-43
MultiPatientAccessSecurityOn parameter6-21
MultiPatientSecurityPeriod parameter 6-22

N

Navigation
    configuration nodes 5-3
    Configuration screen 5-3
    parameters configuration 5-3
    reports 4-3
    system nodes, configuration 5-3
Next button, description of 1-8
numeric keypad, show 1-7

O

OK button, description of 1-8
overview
    accessing Configuration screen 5-2
    changing parameter values 5-7
    Configuration screen buttons 5-4
    Configuration screen navigation 5-3
    device-specific parameters 5-7
    inheritable parameters 5-7
    inheriting parameters 5-6
    parameter values, changing 5-7
    parameters configuration 5-1
    setting configuration parameter values 5-7

P

Parameters configuration
    Accessing 5-2
    adding nodes 5-10
    Alert BedList, setting procedure 6-31
    Alert FHR % (FHR High) 6-8
    Alert FHR % (FHR Low) 6-6
    Alert FHR % (No Data) 6-7
    Alert Parameters 6-43
    Alert Window Period (FHR High) 6-8
    Alert Window Period (FHR Low) 6-5
    Alert Window Period (No Data) 6-6
    AlertAllowAcknowledge 6-24
    AlertAutoAnnotateOn 6-43
    AlertBedList 6-22
    AlertDisplayOnCensus 6-23
    AlertHoldPeriod 6-24
    AlertLimitFhrHigh 6-44
    AlertLimitFhrLow 6-45
    AlertLimitFhrNoDataOn 6-45
    AlertLimitFhrOn 6-44
    AlertLimitMatMhrHigh 6-47
    AlertLimitMatMhrLow 6-47
    AlertLimitMatNibpDiaHigh 6-46
    AlertLimitMatNibpDiaLow 6-46
    AlertLimitMatNiBPOn 6-45
    AlertLimitMatNibpSysHigh 6-46
    AlertLimitMatNibpSysLow 6-46
    AlertLimitMatSao2Low 6-48
    AlertLimitMatSao2On 6-48
    AlertLimitMhrOn 6-47
    AlertMinDisplayTime 6-24
    AlertPresentation 6-23
    AlertPresentation, setting procedure 6-32
    AlertShowPatientId 6-23
    Archive Start Time 6-13
    ArchiveOnState 6-12
    ArchivePath 6-13
    AuditLogin 6-9
    AuditUserViewPeriod 6-4
    AuditUserViewType 6-4
    AutoAnnotateExamOn 6-42

AutoAnnotateMaternalVitalOn 6-41
AutoAnnotateMHRPeriod 6-41
AutoAnnotatePulseOxyPeriod 6-41
Bed Group and Bed 6-40
BedList 6-18
BedTransferAutoAnnotateOn 6-42
Census Bedlist, setting procedure 6-30
CensusFieldList 6-27
CensusFieldList, setting procedure 6-33
CensusShowActiveBedsOnly 6-19
CensusStatusColors 6-27
CensusStatusColors, setting 6-37
CensusStatusLabels 6-28
CensusStatusLabels, setting 6-38
deleting nodes 5-10
device-specific 5-9
Enable Within Normal Limits 6-13
ExportClosedPeriod 6-12
ExportDirectory 6-13
ExportMediaType 6-12
ExportMediaWriteOn 6-13
ExportPendingPeriod 6-11
ExportReviewPeriod 6-11
Facility Group and Facility 6-2
FaxFooter 6-3
FaxHeader 6-3
FetalStripFaxDisclaimer 6-3
FHR/UAVerticalRatio 6-4
FHRAspectRatio 6-3
FHRTimeDisplayInterval 6-4
Gap Tolerance 6-5
GraphHeartBase 6-24
GraphHeartMajorGridlineBase 6-25
GraphHeartMajorGridlineInterval 6-25
GraphHeartMinorGridLineBase 6-25
GraphHeartMinorGridlineInterval 6-25
GraphHeartRange 6-25
GraphTimeMajorLineInterval 6-27
GraphTimeMinorLineInterval 6-27
GraphUaBase 6-26
GraphUaMajorGridLineBase 6-26
GraphUaMajorGridLineInterval 6-27
GraphUaMinorGridLineBase 6-26
GraphUaMinorGridLineInterval 6-26
GraphUaRange 6-26
Gray out Lab and Blood Glucose Data (Infant Data Page-2) 6-14
inherit check box, using 5-7
inheriting 5-6
LateAnnotationTime 6-9
Maternal Re-Alert Delay 6-5
MedicalRecordNumberFormat 6-10
MoveDeleteStripAutoAnnotateOn 6-43
MultiPatientAccessSecurityOn 6-21
MultiPatientSecurityPeriod 6-22
navigation 5-3
overview 5-1
PatientIdentifierDisplay 6-21
PrintFooter 6-3
PrintHeader 6-3
Re-Alert Delay (FHR High) 6-8
Re-Alert Delay (FHR Low) 6-6
Re-Alert Delay (No Data) 6-7
SecurityIdleTime 6-20
Start Screen, setting procedure 6-30
StartScreen 6-20
StripMagnifyDefault 6-22
StripMagnifyDefault, setting 6-31
SurvBedList 6-18
SurvBedList, setting procedure 6-29
SurvDisclaimer 6-3
SurvShowActiveBedsOnly 6-19
TrendTimeOut 6-22
UAAspectRatio 6-3
Upgrading to version 1.6.000 from a previous version 6-48
VerifyPeriod 6-42
VisitNumberFormat 6-10
Workstation Group and Workstation 6-18
password
force change, all users 2-9
force change, single user 2-8
Password field 2-5
PatientIdentifierDisplay parameter 6-21
PeriWatch Surveillance version 1-12
phone number, Technical Support 7-1
Pop-up fields 1-10
power
emergency test 7-2
lost 7-2
Pregnancy Visit Administration 3-1
Move patient data 3-1
PrintFooter parameter 6-3
PrintHeader parameter 6-3
Printing
list of system users 2-8
reports 4-2

R

Re-Alert Delay parameter 6-6, 6-7, 6-8
Related Documentation 1-3
report data, sorting 4-5
Reports
    accessing 4-1
    exporting 4-3
    navigation 4-3
    printing 4-2
    saving 4-3
    Security 4-5
    viewer toolbar buttons 4-3
Resetting the workstation 7-1
Restriction
    User Access 2-10
Role field 2-6

S

saving reports 4-3
Screen Buttons 1-8
Searching for system users 2-3
Security Report 4-5
SecurityIdleTime parameter 6-20
shortcuts, general 1-7
Show field 2-7
Sign on Allowed field 2-6
signatures, electronic 1-6
Sort Tag field 2-6
sorting report data 4-5
Specialty field 2-6
Start Screen parameter, setting procedure 6-30
StartScreen parameter 6-20
Status bar 1-9
status buttons, setting labels for 6-38
status colors, setting procedure 6-37
Strip data, move or delete 3-4
strip timeframe display, setting 6-31
StripMagnifyDefault parameter 6-22
StripMagnifyDefault parameter, setting 6-31
Support phone number 7-1
SurvBedList parameter 6-18
SurvBedList parameter, setting 6-29
SurvDisclaimer parameter 6-3
SurvShowActiveBedsOnly parameter 6-19
System Maintenance
    add new users 2-5
    modify existing users 2-7
System Parameters 6-1

T

Tab key, usage tip 1-7
Technical Support phone number 7-1
time fields, usage 1-11
timeframe display for strips, setting 6-31
tips
    troubleshooting 7-1
TrendTimeOut parameter 6-22
Troubleshooting
    alert does not sound 7-2
    audible alert is silent 7-2
    blank entry on flowsheet 7-2
    cannot log in on Login screen 7-1
    data recovery 7-5
    fetal or maternal monitor not displaying data 7-5
    flowsheet, blank entry 7-2
    hospital network down 7-5
    Login screen, cannot log in 7-1
    network goes down 7-5
    no display of maternal or fetal monitoring 7-5
    no power to workstation 7-1
    outage causes data loss 7-5
    recommendations, downtime and data recovery 7-5
    Resetting the Workstation 7-1
    screen freezes, no response 7-2
    server down 7-5
    system not responding 7-2
troubleshooting 7-1
Type field 2-6
Typographical conventions 1-5

U

UAAspectRatio parameter 6-3
Upgrading to version 1.6.000 from a previous version 6-48
Usage
    time and date fields 1-11
Usage tips
    close PeriWatch Surveillance 1-7
    Ctrl+T keys 1-7
    F3 key 1-7
    F4 key 1-7
    F6 key 1-7
    general shortcuts 1-7
    Tab key 1-7

usage tips
signatures 1-6
Usage tips, F10 key 1-7
User Access Restriction 2-10
User Maintenance 2-1
User Maintenance Screen
accessing 2-1
Active field 2-6
Active User field 2-8
All User field 2-8
Description field 2-5
Facility field 2-6
Force Password Change field 2-7
Inactive User field 2-8
Password field 2-5
Role field 2-6
Show field 2-7
Sign on Allowed field 2-6
Sort Tag field 2-6
Specialty field 2-6
Type field 2-6
Users
adding new 2-5
force password change, all users 2-9
force password change, single user 2-8
modifying existing 2-7
printing the list of 2-8
searching for 2-3
updating system users 2-7

V

VerifyPeriod parameter 6-42
version, PeriWatch Surveillance 1-12 VisitNumberFormat parameter 6-10

W

Who Should Read This Guide 1-2
Workstation
Frozen Screen 7-2
No Power 7-1
no response 7-2
resetting 7-1
screen locks up 7-2
workstation and workstation group
parameters 6-18

PeriGen

Advanced
Perinatal Systems

100 Regency Forest
Drive Suite 200
Cary, NC 27518