

Network Explorer — User Manual

Using the network explorer: its views and controls, call audio and speech-to-text, saving and combining data, and how calls, talkgroups, radios and networks are associated for each protocol.

2026-10-08 · build 2cd563c, 2026-10-08

dsd-server network explorer

live · updated 16:19:53Z · calls, talkgroups & radios, associated per protocol · [status page](#)

Find radio, talkgroup, alias, text...

Record

Audio on

Pause

Clear

Export

Import...

Open...

P25 24 RADIOS

DMR 5 RADIOS

NXDN 4 RADIOS

2 NETWORKS

3 SITES

11 TALKGROUPS

24 RADIOS

62 CALLS (RECENT)

1.2 CALLS / S

0 LIVE CALLS

▶ FILTERS

none — showing everything

2 networks...

CALLS 62

TALKGROUPS 11

RADIOS 24

GRAPH

LINKS

NETWORKS 2

☐ With audio only

☒ Transcribe on play

English

whisper-small

↓ Audio (.zip)

START (UTC)	DURATION	NETWORK	MHZ	SLOT	FROM	TO	TYPE
16:19:29	<1s	WACN BEE00 · SYS 3A1	851.0125	—	13003	TG 500	VOICE GROUP
16:19:28	<1s	WACN BEE00 · SYS 3A1	851.0125	—	12004	TG 400	VOICE GROUP
16:19:28	<1s	WACN BEE00 · SYS 3A1	851.0125	—	16001	12004	VOICE PRIVATE
16:19:27	<1s	WACN BEE00 · SYS 3A1	851.0125	—	15001	10001	VOICE PRIVATE
16:19:27	<1s	WACN BEE00 · SYS 3A1	851.0125	—	15004	TG 400	VOICE GROUP
16:19:27	<1s	WACN BEE00 · SYS 3A1	851.0125	—	15003	TG 400	VOICE GROUP
16:19:26	<1s	WACN BEE00 · SYS 3A1	851.0125	—	12001	TG 100	VOICE GROUP
16:19:25	<1s	WACN BEE00 · SYS 3A1	851.0125	—	15002	TG 400	VOICE GROUP
16:19:25	<1s	WACN BEE00 · SYS 3A1	851.0125	—	15002	TG 401	VOICE GROUP
16:19:24	<1s	WACN BEE00 · SYS 3A1	851.0125	—	12001	TG 101	VOICE GROUP
16:19:23	<1s	WACN BEE00 · SYS 3A1	851.0125	—	14002	TG 300	VOICE GROUP
16:19:23	<1s	WACN BEE00 · SYS 3A1	851.0125	—	13001	TG 201	VOICE GROUP

Radio 12001

WACN BEE00 · SYS 3A1

Only Exclude

7 CALLS

2 TALKGROUPS

0 PRIVATE PEERS

1 NETWORKS

49s ago FIRST

26s ago LAST

TALKGROUPS USED

TG 101

4

TG 100

3

PRIVATE CALLS WITH

None.

SHARES TALKGROUPS WITH

12002

2 TGs

12003

2 TGs

10001

1 TG

12004

1 TG

The network explorer is the `/net` page of dsd-server. It turns everything the server decodes into **calls, talkgroups, radios and networks, and how they are connected**: who talks on which talkgroup, who calls whom privately, which talkgroups share radios, and which systems a radio or talkgroup appears on. It updates live, works on a PC, tablet or phone, and can save, reopen and combine its data.

This manual covers using the page. [Appendix A](#) explains how the associations are worked out, and [Appendix B](#) what that means for each protocol. Server settings, HTTP endpoints and file formats are in the README and PROTOCOL.md.

Contents

1. [Getting started](#)
2. [The page at a glance](#)
3. [Calls](#)
4. [Talkgroups and Radios](#)
5. [Graph](#)
6. [Links](#)
7. [Networks](#)
8. [The details panel](#)
9. [Searching, filtering and sorting](#)
10. [Call audio](#)
11. [Speech-to-text](#)
12. [Saving, reopening and combining data](#)
13. [Recording a session for troubleshooting](#)
14. [Tablets and phones](#)
15. [Limits: what is kept, and for how long](#)
16. [Troubleshooting](#)
17. [Settings reference](#) - [Appendix A: How associations are built](#) - [Appendix B: Per-protocol notes](#) - [Appendix C: Glossary](#)

1. Getting started

1. Start dsd-server as usual and start one or more decode sessions from your client (DMR, P25, NXDN, dPMR, D-STAR, YSF, TETRA, EDACS / ProVoice, X2-TDMA). Paging (POCSAG / FLEX) is not shown in the explorer.
2. Open `http://<server>:<port>/net` in a browser — the same address and port as the status page (which links to it).
3. As traffic is decoded, a tab appears for each protocol and the views fill in. A channel with nothing on it, noise, or the wrong protocol selected leaves no trace.

Send the channel frequency. If your client's `start` message includes `center_freq` (the tuner centre; the channel is `center_freq + freq_offset`), the explorer labels and groups networks by channel (`Color Code 1 · 434.4250 MHz`) instead of by session (`Color Code 1 · stream 3`). That is much easier to read, and it lets

reconnects, restarts and a second receiver on the same channel join up. See [Appendix A.2](#).

Nothing needs to be installed in the browser. The page is self-contained; only the optional speech-to-text loads extra files, and only when used.

The screenshots in this manual use demo data (a simulated P25 system, NXDN and DMR sites, and one DMR test call); transcripts in them are illustrative.

2. The page at a glance

From top to bottom:

Part	What it does
Status line	<code>live · updated 12:34:56Z, or paused, file view, disconnected – retrying</code> . Links back to the status page. The page updates every 1.5 s, but waits while you are in the middle of something — <code>live · held: clicking</code> (a button or mouse held down, a drag), <code>held: scrolling</code> , or <code>held: text selected</code> (so you can copy an id; click anywhere to clear the selection) — and catches up right after. Where the details panel was scrolled to stays put across updates.
Search box	Finds radios, talkgroups, aliases, SMS text and frequencies. Filters every view. See section 9 .
Record	A developer tool, hidden unless turned on (section 13): records everything the explorer receives, for replay and troubleshooting. While on, the header shows the file name, its size and a Download link.
🔊 Audio	Starts / stops recording each call's voice (off by default) — section 10 . Orange when on.
Pause	Freezes the whole page (no updates) until pressed again.
Clear	Forgets everything learned so far, and any imports. Asks first — and, if there are recorded call audio files, whether to delete those from the server too (Cancel keeps them).
Export ▼	Saves what the explorer shows: explorer data (.json), the same with the calls' audio (.zip), the association graph (.graphml), or the listed radios' positions (.kml).
Import...	Adds saved exports (e.g. from another receiver) to the live view.
Open...	Views saved exports offline, read-only (several files are merged). You can also drop files onto the page.
? (Help)	Opens this manual (PDF) in a new tab. It is built into the server, so it matches the server's version and needs no internet.
Protocol tabs	One per protocol with traffic (e.g. <code>DMR 62 radios · 1 live</code>), or with a client connected for it (even before any traffic). A dot marks a protocol with a decode stream connected: green while one is decoding (anything decoded in the last 10 s), hollow when connected but quiet. Hover for the streams. Protocols are never mixed: a DMR radio 1234 and a P25 radio 1234 are unrelated.
Connections	At the end of the tabs row: <code>● 3 clients · 2 streams</code> — clients connected to the server and the decode streams they run (green dot while any decodes), or <code>No clients connected</code> . Hover for each stream's protocol, frequency, and when it last decoded something.

Part	What it does
Stat cards	Networks, Sites, Talkgroups, Radios, Calls (recent), Streams (this protocol's connected decode streams, green while one decodes; hover for each; not in a file view) and Live calls — for the current protocol, network filter and search (not With audio only or Hide signalling , which only shorten the Calls list). The protocol tab's "N live" counts all of its networks, so with a network filter or a search the two can differ.
Filters	Everything that narrows the page, in one section under the stat cards (§9). Collapsed (the default) it is one row: ► Filters , a chip for each filter in force (click one to drop it) and Clear all ; with none it says <i>none — showing everything</i> . Click ► Filters to open it: a row each for networks (one chip per network, with its call count), talkgroups and radios (each with a box to type ids into), and the search. The browser remembers whether it is open.
View tabs	Calls · Talkgroups · Radios · Graph · Map · Links · Networks.
Details panel	On the right (or a drawer on smaller screens): everything tied to the radio, talkgroup or network you click.

On a narrow window the header's buttons fold into a **≡ Menu**.

When the server is updated to a new version of the explorer, open pages reload themselves (no need to refresh): the protocol, filters, search and selection are kept. The reload waits while you are busy — audio playing, speech-to-text running, a click, a text selection or typing — and a note says it will happen when you're done. Restarting the server with the same version doesn't reload anything.

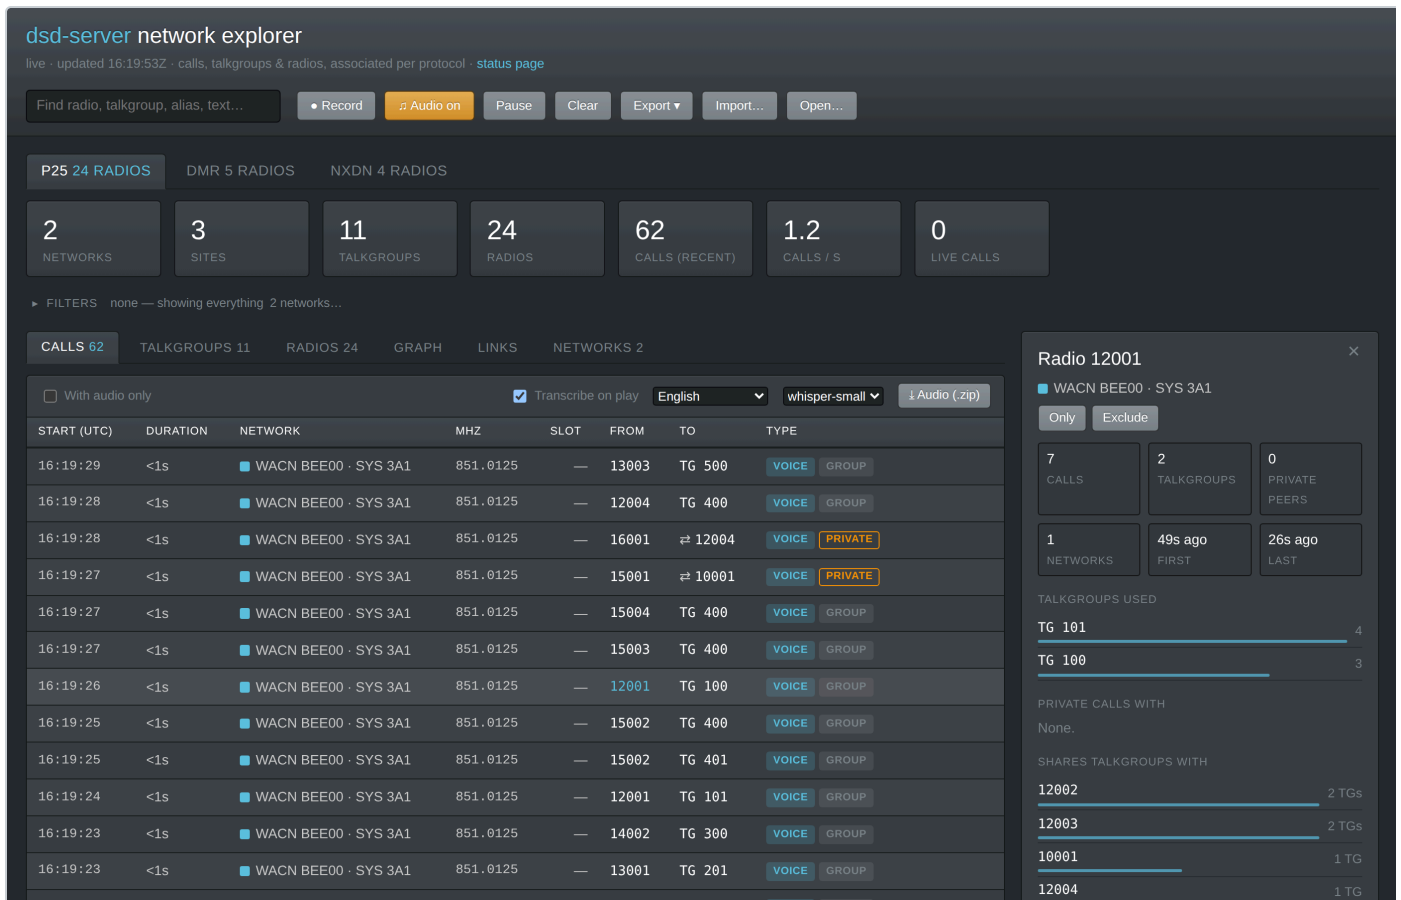


Figure 1: The explorer on a PC: header, protocol tabs, stat cards, the filters (collapsed), the Calls view and, on the right, the details of the radio clicked (12001), with ✕ to deselect it.

3. Calls

One row per call, newest first. A *call* is stitched together from many decoder lines (sync, voice frames, call headers, aliases, SMS) — see [Appendix A.3](#).

Column	Meaning
Start (UTC)	When the call began.
Duration	How long it lasted; a pulsing green dot and running time while it is live. A DMR call ends when the talker unkeys: the repeater's hang time after it (terminators repeating the call's ids for a few seconds) isn't counted, though a talker keying up again within it continues the same call. The audio can still be a little shorter: silence at the start of a transmission isn't recorded.
Network	The network it was heard on (coloured swatch). When the MHz column already shows the frequency, it is left out of the name here; hover for the full name.
MHz	The channel frequency (when the client sent it).
Slot	TDMA timeslot where the decoder reports one (DMR's 1 or 2; P25 Phase 2); — otherwise.

Column	Meaning
From	The talking radio, with its talker alias when decoded. Click it for the radio's details.
To	The talkgroup (TG 1234), or $\approx$ 5678 for a private (radio-to-radio) call. Click it for details.
Type	Badges: VOICE , DATA , or SIGNALING (a call was announced — source / target decoded — but no voice or data was heard on this channel, so there is no audio; often a control-channel grant, a hang-time message, or noise); GROUP or PRIVATE ; EMERGENCY ; ENCRYPTED (hover for the algorithm and key id it named); and 2 RX when two receivers heard the same call (it is listed once). Hover for an explanation.
Audio	► 0:12 plays the call's recorded voice, ↓ downloads it — only when audio recording is on (section 10).
Content	What the call carried: an SMS / text message, or — for a data call without text — what kind of data, in grey italics: ACK (delivery confirmed) , Data packet , ARS (registration) , LRRP (location) , TMS (text message) , Moto data (service 0x...) for a Motorola (MNIS) service with no published format (0x80 and 0x20 are common — binary packets from radios to the data gateway, kept undecoded rather than shown as nonsense text), or Data announced only when only the announcement was heard here (the data may have gone out on another channel). An encrypted call shows the algorithm and key id it announced: AES-256 · key 0x666A . Motorola ARS packets are decoded: ARS registration · radio 21518 (a radio registering with the system's data gateway, by its device id) and ARS registration ACK (the gateway's answer). A position report sent during the call shows as 📍 lat, lon , linked to Google Maps. This column only appears when some call has any of these.

A call's **transcript** (when speech-to-text is used) appears in quotes on its own line under the row.

CALLS 9
TALKGROUPS 4
RADIOS 5
GRAPH
LINKS
NETWORKS 2

☐ With audio only
☒ Transcribe on play
English
whisper-small
Audio (.zip)

START (UTC)	DURATION	NETWORK	MHZ	SLOT	FROM	TO	TYPE	AUDIO
16:19:15	2.0s	Color Code 1	434.4250	1	123	TG 1	VOICE GROUP	0:03 ↓
"Unit one-two-three, radio check, how do you copy?"								
16:19:10	2.0s	Color Code 1	434.4250	1	123	TG 1	VOICE GROUP	0:03 ↓
"Copy that, en route to the north gate."								
16:19:08	<1s	Network 9	453.3250	2	3115 DISPATCH 2	TG 10	VOICE GROUP	
16:19:07	<1s	Network 9	453.3250	1	3121 UNIT 21	TG 9	VOICE GROUP	
16:19:07	1.6s	Network 9	453.3250	2	3120	TG 11	VOICE GROUP	
16:19:06	1.6s	Network 9	453.3250	1	3112 K. REYES	TG 10	VOICE GROUP	
16:19:05	2.0s	Color Code 1	434.4250	1	123	TG 1	VOICE GROUP	0:03 ↓
"Loud and clear, thanks."								
16:19:05	1.6s	Network 9	453.3250	2	3115 DISPATCH 2	TG 9	VOICE GROUP	
16:19:04	1.6s	Network 9	453.3250	1	3112 K. REYES	TG 9	VOICE GROUP	

16:19:15Z 434.4250 MHz slot 1 123 - TG 1 Color Code 1 · 434.4250 MHz 0:01 / 0:03
Unit one-two-three, radio check, how do you copy? · whisper-small · 6.2 s

Associations
Click a radio, talkgroup or network anywhere on the page to see what it is tied to: the talkgroups a radio uses, who talks on a talkgroup, which talkgroups share radios, private-call partners, and the networks they were heard on.

Figure 2: DMR calls with recorded audio (► and ↓), transcripts under their calls, and the now-playing bar at the bottom of the window.

Calls toolbar (above the list):

- **With audio only** — lists only calls with recorded voice.
- **Hide signalling** — hides **SIGNALING** calls (announced, but no voice or data heard here). Appears only when there are any. Like **With audio only**, it only shortens the Calls list; the stat cards still count every call.
- **Transcribe on play**, the language and model lists — see section 11.

- **↓ Audio (.zip)** — downloads the audio of the calls listed ([section 10](#)).

The audio and transcription controls appear once audio recording is on or some call has audio.

Up to 400 calls are shown at a time; the explorer keeps many more (5000 per protocol by default) — narrow the list with the search box, the **Filters** or a sort to see older ones.

4. Talkgroups and Radios

Talkgroups: one row per talkgroup — the networks it was heard on, how many radios used it, its call count, emergency and encrypted call counts, and when it was first and last heard.

Radios: one row per radio — its busiest talkgroups, how many talkgroups and private-call partners it has, its networks, call count and when it was last heard. Aliases are shown next to the id wherever the radio appears.

Click a row for its details ([section 8](#)). Click a column header to sort.

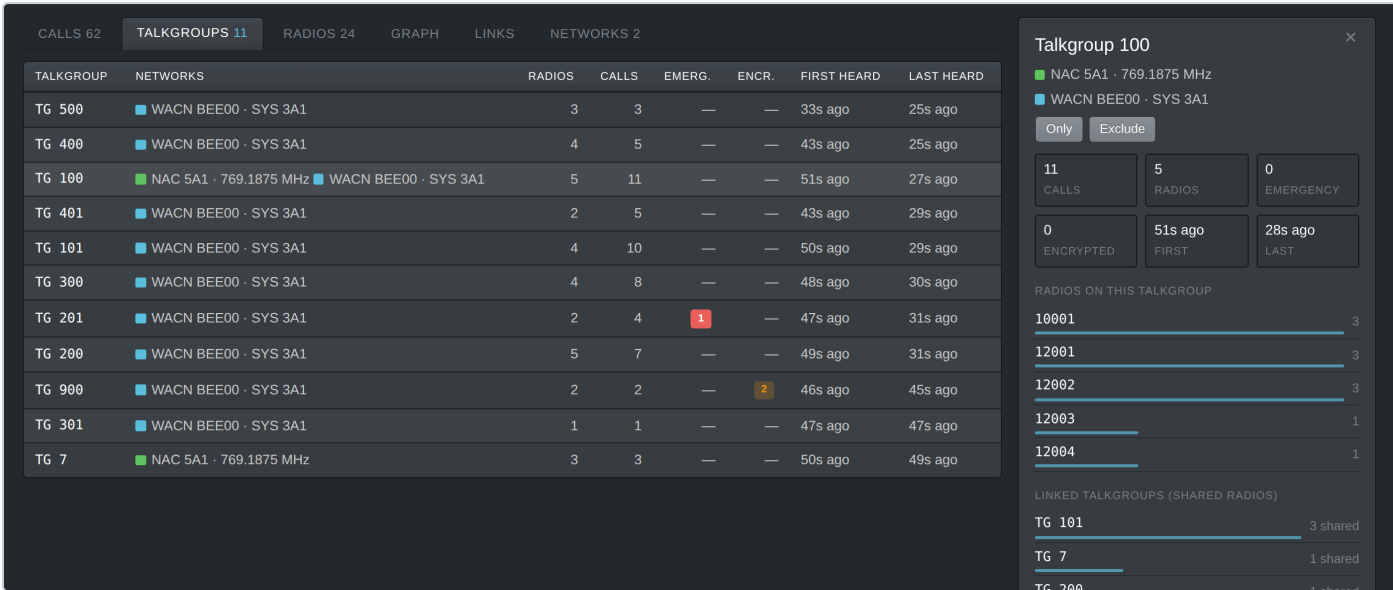


Figure 3: Talkgroups, with TG 100 selected: its radios and the talkgroups linked to it through shared radios.

5. Graph

A live picture of who talks on what: **talkgroups** and **radios** are nodes, a line joins a radio to each talkgroup it used, and a **dashed orange line** joins two radios that made a private call. Node colour is the network; a **white dashed ring** marks a radio or talkgroup seen on two or more networks (drawn in the colour of the busiest of them when it first appears, and it keeps that colour while it stays on that network, rather than changing with every shift in traffic); a talkgroup's size grows with its calls.

The layout arranges itself: linked nodes pull together and every node pushes the others away, harder the more links it has. So a busy talkgroup, or a radio with many private-call partners (a data gateway, a dispatcher), keeps its own space with its radios around it, other talkgroups stay out of its ring, and nodes never sit on top of each

other. Private-call links pull less than talkgroup links, so the talkgroups shape the picture.

- **Nodes** — how many of the busiest radios and talkgroups to draw (100 to 1000). The note on the right says how many are shown.
- **Private-call links** and **Radio labels** — show or hide them.
- Drag a node to move it; drag the background to pan; scroll, pinch or use **- / +** to zoom; **Fit** brings everything back into view. Until you zoom or pan yourself, the view keeps the whole graph in sight as it grows (it eases out to fit when a node would leave the frame); once you have zoomed or panned it stays where you put it, and **Fit** turns following back on.
- Click a node to select it: its neighbours stay lit, everything else fades, and the details panel shows it.

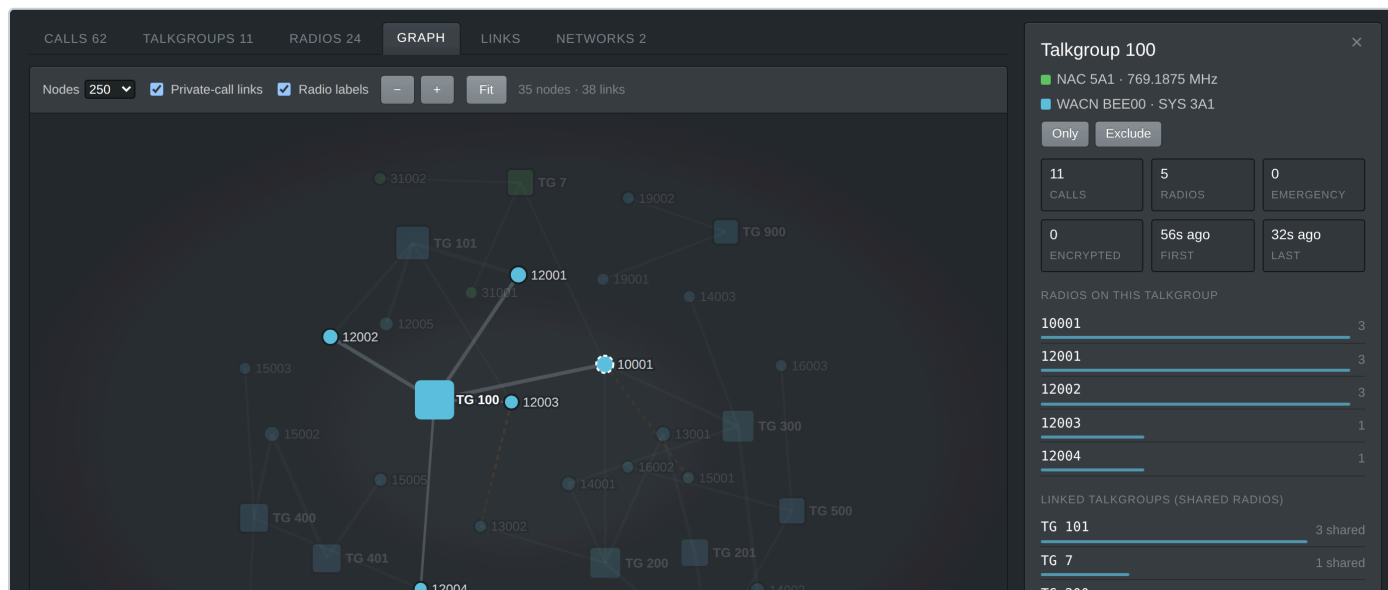


Figure 4: The graph with TG 100 selected. Squares are talkgroups, dots radios; the white dashed ring (10001) marks a radio seen on two networks.

6. Links

The analysis view — evidence of how radios, talkgroups and systems relate:

- **Probably the same network** — merge suggestions: networks that look like one channel heard at different frequency offsets, each with its reasons, **Merge** and **Not the same** ([Merging networks](#)). Shown first when there are any. A network with no decoded identity (**Unidentified** · ... — only a frequency, nothing else) is never suggested: it has nothing to match on and comes and goes with its stream.
- **Talk communities** — groups of radios tied together through talkgroups they share or private calls between them, largest first. A community is often one agency, fleet or work group.
- **Seen on more than one network** — talkgroups and radios heard on two or more networks. On weakly identified systems (see [Appendix A.2](#)) this is how you spot that two "networks" are really the same system, or that systems are linked.
- **Hub radios** — radios active on three or more talkgroups: dispatchers, supervisors, scanning or patched radios.

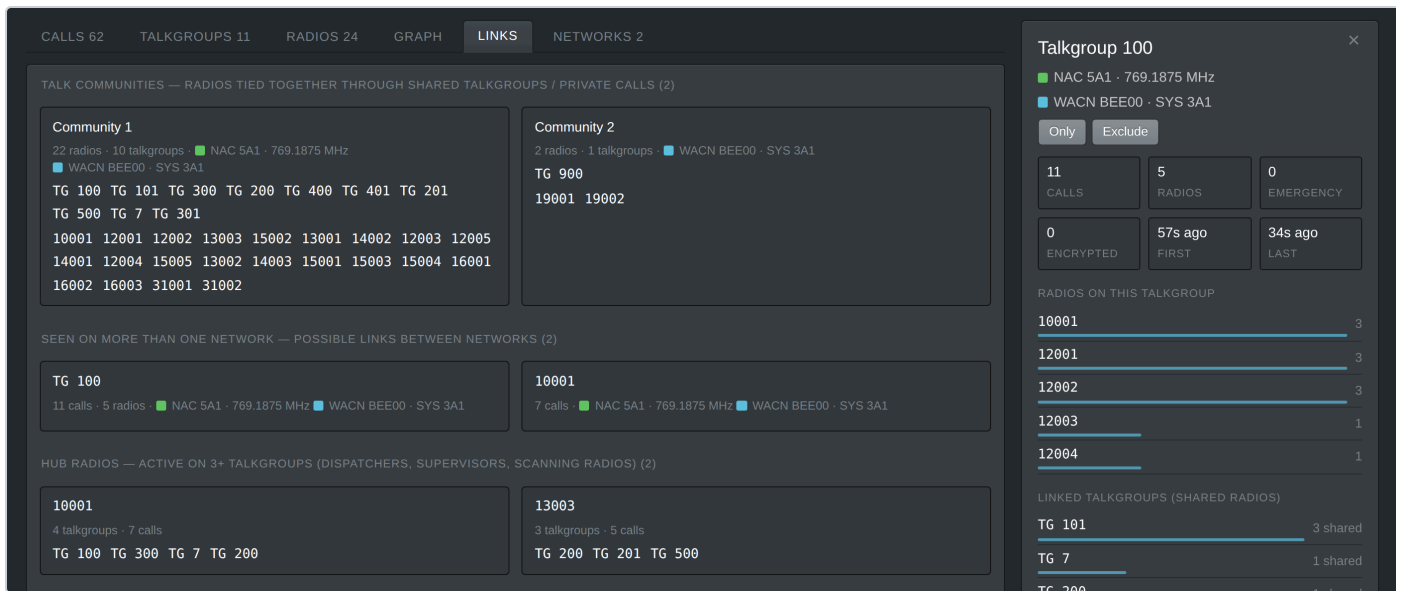


Figure 5: Links: talk communities, a talkgroup and a radio seen on two networks, and hub radios.

The Map view

Radios that sent **position reports** (DMR LRRP / GPS, P25 Motorola GPS): each one's latest position as a labelled dot in its network's colour, and — with **Paths** ticked — the path through its positions, in time order and straight from fix to fix (no road snapping). A path starts at a small ring (its first fix) and ends at the radio's labelled dot (its latest). Point at a path or a dot to pick out that radio — its path, ring and dot stay bright, everything else fades — and click either to select the radio: its path stands out, with every fix, and the others stay faded until you deselect it. Drag to pan, scroll or **+** / **-** to zoom, **Fit** to see them all. It follows the filters and the search.

The map is drawn by the page from **map tiles** — no key or account. **Map** picks the tiles: **OpenStreetMap**, **CARTO Dark**, **Esri imagery** (satellite), **OpenTopoMap**, or **No map** (positions only, and the sketch in a radio's details); the browser remembers the choice. The browser fetches the tiles itself, so it needs the internet — or set `DSD_NET_MAP_TILES` to a tile server of your own (e.g. a local OpenStreetMap server, for use offline); it then comes first as **This server's map**. A single position (📍 in a call, a radio's fixes) opens in **Google Maps**.

7. Networks

One row per network the explorer has identified:

Column	Meaning
Network	Its name: a system id (WACN BEE00 · SYS 19E, Network 12, System 4A1, MCC 234 · MNC 14), or a short code with a channel (Color Code 5 · 460.0250 MHz) or a stream (Color Code 1 · stream 3), or Unidentified · ...
Identity	How sure the identification is: strong , channel , weak or unidentified (hover for the meaning; Appendix A.2).
Identifiers	The raw ids decoded (cc=5 site_id=2 network_type=cap+ ...).

Column	Meaning
Sites	Sites reported (RFSS 1 · Site 3, Site 2, LA 1001 ...), including neighbour sites announced by the system.
Channels (MHz)	Frequencies it was heard on.
TGs / Radios / Calls	Counts on this network.
Streams	How many decode sessions fed it (more than one = several receivers or reconnects).

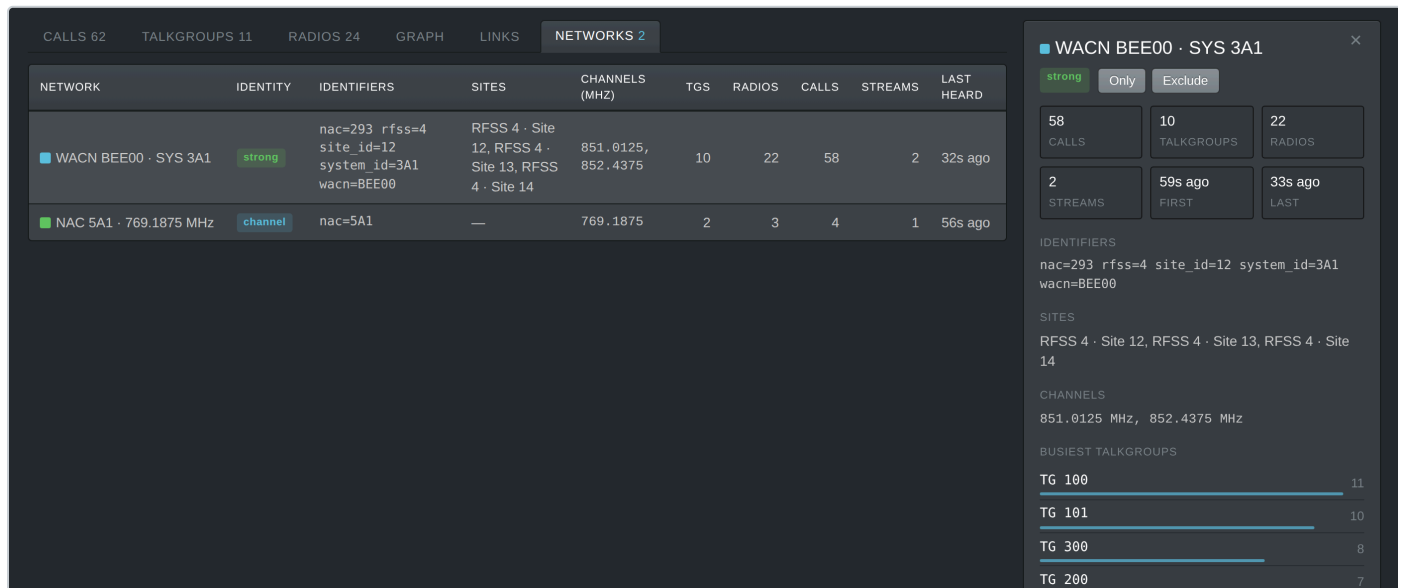


Figure 6: Networks: a strongly identified P25 system (three sites, two channels) and a NAC heard on a known channel; the system's details on the right.

Merging networks

A network without a system id is named by its code and channel (Color Code 1 · 436.6250 MHz). If the frequency reported for the same channel drifts — receivers or sessions with different tuning offsets — the same repeater can show up twice (... 436.6250 MHz and ... 436.6275 MHz), with its talkgroups and radios split between the two. Merge them to see them as one:

- In a network's details, **Merge into...** lists the other networks of the protocol, likeliest first: the same code (same code), the nearest channel (2.5 kHz away) and how many talkgroups and radios they share (3 shared). Pick one and press **Merge**: this network becomes part of that one.
- Or pick two or more networks in the open **Filters'** Networks row and press **Merge picked (N)**: they are merged into the busiest of them.
- Or take a suggestion from **Links** → **Probably the same network** (below).

Merge suggestions

The **Links** view lists pairs of networks that are probably one, with the evidence and a rating — **very likely**, **likely** or **possible**:

Evidence	Meaning
N calls heard on both	The same call (same source, target and kind, within 4 s) was heard on both networks by different streams — one transmission, two frequency readings. The strongest sign: <i>very likely</i> .
same color code (1) (or NAC, RAN, ...)	Both carry the same short code.
2.5 kHz apart	Their channels are this close — less than a channel apart (real channels are 6.25 or 12.5 kHz apart).
one took over when the other stopped	They were never heard in the same period: what a retune or a changed offset looks like.
talkgroups / radios shared	Supporting evidence only: on amateur DMR, radio ids are worldwide and TG 9 is local on every repeater.

A pair is never suggested when the evidence says they are different channels: both have a system id; their codes differ; **one stream heard both at the same moment**; **different calls on the same slot at the same moment** (two transmissions at once — unless the same calls were also heard on both, which is shown as *but: different calls at the same moment Nx*); or their channels are more than 6.25 kHz apart (or unknown) with no call heard on both.

Merge merges the less busy one into the busier. **Not the same** stops suggesting that pair in this browser (**Suggest them again** brings them back). The suggestions only advise: nothing is merged until you press Merge. The **Merge into...** list in a network's details is ordered by the same evidence (its rating first).

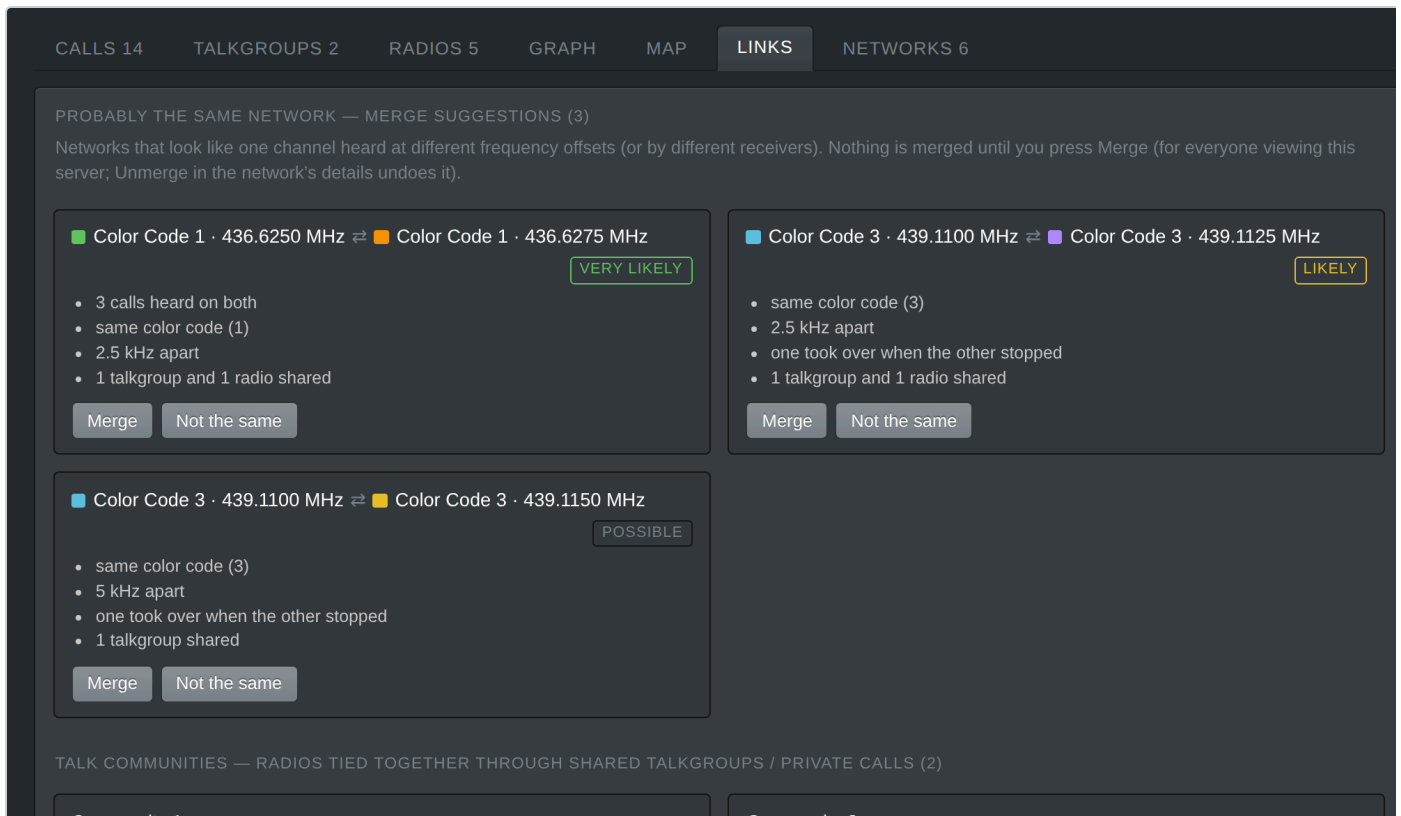


Figure 6c: Merge suggestions: a pair heard together (very likely), a hand-off 2.5 kHz apart (likely) and a pair 5 kHz apart (possible). A pair with different calls at the same moment is not suggested.

A merged network keeps the name of the one merged into, lists every channel, and adds up the counts; the Networks view marks it **+N merged**, and every view, filter, the graph and the map treat it as one network. Its details list **Merged networks** — each part with its calls and channels — with **Unmerge** for each (and **Unmerge all**). Nothing is changed underneath: the networks stay apart in the data, so unmerging gives back exactly what was there.

Merges are **shared**: everyone viewing the server sees them, they stay through **Clear** and restarts (the server keeps them in `net_merges.json` next to the recordings, or `DSD_NET_MERGES_FILE`), and exports carry them — opening or importing that export shows the networks merged too. In a file view, merging and unmerging only change that view.

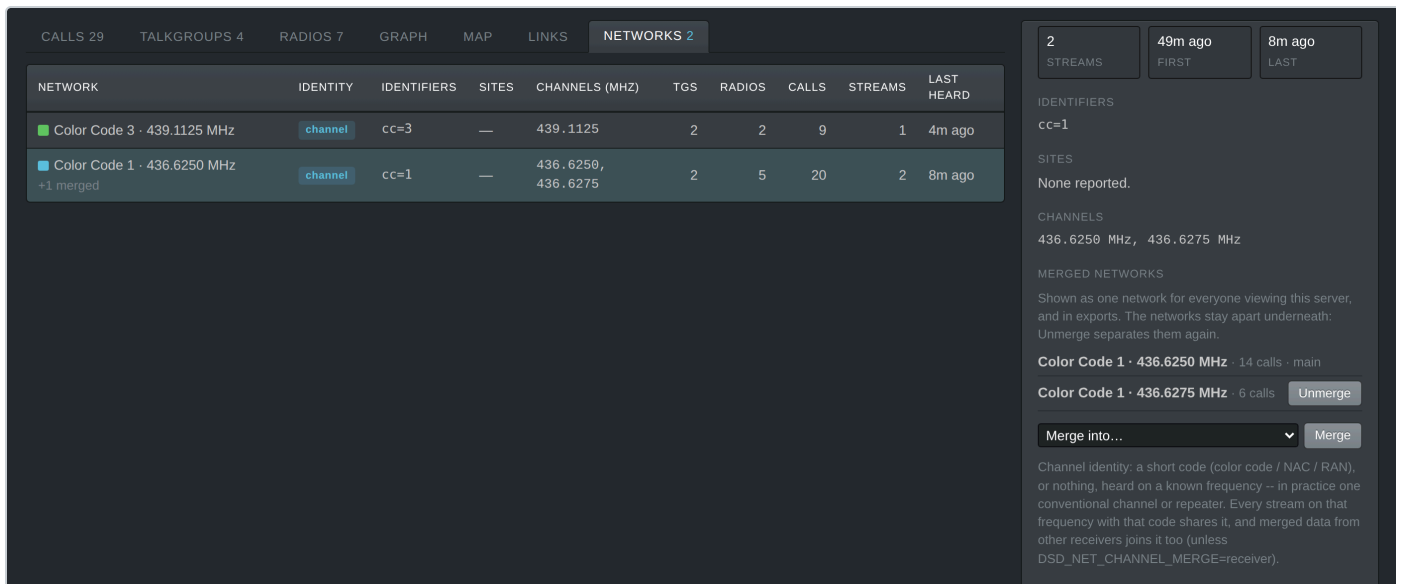


Figure 6b: Two DMR networks — one repeater heard 2.5 kHz apart — merged into one; its details list the parts with Unmerge, and Merge into... suggests the remaining network.

8. The details panel

Click any radio, talkgroup or network — in a table, the graph, a chip or a link — to open its details. Selecting something only shows its details and highlights it (in the graph, its neighbours): it doesn't filter the lists or the stat cards. To deselect, click the **X** at the panel's top right, press **Esc**, click the same item again, or click an empty part of the graph. On a tablet or phone the details are a drawer: **Close** or Esc.

- **Radio: Only** (show only this radio; **All** undoes it) and **Exclude** (hide it; **Include** undoes it); calls, talkgroups, private peers and networks; **Talkgroups used** (by calls); **Private calls with**; **Shares talkgroups with** — other radios on its talkgroups, with how many in common; **Positions (N)** when it sent position reports — N different places (repeats of the same spot count once): the latest, linked to Google Maps; a **map** of its positions and path (oldest fix green, latest red — a sketch instead with **No map**), how far it spans and moved, **Map view**, **Download KML** (the exact track and every fix, timestamped, for Google Earth or Google My Maps' *Import*) and the fixes, newest first; **Encryption keys seen** (below); **Recent calls**, with ▶ where audio exists and, under each, its text, what a data call carried (ACK, ARS, ...) and any position report.
- **Talkgroup: Only** (show only this talkgroup; **All** undoes it) and **Exclude** (hide it; **Include** undoes it); calls, radios, emergency / encrypted counts, networks; **Encryption keys seen** (below); **Radios on this talkgroup**; **Linked talkgroups (shared radios)**; **Recent calls**.
- **Network: Only** (show only this network; **All** undoes it) and **Exclude** (hide it; **Include** undoes it); counts; identifiers; sites; channels; **Merged networks** with **Unmerge**, and **Merge into...** ([Merging networks](#)); first and last heard; **Encryption keys seen** (below); its busiest talkgroups and radios.
- **Encryption keys seen** (radio, talkgroup, network; only when there are any): each key its encrypted calls announced -- the algorithm (named per protocol: P25 AES-256, ADP (RC4), DES-OFB...; DMR RC4 (EP), AES-256...; NXDN DES, AES, Scrambler) and the **key id** -- with how many calls used it. Keys belong to a talkgroup or channel rather than a radio: every radio on a talkgroup uses its key. (P25, DMR and NXDN, from dsd-fme; a call flagged encrypted without its key id decoded counts as encrypted only.)

- **Loading a key.** On a **network's** details (live view), each key id has **Add key...** — type the key (hex, up to 64 digits) and **Save**. It then shows ✓ **key loaded**, with **Replace key** / **Remove**. A key is stored per network and key id; talkgroup and radio panels show ✓ **key loaded** for reference but are managed on the network.
- **Using it.** The explorer **does not decrypt** — it stores the keys and hands them to your decoder. ↓ **Download key list** gives the network's keys as a dsd-fme hex key list (`keyid,key`); point your decode client at it with `-K`. Keys are kept on the server across restarts (`DSD_NET_KEYS_FILE`, default `net_keys.json` in the recordings folder, written readable only by the server's user). A key value is never shown again, never sent in `/net.json`, and never put in an export — only the key-list download returns it.
- Only enter keys for systems you are **authorized to monitor**.
- **Keys tab.** Each protocol tab gains a **Keys** sub-tab when it has any encryption key ids (seen or loaded). It lists them grouped by network with the same add / replace / remove and **Download key list** as the network details, so you can manage every key for a protocol in one place. **Download all ()** gives a zip of per-network key lists (one `-K` CSV per network, so there are no key-id collisions), and **Remove all** clears every loaded key for the protocol (with a confirm). Values are never shown.

9. Searching, filtering and sorting

- The **search box** matches radio ids, talkgroup ids, aliases, SMS text, frequencies (e.g. `460.17`) and encryption (a key id such as `0x666A`, or an algorithm such as `AES`), in every view, including the graph and links.
- The **Filters** section gathers every filter. Each limits every view, the graph and the stat cards, and they combine:
- **Networks** — click network chips to show only those (one or several; each click adds or drops one). In a network's details, **Only** picks just that one and **Exclude** hides it (its calls, talkgroups and radios). The Networks view still lists every network, so an excluded one can be included again. With two or more picked, **Merge picked** shows them as one network ([Merging networks](#)).
- **Talkgroups** — from a talkgroup's details (**Only** / **Exclude**), or by typing ids into the box in the open Filters' Talkgroups row: **Pick** (or Enter) adds them to the picked ones, **Exclude** excludes them. Several at once work (`16 12`, `TG 16`, `TG 12`), and the box suggests the talkgroups heard. Picking talkgroups shows their calls and the radios that used them (private calls, which have no talkgroup, are hidden); excluding one hides its calls, and radios heard only on it.
- **Radios** — the same, from a radio's details or the Radios row's box, which also takes an alias. Picking a radio shows its calls (both ends of a private call count) and the talkgroups it used; excluding one hides it and its calls.
- **Search** — the search box's text, shown here so it can be cleared.

An id not heard yet is still added (the page says so), so you can filter for a talkgroup or radio before it turns up. A picked item's chip is highlighted and an excluded one's is dashed and struck through; click a chip to take it out of the filter, the **All ...** chip of a row to clear that row, or **Clear all** for everything. The filters reset when you switch protocol tabs, **Clear**, or open a file. - **Click a column header** to sort by it; click again to reverse. Calls can be sorted by start, duration, frequency, slot, source, target and **Audio** (calls with audio first). On a phone a **Sort** menu replaces the headers. - Filters and sorting also decide what ↓ **Audio (.zip)** saves.

10. Call audio

The explorer can keep each call's decoded voice so you can play it back. **Off by default.** Turn it on with  **Audio** in the header, or start the server with `DSD_NET_AUDIO=1`. The server remembers the switch: after a restart, audio recording is on or off as you last left it (unless the server is started with `DSD_NET_AUDIO` set, which decides at every start).

-  plays a call (press again, or , to stop). The call playing stays in a **bar at the bottom of the window** — time, channel, who → whom, progress,  download and the transcript — however fast the list moves.  closes it. A call **still in progress** plays as it is being recorded: at the end of what has arrived, the player fetches the rest and carries on (with a brief pause), until the call is over; with speech-to-text on, it is transcribed once the call ends.
-  next to  downloads the call's WAV (8 kHz mono), named after the call:
`call_20261002T172931Z_434.4250MHz_s1_TG1_from_123.wav`.
-  **Audio (.zip)** saves the audio of the calls **listed, in the order shown** (so filter, search or sort first), up to 25 MB, with a `calls.csv` of time, duration, network, MHz, slot, from (and alias), to, flags and any transcript. Handy for sending examples.

What gets recorded:

- One file per call. DMR's two timeslots are recorded separately; audio heard up to 1 s before the call was decoded is included; a call heard by two receivers is recorded once.
- **Never:** silence (no file without audible audio; recordings under 0.2 s are deleted), data calls (SMS, private data), and **encrypted calls** (unless the session has the key).
- Disk use is capped (1 GB by default, about 18 hours of speech); the oldest files go first, and calls with audio stay in the call list longest.
- Audio stays on the server that recorded it. A plain export notes which calls had audio; **Export ▼** → **Explorer data with audio (.zip)** also packs the audio, and opening that zip plays it (§12). An **Import** into the live view never has audio to play.

Rules on keeping intercepted communications differ from place to place; check what applies to you before switching audio on.

11. Speech-to-text

With **Transcribe on play** ticked, playing a call also turns its speech into text. The text shows in the bottom bar, then under the call in the list, and goes into the audio zip's `calls.csv`.

- It runs **in your browser** (OpenAI's Whisper via Transformers.js); the server only provides the files. Someone has to fetch them onto the server once with `tools/get_asr_assets.sh` (see the README). Without them the bar says so and offers to load them from the internet instead — only if you choose to.
- **Language:** pick the spoken language (default English). "Detect language" guesses, poorly on short calls.
- **Model:** shown when the server has more than one. `small` (the default) is far more accurate on radio voice than `base` or `tiny`, but slower.

- **Speed:** the first call of a visit also loads the model (about 250 MB for `small`; cached afterwards). Then roughly 5–15 s per call on a desktop. Pages opened over plain `http://<server-ip>` run on one CPU thread and take about twice as long as HTTPS or `localhost`.
- **Accuracy:** good on clear speech, unreliable on short or garbled calls. Whisper sometimes invents text on silence or noise ("you", "Thanks for watching") or gets stuck repeating a phrase; the explorer drops those and shows "(no clear speech recognized)". Treat transcripts as a hint.
- Transcripts are kept in **your browser** (the last ~1000), not on the server — another browser starts without them. Replaying a transcribed call is instant.

12. Saving, reopening and combining data

- **Export ▼ → Explorer data (.json)** saves the networks, talkgroups, radios, every association with its counts, and the recent calls. **Open...** it later (or drop it on the page) to browse it offline, with every view working; times are shown relative to the export. A blue bar says you are in a file view; **Back to live** returns.
- **Export ▼ → Explorer data with audio (.zip)** is the same export plus every call's audio (`audio/*.wav`), in one zip. **Open...** it (or drop it on the page) to browse it with the audio playable — ►, ↓ and speech-to-text work as live; opened together with other exports, its calls keep their audio in the merged view. The zip is built in the browser and stops adding audio at 1 GB (it says how many were left out). **Import...** takes the zip too, without its audio.
- **Export ▼ → Association graph (.graphml)** is for graph tools (Gephi, Cytoscape, yEd, networkx).
- **Export ▼ → Positions (.kml)** saves the position reports of the radios listed (this protocol, with the filters): a track and timestamped points per radio, for Google Earth or Google My Maps (*Import*). Each radio keeps its latest 100 distinct positions; they are in the explorer data too.
- **Open...** with **several files** shows them merged, read-only, with a report of what happened to each file and a **Save merged** link.
- **Import...** adds exports to the **live** view — e.g. other receivers' exports — shown together with the live data. A bar lists the imports, each removable (✕, or **Remove all**). The ✕ at the bar's right end only hides the bar: the imports stay included, and a small **N imports** beside the protocol tabs brings it back. This browser remembers it until the imports change (a new import shows the bar again). New traffic keeps arriving on top; **Export** then saves the combined view.

When files are combined, talkgroups and radios join by id within a protocol; networks join by their system id, or by code and channel. A call two receivers both heard counts once (**2 RX**). The same data is never counted twice: duplicate or overlapping exports are skipped or refused, with the reason shown. Name each receiver with `DSD_SERVER_NAME` so its networks are easy to tell apart. `net-merge` does the same from the command line. Exports carry their [network merges](#); combined files keep them all (a merge made on this server wins over an imported one).

13. Recording a session for troubleshooting

If something in the explorer looks wrong (phantom calls, calls cut short, networks split or merged wrongly), a **recording** lets it be reproduced exactly:

Record is a developer tool, so it is hidden from regular users. To show it in your browser, open the explorer once as `http://<server>/net?dev=1` — the browser remembers it (`?dev=0` hides it again). A server started with `DSD_NET_DEV=1` shows it to everyone.

1. Click **Record** (accept the offer to clear first — the replay is then exact).
2. Let the problem happen, then click **Stop recording** and **Download** (`net_<UTC>.jsonl.gz`).
3. Send the file. `net-replay` rebuilds precisely what the explorer showed, and can show the state at any moment or produce an export from it.

A recording holds the decoder's output (not audio or IQ), compressed — around half a megabyte per minute on a busy multi-channel server.

14. Tablets and phones

- Touch targets are finger-sized and the page scrolls as one.
- Below about 1050 px wide the details open in a **drawer** from the right (a **bottom sheet** on a phone) with a **Close** button.
- On a phone: the header's actions move into **≡ Menu**, calls are listed as **cards**, other tables become cards with a **Sort** menu, and the stat cards shrink to a strip.
- The graph has pinch-zoom and `- / +` buttons.
- Explanations that a mouse shows on hover (badges, identity levels, Calls / s) appear when tapped.

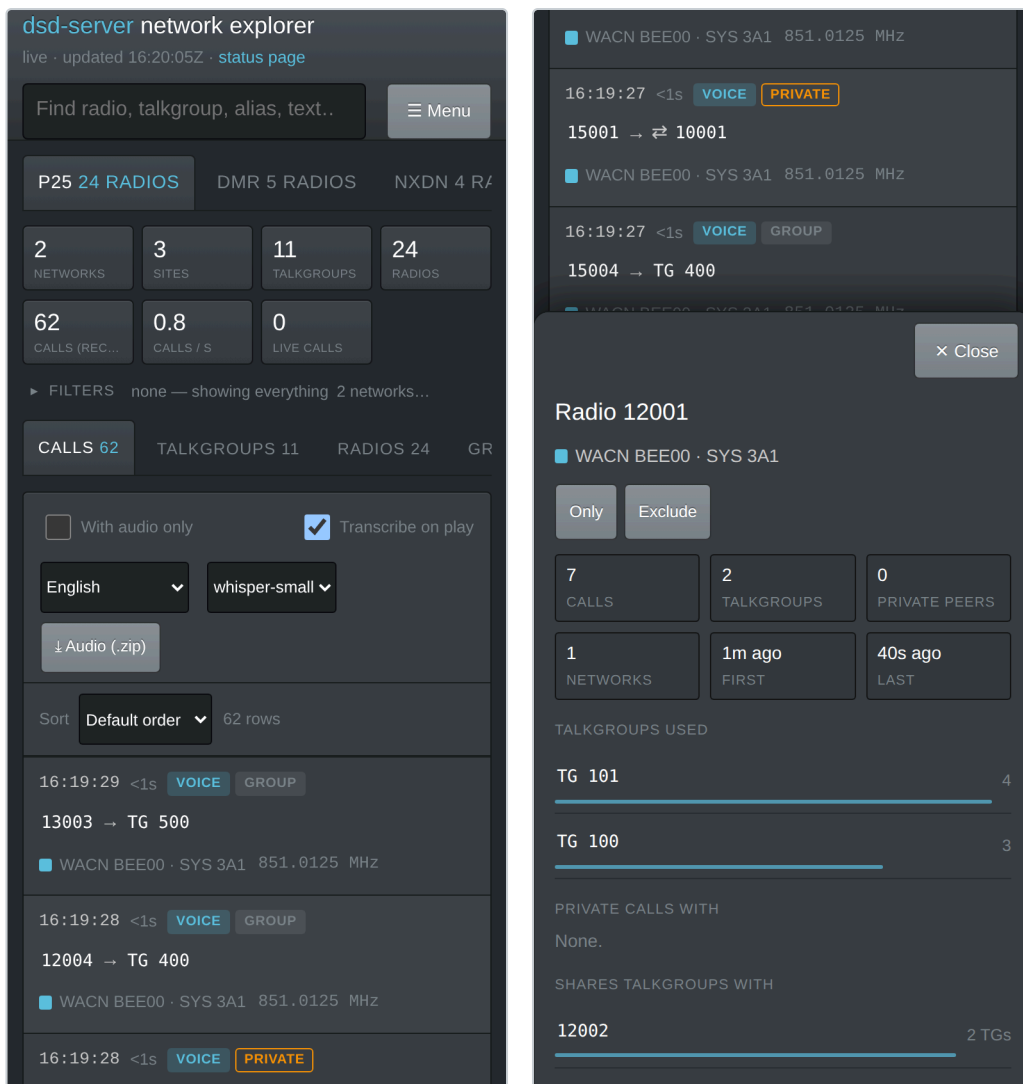


Figure 7: On a phone: calls as cards (left) and a radio's details in a bottom sheet (right).

15. Limits: what is kept, and for how long

- Everything is in the server's memory: it resets when the server restarts or someone presses **Clear**. Export (or record) what you want to keep.
- **Calls**: the newest 5000 per protocol (`DSD_NET_MAX_CALLS`); calls with audio are dropped last. Talkgroup / radio / network counts and associations are kept for everything heard, not just the listed calls.
- **Radios / talkgroups / networks**: up to 3000 / 1500 / 200 per protocol; the least recently heard go first.
- When a session ends, a network that never carried a call (and radios known only through it) is dropped if it never identified itself — `Unidentified`, or a code tied to that one stream (`Color Code 4 · stream 3`) — or if a fuller identity covers it (a P25 NAC, or a SYS without its WACN, once the system's network is known), unless another running session is still on it. A network that identified itself — a system id, or a code on a known channel — stays, calls or not: a quiet control channel doesn't disappear when its client reconnects. When a session retunes, the old channel's call-less networks go.

16. Troubleshooting

Symptom	Likely cause / what to do
A session runs but nothing appears	The explorer only shows streams that decode real traffic. Check the status page: is the protocol right, is anything being decoded?
Unidentified · ... network	No identity decoded yet (often at the start of a session, or on a quiet channel). It is not listed until a call is heard on it or an identity is decoded, then it appears (and updates as more is heard).
One system appears as several Color Code n · stream N networks	The client didn't send the frequency, so short codes can't be trusted to join streams. Send <code>center_freq</code> in <code>start</code> . Meanwhile Links → Seen on more than one network shows the shared radios and talkgroups.
Many very short calls with no source	Usually decoder lines the explorer misread as calls. Make a recording (section 13) and send it — that is how the Capacity Plus channel-status issue was found and fixed.
The list moves too fast to read	The header's Pause freezes the page; or narrow the list with the search box or the Filters .
► buttons don't appear	Audio recording is off — press  Audio . Encrypted and data calls never have audio.
"Speech-to-text needs its files on the server"	Run <code>tools/get_asr_assets.sh</code> on the server (or point <code>DSD_NET_ASR_DIR</code> at a copy), then reload the page.
Transcripts are slow	Open the page over HTTPS or as <code>localhost</code> , use a faster PC, or pick <code>base</code> in the model list (faster but much less accurate).
Transcript is wrong	Try the right language, or <code>small</code> / <code>small.en</code> if a smaller model is selected. Short or poor-signal calls are often beyond any model.

17. Settings reference

Server environment variables that affect the explorer (details in the README):

Variable	Default	Effect
<code>DSD_SERVER_NAME</code>	host name	This receiver's name in exports and merged views.
<code>DSD_NET_MAX_CALLS</code>	5000	Calls kept per protocol.
<code>DSD_NET_FREQ_STEP_HZ</code>	1250	Channel raster frequencies are snapped to.
<code>DSD_NET_MERGES_FILE</code>	<code>net_merges.json</code> in the log dir	Where the network merges are kept across restarts.
<code>DSD_NET_CHANNEL_MERGE</code>	(merge)	<code>receiver</code> keeps different receivers' channel networks apart when merging.
<code>DSD_NET_AUDIO</code>	(as last left)	<code>1</code> records call audio from startup, <code>0</code> never at startup; unset, the  Audio switch is remembered across restarts.

Variable	Default	Effect
DSD_NET_SETTINGS_FILE	net_settings.json in the log dir	Where remembered switches (Audio) are kept.
DSD_NET_AUDIO_DIR	net_audio/ in the log dir	Where call audio goes.
DSD_NET_AUDIO_MAX_MB / DSD_NET_AUDIO_MAX_AGE_H	1024 / none	Audio disk cap and maximum age.
DSD_NET_ASR_DIR	net_asr/ in the log dir	Speech-to-text files (tools/get_asr_assets.sh).
DSD_NET_MAP_TILES / DSD_NET_MAP_ATTRIB	(public tiles)	A map tile server of your own — a URL template with {z} {x} {y} (e.g. http://maps.local/tile/{z}/{x}/{y}.png) — and its credit line, for the Map view.
DSD_NET_ASR_MODEL / DSD_NET_ASR_LANG	most accurate present / english	Default speech model and language.
DSD_NET_LOG	off	1 records from startup.
DSD_NET_DEV	off	1 shows the developer tools (Record) to everyone; otherwise a browser opts in with /net?dev=1.
DSD_NET_LOG_DIR / DSD_NET_LOG_MAX_MB	IQ-capture dir, else working dir / 1024	Where recordings go, and their size cap.

Appendix A: How associations are built

This is a high-level description of what the explorer does with the decoder's output. It works the same way for every protocol; [Appendix B](#) covers the differences.

A.1 Inputs

Each decode session is a **stream**: one receiver channel decoding one protocol. The decoder (dsd-fme, DSDcc or the TETRA decoder) prints lines for sync bursts, call headers, voice frames, talker aliases, SMS, and system broadcasts. dsd-server parses each line into an event — its kind (sync, call, voice, data, message ...), slot, source id, target id, alias, text, and identity tokens such as a color code or system id. The explorer is fed every event of every stream, including lines clients never see.

Everything is kept **per protocol family**. Ids are only ever compared within a family.

A.2 Which network a stream is on

Identity and calls arrive on **different lines**: a call header carries only source and target, while the system's identity comes from sync bursts or system broadcasts. So each stream remembers the identity it has decoded so far, and each call is credited to its stream's current network. Identity comes in three strengths:

- **Strong** — a real system id that is unique in practice: P25 WACN + System ID, DMR network id (Tier III / Capacity Max), NXDN system code, TETRA MCC + MNC, EDACS system id. Every stream that hears the same strong id is the same network, whichever receiver or session it came from.
- **Weak** — a short code that unrelated systems routinely share: DMR color code (16 values), P25 NAC, NXDN RAN, dPMR channel code, D-STAR repeater callsign, YSF downlink id. A weak id alone is **not** treated as a network identity: each stream gets its own network (`Color Code 1 · stream 3`), and shared radios and talkgroups appear under **Links** as evidence instead of being merged silently.
- **Channel** — a weak id (or none) **plus the channel frequency** sent by the client. A short code on one channel is in practice one repeater or conventional channel, so every stream on that frequency with that code shares one network (`Color Code 1 · 434.4250 MHz`). A stream on a known channel with nothing decoded yet is `Unidentified · 434.4250 MHz`. Such a bare `Unidentified · ...` network (a receiver is tuned there but nothing has been decoded) is **not listed** -- not in the network list, the counts, filters or merge suggestions -- until a call is heard on it or an identity is decoded; its protocol tab still shows while a stream is receiving on it.

Refinements:

- **Upgrades**: a stream's identity can grow (`unidentified` → `NAC` → `SYS` → `WACN/SYS`). Its earlier, less specific network is then folded into the new one when only that stream fed it, or when the new identity strictly contains the old.
- **Retunes**: a *different* value for an identifying id (another color code, another system id) means the stream is now on another network; it starts its identity over.

- **Placeholders:** weak codes must be seen **twice in a row** before they are believed (dsd-fme prints placeholders such as `CoLor Code=00` at the start of a burst). Strong ids, from decoded control messages, are taken at once.
- **Neighbour sites:** adjacent / neighbour-site broadcasts add a site to the network but never change the stream's own identity or site.
- **Sites:** site ids (P25 RFSS/Site, DMR Site, NXDN site code / location, TETRA location area) are recorded as the network's sites, not as separate networks.

A.3 From decoder lines to calls

A call is assembled from many events:

1. **Which call an event belongs to.** Calls are tracked per stream, per **slot** and per **target**. An event with a target joins the open call on that slot and target; one without a target joins the slot's latest call. This keeps two DMR timeslots apart, and keeps several grants interleaved on a control channel apart.
2. **New call.** A call starts at a call header, voice or data event with a source or target. A sync burst alone never starts one. A new call on a TDMA slot ends the previous call on that slot. A **new talker** (different source) on the same target starts a new call.
3. **End of call.** A call ends after **4 seconds** without events, or when replaced as above.
4. **What it collects.** Source and target (filled in as they are decoded — the same call is recognised with or without a slot marker, or before its target is known), talker alias, SMS text, and flags: **voice** (voice frames / voice sync), **data** (data headers, SMS, UDT), **emergency**, **encrypted** (a non-clear algorithm id or an encryption flag) -- with the algorithm and **key id** the call names, when decoded -- and **private**. The key is counted once per call on its network, talkgroup and talker.
5. **Private calls.** A call is private (radio → radio) when the decoder marks it so: a unit-target flag, or "Private", "Unit to Unit", "Individual", "I-Call" or "U2U" on its lines. A call first counted as a group call and then found to be private has its association moved from the talkgroup to the radio pair.
6. **Ignored.** Lines that failed their error check (CRC/FEC) are dropped — their ids are unreliable. System broadcasts (identity, LCW, status) never start calls, only refine the call in progress on their slot. **Rosters** — e.g. Capacity Plus channel status (`Private or Data Call(s) - LSN 01: TGT 17434; ...`), which lists traffic on the site's *other* channels — never start, end or extend calls.

A.4 Counting associations

When a call has both a source and a target it is **counted once**:

- **Group call:** radio → talkgroup. The radio's talkgroup count and the talkgroup's radio count go up; both are marked as heard on the call's network.
- **Private call:** radio ↔ radio. Both radios get the other as a **private peer**.
- The network's call count, the radio's and talkgroup's call counts and last-heard times are updated.

The derived views come from these counts:

- **Radios sharing talkgroups** (radio details): radios counted on the same talkgroups.
- **Linked talkgroups** (talkgroup details): talkgroups whose radios also use this one.
- **Talk communities** (Links): connected groups of radios and talkgroups, through group and private calls.

- **Seen on more than one network** (Links): radios or talkgroups counted on two or more networks.
- **Hub radios** (Links): radios on three or more talkgroups.

A.5 One call heard twice (2 RX)

Two receivers often hear the same call — a P25 control channel's grant and the voice channel, two sites of one system, or two receivers on one repeater. When a call from a different stream has the **same network, source, target and group/private type** and is still running (within 4 s), it is the same call: the second is folded into the first (flags, alias and text combined, earliest start, latest end) and counted once, marked **2 RX**. Only one audio recording is kept.

A.6 Combining exports

Merging (Open with several files, Import, `net-merge`) applies the same rules across files: talkgroups and radios join by id; networks join by strong id, or by code + channel (unless `DSD_NET_CHANNEL_MERGE=receiver`). A weak id with no channel stays per receiver (`... · stream 3 · rx-north`). Calls are folded as in A.5 across files. Each export records its server run and the time span it covers, so the same data is never counted twice.

Network merges are rules, not changes to the data: per protocol, a network key and the key it is shown under (`cc:1@436627500` → `cc:1@436625000`). The page applies them when it shows the data; exports keep the rules about the networks they hold, combining files keeps them all, and GraphML — which has no place for rules — gets the networks already merged. When files are combined, two receivers' records of one call on two merged networks fold into one call (**2 RX**), as they would on one network.

A.7 Audio

Decoded voice arrives per stream and per slot (DMR's two slots are the left and right channels of dsd-fme's audio). It goes to the open call on that stream and slot. Audio heard just before a call is decoded (up to 1 s) is held and put at the start of the call. Data-only calls never get audio. While only one DMR slot carries voice, dsd-fme copies that voice to both channels. The copy goes to the slot that last showed voice (a voice frame or voice burst), not to the slot of the last line. On a Capacity Plus or trunked channel the other slot sends control bursts nonstop, and following those would cut holes in the call. A copy that lands on a data call on the other slot is given back to the voice call. Encrypted calls are not recorded (unless the session has the key).

Appendix B: Per-protocol notes

Protocol	Strong identity	Weak identity	Sites	Ids (radio / target)	Slots
DMR	Network id (Tier III, Capacity Max; with network type)	Color code (0–15)	Site id	Radio id → talkgroup or radio	2 (TDMA)
P25	WACN + System ID (or System ID alone)	NAC (12-bit)	RFSS + Site	Unit id → talkgroup or unit	Phase 2: 2
NXDN	System code	RAN	Site code / location id	Unit id → group or unit	—
TETRA	MCC + MNC	Colour code	Location area (LA)	SSI → called SSI (group or individual)	—
dPMR	—	Channel code	—	Radio id → talkgroup	—
D-STAR	—	Repeater callsign (RPT1)	—	Callsign → destination callsign	—
YSF	—	Downlink id	—	Callsign → destination	—
EDACS / ProVoice	System id	—	—	Source → group (or individual)	—
X2-TDMA	—	—	—	Radio id → talkgroup	as decoded

DMR

- Tier II conventional and repeaters usually give only a **color code**. Send the frequency so each repeater becomes a channel network; otherwise each stream is its own network.
- Tier III trunking and Capacity Max give a **network id** (strong). Capacity Plus reports its site and type (`network_type=cap+`, `site_id`) as identifiers of the color-code network.
- The two timeslots are separate calls; a sync line's slot is carried onto the call lines that follow it when they don't name a slot.
- Capacity Plus **channel-status rosters** (Bank One ... Private or Data Call(s) - LSN ...) list traffic on the site's other channels and are not calls (Appendix A.3).
- SMS: a data preamble, data header and the decoded text become **one** data call carrying the text. Talker aliases are attached to the call and the radio.
- Other data calls are labelled from their headers: a **Response Packet** is an ACK, a **Confirmed / Unconfirmed Delivery** header a data packet, and the Motorola (MNIS) service header that follows names the service (ARS, LRRP, TMS, or its number). Only ARS is decoded; the other services are binary and are no longer scanned for printable bytes (which used to show them as nonsense text like "`=&0b`" or `"/A/"`). A data preamble with nothing after it on the channel is *data announced only*.
- Position reports (DMR LRRP / GPS, P25 Motorola LCW GPS) are put on the call and kept as the sending radio's last position.

P25

- A control channel broadcasts **WACN / System ID / RFSS / Site**. A voice or conventional channel may only show the **NAC**. Because a NAC is 12 bits (more distinctive than a color code), a NAC-only stream is attached to the known WACN/SysID network with that NAC — when exactly one has it.
- A control-channel grant and the voice channel carrying it are the same call: they are folded into one (**2 RX**).
- Encryption is taken from the algorithm id (anything other than clear / 0x80).

NXDN

- **System code** (from control channel broadcasts) is strong; the **RAN** alone is weak. Site code and location id become sites.

TETRA

- **MCC + MNC** (from the cell's broadcasts) identify the network; **location area** is the site. The calling SSI is the radio; the called SSI (a group or an individual) is the target — reported by the tetmon decoder path; the tetra-kit path reports only the caller, so its calls show no target and aren't counted as associations. Encryption comes from the decoder's encryption flags.

dPMR

- Only a **channel code** — a weak id, so send the frequency to join streams.

D-STAR and YSF

- Ids are **callsigns**, not numbers: the source callsign is the radio, the destination (often `CQ CQ CQ` = everyone) is the "talkgroup".
- The repeater callsign (D-STAR RPT1) or downlink id (YSF) is the network's weak identity, believed at once. Radio text / messages are attached to the call. A simplex D-STAR call (`RPT 1: DIRECT`) has no repeater, so its network is just the channel.
- A D-STAR call picked up after its header shows a blank source (`SRC: ... INTERRUPTED`). It's still a call to its destination: it counts for that "talkgroup" and the channel, with no radio. dsd-fme builds that log frame payloads print the header on every voice frame (`AMBE ... DST:`), and those are read too.

EDACS / ProVoice

- The **system id** is strong. The caller is the radio and the group (or, for an individual call, the callee) the target; channel (LCN), AFS and LID numbers are kept as identifiers. This parsing follows dsd-fme's EDACS / ProVoice output formats but hasn't yet been checked against a live signal.

X2-TDMA

- No identity is decoded; networks are `Unidentified`, by channel when the frequency is known.

Appendix C: Glossary

Term	Meaning
Stream	One decode session: one receiver channel, one protocol.
Network	A radio system as the explorer identifies it (Appendix A.2).
Merge (networks)	Showing two or more networks as one — e.g. one repeater heard at two frequency offsets. Shared by everyone on the server and kept in exports; Unmerge undoes it (Merging networks).
Chip	A small rounded, clickable label on the page, like a tag. In the Filters , each network chip names one network (with its colour swatch and call count), and each talkgroup, radio or search in force has one. A highlighted chip is picked, a dashed struck-through one excluded; click it to drop it from the filter.
Strong / weak / channel identity	How a network was identified: a unique system id / only a short shared code / a short code on a known frequency.
Talkgroup (TG)	A group address many radios listen to.
Private call	Radio-to-radio (unit-to-unit, individual) call;  in the To column.
Slot	A TDMA timeslot: DMR has 2 per channel, TETRA 4. Each carries its own call.
2 RX	One call heard by two receivers / streams, listed once.
Talker alias	A name the radio sends with its id (DMR, P25).
Color code / NAC / RAN	Short codes that keep co-channel systems apart (DMR / P25 / NXDN). Not unique.
WACN / System ID	P25's wide-area and system identifiers.
LSN	Logical slot number: a channel and slot on a Capacity Plus site.
Export	The explorer's gathered data saved as a file (re-openable).
Recording	The explorer's raw input saved for exact replay (troubleshooting).