


Example video function board

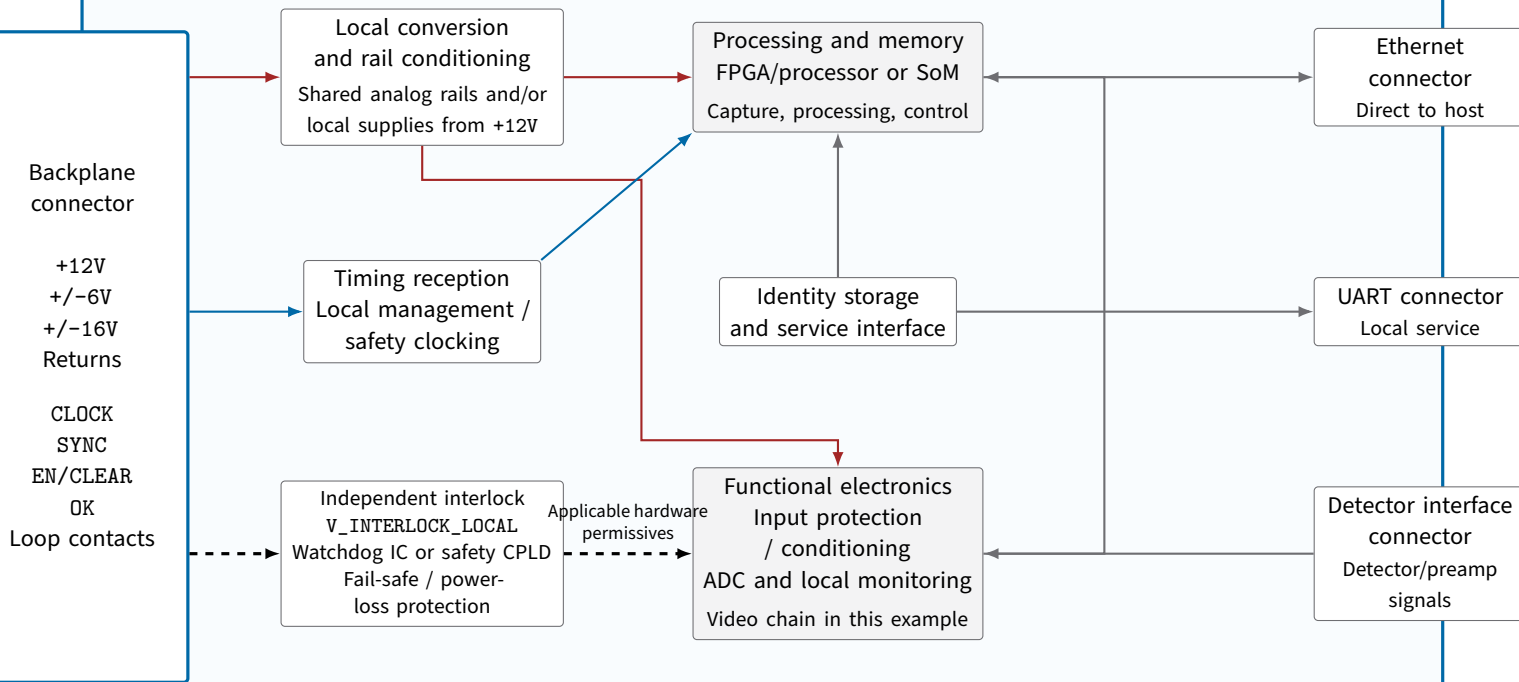

Loop contacts use copper or unconditional active forwarding. Interlock power derives from protected +12V.
Arrows show selected functional paths, not every supply, signal, or protection connection.

Conceptual arrangement only: no fixed dimensions, placement, connector count, component family, ADC rate, or Ethernet speed.
Clock and bias boards replace the video chain with their detector-specific electronics.