



**A: Separate watchdog device**

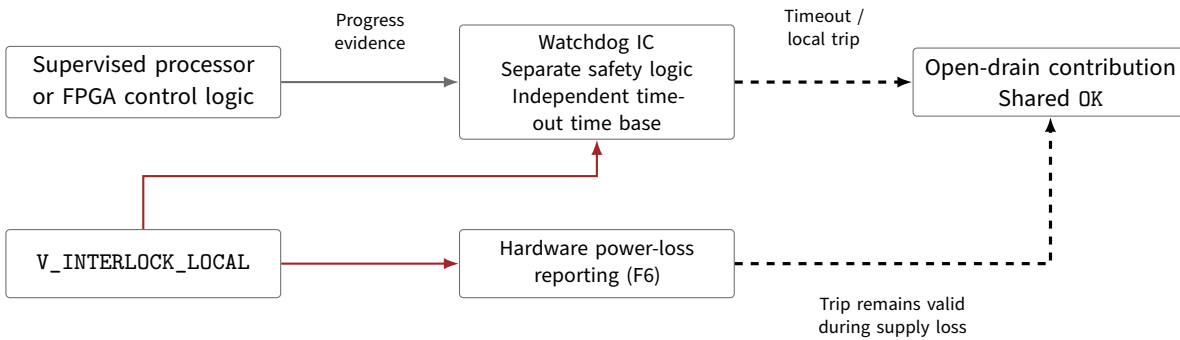

**B: Combined safety functions**

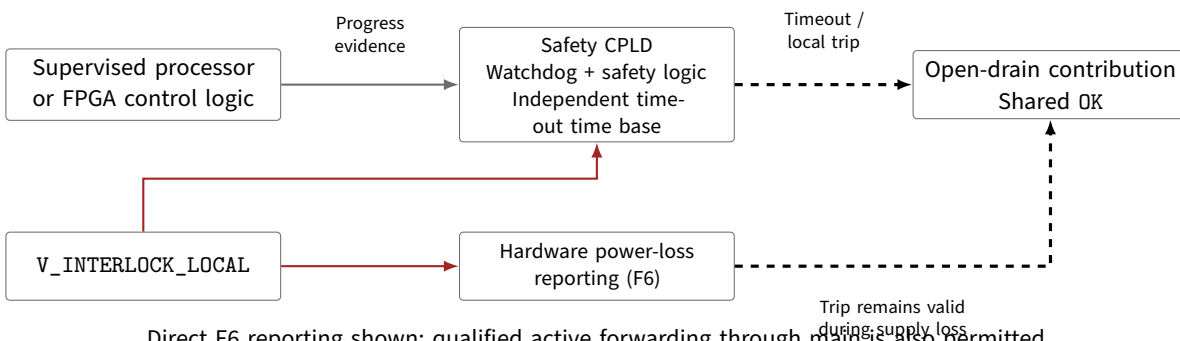

Direct F6 reporting shown; qualified active forwarding through main is also permitted.

Both examples require fail-safe power/reset behavior and relay de-energization without continued logic progression.

A CPLD watchdog does not independently cover failure of that same CPLD; board design must address it.