


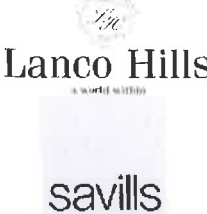

Project Name	LANCO HILLS RESIDENTIAL PROJECT- LH 10 ,HYDERABAD		
Client	LANCO HILLS TECHNOLOGY PARK PRIVATE LIMITED		
PMC	SAVILLS PROPERTY SERVICES (INDIA) PRIVATE LIMITED		
Main Contractor	BCIM ENGINEERING PVT LIMITED		
REVISION HISTORY			
REV.NO	DATE	DETAILS OF REVISION	
R0	21.05.2026	Initial Issue for review and approval	
R1	29.05.2026	Groove Thickness	
PREPARED BY BCIM		REVIEWED BY BCIM	REVIEWED & APPROVED BY PMC/Client
			

	BCIM ENGINEERING PVT LTD METHOD STATEMENT FOR WATERPROOFING WORKS	

1. WATERPROOFING FOR EDECK LEVEL RCC WALL @ EXPANSION JOINT AREA

1. Objective

The Objective of this Method statement is to carryout Waterproofing Treatment for EDECK level Expansion Joint locations by meeting the contract documents, Technical Data Sheet and Approved Drawings.

2. Scope of Work

Providing and applying waterproofing treatment of RCC walls at the expansion joint area at Edeck level using Sikalastic-562 IN Single component polyurethane coating with Sikalastic-11Primer W, including all crack and joint repairs.

3. Reference

- Approved Drawings
- Approved Materials

4. Materials Used

S.No	Material/Product	Purpose
1	Sikalastic-562 IN	Single Component Polyurethane waterproof coating
2	Sikalastic-11 Primer W	Primer coat (1coat)
3	Sikaflex-127	PU sealant for cracks and construction joints
4	Conbextra GP2	Cementitious grout for porous area grouting

5. Surface Preparation

- Inspect the entire expansion joint area and surrounding RCC wall surfaces. Identify all cracks, honeycombs, porous zones, loose concrete, and efflorescence. Mark locations requiring special attention before commencing any work.
- Clean the entire RCC wall surface and expansion joint faces thoroughly. Remove all loose particles, dust, laitance, oil, grease, old paint, and deteriorated sealant using a wire brush, grinding machine, or chipping tools as appropriate. Blow clean with compressed air to remove dust from all pores and cavities.


 Bala Subramanian
 29/05/26


 P. Sel
 29/05/26

- Treat all identified honeycombs and porous areas: rake out loose material to a sound substrate, clean with compressed air, wet the area, and fill flush with Conbextra GP2 cementitious grout. Allow to cure for a minimum of 24 hours before proceeding.
- For surface cracks on the RCC wall: cut a V-groove of 10 mm wide x 10 mm deep along each crack using a grinder/groove cutter. Clean the groove thoroughly with compressed air and fill with Conbextra GP2 mortar flush with the surface. Allow to cure fully before applying the coating system.
- For cold joints and construction joints with seepage: drill 12–14 mm dia. holes at 200–300 mm spacing along the joint, fix mechanical injection nipples using Conbextra GP2 rapid-setting grout, and carry out pressure grouting with cement slurry mixed with Conbextra GP2. After grouting, cut nipples flush and seal with Conbextra GP2 non-shrink mortar.
- Expansion joint preparation: Remove the existing expansion board/filler to a minimum depth of 80 mm. Clean both sides of the joint faces by wire brushing and compressed air blowing to remove all dust, loose material, and old sealant residue. Widen or dress the joint to achieve uniform parallel faces where required.
- Backer rod installation: Select a closed-cell polyethylene foam backer rod of diameter 25–30% larger than the joint width (e.g., for a 25 mm wide joint, use a 32 mm diameter backer rod; for a 35–50 mm wide joint, use a 50 mm diameter backer rod). Insert the backer rod to a depth such that the sealant depth is approximately half the joint width (minimum 10 mm, maximum 15 mm sealant depth). The backer rod must sit firmly and uniformly without gaps. Do not puncture or twist the backer rod during installation.
- Apply masking tape on both sides of the joint edges to protect the adjacent surface and ensure clean, straight sealant lines. Ensure the tape is pressed firmly to prevent sealant bleed underneath.
- At all wall-floor junctions and internal corners, cut a 12 mm x 12 mm chase along the junction line. Clean the chase and fill with Conbextra GP2. Once cured, form coves/fillets of 50 mm x 50 mm using CM 1:4 mortar admixed with Conbextra GP2 to ensure waterproof continuity at all re-entrant angles.

6. Application Procedure

- Sikaflex-127 Sealant Application (Expansion Joint): Using a caulking gun or suitable applicator, fill the joint in a single continuous pass from bottom upward, working the sealant firmly against the backer rod and both joint faces to avoid air entrapment. Overfill slightly and then tool the sealant surface using a wet spatula/tooling instrument to form a smooth, concave profile, ensuring positive contact with both substrates across the full width of the joint. Remove masking tape immediately after tooling, before the sealant begins to skin over. Minimum sealant depth: 10 mm; minimum sealant width: equal to joint width. Allow the sealant to cure undisturbed for a minimum of 24 hours before applying the topcoat system over the surrounding wall area.
- Ensure the substrate is clean, dry, sound, and free from all dust and loose particles. Apply one coat of Sikalastic-11Primer W uniformly over the entire RCC wall surface (excluding the fresh sealant joint) using a brush or roller, ensuring full coverage including all corners, edges, and wall-floor junctions. Coverage rate: as per manufacturer's specification (typically 6–8 sqm/litre). Allow the primer to dry fully and become tack-free before applying the Sikalastic-562 IN coating – minimum drying time 30–60

*Bah
Bate Subgman
29/05/26*

29/05/26

minutes depending on ambient conditions. Do not allow the primed surface to be contaminated with dust or moisture before coating.

- Apply the first coat of Sikalastic-562 IN Plus over the primed RCC wall surface using a brush, roller, or airless spray at the wet film thickness specified by the manufacturer. Ensure uniform coverage of 1.5Kg/M2 in two Coats across the full wall area including all corners, coves, and junctions. Extend the coating to overlap 50 mm onto the cured Sikaflex-127 sealant on both sides of the expansion joint. Allow the first coat to cure as per manufacturer's instructions (minimum inter-coat time: typically 4-8 hours or until tack-free) before applying the second coat.
- Apply the second coat of Sikalastic-562 IN in the cross direction to the first coat to achieve uniform film build and eliminate any pinholes or holidays. Apply at the same wet film thickness as the first coat. Ensure continuous, pinhole-free coverage. Total minimum dry film thickness shall be as per manufacturer's specification. Allow full cure for a minimum of 7 days before exposure to water or further finishing works.
- Protective Cement Plaster Coat: After full curing of the Sikalastic-562 IN two-coat system, apply a protective cement plaster coat (CM 1:4 using M-Sand) of 12-15 mm thickness as the final finishing layer over the coated wall surface. Cure the plaster coat for a minimum of 7 days. The plaster coat shall not cover the expansion joint sealant face; stop the plaster at the joint edge to allow the Sikaflex-127 sealant to remain exposed and functional.

Post ponding test:

After full curing of all applied systems, conduct a water tightness test. Flood the expansion joint area with water to a minimum depth of 25 mm and retain for 72 hours. Inspect for any seepage, dampness, or wet patches on the reverse face. Proceed to the next stage only after satisfactory test results are confirmed and approved by the Engineer-in-Charge. Any deficiencies found shall be repaired and re-tested before acceptance.

Instruments:

- Grinding Machine with accessories
- Hammer and Chisel
- Roller and Paint Brush
- Drilling machine and bits
- Injection Grouting Machine
- Slow Speed Mixer
- Spatula
- Coir Cleaning Brush.

ATTACHMENT

1. Check list for Waterproofing

Bah
Sata Subhramany
29/05/26

hal
29/05/26