

Introduction to the power flow analysis

ELEC0447 - Analysis of electric power and energy systems

Bertrand Cornélusse

October 8, 2026

Overview

1. Introduction
2. The power flow equations
3. Power flow solution method
4. Slack Bus Selection and Distributed Slack
(Advanced section)

Introduction

The background of the slide features a minimalist design with teal-colored geometric shapes. Two large teal triangles point towards each other from the left and right sides, meeting at a point at the bottom center. A smaller, darker teal triangle is positioned at the very bottom center, partially overlapping the base of the other two.

What is a Power Flow Analysis?

Power flow (or load flow) analysis determines the steady-state *electrical operating state* of an AC power system under specified generation, consumption, and voltage control conditions.

The State Variables to Determine:

- ▶ Voltage magnitude V_k at every bus k
- ▶ Voltage phase angle θ_k at every bus k

$$\bar{\mathbf{V}} = \begin{bmatrix} V_1 e^{j\theta_1} & \dots & V_n e^{j\theta_n} \end{bmatrix}^T$$

Derived Quantities (from $\bar{\mathbf{V}}$):

- ▶ Branch currents $\bar{I}_{km}$ and loadings
- ▶ Active/reactive flows P_{km}, Q_{km}
- ▶ Transmission losses $P_{\text{loss}}, Q_{\text{loss}}$
- ▶ Generator reactive outputs Q_{Gk}

The Core Principle: Once the complex bus voltages $\bar{\mathbf{V}}$ are known, every other physical quantity in the network is directly computed via Ohm's and Kirchhoff's laws.

Why Isn't This Standard Linear Circuit Analysis? I

Linear Circuit Theory:

- ▶ Independent current or voltage sources
- ▶ Nodal analysis with linear impedances:

$$\bar{\mathbf{I}} = \mathbf{Y}_{\text{bus}} \bar{\mathbf{V}} \implies \bar{\mathbf{V}} = \mathbf{Y}_{\text{bus}}^{-1} \bar{\mathbf{I}}$$

- ▶ Solved in a single linear step

Power System Reality:

- ▶ Loads consume constant **power** (P_L, Q_L) , largely independent of voltage
- ▶ Generators regulate active power P_G and voltage magnitude V_G
- ▶ Injections: $S_k = \bar{V}_k \bar{I}_k^* = \bar{V}_k (\mathbf{Y}_{\text{bus}} \bar{\mathbf{V}})_k^*$

Why Isn't This Standard Linear Circuit Analysis? II

The Non-Linearity Challenge

The relationship between power injections and bus voltages involves quadratic terms (V_k^2) and trigonometric functions of angle differences. This forms a system of **non-linear algebraic equations** that must be solved using iterative numerical algorithms!

Why Do We Use Power Flow? (Operations & Reliability)

Power flow is the foundational simulation tool for grid operators and utilities:

- ▶ **Operational Security & Real-Time Monitoring:**

- ▶ Verify that all transmission line and transformer currents stay within thermal limits ($I_{km} \leq I_{\max}$) to prevent line sag or cable damage
- ▶ Ensure bus voltages remain strictly within regulatory safety bounds ($0.95 \leq V_k \leq 1.05$ pu) to prevent equipment tripping

- ▶ **Contingency Analysis ($N - 1$ Security Criterion):**

- ▶ Power systems are legally required to withstand the sudden tripping of any single asset (line, transformer, generator) without causing cascading overloads
- ▶ TSOs (e.g. Elia, RTE, TenneT) run thousands of automated power flows every hour to screen for $N - 1$ vulnerabilities

Why Do We Use Power Flow? (Planning, Markets & Stability)

► Grid Expansion & Long-Term Planning:

- Forecast where bottlenecks will appear 5–20 years ahead
- Size and place new transmission lines, subsea cables, transformers, or reactive compensation devices (STATCOM, synchronous condensers)

► Renewables Integration & Electricity Markets:

- Calculate grid hosting capacity for massive offshore wind and utility-scale solar
- Verify the physical feasibility of market clearing schedules and compute Locational Marginal Prices (LMP) and transmission congestion charges

► Foundation for Dynamic Stability Studies:

- Power flow provides the initial equilibrium point ($\mathbf{V}_0, \boldsymbol{\theta}_0$) required to initialize transient stability, small-signal stability, and voltage stability simulations

Power Flow Problem Statement & Bus Types I

At every bus k , four physical quantities describe the state:

$$(V_k, \theta_k, P_k, Q_k)$$

In power flow analysis, **two variables are specified** (boundary conditions) and **two variables are unknown**:

- ▶ **PQ Buses (Load buses):**

- ▶ Active power P_k^{spec} and reactive power Q_k^{spec} are specified (consumed by loads, or injected by non-voltage-regulating renewable generators).
- ▶ **Unknowns to find:** Voltage magnitude V_k and phase angle θ_k .

Power Flow Problem Statement & Bus Types II

► PV Buses (Voltage-regulated generator buses):

- Active power P_k^{spec} and voltage magnitude V_k^{spec} are specified (controlled via governor and Automatic Voltage Regulator (AVR)).
- **Unknowns to find:** Phase angle θ_k and reactive power Q_k .
- *Reactive limits:* If Q_k hits a capability limit ($Q_{\min}$ or $Q_{\max}$), the generator cannot maintain voltage; the bus switches to a **PQ bus** with $Q_k = Q_{\text{limit}}$.

► One Slack Bus (Swing or Reference bus):

- Sets the angular reference for the entire system: $\theta_{\text{slack}} = 0^\circ$.
- Voltage magnitude is specified (typically $V_{\text{slack}} = 1.0$ pu).
- **Unknowns to find:** Active power P_{slack} and reactive power Q_{slack} .

Power Flow Problem Statement & Bus Types III


Why is a Slack Bus strictly necessary?

Transmission losses ($P_{\text{loss}} = \sum R_{km} I_{km}^2$) depend on the branch currents, which are unknown before voltages are found! Therefore, total generation cannot be fixed in advance:

$$\sum P_G = \sum P_L + P_{\text{loss}}(\bar{\mathbf{V}})$$

The slack bus generator automatically acts as the buffer that balances the remaining active and reactive power of the grid.

A First Tiny Example (3-Bus System) I

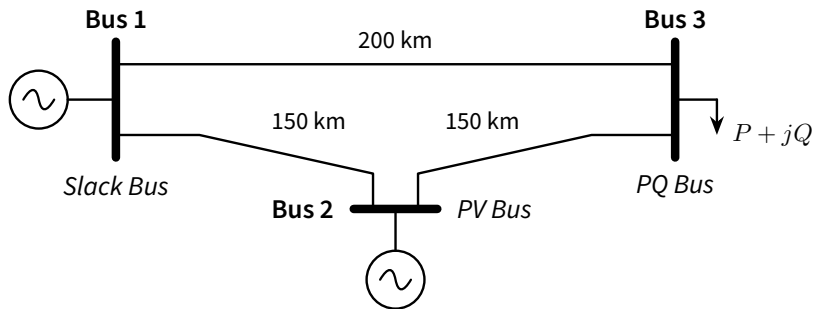

A First Tiny Example (3-Bus System) II

Buses:

- ▶ **Bus 1 (Slack):** $V_1 = 1.00$ pu, $\theta_1 = 0^\circ$
- ▶ **Bus 2 (PV):** $V_2 = 1.05$ pu, generating $P_2 = 2.0$ pu (200 MW)
- ▶ **Bus 3 (PQ):** Load consuming $P_3 = 5.0$ pu (500 MW) and $Q_3 = 1.0$ pu (100 Mvar)

Lines (Base: 345 kV, 100 MVA):

- ▶ $X = 0.376 \Omega/\text{km}$, $R = 0.037 \Omega/\text{km}$
- ▶ Lengths: $L_{12} = 150$ km, $L_{23} = 150$ km, $L_{31} = 200$ km
- ▶ Base impedance:
 $Z_B = 345^2/100 = 1190.25 \Omega$
- ▶ Current rating: $I_{\max} = 0.20$ kA

Modeling the System in PandaPower

We will see how to formulate mathematically the problem and solve it from scratch.

Usually, engineers use specialized power system software. One such open-source, Python-based tool is **PandaPower** [1].

► [Open PandaPower 3-Bus Model in Google Colab](#)

► [Open Local PandaPower Python Notebook](#)

Creation of the Power Flow Model with PandaPower I

```
1  # Import PandaPower package and name it pp
2  import pandapower as pp
3
4  # Create an empty network object
5  net = pp.create_empty_network()
6
7  # Per unit bases (3-phase values)
8  Pbase = 100  # MVA
9  Vbase = 345 # kV
10
11 # Create buses (geodata are coordinates for graphical representation)
12 b1 = pp.create_bus(net, vn_kv=Vbase, name="Bus 1", geodata=(0,1))
13 b2 = pp.create_bus(net, vn_kv=Vbase, name="Bus 2", geodata=(2.5,0))
14 b3 = pp.create_bus(net, vn_kv=Vbase, name="Bus 3", geodata=(5,1))
```

Creation of the Power Flow Model with PandaPower II

```
15
16 # Create bus elements
17 pp.create_ext_grid(net, bus=b1, vm_pu=1.00, name="Grid Connection")
18 pp.create_load(net, bus=b3, p_mw=5*Pbase, q_mvar=1*Pbase, name="Load")
19 pp.create_gen(net, bus=b2, p_mw=2*Pbase, vm_pu=1.05, name="PV")
20
21 # Create branch elements.
22 # Here I neglect shunt capacitances.
23 Zbase = Vbase**2 / Pbase
24 X_km = 0.376
25 R_km = 0.037
26 l12_km = 150
27 l23_km = 150
28 l31_km = 200
```

Creation of the Power Flow Model with PandaPower III

```
29
30 pp.create_line_from_parameters(net, name="line1", from_bus = b1, to_bus = b2,
31     length_km=l12_km, r_ohm_per_km = R_km, x_ohm_per_km = X_km,
32     c_nf_per_km = 0, max_i_ka = 0.2)
33 pp.create_line_from_parameters(net, name="line2", from_bus = b2, to_bus = b3,
34     length_km=l23_km, r_ohm_per_km = R_km, x_ohm_per_km = X_km,
35     c_nf_per_km = 0, max_i_ka = 0.2)
36 pp.create_line_from_parameters(net, name="line3", from_bus = b3, to_bus = b1,
37     length_km=l31_km, r_ohm_per_km = R_km, x_ohm_per_km = X_km,
38     c_nf_per_km = 0, max_i_ka = 0.2)
39
40 # Solve the model
41 pp.runpp(net)
```

Results of the 3-Bus Example: Bus State

Bus	Type	V [pu]	θ [°]	P [MW]	Q [Mvar]
Bus 1	Slack	1.000	0.00	-308.38	+81.61
Bus 2	PV	1.050	-2.07	-200.00	-266.74
Bus 3	PQ	0.978	-8.79	+500.00	+100.00

Legend & Conventions:

- ▶ Standard text: Specified input data
- ▶ **Bold blue text: Computed by power flow**
- ▶ **Sign convention (PandaPower net flow):**
 - ▶ Negative (−): Net injection (generation)
 - ▶ Positive (+): Net withdrawal (load)

Physical Observations:

- ▶ Bus 1 generator supplies 308.38 MW to balance total load plus line losses
- ▶ Bus 2 generator injects 266.74 Mvar to hold voltage at 1.05 pu
- ▶ Voltage at load Bus 3 drops to 0.978 pu ($\Delta\theta = -8.79^\circ$)

Results of the 3-Bus Example: Line Flows & Loading

Line	From → To	P_{from} [MW]	P_{to} [MW]	P_{loss} [MW]	Q_{loss} [Mvar]	I [kA]	I_{max} [kA]	Loading [%]
Line 1	Bus 1 → Bus 2	+69.0	-68.2	0.80	8.08	0.22	0.20	109.8 %
Line 2	Bus 2 → Bus 3	+268.2	-264.2	3.97	40.30	0.49	0.20	245.2 %
Line 3	Bus 3 → Bus 1	-235.8	+239.4	3.62	36.75	0.40	0.20	201.2 %
Total Losses				8.39	85.13			

Active Power Balance:

- ▶ Total Gen: $P_G = 308.38 + 200.00 = 508.38$ MW
- ▶ Total Load: $P_L = 500.00$ MW
- ▶ Losses: $P_G - P_L = 8.38$ MW (1.65% of load)
- ▶ Matches sum of line losses: 8.39 MW

Engineering Diagnosis:

- ▶ Bus voltages are healthy (0.978 – 1.05 pu)
- ▶ **Lines 2 and 3 are severely overloaded** (245% and 201%)!
- ▶ Protection relays would trip these lines, risking cascading failure without re-dispatch!

Solving Overloads: Realistic Sequence of Actions I

The 3-bus results showed **severe overloads ($> 200\%$)** and **massive reactive circulation (267 Mvar)**. How do engineers address this in practice?

Phase 1: Operational Voltage & Reactive Power Actions

1. Compensate Reactive Power on the Load Side (Bus 3):

- ▶ Load at Bus 3 consumes 100 Mvar.
- ▶ Installing a shunt capacitor bank directly at Bus 3 provides this reactive power locally.

Solving Overloads: Realistic Sequence of Actions II

- ▶ Eliminates reactive transit over Lines 2 and 3, reducing line currents:

$$I = \frac{\sqrt{P^2 + Q^2}}{\sqrt{3}V}$$

and significantly lowering I^2X line voltage drops and losses.

2. Regulate Voltage at Bus 2 at a Lower Setpoint:

- ▶ Bus 2 was set at $V_2 = 1.05$ pu while Bus 1 is at 1.00 pu.
- ▶ This large voltage gradient drove an unneeded 266.7 Mvar into the grid!
- ▶ Lowering V_2 (e.g., to 1.01 pu) drastically cuts reactive power circulation.

3. Relieve Generator 2 $\implies$ Increase Active Power Generation:

Solving Overloads: Realistic Sequence of Actions III

- ▶ Reducing Q_{G2} frees apparent power capacity: $S = \sqrt{P^2 + Q^2}$.
- ▶ Inside the generator's **capability curve** (rotor and stator thermal limits, covered in a future lecture), Gen 2 can now produce more active power P_2 .
- ▶ Producing more power at Bus 2 brings generation closer to load Bus 3 and relieves the distant slack generator at Bus 1!

Solving Overloads: Realistic Sequence of Actions IV

Phase 2: Thermal Ratings, Emergency Actions & Planning

4. Re-Evaluate Line Thermal Ratings: Can We Temporarily Exceed Them?:

- ▶ Even with V/Q control, lines remain heavily loaded (> 200 MW).
- ▶ *Question:* Is $I_{\max} = 0.20$ kA an overly conservative Static Line Rating (SLR) based on worst-case weather (high ambient T° , zero wind)?
- ▶ Overhead conductors have thermal inertia (time constants of 10–20 minutes).
- ▶ Operators can leverage **short-term emergency ratings** or **Dynamic Line Rating (DLR)** to operate above nominal while taking remedial actions.

5. If Overloads Persist: Emergency Load Shedding:


Solving Overloads: Realistic Sequence of Actions V

- ▶ If lines cannot safely sustain the flow without risk of excessive conductor sag (ground clearance violation) or annealing:
- ▶ The operator must immediately perform **load shedding** / curtailment at Bus 3 as a last resort to prevent protection tripping and cascading blackouts.

6. Long-Term Planning Solutions:

- ▶ **Transmission expansion:** Reconductor lines with High-Temperature Low-Sag (HTLS) conductors, or build parallel circuits (Line 2 bis, Line 3 bis).
- ▶ **Generation expansion:** Build a new generator or utility-scale battery storage directly at or near load Bus 3.

The power flow equations

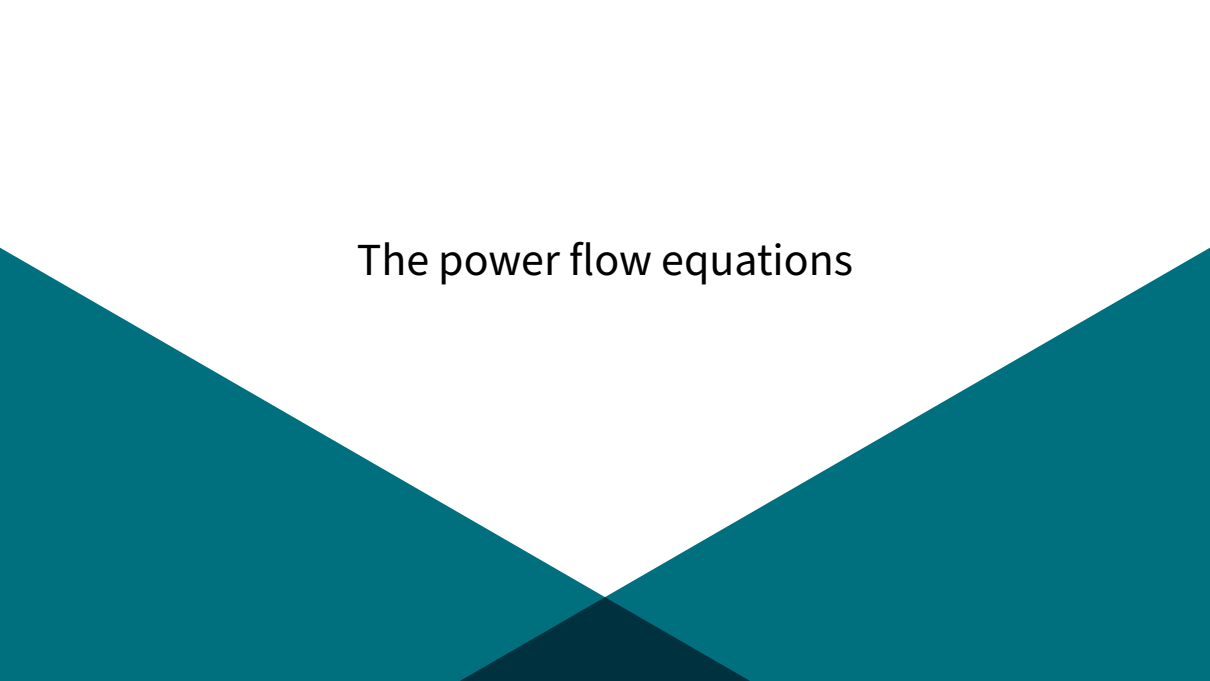The background of the slide features a white upper half and a teal lower half. The teal section is composed of two large triangles meeting at a point in the center, with a smaller, darker teal triangle at the bottom center.

The Nodal Admittance Matrix $\mathbf{Y}_{\text{bus}}$

Consider a power system with bus set $\mathcal{N} = \{1, \dots, n\}$ interconnected by transmission lines modeled by equivalent π circuits:

- ▶ For line connecting buses k and m : series impedance $\bar{z}_{km} = r_{km} + jx_{km}$, series admittance $\bar{y}_{km} = 1/\bar{z}_{km}$ (and $\bar{y}_{km} = 0$ if no line exists)
- ▶ Line total charging shunt susceptance b_{km}^{sh} , split equally as $j\omega C_{km}/2$ at each terminal
- ▶ Shunt element connected at node k (e.g. reactor/capacitor): $Y_{k,sh} = G_{k,sh} + jB_{k,sh}$
- ▶ Total shunt admittance between bus k and ground:

$$Y_{kG} = Y_{k,sh} + \sum_{m \in \mathcal{N}_k} j \frac{\omega C_{km}}{2}$$

The Nodal Admittance Matrix $\mathbf{Y}_{bus}$ II

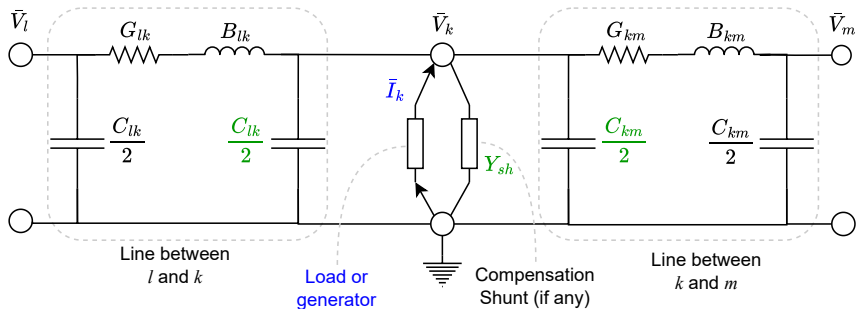


Figure 1: Current injection at bus k as a function of branch flows to neighbors (l, m) and shunt elements to ground.

The Nodal Admittance Matrix $\mathbf{Y}_{\text{bus}}$ III

By Kirchhoff's Current Law (KCL), the net current injection $\bar{I}_k$ into bus k is:

$$\bar{I}_k = Y_{kG} \bar{V}_k + \sum_{m \in \mathcal{N} \setminus \{k\}} \bar{y}_{km} (\bar{V}_k - \bar{V}_m) \quad (1)$$

Factoring out the bus voltages:

$$\bar{I}_k = \underbrace{\left(Y_{kG} + \sum_{m \in \mathcal{N} \setminus \{k\}} \bar{y}_{km} \right)}_{Y_{kk}} \bar{V}_k + \sum_{m \in \mathcal{N} \setminus \{k\}} \underbrace{(-\bar{y}_{km})}_{Y_{km}} \bar{V}_m \quad (2)$$

The Nodal Admittance Matrix $\mathbf{Y}_{\text{bus}}$ IV

In matrix form for all n buses:

$$\bar{\mathbf{I}} = \mathbf{Y}_{\text{bus}} \bar{\mathbf{V}} \quad (3)$$

Rules for building $\mathbf{Y}_{\text{bus}}$ by inspection:

- ▶ **Diagonal element Y_{kk} :** sum of all admittances connected to bus k (series lines + shunts)
- ▶ **Off-diagonal element Y_{km} ($m \neq k$):** negative of the series admittance connecting bus k and bus m (hence $Y_{km} = Y_{mk}$ for bilateral lines)

Power Flow Equations in Polar Coordinates I

In power systems, boundary conditions are given in powers rather than currents. The complex power injection vector is:

$$\mathbf{S} = \mathbf{P} + j\mathbf{Q} = \text{diag}(\bar{\mathbf{V}})\bar{\mathbf{I}}^* = \bar{\mathbf{V}} \circ (\mathbf{Y}_{\text{bus}}\bar{\mathbf{V}})^* \quad (4)$$

where $\circ$ denotes the Hadamard (element-wise) product.

For a single bus k :

$$S_k = P_k + jQ_k = \bar{V}_k \bar{I}_k^* = \bar{V}_k \sum_{m=1}^n Y_{km}^* \bar{V}_m^* \quad (5)$$

Power Flow Equations in Polar Coordinates II

Expressing voltages in polar coordinates and admittance in rectangular coordinates:

$$\bar{V}_k = V_k e^{j\theta_k}, \quad \bar{V}_m = V_m e^{j\theta_m}, \quad Y_{km} = G_{km} + jB_{km}$$

Then:

$$S_k = \sum_{m=1}^n V_k V_m e^{j(\theta_k - \theta_m)} (G_{km} - jB_{km})$$

Power Flow Equations in Polar Coordinates III

Using Euler's identity $e^{j\theta_{km}} = \cos \theta_{km} + j \sin \theta_{km}$ with phase difference $\theta_{km} = \theta_k - \theta_m$:

$$P_k = V_k \underbrace{\sum_{m=1}^n V_m (G_{km} \cos \theta_{km} + B_{km} \sin \theta_{km})}_{p_k(\mathbf{V}, \boldsymbol{\theta})} \quad (6)$$

$$Q_k = V_k \underbrace{\sum_{m=1}^n V_m (G_{km} \sin \theta_{km} - B_{km} \cos \theta_{km})}_{q_k(\mathbf{V}, \boldsymbol{\theta})} \quad (7)$$

Power Flow Equations in Polar Coordinates IV

Separating the self-term ($m = k$, where $\theta_{kk} = 0$, $\cos 0 = 1$, $\sin 0 = 0$):

$$P_k = G_{kk} V_k^2 + V_k \sum_{m \neq k} V_m (G_{km} \cos \theta_{km} + B_{km} \sin \theta_{km}) \quad (8)$$

$$Q_k = -B_{kk} V_k^2 + V_k \sum_{m \neq k} V_m (G_{km} \sin \theta_{km} - B_{km} \cos \theta_{km}) \quad (9)$$

- ▶ $G_{kk} V_k^2$ represents local active power dissipation
- ▶ $-B_{kk} V_k^2$ represents local reactive power injected by shunt susceptance
- ▶ The summation over $m \neq k$ represents the active/reactive power exchanged with neighboring buses

Number of Equations and Unknowns I

In an n -bus power system with n_{PQ} PQ buses, n_{PV} PV buses, and 1 slack bus ($n = n_{PQ} + n_{PV} + 1$):

Bus Type	Count	Specified Knowns	Iterative Unknowns	Equations Used
PQ Bus	n_{PQ}	$P_k^{\text{spec}}, Q_k^{\text{spec}}$	V_k, θ_k	$P_k - p_k = 0, Q_k - q_k = 0$
PV Bus	n_{PV}	$P_k^{\text{spec}}, V_k^{\text{spec}}$	θ_k	$P_k - p_k = 0$
Slack Bus	1	$V_s^{\text{spec}}, \theta_s^{\text{spec}} = 0$	none (in NR)	none (in NR)
Total	n	$2n$ knowns	$2n_{PQ} + n_{PV}$	$2n_{PQ} + n_{PV}$ equations

Number of Equations and Unknowns II

Post-processing quantities (computed after convergence):

- ▶ Slack bus power injections: $P_{\text{slack}} = p_{\text{slack}}(\mathbf{V}, \boldsymbol{\theta})$ and $Q_{\text{slack}} = q_{\text{slack}}(\mathbf{V}, \boldsymbol{\theta})$
- ▶ Generator reactive power at PV buses: $Q_k = q_k(\mathbf{V}, \boldsymbol{\theta})$ for $k \in \mathcal{N}_{PV}$
- ▶ Branch currents, active/reactive line flows, and system losses

Power flow solution method

The background of the slide features a white upper half and a teal lower half. The teal section is composed of two large triangles meeting at a point at the bottom center, with a smaller, darker teal triangle positioned directly beneath that point.

Power Flow Solution via Newton-Raphson I

Let the specified (known) active and reactive powers be P_k^0 and Q_k^0 .

We define the **power mismatch functions**:

$$\Delta P_k(\mathbf{V}, \boldsymbol{\theta}) = P_k^0 - p_k(\mathbf{V}, \boldsymbol{\theta}), \quad \forall k \in \mathcal{N}_{PQ} \cup \mathcal{N}_{PV}$$

$$\Delta Q_k(\mathbf{V}, \boldsymbol{\theta}) = Q_k^0 - q_k(\mathbf{V}, \boldsymbol{\theta}), \quad \forall k \in \mathcal{N}_{PQ}$$

We want to find a solution such that

$$\Delta P_k(\mathbf{V}, \boldsymbol{\theta}) = \Delta Q_k(\mathbf{V}, \boldsymbol{\theta}) = 0,$$

i.e. we want to find values for unknown variables to explain the known variables.

Power Flow Solution via Newton-Raphson II

This forms a set of $2n_{PQ} + n_{PV}$ non-linear algebraic equations in $2n_{PQ} + n_{PV}$ unknown state variables:

$$\mathbf{x} = \begin{bmatrix} \boldsymbol{\theta}_{PQ,PV} \\ \mathbf{V}_{PQ} \end{bmatrix}, \quad \mathbf{F}(\mathbf{x}) = \begin{bmatrix} \Delta \mathbf{P}(\mathbf{x}) \\ \Delta \mathbf{Q}(\mathbf{x}) \end{bmatrix} = \mathbf{0}$$

The standard method to solve this non-linear system is the **Newton-Raphson method**.

Newton-Raphson Method in 1D: Principles

Suppose we want to find x such that the mismatch $g(x) = c - f(x) = 0$.

- ▶ Start with an initial guess $x^{(0)}$ at iteration $i = 0$
- ▶ First-order Taylor approximation around $x^{(i)}$:

$$g(x^{(i)} + \Delta x) \approx g(x^{(i)}) + g'(x^{(i)})\Delta x = 0$$

- ▶ Solve for the update step: $\Delta x = -\frac{g(x^{(i)})}{g'(x^{(i)})} = \frac{c - f(x^{(i)})}{f'(x^{(i)})}$
- ▶ Update iterate: $x^{(i+1)} = x^{(i)} + \Delta x$ and repeat until $|g(x^{(i)})| \leq \epsilon$

Quadratic Convergence: If $x^{(0)}$ is near the root, $|x^{(i+1)} - x^*| \leq K|x^{(i)} - x^*|^2$. The number of accurate decimal digits roughly doubles at each iteration!

Newton-Raphson 1D: Step-by-Step Convergence


Example: Solve $g(x) = 4 - x^3 = 0$

$$\Delta x^{(i)} = \frac{4 - (x^{(i)})^3}{3(x^{(i)})^2}, \quad x^{(i+1)} = x^{(i)} + \Delta x^{(i)}$$

i	$x^{(i)}$	$g(x^{(i)})$	$\Delta x^{(i)}$	$ x^{(i)} - x^* $
0	3.5000	-38.88	-1.058	1.913
1	2.4422	-10.57	-0.590	0.855
2	1.8517	-2.35	-0.228	0.264
3	1.6233	-0.27	-0.035	0.036

► [Python Colab Implementation](#)

► [Interactive Web Visualizer](#)

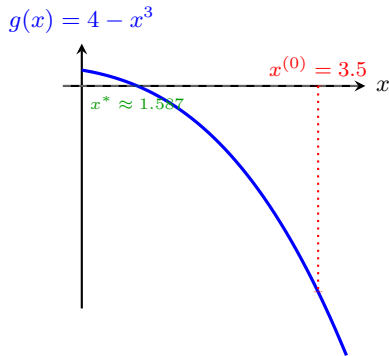

Newton-Raphson 1D: Step-by-Step Convergence


Example: Solve $g(x) = 4 - x^3 = 0$

$$\Delta x^{(i)} = \frac{4 - (x^{(i)})^3}{3(x^{(i)})^2}, \quad x^{(i+1)} = x^{(i)} + \Delta x^{(i)}$$

i	$x^{(i)}$	$g(x^{(i)})$	$\Delta x^{(i)}$	$ x^{(i)} - x^* $
0	3.5000	-38.88	-1.058	1.913
1	2.4422	-10.57	-0.590	0.855
2	1.8517	-2.35	-0.228	0.264
3	1.6233	-0.27	-0.035	0.036

► [Python Colab Implementation](#)

► [Interactive Web Visualizer](#)

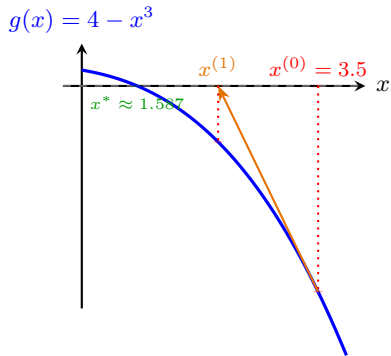

Newton-Raphson 1D: Step-by-Step Convergence


Example: Solve $g(x) = 4 - x^3 = 0$

$$\Delta x^{(i)} = \frac{4 - (x^{(i)})^3}{3(x^{(i)})^2}, \quad x^{(i+1)} = x^{(i)} + \Delta x^{(i)}$$

i	$x^{(i)}$	$g(x^{(i)})$	$\Delta x^{(i)}$	$ x^{(i)} - x^* $
0	3.5000	-38.88	-1.058	1.913
1	2.4422	-10.57	-0.590	0.855
2	1.8517	-2.35	-0.228	0.264
3	1.6233	-0.27	-0.035	0.036

► [Python Colab Implementation](#)

► [Interactive Web Visualizer](#)

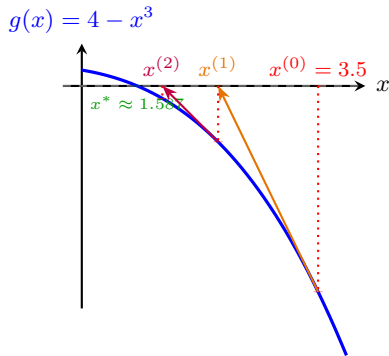

Newton-Raphson 1D: Step-by-Step Convergence


Example: Solve $g(x) = 4 - x^3 = 0$

$$\Delta x^{(i)} = \frac{4 - (x^{(i)})^3}{3(x^{(i)})^2}, \quad x^{(i+1)} = x^{(i)} + \Delta x^{(i)}$$

i	$x^{(i)}$	$g(x^{(i)})$	$\Delta x^{(i)}$	$ x^{(i)} - x^* $
0	3.5000	-38.88	-1.058	1.913
1	2.4422	-10.57	-0.590	0.855
2	1.8517	-2.35	-0.228	0.264
3	1.6233	-0.27	-0.035	0.036

► [Python Colab Implementation](#)

► [Interactive Web Visualizer](#)

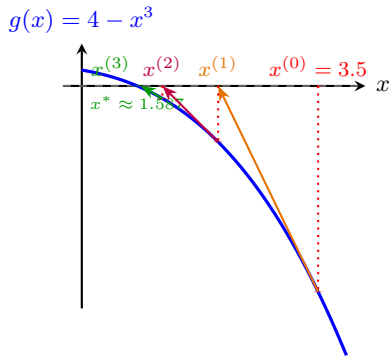

Newton-Raphson for Power Flow I

We apply the same principle in dimension $M = 2n_{PQ} + n_{PV}$. At iteration (i) , the linearized mismatch system is:

$$\mathbf{J}(\mathbf{x}^{(i)})\Delta\mathbf{x}^{(i)} = \mathbf{F}(\mathbf{x}^{(i)}) \quad (10)$$

where the **Jacobian matrix** $\mathbf{J}$ contains the partial derivatives:

$$\begin{bmatrix} \mathbf{J}_{P\theta} & \mathbf{J}_{PV} \\ \mathbf{J}_{Q\theta} & \mathbf{J}_{QV} \end{bmatrix}^{(i)} \begin{bmatrix} \Delta\boldsymbol{\theta} \\ \Delta\mathbf{V} \end{bmatrix}^{(i)} = \begin{bmatrix} \mathbf{P}^0 - \mathbf{p}(\mathbf{V}^{(i)}, \boldsymbol{\theta}^{(i)}) \\ \mathbf{Q}^0 - \mathbf{q}(\mathbf{V}^{(i)}, \boldsymbol{\theta}^{(i)}) \end{bmatrix} \quad (11)$$

Newton-Raphson for Power Flow II

The four sub-matrices of the Jacobian are:

► $\mathbf{J}_{P\theta} = \frac{\partial \mathbf{P}}{\partial \boldsymbol{\theta}}$ of size $(n_{PQ} + n_{PV}) \times (n_{PQ} + n_{PV})$

► $\mathbf{J}_{PV} = \frac{\partial \mathbf{P}}{\partial \mathbf{V}}$ of size $(n_{PQ} + n_{PV}) \times n_{PQ}$

► $\mathbf{J}_{Q\theta} = \frac{\partial \mathbf{Q}}{\partial \boldsymbol{\theta}}$ of size $n_{PQ} \times (n_{PQ} + n_{PV})$

► $\mathbf{J}_{QV} = \frac{\partial \mathbf{Q}}{\partial \mathbf{V}}$ of size $n_{PQ} \times n_{PQ}$

Once $\Delta \boldsymbol{\theta}$ and $\Delta \mathbf{V}$ are calculated by solving the linear system:

$$\boldsymbol{\theta}^{(i+1)} = \boldsymbol{\theta}^{(i)} + \Delta \boldsymbol{\theta}, \quad \mathbf{V}^{(i+1)} = \mathbf{V}^{(i)} + \Delta \mathbf{V}$$

Remarks on Practical Implementation

- ▶ **Avoid Inversion:** We never compute the matrix inverse $\mathbf{J}^{-1}$; instead, we solve the linear system $\mathbf{J}\Delta\mathbf{x} = \Delta\mathbf{F}$ via LU factorization and forward/backward substitution
- ▶ **Sparsity Exploitation:** In real power systems, each bus is typically connected to only 2–5 neighboring lines. The Jacobian is extremely sparse (often $> 99\%$ zeros). Using sparse matrix algorithms reduces computational cost from $\mathcal{O}(n^3)$ to nearly $\mathcal{O}(n^{1.2})$!
- ▶ **Flat Start:** Without prior knowledge, iterations are initialized at a *flat start*:

$$V_k^{(0)} = 1.0 \text{ pu}, \quad \theta_k^{(0)} = 0^\circ \quad \forall k$$

- ▶ **Jacobian Reuse:** In modified Newton methods, the Jacobian can be held constant across multiple iterations close to convergence to save computation

Illustration on the 3-Bus Example I

Let us apply the Newton-Raphson algorithm step-by-step to our 3-bus network:

- ▶ Bus 1 is Slack ($V_1 = 1.0$ pu, $\theta_1 = 0^\circ$)
- ▶ Bus 2 is PV ($V_2 = 1.05$ pu, $P_2 = -2.0$ pu) $\rightarrow$ unknown: θ_2
- ▶ Bus 3 is PQ ($P_3 = 5.0$ pu, $Q_3 = 1.0$ pu) $\rightarrow$ unknowns: θ_3, V_3

The unknown vector has dimension 3:

$$\mathbf{x} = \begin{bmatrix} \theta_2 & \theta_3 & V_3 \end{bmatrix}^T$$

Illustration on the 3-Bus Example II

Step 0: Flat Start Initialization

$$\mathbf{x}^{(0)} = \begin{bmatrix} \theta_2^{(0)} & \theta_3^{(0)} & V_3^{(0)} \end{bmatrix}^T = \begin{bmatrix} 0 \text{ rad} & 0 \text{ rad} & 1.0 \text{ pu} \end{bmatrix}^T$$

Step 1: Initial Power Mismatches Evaluating p_2, p_3, q_3 at $\mathbf{x}^{(0)}$:

$$\begin{bmatrix} \Delta P_2 \\ \Delta P_3 \\ \Delta Q_3 \end{bmatrix}^{(0)} = \begin{bmatrix} P_2^0 - p_2(\mathbf{x}^{(0)}) \\ P_3^0 - p_3(\mathbf{x}^{(0)}) \\ Q_3^0 - q_3(\mathbf{x}^{(0)}) \end{bmatrix} = \begin{bmatrix} -1.784 \\ +4.897 \\ -0.045 \end{bmatrix} \text{ pu}$$

Illustration on the 3-Bus Example III

Step 2: Linear System Solution Compute the 3×3 Jacobian at $\mathbf{x}^{(0)}$ and solve:

$$\begin{bmatrix} \frac{\partial p_2}{\partial \theta_2} & \frac{\partial p_2}{\partial \theta_3} & \frac{\partial p_2}{\partial V_3} \\ \frac{\partial p_3}{\partial \theta_2} & \frac{\partial p_3}{\partial \theta_3} & \frac{\partial p_3}{\partial V_3} \\ \frac{\partial q_3}{\partial \theta_2} & \frac{\partial q_3}{\partial \theta_3} & \frac{\partial q_3}{\partial V_3} \end{bmatrix}^{(0)} \begin{bmatrix} \Delta \theta_2 \\ \Delta \theta_3 \\ \Delta V_3 \end{bmatrix}^{(0)} = \begin{bmatrix} \Delta P_2 \\ \Delta P_3 \\ \Delta Q_3 \end{bmatrix}^{(0)}$$

Update: $\mathbf{x}^{(1)} = \mathbf{x}^{(0)} + \Delta \mathbf{x}^{(0)}$.

Illustration on the 3-Bus Example IV

Convergence History of the 3-Bus System:

Iter i	$ \Delta P_2 $ [pu]	$ \Delta P_3 $ [pu]	$ \Delta Q_3 $ [pu]	Max Error
0	1.7840	4.8972	0.0451	4.8972
1	0.0206	0.1046	0.3125	0.3125
2	0.0005	0.0015	0.0033	0.0033
3	1.0×10^{-7}	2.4×10^{-7}	4.1×10^{-7}	4.1×10^{-7}

Convergence to 7 decimal places in only 3 iterations!

Final state: $\theta_2 = -2.066^\circ$, $\theta_3 = -8.787^\circ$, $V_3 = 0.9781$ pu, perfectly matching PandaPower!

► [Open 3-Bus Newton-Raphson Python Notebook](#)

Fast Decoupled Power Flow I

In high-voltage transmission networks, physical characteristics offer natural decoupling:

- ▶ Lines have high X/R ratios ($X \gg R$), so active power flow is predominantly coupled to voltage angles:

$$P \sim \frac{V_k V_m}{X} \sin(\theta_k - \theta_m) \quad \Rightarrow \quad \frac{\partial P}{\partial \theta} \gg \frac{\partial P}{\partial V}$$

- ▶ Reactive power flow is predominantly coupled to voltage magnitudes:

$$Q \sim \frac{V_k^2 - V_k V_m \cos \theta_{km}}{X} \quad \Rightarrow \quad \frac{\partial Q}{\partial V} \gg \frac{\partial Q}{\partial \theta}$$

Fast Decoupled Power Flow II

Setting the cross-coupling sub-matrices to zero ($\mathbf{J}_{PV} \approx \mathbf{0}$, $\mathbf{J}_{Q\theta} \approx \mathbf{0}$) splits the problem into two smaller, decoupled sub-systems:

$$\mathbf{J}_{P\theta}\Delta\theta = \Delta\mathbf{P} \quad (12)$$

$$\mathbf{J}_{QV}\Delta\mathbf{V} = \Delta\mathbf{Q} \quad (13)$$

- ▶ Faster iteration speed (two smaller linear systems instead of one large system)
- ▶ The sub-Jacobians can be approximated by constant matrices and inverted/factorized only once
- ▶ Sub-Jacobians also provide direct sensitivity information useful for operational planning

DC Power Flow (Linear Approximation) I

The "**Direct Current**" (DC) **power flow** is a linear approximation of the AC power flow, widely used in wholesale market clearing, unit commitment, and long-term transmission planning:

Underlying Assumptions:

1. **Lossless Lines:** $R \ll X$, resistances are neglected ($R = 0$)
2. **Flat Voltages:** $V_k \approx 1.0$ pu for all buses
3. **Small Phase Differences:** $\theta_{km} \ll 1$ rad $\implies \sin \theta_{km} \approx \theta_{km}, \cos \theta_{km} \approx 1$
4. Reactive power flows are neglected; shunt admittances are ignored

DC Power Flow (Linear Approximation) II

Under these assumptions, the branch flow from bus k to bus m simplifies to:

$$P_{km} = \frac{V_k V_m}{X_{km}} \sin(\theta_k - \theta_m) \approx \frac{\theta_k - \theta_m}{X_{km}} = B_{km}(\theta_k - \theta_m)$$

And the bus power injection equation becomes strictly **linear**:

$$P_k = \sum_{m \in \mathcal{N}_k} B_{km}(\theta_k - \theta_m)$$

In matrix form:

$$\mathbf{P} = \mathbf{B}'\boldsymbol{\theta} \tag{14}$$

where $\mathbf{B}' = \Im(\mathbf{Y}_{\text{bus}})$ (without slack bus row/column).

Application of DC Power Flow

Application to the 3-Bus Case

- ▶ Compare AC power flow versus DC linear approximation
- ▶ Quantify the impact of neglecting losses and voltage variations
- ▶ Understand the code and analyze the results:

▶ [Open 3-Bus DC Power Flow Python Notebook](#)

Slack Bus Selection and Distributed Slack (Advanced section)

The Dual Role of the Slack Bus

Reminder. In classical AC power flow, the **slack (or swing) bus** fulfills two distinct roles:

1. Mathematical: Angle reference

- ▶ In AC grids, power flows depend strictly on **phase differences** $\theta_k - \theta_m$.
- ▶ Shifting all angles by $\Delta\theta$ leaves physical flows unchanged.
- ▶ One bus must anchor the coordinate frame:

$$\theta_{\text{ref}} = 0^\circ$$

removing the singularity of the Jacobian.

2. Physical: Power Balancing

- ▶ Active power conservation requires:

$$\sum P_{Gk} = \sum P_{Lk} + P_{\text{loss}}(\mathbf{V}, \boldsymbol{\theta})$$

- ▶ Total transmission losses P_{loss} depend on the unknown voltages $\mathbf{V}$.
- ▶ P_{slack} must remain a free variable to absorb the net loss mismatch.

How to Choose the Slack Bus in Single-Slack Studies I

How should the engineer select the slack bus?

► 1. Large Generating Capacity and Headroom:

- Connect to a major, flexible generating plant (e.g., large hydro or CCGT).
- Must have ample active and reactive spinning reserves (see lecture on generators):

$$P_{G,\min} \ll P_{G,\text{slack}} \ll P_{G,\max}, \quad Q_{G,\min} \ll Q_{G,\text{slack}} \ll Q_{G,\max}$$

to absorb unexpected loss variations without breaching machine capability limits.

► 2. Voltage Regulation Capability:

- Strong Automatic Voltage Regulator (AVR) and high reactive capability (Q) to maintain terminal voltage $V_{\text{slack}} = V^0$ (see lecture on generators).

How to Choose the Slack Bus in Single-Slack Studies II

▶ 3. Electrical Centrality and Grid Strength:

- ▶ High short-circuit capacity (low Thévenin impedance, electrically "stiff" bus).
- ▶ Centrally located in terms of electrical distance (impedance) to major load centers.
- ▶ High nodal degree: interconnected with multiple strong, high-capacity transmission lines.

▶ 4. Grid Interconnection / Tie-Line Substation:

- ▶ In regional transmission or distribution utility models, the boundary substation connecting to the external transmission grid is selected as the slack ("infinite bus").

Pitfalls of a Poor Slack Bus Choice I

Designating a single, arbitrary slack bus can create serious modeling distortions:

1. Artificial Congestion and False Overloads

- ▶ If a small or peripheral generator is chosen as slack, it is forced to supply the loss balance for the *entire* grid.
- ▶ All loss-compensating energy must travel across local transmission paths, triggering **spurious overload alarms** on adjacent lines that do not exist in reality!

2. Generator Limit Violations & Solver Divergence

If the single slack generator hits its $P_{\max}$ or $Q_{\max}$ limits, the solver must dynamically switch the slack bus, frequently causing limit-cycling or non-convergence in NR.

Pitfalls of a Poor Slack Bus Choice II

3. Sensitivity and Market Distortions (notions defined in the Energy Markets course)

- ▶ Sensitivities such as Power Transfer Distribution Factors (PTDF) and Locational Marginal Prices (LMP) depend directly on the slack reference
- ▶ An arbitrary slack choice skews market signals and transmission loss allocation.

Why Single Slack Fails in Real Practice I

The Physical Reality of Power Systems:

- ▶ In actual real-time operations, **no single power plant** absorbs the entire system mismatch or covers all grid losses!
- ▶ We will come back to that in the lecture on frequency stability!

1. Primary Frequency Control (Governor Droop, $t < 10$ s):

- ▶ Any power imbalance creates an instantaneous frequency deviation $\Delta f = f - f_0$.

Why Single Slack Fails in Real Practice II

- ▶ All synchronized generators equipped with speed governors respond **simultaneously** according to their droop characteristic R_k :

$$\Delta P_{Gk} = -\frac{1}{R_k} \Delta f$$

- ▶ The deficit or surplus is automatically shared across **all** online generators!

2. Secondary Frequency Control / AGC ($t \sim 30 \text{ s} - 15 \text{ min}$):

- ▶ Automatic Generation Control (AGC) restores frequency and tie-line schedules by dispatching regulation reserves across designated generators according to participation factors α_k .

Why Single Slack Fails in Real Practice III

The $N - 1$ Contingency Paradox

- ▶ Suppose a 1000 MW nuclear unit trips unexpectedly.
- ▶ In a **single-slack** power flow, the solver forces the single slack bus to pick up all 1000 MW. The resulting simulated line flows and voltages around that bus are completely unphysical!
- ▶ In **reality**, the 1000 MW deficit is shared among hundreds of generators across the entire synchronous interconnection (e.g. continental Europe).

The Distributed Slack Formulation I

To mirror physical reality, modern tools use a **Distributed Slack (or Distributed Balancing)** model:

- ▶ Assign **participation factors** $\alpha_k \geq 0$ to a set of participating generators $\mathcal{G}_{\text{slack}}$:

$$\sum_{k \in \mathcal{G}_{\text{slack}}} \alpha_k = 1$$

- ▶ Introduce a global scalar balancing variable: ΔP_{slack}
- ▶ Active power generation at each participating bus k becomes:

$$P_{Gk} = P_{Gk}^0 + \alpha_k \Delta P_{\text{slack}}$$

The Distributed Slack Formulation II

- Maintain **one** bus as the **angle reference**: $\theta_{\text{ref}} = 0^\circ$ (decoupling angle reference from power balancing!)

Closing the Power Balance System:

- Add the global active power balance equation to the system:

$$\sum_{k=1}^n P_k(\mathbf{V}, \boldsymbol{\theta}) = \sum_{k \in \mathcal{G}} P_{Gk} - \sum_{k \in \mathcal{L}} P_{Lk} - P_{\text{loss}}(\mathbf{V}, \boldsymbol{\theta}) = 0$$

- Total unknowns: $M = (2n_{PQ} + n_{PV}) + 1$ (the standard unknowns plus ΔP_{slack})
- Total equations: $M = (2n_{PQ} + n_{PV}) + 1$
- The augmented Jacobian remains square and is solved directly via Newton-Raphson!

Choosing Participation Factors α_k I

Depending on the engineering application, participation factors α_k are chosen as:

1. Governor Droop Based (Primary Frequency Response):

$$\alpha_k = \frac{P_{Gk}^{\max} / R_k}{\sum_j P_{Gj}^{\max} / R_j}$$

Faithfully reproduces post-contingency steady-state flows for $N - 1$ security analysis.

Choosing Participation Factors α_k II

2. Generation Capacity Proportional:

$$\alpha_k = \frac{P_{Gk}^{\max}}{\sum_j P_{Gj}^{\max}} \quad \text{or} \quad \alpha_k = \frac{P_{Gk}^0}{\sum_j P_{Gj}^0}$$

Distributes losses proportionally across generators without overloading individual units.

Choosing Participation Factors α_k III

3. Load Proportional (Distributed Load Slack):

$$\alpha_k = \frac{P_{Lk}}{\sum_j P_{Lj}}$$

Allocates losses as incremental demand across consumers (standard in market clearing and loss allocation).

4. Economic Merit-Order Participation:

$$\alpha_k \propto \frac{1}{\text{Marginal Cost}_k}$$

Distributes loss compensation according to optimal redispatch / tertiary reserves.

Distributed Slack in Industry Practice I

Key Engineering Takeaway

Decouple the angle reference from loss balancing:

- ▶ **Angle reference** ($\theta_{\text{ref}} = 0^\circ$) is a *mathematical necessity* to anchor the coordinate frame.
- ▶ **Distributed slack** (α_k) is a *physical necessity* to reflect real frequency response and prevent localized flow distortion.

Distributed Slack in Industry Practice II

Industrial Implementation:

- ▶ Supported natively in power systems software:
 - ▶ **PandaPower**: `pp.runpp(net, distributed_slack=True)`
 - ▶ **MATPOWER**: User-defined generator participation in OPF/PF
 - ▶ **PSS/E & PowerFactory**: Inertial/governor dispatch modes for $N - 1$ contingency screening
- ▶ **Electricity Market Clearing**:
 - ▶ In wholesale electricity markets (e.g. European Day-Ahead Flow-Based Market Coupling, US ISOs), distributed slack ensures that PTDFs and LMPs are neutral and do not favor an arbitrary bus.

References I



L. Thurner, A. Scheidler, F. Schäfer, J.-H. Menke, J. Dollichon, F. Meier, S. Meinecke, and M. Braun, “pandapower—an open-source python tool for convenient modeling, analysis, and optimization of electric power systems,” *IEEE Transactions on Power Systems*, vol. 33, no. 6, pp. 6510–6521, 2018.