


Smartbox[™]

Notebook/Chromebook & Tablet Charging Locker (5 Bays)

- Includes Digital Number Lock

Charge and store up to 5 laptops and tablets

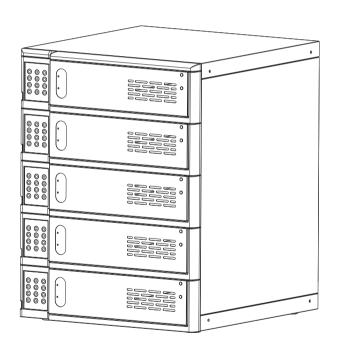

User Manual




Contents


The product is designed to allow you to easily store, secure, charge up to 5 devices per unit.

| 1. Product Specification | P.1 |
|---------------------------|------|
| 2. Introduction | P.02 |
| Package Contents | P.02 |
| Cabinet Diagram | P.02 |
| Interior View | P.03 |
| 3. Quick Start Guide | P.03 |
| 4. Adminstration Software | P.05 |
| 4-1 For Windows OS User | P.05 |
| 4-2 For Mac OS User | P.09 |
| 5. Safety | P.17 |

1. Product Specification

Cabinet Dimension

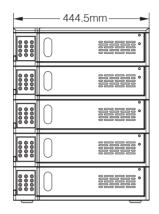

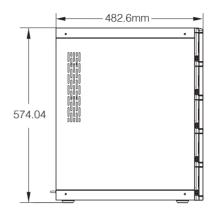

Optional Accessory DAISY-CHAIN KIT

A pair of optional bracket kit must be ordered separately for joining the lockers when they are being stacked on top of each other. A daisy chain power cable is also included in the kit for connecting the lockers. (Do not stack over 2 lockers in AC110V environment or over 4 lockers in AC220V environment.



DAISY-CHAIN Power Cable



Bracket Kit

Product Spec

| Capacity | 5 Bays | Weight | N.W: 21kg G.W.: 26kg |
|------------------------------|--|---------------|---|
| Support Device | Laptop/Chromebook/Tablet up to 17" sreen size | Lock Type | Electronic type: Digital Key Lock |
| Compartment Dimension | (H)109.22 x (W)325.12 x (D)452.12mm | | Mechanical type: 3-Dial Lock |
| Cart Dimension | (H)574.04 x (W)444.5 x (D)482.6mm | Power | C100~125V/9A. |
| Packaging Dimension | (H)683.26 x (W)576.58 x (D)619.76mm | Specification | AC200~240V/10A(50/60Hz) USB DC5V/2.4A |
| | | Charging Type | Support AU types AC power |
| Regulation/ Certification | Australia/N.Z.: AS/NZS CISPR 22, AS/NZS 60950-1 | | outlet x 1pc USB Charging Port x 1pcs (MAX 2 ports) |

2. Package Contents


Package Contents

SB-CL05D x 1 Power cable x 1 User manual x 1





Cabinet Diagram

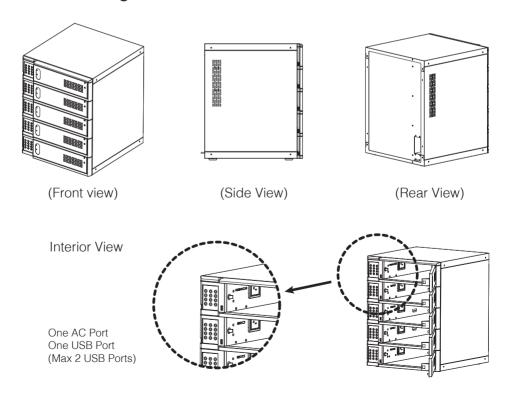

3. Quick Start Guide

Identification of LED Indicators





Code Status of Door Lock Solid Red: Door is locked with code

Solid Green: Door is locked without code, press to

Blink Green: Able to insert the code





Keypad Indicator

Red: lights when key buttons are pressed



Door indicator Red: when door is closed

Green: when door is opened



USB charging indicator Red: USB port is charging

Green: USB device is fully charged

How To Start Quickly



- Plug in the power cord
- Press to open the door (code indicator will flash GREEN)



- Close door and insert 4 digital code when code indicator is flashing (Re-press button if indicator becomes SOLID GREEN)
- Press a button after the code is entered
- Ensure the code has been successfully entered and accessed . After this the code indicator will turn Red.
- Insert the code as set by user then press button to open



4-1. Software Installation Guide

a. Software about administration platform (For Windows OS only)

Double click "SingleLockerHostApp" to start the software installation



Press "Next" after the Setup Wizard pop up



Choose the target drive/folder to place software then press "Next" to go to next stage



Simply press "Install" to start the software installation, then Setup Wizard will come out with the processing status of installation.





Installation is complete, press "Finish" to close the pop up window



b. Administration User GuideOperation guidance for administrator(For Windows OS only)

Before you start to use this administration platform, please make sure your "SingleLockerHostApp" has been successfully installed on your laptop or refer to "Software Installation Guide" and "SingleLockerHostApp" we have provided.



Please use a Micro USB cable to connect your computer with the charging locker. The Micro USB port on the charging locker is placed at left bottom corner next to the keypad.





Double click the shortcut of "KeyLockerUSBHostApp" automatically.

After software opens, you will see the administration platform on the right.

on windows desktop. Software will run



Administrator Guidance

Unlock by administrator

Unlock the door without user's personal code



Select 1st option (Inspect, Unlock Door Only (User Password Reserved)) » Insert "Inspect Code" » Press "RUN" to proceed. Door will open after "Successful" message pop up.

Tip: Default Inspect Code is 12345678

Unlock & Reset by administrator

Allows you to open the locker and delete/reset the code that was set by the user to default



Select 2nd option (Reset, Empty User Password And Reset Status To Available) » Insert "Reset Code" » Press "RUN" to proceed.

Door will open after "Successful" message pops up, user's personal code will be deleted and the device will be reset to the default settings. (Doors will open by pressing unlock button in default setting)

Tip: Default Reset Code is 12345678

Inspect Code Set up by administrator

Setting your own Inspect Code for confidentiality concern



Select 3rd option (Set Inspect Code (MaxLen: 8, Default: 12345678)) » Insert "Current Inspect Code" » Insert "New Inspect Code" and "Confirm Inspect Code" » Press "RUN" to proceed.

"Successful!" message will pop up after the code has been configured successfully. Notice! You may not set more than 8 digits for the code.

Tip: Default Inspect Code is 12345678

Reset Code Set up by administrator

Setting your own Reset Code for confidentiality concern



Select 4th option (Set Reset Code (MaxLen: 8, Default: 12345678)) » Insert "Current Reset Code" » Insert "New Reset Code" and "Confirm Reset Code" » Press "RUN" to proceed.

"Successful!" message will pop up after the code has been configured successfully. Notice! You may not set more than 8 digits for the code.

Tip: Default Inspect Code is 12345678. It's an important code to reset code back to default setting (refer to 2nd function option), suggest administrator to take a note to avoid code missing.

4-2. For Mac OS Version

a. Application Installation Guide


LockerAdmin



Before you start to use the Administration App (Application) and work with your locker, you will need to install the App on your mac.


How to install App

1. Open your Finder and go to the location where you saved the App file we have provided.

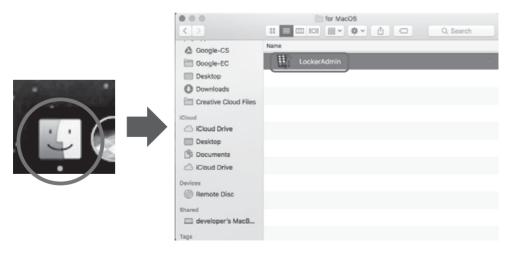

Tips: The file is named as (LockerAdmin).


2. Open another New Finder Window (right click on Finder icon) then go to Application Window.

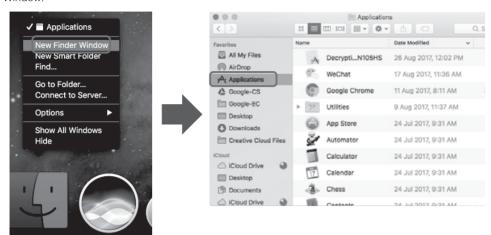

3. After you have opened above two Finder Windows, you have to copy "LockerAdmin" then past to anywhere inside the "Application Window".



4. Dropping " LockerAdmin" into Dock as a short cut to open the application.

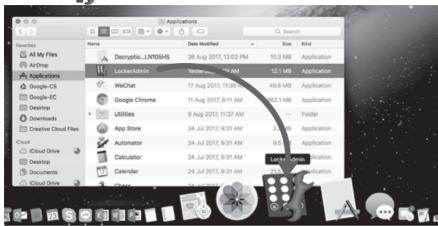

Your administration application has been installed successfully into your Mac, you are now able to manage each compartment of your locker.



How To use the App


LockerAdmin



We suggest the App should be treated as a confidential program and never be disclosed to any third party or end-user. It will be more convenient for administrator to manage lockers by using this specific App.

IMPORTANT!

Please always remember to OPEN LockerAdmin before you connect your Mac to target compartment.

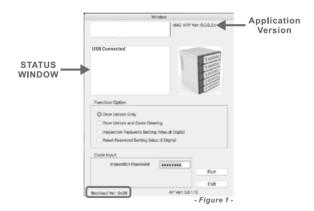

Administration Window will pop up after you OPEN LockerAdmin from Dock, then connect your Mac to the target compartment. App will detect the connection status and indicate the USB connection status in the status window automatically. Meanwhile, you need to check and ensure the "Bootload Ver.: XXXX" has been detected and shown on the left bottom of the window. (See figure 1)

NOTICE! App is unable to run if "Bootload Ver." is undetected, please confirm you are using correct USB Cable (not only for power but also for data) and is connected properly. Or try to reconnect the USB Cable.

Function Options

Door Unlock Only

Allows administrator to unlock and open each compartment without user's own code.

Door Unlock and Code Clearing

This function is usually in use when users forget the personal code they had set. This function allows administrator to unlock the door and clear the code which was set by the user.

Inspection Password Setting (Max.: 8 Digits)

Inspection Password is mainly used for Door Unlock Only function and starts with the default password setting before you change it. Administrators are allowed to set their own Inspection Password, but if the password is forgotten, you will need to reset all your passwords back to the default setting. (See what to do if you forget INSPECTION/RESET Password)

Reset Password Setting (Max.: 8 Digits)

Reset Password is mainly used for Door Unlock and Code Clearing function and starts with the default password setting before you change it. Administrators are allowed to set their own Reset Password, but if the password is forgotten, you will need to reset all your passwords back to the default setting. (See what to do if you forgot INSPECTION/RESET Password)



- Door Unlock Only
- (See figure 2)

Select Door Unlock Only from Function Option, insert Inspection Password then press RUN to proceed with this function.

Tips: Default Inspection Password: 12345678

- Door Unlock & Code Clearing
- (See figure 3)

Select Door Unlock and Code Clearing from Function Option, Insert Reset Password then press RUN to proceed with this function.

Tips: Default Reset Password: 12345678

- INSPECTION Password Setting
- (Max.: 8 Digits)(See figure 4)


Select Inspection Password Setting (Max.: 8 Digits) from Function Option, Insert Current Inspection Password (start with default), New Inspection Password and Confirm Inspection Password then press RUN to proceed with the change.

Tips: For strict security concerns, we recommend administrators to set their own Inspection Password from the beginning (before users start to use).

- Reset Password Setting
- (Max.: 8 Digits)(See figure 5)

Select Reset Password Setting (Max.: 8 Digits) from Function Option, Insert Current Reset Password (start with default), New Reset Password and Confirm Reset Password then press RUN to proceed with the change.


Tips: For strict security concerns, we recommend administrators to set their own Reset Password from the beginning (before users start to use).

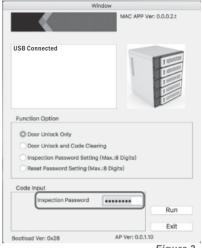


- Figure 2



- Figure 3 -

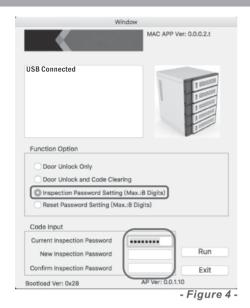


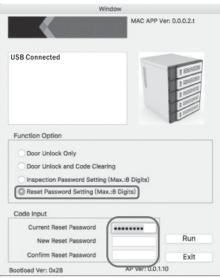


- Figure 5 -

What to do if you forget INSPECTION/RESET Password

If you unfortunately forget the password you have set, you can follow the below steps to reset your password back to factory settings.

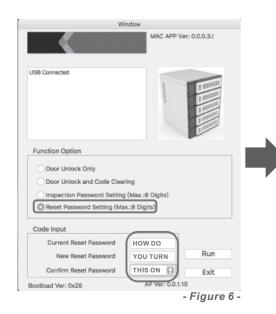

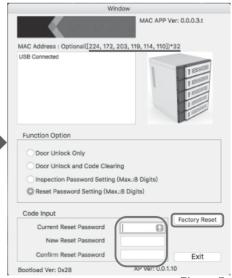

- Figure 7 -

- 1. Select Reset Password Setting (Max.: 8 Digits).
- 2. Insert HOW DO into Current Reset Password column.

(The words you insert has to be in capital letter with space between words)

3. Insert YOU TURN into New Reset Password column.

(The words you insert has to be in capital letter with space between words)

4. Insert THIS ON into Confirm Reset Password column.

(The words you insert has to be in capital letter with space between words)

- 5. Press RUN to continue the progress. (See figure 6)
- 6. A set of MAC Address will be generated after you press RUN, please provide this MAC Address set to your vendor contact person. (See figure 7)
- 7. Vendor will provide three sets of password to you and you will need to insert separately into Current Reset Password, New Reset Password and Confirm Reset Password.
- 8. Press Factory Reset to complete the procedure.

(All passwords will back to default setting including Inspection Password)

NOTICE!

- 1. This process will erase all the passwords and set them back to factory setting.
- 2. Ensure the passwords are inserted correctly.
- 3. Ensure to proceed within one day after your vendor has provided three sets of password.

4. Safety

WARNING:


This product must only be used for its intended purpose in accordance with these operating instructions. Failure to observe the following notices can result in fire, injury, death by electric shock or equipment damage.



- . Always turn OFF the power to the product before plugging IN or OUT.
- . Do not unplug the power cord from the outlet when your hands are wet.
- . Do not use cables that are damaged.
- . Do not unplug by pulling on the cable.
- . Do not plug the cable into an extension cable.
- . Keep the door closed and locked when in use.



- . This product is designed to be used indoors only.
- . This product is not designed to be operated by a child or student.
- . Please move this product only under adult operation and supervision.
- . Do not allow anyone to set, stand, or climb on the product.
- . Move the product with caution.
- . Keep the product away from water.
- . Keep the ventilation holes unblocked for air circulation.
- . Do not place TV or monitor on top of the product.
- . Do not use the product to store liquids or cleaning supplies.
- . Keep the door closed and locked when in use.
- . Disconnect the power cable from the wall before relocate the main unit.

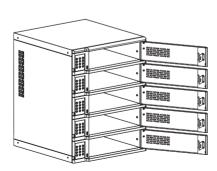



© ALOGIC. All rights reserved. Reproduction in whole or in part without permission is prohibited. All other trademarks are the properties of their owners. Tested to comply with FCC and CE Standards.

HOME OR OFFICE USE.

Alogic is the trademark of Alogic Corporation



