RomejkOS

A chaotic glyph-based image generator.

01 / Start here

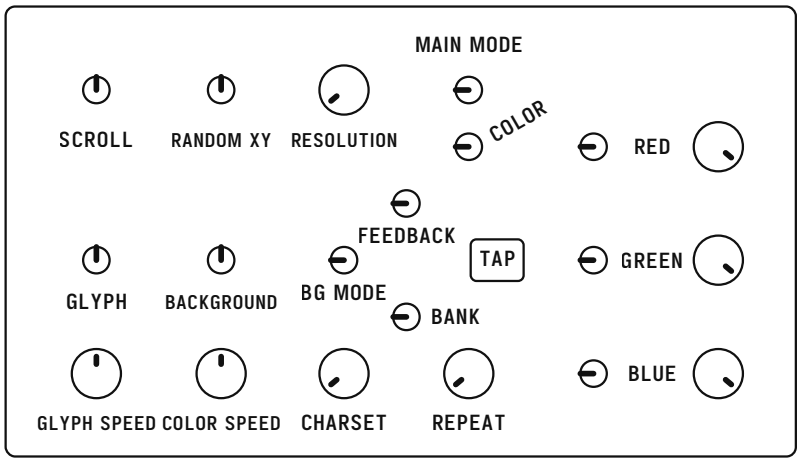

1 / Set the controls as shown.

2 / First steps

SCROLL ↑: scrolling glyphs. RANDOM XY ↑: random placement

GLYPH SPEED: rate of new glyphs

COLOR SPEED: rate of color changes

BANK: characters, words, or sentences. Turn CHARSET to change the text.

MAIN MODE: changes glyph size and placement

BG MODE: changes glyph backgrounds

FEEDBACK: alters the whole image

02 / Control reference

Writing and display · ↑ / ⊗ / ↓

SCROLL
↑ Scrolling text
⊗ OFF
↓ ON/OFF via LFO (black)

RANDOM XY
↑ Scattered text
⊗ OFF
↓ ON/OFF (inverted black LFO)

GLYPH
↑ Visible characters
⊗ Hidden
↓ ON/OFF via white LFO

BACKGROUND
↑ Colored background
⊗ Black background
↓ ON/OFF via LFO at COLOR SPEED

Size and layering · ← / ⊗ / →

MAIN MODE
← Normal size
⊗ Random size: SCROLL 1–4×. RANDOM XY 1–2×
→ SCROLL centered, 4×. RANDOM XY normal

COLOR
← Random text and background colors
⊗ White and black according to GLYPH and BACKGROUND
→ One nonblack color, set by COLOR SPEED. Ignores GLYPH and BACKGROUND

BG MODE
← Each glyph has a rectangular background
⊗ Overprint. New rows use the background color
→ Overprint. Reuses the top rows

FEEDBACK
← Off
⊗ Shifts up and left. Trails at the edges
→ Smears colors other than the text and background colors

BANK · see CHARSET
← Glyphs
⊗ Words
→ Sentence generator

Other

Solid screen: any solid nonblack screen is cleared
BANK ⊗ + BG MODE ⊗: repeated letters, random case
BG MODE ←: joined words. ⊗ or →: spaced words

Speed, resolution and text

GLYPH SPEED
↻: rate of new glyphs (1 s to 3 ms)
↺↺: new glyphs at TAP tempo

RESOLUTION
Select resolution: 320×240 / 180×120 / 160×120 / 120×80 / 80×60
Lower resolution: larger text.
SCROLL or RANDOM XY ↓: controls the black LFO (0.2 to 3 s)
↺↺ in LFO mode: clears the screen on each TAP beat

CHARSET · depends on BANK
BANK ←: 12 character sets
BANK ⊗: 7 themed word lists
BANK →: 16 sentence separators

REPEAT
↺↺: no repeats
↻: more repeats. ↻↻: infinite repeats, except with BANK ⊗ and BG MODE ⊗

TAP · clearing and tempo

This button clears the screen. Hold to keep clearing.
GLYPH SPEED at ↺↺: TAP tempo (smoothed over 2 to 8 presses)
Autonomous mode ON/OFF, see below.

Colors

COLOR SPEED
↻: rate of color changes (4 s–10 ms)

RED / GREEN / BLUE

Knobs · ↻ brightness (max: ↻↻)

Switches · ← direct · ⊗ off · → 45 Ω

Autonomous mode

Set all 4 vertical switches to ⊗, then hold TAP for at least 10 s to enter/exit autonomous mode.
Romejko gradually changes the controls on its own, indefinitely.
RESOLUTION is unaffected. You can still turn it.