



CONFIGURATION AND EXTENSION - VOLUME 4

RELEASE 10.02.00 TECHNICAL MANUAL

PUBLICATION PSCEV4-GR010C-EN-E-MARCH-2021 Supersedes publication PSCEV4-GR010B-EN-E



Contact Rockwell See contact information provided in your maintenance contract.

Copyright Notice © 2021 Rockwell Automation Technologies, Inc. All rights reserved.

This document and any accompanying Rockwell Software products are copyrighted by Rockwell Automation Technologies, Inc. Any reproduction and/or distribution without prior written consent from Rockwell Automation Technologies, Inc. is strictly prohibited. Please refer to the license agreement for details.

Trademark Notices FactoryTalk, PharmaSuite, Rockwell Automation, Rockwell Software, and the Rockwell Software logo are registered trademarks of Rockwell Automation, Inc.

The following logos and products are trademarks of Rockwell Automation, Inc.:

FactoryTalk Shop Operations Server, FactoryTalk ProductionCentre, FactoryTalk Administration Console, FactoryTalk Automation Platform, and FactoryTalk Security. Operational Data Store, ODS, Plant Operations, Process Designer, Shop Operations, Rockwell Software CPGSuite, and Rockwell Software AutoSuite.

Other Trademarks ActiveX, Microsoft, Microsoft Access, SOL Server, Visual Basic, Visual C++, Visual SourceSafe, Windows, Windows 7 Professional, Windows 10, Windows Server 2008, Windows Server 2012, and Windows Server 2016 are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

> Adobe, Acrobat, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

ControlNet is a registered trademark of ControlNet International.

DeviceNet is a trademark of the Open DeviceNet Vendor Association, Inc. (ODVA).

Ethernet is a registered trademark of Digital Equipment Corporation, Intel, and Xerox Corporation.

OLE for Process Control (OPC) is a registered trademark of the OPC Foundation.

Oracle, SQL*Net, and SQL*Plus are registered trademarks of Oracle Corporation.

All other trademarks are the property of their respective holders and are hereby acknowledged.

Warranty This product is warranted in accordance with the product license. The product's performance may be affected by system configuration, the application being performed, operator control, maintenance, and other related factors. Rockwell Automation is not responsible for these intervening factors. The instructions in this document do not cover all the details or variations in the equipment, procedure, or process described, nor do they provide directions for meeting every possible contingency during installation, operation, or maintenance. This product's implementation may vary among users.

> This document is current as of the time of release of the product; however, the accompanying software may have changed since the release. Rockwell Automation, Inc. reserves the right to change any information contained in this document or the software at any time without prior notice. It is your responsibility to obtain the most current information available from Rockwell when installing or using this product.

Contents

Chapter 1	Introduction	1
	Intended Audience	5
	Typographical Conventions	5
Chapter 2	Extension and Naming Conventions	<mark>7</mark>
	Guidelines to Control the Migration Effort	7
	Building Block-specific Conventions	9
	Oracle Database Data Types: varchar2 and nvarchar2	. 10
Chapter 3	Managing Configurations	11
	What Are Application Configurations?	. 12
	What Are Hierarchical Configurations?	. 12
	Version Information of PharmaSuite JAR Files	. 14
	Characteristics of Configuration Keys	. 15
	Configuration Keys of Phase Building Blocks	. 15
	Lookup Mechanism	. 16
	Supported Buildtime Objects	. 18
	Logging of Customer-specific Configuration Keys	. 20
	Dynamic Change of Configuration	. 20
	Defining a Configuration Key	. <mark>. 21</mark>
	Defining a Station-specific Configuration Key	. <mark>2</mark> 1
	Retrieving a Station-specific Configuration Key	. 23
	Overriding Configuration Keys in Unit Tests	. 24
Chapter 4	Logging and Debugging	. 25
	Configuring the Logging Capability	. 25
	Configuring log4j Properties Files	. 27

,			
,			
,			
þ			

	Debugging Support	29
	Workflow Analysis	29
	Barcode Support	31
	Focus Issues Analysis	31
	Analysis of Expression Evaluation in Input Parameters during Execution	32
	Configuring Logging for PharmaSuite Servers	33
	Configuring Logging for ActiveMQ	34
Chapter 5	Configuration Keys of PharmaSuite	37
	Global Configuration Keys	38
	Configuration Keys for User Interface	46
	Configuration Keys Specific to the Production Management Client	54
	Configuration Keys Specific to the Production Execution Client	56
	Configuration Keys Specific to EBR	<mark>77</mark>
	Configuration Keys for Recipe, Order, and Workflow Management	<mark>8</mark> 1
	Configuration Keys for Inventory Management	<mark>9</mark> 0
	Configuration Keys for Barcodes	<mark>99</mark>
	Configuration Keys for the Batch Report	103
	Configuration Keys for S88-specific Equipment	106
	Configuration Keys for Exception Recording	120
	Configuration Keys for Dispense	136
	Configuration Keys for Recipe and Workflow Designer	142
	Configuration Keys Specific to the Production Execution Viewer	170
	Configuration Keys for Data Manager	172
	Configuration Keys for the Exception Dashboard	177
	Configuration Keys for Archive and Purge	181
	Configuration Keys for Treatment ID Use	185
Chapter 6	Reference Documents	187
Chapter 7	Revision History	189
Index	•••••	191

Figures

Figure 1: Example of the separation of configuration items using nested application objects	12
Figure 2: Define a bootstrap application	13
Figure 3: Build up an application hierarchy tree	14
Figure 4: Lookup on instance level (station)	16
Figure 5: Lookup on instance level (form)	17
Figure 6: Lookup on class level	17
Figure 7: Lookup on application level	18
Figure 8: Application object with width configuration on specific stations (PS Administration)	22
Figure 9: Disable automatically evaluated TAB sequence of the pmc_OrderObject form	52
Figure 10: Enable automatically evaluated TAB sequence of the pec_FilterSublotsForm form	53

viii PSCEV4-GR010C-EN-E, 1.0

Introduction

This documentation contains important information about how to configure and adapt a PharmaSuite system including information about actions that need to be performed in FactoryTalk® ProductionCentre.

TIP

PharmaSuite provides the PS Administration application to administer database objects such as access privileges, lists, applications, users, or user groups, see "Implementation Guide PS Administration" [A1] (page 187).

The information is structured in the following sections:

VOLUME 1: STYLE AND LAYOUT

In this volume you will find information about standard styles and layouts that are defined for the user interface of PharmaSuite. You will also learn how to modify the elements of the user interface to fit your purposes.

It consists of the following chapters:

- Changing the General Appearance of PharmaSuite
- Creating and Adapting Forms
- Using Forms in the Production Execution Client
- Using Forms in the Production Management Client
- Adapting the Workflows of the Production Execution Client
- Adapting the Use Cases of the Production Management Client
- Changing the Layout of Forms

VOLUME 2: SEMANTIC (AFFECTING THE WHOLE SYSTEM)

In this volume you will find information about such system functionalities as field attributes, version management, services, audit trail, etc. You will also learn how you can adapt the mechanisms available in PharmaSuite to match your needs, as well as maintain and manage certain elements of the system, such as units of measures, signatures, or users.

It consists of the following chapters:

- Adapting and Adding Field Attributes
- Creating and Extending GUI Activities

- Creating Java Artifacts to Access Application Tables
- Configuring Flexible State Models
- Adapting Versioning Graphs
- Localizing Date and Time Representation
- Managing Services
- Adapting the Order Explosion Service
- Documenting Order- and Workflow-related Changes
- Documenting Skipped and Failed Automatic Transitions of Equipment Entities
- Documenting Object Lock Removal
- Managing Electronic Signatures and Access Rights
- Modifying and Adding Constraints
- Modifying and Adding Checks
- Managing Audit Trail
- Adding Units of Measure and Global Conversion Definitions
- Changing Number Generation Schemes
- Changing or Adding New Reports
- Changing or Adding New Labels
- Working with the Batch Record API
- Adapting the Export for Archive Process
- Adapting the Purge Process
- Defining the Risk Level for Exceptions
- Supporting External Authentication Systems
- Supporting External Exception Review
- Supporting External Interfaces for Equipment Management
- Defining Units of Measure for Potency
- Adapting the About Dialog
- Adding New Scale Drivers
- Providing Localization to Support Different Locales

3

VOLUME 3: SEMANTIC (AFFECTING SPECIFIC AREAS)

In this volume you will find information about providing additional information in Recipe and Workflow Designer or Production Execution Client, etc. You will also learn how you can adapt windows in Recipe and Workflow Designer, Cockpit actions, or user documentation.

It consists of the following chapters:

- Adding Numeric Fields to the Database
- Configuring the Universe of Recipe and Workflow Designer
- Configuring the Setlist of Recipe and Workflow Designer
- Configuring the Property Windows of Recipe and Workflow Designer
- Configuring the Parameter Panel of Recipe and Workflow Designer
- Managing the Layout of Recipe and Workflow Designer and Data Manager
- Configuring the Expression Editor of Recipe and Workflow Designer and Data Manager
- Using ERP BOMs in Recipe and Workflow Designer
- Configuring the Initialization of Material Parameters in Recipe and Workflow Designer
- Extending Comparison in Recipe and Workflow Designer
- Configuring Menu and Toolbar of Recipe and Workflow Designer
- Providing Lists of Pre-defined Texts to Extend Exceptions, Exception Comments, and Signature Comments
- Configuring the Details Window of Data Manager Work Center
- Configuring the Change History of Data Manager Work Center
- Configuring FSMs for Equipment Properties
- Providing Images for Equipment Classes in Data Manager
- Providing Report Designs for (Template) Equipment Entities in Data Manager
- Adding an Equipment Logbook Category Accessible by Phase Building Blocks
- Retrieving Specific Information from the Equipment Logbook
- Configuring Additional Purposes for the Equipment Type Technical Property
 Type
- Adding a Workflow Type to Workflow Designer and the Production Execution Client
- Managing Cockpit Actions of the Production Execution Client
- Configuring Menu and Toolbar of the Production Response Client

- Adding Filter Attributes to the Exception Dashboard of the Production Response Client
- Material Handling for DCS
- Adapting User Documentation

VOLUME 4: CONFIGURATION FRAMEWORK

In this volume you will find information about the methods for managing application configurations, logging and debugging. You will also learn how to administer configuration keys, and which configuration keys are available in PharmaSuite. It consists of the following chapters:

- Managing Configurations (page 11)
- Logging and Debugging (page 25)
- Configuration Keys of PharmaSuite (page 37)

VOLUME 5: EXTENSION USE CASES

In this volume you will find step-by-step instructions for selected extension use cases. As a trained FactoryTalk ProductionCentre and PharmaSuite system integrator, you will learn how to adapt PharmaSuite.

It consists of the following chapters:

- Processing Materials with a Second Potency
- Adding the Second Potency Attribute to ERP BOMs
- Adding the Second Potency Function to the Expression Editor
- Managing Batches in the ConditionallyReleased Status
- Adapting the Approval Workflow of Master Recipes
- Adding the Material Balance Section to the Batch Report
- Displaying a Retest Date Column in the Overview Panel of the Exception Dashboard
- Adding the Print FDA Report Function to PharmaSuite Clients
- Adding the Print QA Report Function to Recipe and Workflow Designer
- Automatic Archiving and Purging of Specific Orders and Workflows
- Displaying Custom Columns in PharmaSuite's Audit Trail
- Using a Locale with Unicode Fonts

REFERENCE DOCUMENTS

Finally, the Reference Documents (page 187) section provides a list of all the documentation that is referenced in this manual.

In Volume 5, each extension use case description comes with its own Reference Documents sections.

Intended Audience

This manual is intended for system engineers who implement customer-specific configurations and extensions to a PharmaSuite standard system.

The system engineers need to have a thorough working knowledge of FactoryTalk ProductionCentre, PharmaSuite, and other components relevant to the configuration or extension use cases.

Some use case require a fully set up PharmaSuite development environment and profound Java know-how.

Typographical Conventions

This documentation uses typographical conventions to enhance the readability of the information it presents. The following kinds of formatting indicate specific information:

Bold typeface	Designates user interface texts, such as	
	window and dialog titles	
	menu functions	
	panel, tab, and button names	
	■ box labels	
	object properties and their values (e.g., status).	
Italic typeface	Designates technical background information, such as	
	path, folder, and file names	
	methods	
	classes.	
CAPITALS	Designate keyboard-related information, such as	
	key names	
	keyboard shortcuts.	
Monospaced typeface	Designates code examples.	

 ${\ \ \ }^{\circ}$ FT PharmaSuite $^{\circ}$ - Technical Manual Configuration and Extension - Volume 4

Extension and Naming Conventions

This section describes how to control efforts for migrating your PharmaSuite installation to upcoming versions. If you cannot observe the guidelines for technical reasons, please report the issue to your dedicated delivery team of Rockwell Automation or your system integrator.

PharmaSuite artifacts fall into two main groups: building blocks and PharmaSuite core artifacts.

- When you wish to modify a building block, use a copy of the building block. For details, see "Technical Manual Developing System Building Blocks" [A2] (page 187).
- When you wish to modify a PharmaSuite core artifact, the extension strategy depends on the artifact itself.
 Modify DSX objects and copy all other PharmaSuite artifacts (e.g., XML configurations for services).

In all cases, please follow the guidelines to control the migration effort (page 7).

Guidelines to Control the Migration Effort

Please ensure that you observe the guidelines listed below.

- 1. Retain the published API
 The published API of PharmaSuite is accessible via the PharmaSuite start page
 ("PharmaSuite-related Java Documentation" [C1] (page 188)).
 - If you adapt PharmaSuite on Java level, you must only use the published PharmaSuite Java API.
 - Published interfaces will only be changed if necessary. Changes to these interfaces and classes will be announced in future release notes.
 - Avoid using methods and classes that are not published, classes from the implementation package (...impl...), or Pnuts functions from any PharmaSuite subroutine.

These classes and functions may change in future versions of PharmaSuite without notification.

2. Rather modify than copy

Whenever you wish to extend/modify any object of PharmaSuite in Process Designer (DSX objects), just override the object, except for the following objects:

- For the Application object Default Configuration, apply the mechanism of nested configurations in order to reduce a potential migration effort. PharmaSuite provides the PS Administration application to administer database objects such as access privileges, lists, applications, users, or user groups, see "Implementation Guide PS Administration" [A1] (page 187). Using Process Designer for these tasks is possible, but does not provide the full functional scope required for PharmaSuite. For information on the administration of database objects with Process Designer in this case, please refer to chapter "Managing Configurations" (page 11) in Volume 4 of the "Technical Manual Configuration and Extension".
- For **FSMs** (flexible state models), structural changes (i.e., changes to states and transitions) are not allowed in order to enable a later system migration. Modifications of semantic properties can be applied to the standard FSM. They do not impact a system migration.

When you migrate your PharmaSuite installation to another version, PharmaSuite Update and Migration displays a warning if a standard object was changed. Subsequently, you can decide whether to adapt your extension, ignore the changes delivered with the new version, or replace your extension with the new version (if applicable).

3. Mark your objects

When naming your artifacts (e.g., objects in Process Designer, classes, interfaces, methods, functions, building blocks), use specific prefixes for your objects. The main purpose of the naming conventions is to prevent naming conflicts with deliverables from other vendors or with other versions.

- Define and make use of a vendor code consisting of up to three uppercase letters as prefix (e.g., MYC for the My Company vendor code).
 The X_ and RS_ prefixes are reserved for PharmaSuite and PharmaSuite-specific product building blocks, respectively.
- Do not reuse any of the prefixes of PharmaSuite objects in Process Designer in order to avoid conflicts during migration.
- This guideline also applies to UDA definitions and column names of application tables.
- Additional conventions apply to building blocks (page 9).

If you do not observe the guidelines, an update process during system migration may fail due to conflicts.

Building Block-specific Conventions

Besides the general conventions (page 7), additional conventions apply to building blocks related to vendor code, version number, and length restrictions:

1. Vendor code

- It must be appended to the name of a phase or parameter class used in the UI (enclosed in round brackets).
- It must be used as prefix for the AT definitions.
- The package name must also contain a vendor reference. You can either use the vendor code or write out the company's full name.

2. Version number

- The version number consists of two components, an integral part to refer to a major version and a fractional part to refer to a minor version, e.g., 2.1.
- It must be appended to the name of the phase or parameter class used in the UI and to the base name used for the generated artifacts.
- For the UI, the version number is enclosed in square brackets, e.g., [2.1].
- Internal names must not contain brackets and dots, since Java does not allow the usage of these characters. Therefore, the last four characters are reserved for the version number, with digits 1 and 2 representing the major version and digits 3 and 4 representing the minor version. The format is xxyy, e.g., 0201 for version [2.1], 0100 for version [1.0], or 0113 for version [1.13].

3. Length restrictions

- The maximum length of the **name** of a phase or parameter class used in the UI is 64 characters.
- The maximum length of the **base name** of a phase building block or parameter class is 18 characters (14 for the name, 4 for the version).

Examples:

Hello World phase of My Company with vendor code MYC in version 2.1

```
<Name>Hello World Phase (MYC) [2.1]
<PhaseLibBaseName>HelloWorld0201</PhaseLibBaseName>
<ATDefinitionPrefix>MYC</ATDefinitionPrefix>
<PackageName>com.mycompany.phase.helloworld</PackageName>
```

■ My Parameter parameter class of My Company with vendor code MYC in version 1.0

```
<Name>My Parameter (MYC) [1.0]
<ParamClassBaseName>MyParam0100</paramClassBaseName>
<ATDefinitionPrefix>MYC</ATDefinitionPrefix>
<PackageName>com.mycompany.parameter.myparam</PackageName>
```

Oracle Database Data Types: varchar2 and nvarchar2

When you define text fields for FactoryTalk ProductionCentre application tables or UDAs, you should be aware that there are significant differences between the **varchar2** and **nvarchar2** data types used by Oracle databases.

- The maximum field length for both database data types is restricted to 4000 bytes.
- A field of the **nvarchar2** data type works as expected: For a 4000 characters text field, you can only insert the maximum of 2000 2-byte UTF8 characters or 1300 3-byte UTF8 characters. PharmaSuite text input fields check the number of bytes.
- For an Oracle 11 database, a field of the **varchar2** data type can only handle 1000 2-byte UTF8 characters or 667 3-byte UTF8 characters. In this case, PharmaSuite text input fields check the byte length and prevent the database exception "ORA-01704: string literal too long".

TIP

Previous versions of FactoryTalk ProductionCentre (prior to 9.3) and PharmaSuite (prior to 5.0) contained varchar2 database data type definitions instead of nvarchar2. Therefore, a migrated PharmaSuite system may contain varchar2 definitions and the maximum length of a varchar2 database field may be defined in maximum number of bytes. In this case, if a text does not only contain 1-byte UTF8 characters, the byte length is greater than the char length and can cause a "value too large exception" (ORA-01401: inserted value too large for column, ORA-12899: value too large for column).

For this reason, we recommend to migrate all **varchar2** fields to **nvarchar2** fields. A migrated FactoryTalk ProductionCentre database should have the same database schema as the database of a newly installed FactoryTalk ProductionCentre system and only contain **nvarchar2** database data type field definitions.

Managing Configurations

TIP

PharmaSuite provides the PS Administration application to administer database objects such as access privileges, lists, applications, users, or user groups, see "Implementation Guide PS Administration" [A1] (page 187).

Using Process Designer for these tasks is possible, but does not provide the full functional scope required for PharmaSuite. For information on the administration of database objects with Process Designer in this case, please refer to the FactoryTalk ProductionCentre documentation. In particular, see sections "Applications" and "CONFIGURATION_PROPERTY" in "Process Designer Online Help" [B1] (page 187).

This section contains general information about application configurations (page 12), hierarchical configurations in PharmaSuite (page 12), and the dynamic change of a configuration (page 20). It also provides the characteristics of configuration keys (page 15), how to define configuration keys (page 21), and how to override configuration keys in unit tests (page 24).

To define a configuration key, perform the following steps:

- 1. Define (page 21) the configuration key.
- 2. Run the application with the updated configuration key settings.
- 3. Verify the system behavior.

What Are Application Configurations?

An Application Configuration represents a collection of Configuration Items, also referred as configuration keys. Application Configurations are a prerequisite for the management of configuration keys. Configuration keys are defined in the FactoryTalk ProductionCentre **Application** objects.

What Are Hierarchical Configurations?

PharmaSuite supports multi-level hierarchical configurations in order to provide a flexible support for adapting and migrating multiple applications.

Typical use cases for hierarchical configurations are:

- separation of standard, global customer, and customer-site specific configuration keys
- overwriting global configuration keys for specific stations, user groups, or users.

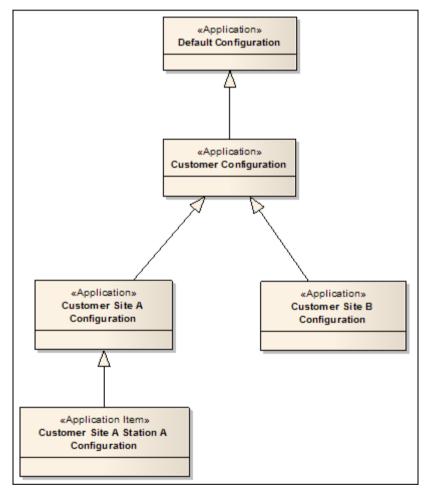


Figure 1: Example of the separation of configuration items using nested application objects

A hierarchical configuration is defined by linking multiple Application objects in a tree. The top-level root of the tree is represented by the Application object **DefaultConfiguration**, which must not be modified.

The **configuration keys** defined on the **DefaultConfiguration** level are overwritten by customer-specific configuration keys, which are defined on the **Customer** level (here: **Customer Configuration**). The customer configuration keys are overwritten by items defined on the **Customer Site** level (here: **Customer Site A Configuration**, **Customer Site B Configuration**), etc.

The most specific Application object is defined by the BootstrapApp parameter of a User, User group, or Station object (via the Customizer dialog). At runtime, this parameter is first searched in the current User object, then in its User group objects, and finally in the current Station object.

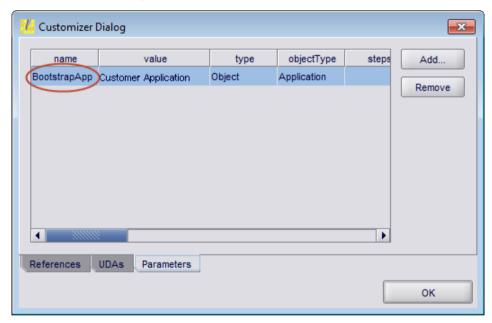


Figure 2: Define a bootstrap application

For the definition of an application configuration hierarchy, the Bootstrap

Application object references another Application object, which also refers to another

Application object, and so on. Here, the string of references ends with the Application

object Default Configuration. The hierarchy is built up in the details frame of the

Application object by dragging and dropping a nested Application object (here: Default

Configuration) into a more specific Application object (here: Customer Application).

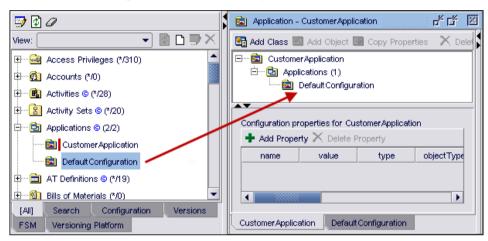


Figure 3: Build up an application hierarchy tree

This approach allows you to overwrite configuration keys by adding them to a more specific **Application** object in the configuration tree.

TIP

We do not recommend to change configuration keys directly on the top-level application **Default Configuration**.

Version Information of PharmaSuite JAR Files

The PharmaSuite JAR files are maintained as **Library** objects in Process Designer. The JAR file's version is included in the JAR file name and the **name** and **userVersion** attributes of the **Library** object.

Characteristics of Configuration Keys

A configuration key consists of three components:

[<type-name>[/<instance-name>]/]property-key>

- <type-name>
 - FactoryTalk ProductionCentre buildtime object class. The buildtime object must be supported (page 18).
 - Optional component.
- <instance-name>
 - Particular FactoryTalk ProductionCentre buildtime object instance of the type defined by **<type-name>**.
 - Optional component, requires <type-name>.
- property-key>
 - Key itself. It must not contain any slashes ("/"). If you need to create a grouping of the property-key parameters, use the "." notation instead (analogous to the notation of Java property files).

In **Application** objects, the configuration keys can be grouped by specifying them on the application level, type level (also referred to as class level), and instance level. Hence, it is possible to attach configuration keys inside an **Application** object to FactoryTalk ProductionCentre buildtime instances, FactoryTalk ProductionCentre buildtime classes, or to the application itself.

TIP

Please keep in mind that the spelling of a key is case-sensitive and the key length depends on FactoryTalk ProductionCentre. For PharmaSuite, the length is <= 64 characters.

Configuration Keys of Phase Building Blocks

PharmaSuite provides the **Phase** type for configuration keys of phase building blocks. The phase itself corresponds to the instance level (e.g. ShowHistoricalDataChartPhase).

Example: Phase/Show Historical Data Chart Phase/Historical Data Chart Report Resolution

- Phase
 - ShowHistoricalDataChartPhase
 - HistoricalDataChartReportResolution

Lookup Mechanism

This section outlines the FactoryTalk ProductionCentre lookup mechanism for configuration keys in **Application** objects.

In the example below, the system performs the following steps when searching for the **Form/ConfKeyForm/key** configuration key.

Instance level (station)
 First, the system searches for the Form/ConfKeyForm/key key in the current station (here: ConfKeyStation).

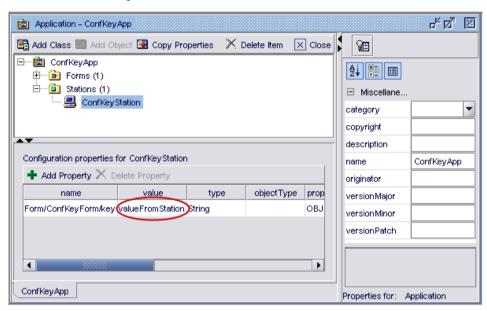


Figure 4: Lookup on instance level (station)

2. Instance level (form)

If the search on the instance level (station) was not successful, the system searches in a particular instance of the **ConfKeyForm** form in the forms of the **Application** object (here: **ConfKeyApp**). If the key is specified in the form, we will receive its value.

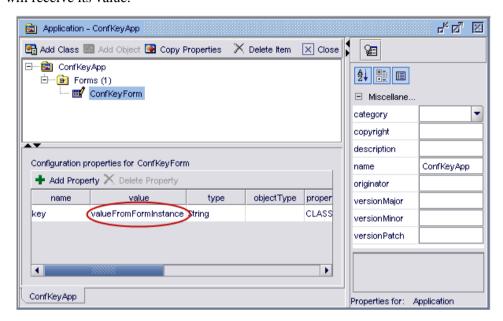


Figure 5: Lookup on instance level (form)

Class level

If we specified the key on class level, only the search on this level would yield a value due to the implicit default mechanism of FactoryTalk ProductionCentre.

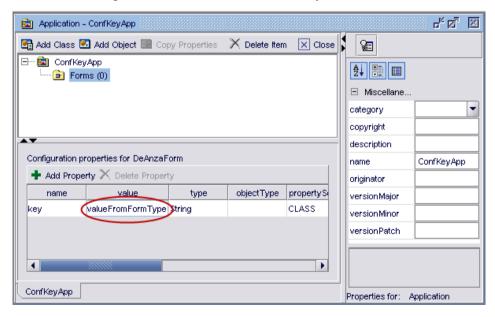


Figure 6: Lookup on class level

3. Application level

If we still do not get a value for the **Form/ConfKeyForm/key** key, the system searches for the key in the configuration properties on the application level.

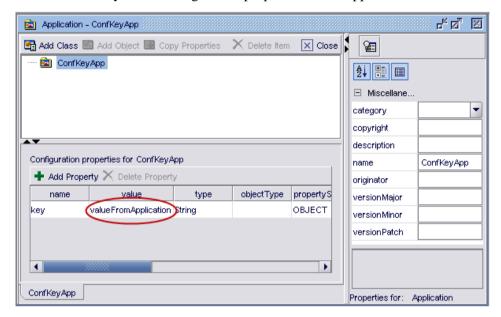


Figure 7: Lookup on application level

The steps (1.) to (3.) are repeated for all nested applications and their nested applications in the configuration hierarchy tree. If no value is found, the default value defined by the API is returned.

Supported Buildtime Objects

The following types of buildtime objects are supported as application configuration keys. Their names must be specified as the first part of the configuration key. Please consider the correct spelling given here (it might differ from the spelling of the names as displayed in Process Designer).

- AccessPrivilege
- Account
- ActivitySet
- ATDefinition
- BillOfMaterials
- Carrier
- CarrierClass
- Equipment
- EquipmentClass
- FlexibleStateModel

19

- Form
- Hierarchy
- LabelDataDefinition
- LabelDesign
- LibraryHolder
- List
- Locale
- Location
- MasterRecipe
- Messages
- Part
- PartClass
- ProcessBom
- ProductionLine
- ProductionQueue
- ReportDataDefinition
- ReportDesign
- ResourceCondition
- ResourceRoute
- Route
- SemanticProperty
- SemanticPropertySet
- Station
- TestDefinition
- User
- UserGroup
- WorkCenter
- WorkInstruction

Logging of Customer-specific Configuration Keys

Customer-specific configurations and their associated configuration keys that are defined on the customer level are logged in the default logging folder of PharmaSuite in the Windows default user directory:

.../Documents and Settings/<User>/ApplicationData/Rockwell Automation/FactoryTalk ProductionCentre/Logs/PlantOpsClient/ApplicationConfigurationSettings.log.

This file includes not only the customer-specific configuration keys and their values, it also contains the application name, the application configuration keys, and their instances. The log file provides information at client start-up including the logged-in user, current station, work center, and the current date and time.

Dynamic Change of Configuration

Each time a user logs into a PharmaSuite application the configuration is loaded based on the current user and station configuration. However, it is possible to refresh the **MESConfiguration** configuration and notify listeners that are interested in the event. The API of the **MESConfiguration** configuration supports this feature with the following static methods:

- addRefreshListener allows to add a listener to be notified after the reload has taken place. It is possible to add multiple listeners.
- removeRefreshListener allows to remove a listener.
- refresh removes the existing configuration and reloads it from the middle tier based on the current user and station. After the reload, all registered listeners are notified.

A user or station change is probably the most common use case for a reload of the **MESConfiguration** configuration. However, keep in mind that most configuration keys are expected to be identical for all users and stations across the system. That leaves only very specific configuration keys, which may require your application or building block to register for configuration key changes. For details, see the description of the configuration keys in chapter "Configuration Keys of PharmaSuite" (page 37).

TIP

Do not store configuration items in fields of a class. In this case, you create a local cache, which can get out of sync with the current set of configuration items. Keep in mind that some other data like style sheet data is derived from the **MESConfiguration** configuration. If you need to use a cache, consider to register the class as a listener to the **MESConfiguration** refresh events.

Defining a Configuration Key

To define a configuration key, proceed as follows:

- 1. In Process Designer, expand the **Applications** node and open the relevant **Application** object.
- 2. In the details frame of the **Application** object, select the item whose configuration key you are defining.
 - An item is the application, a class of the application, or an instance of a class.
- 3. If the configuration key does not exist:
 In the configuration properties frame, click the **Add Property** button and enter the required data.
- 4. If the configuration key already exits:
 In the configuration properties frame, select the cell whose value should be updated. Modify the value.
- 5. Save the **Application** object.

Defining a Station-specific Configuration Key

Station-specific configuration key can be defined in two, different approaches:

Approach 1

- Create a Station-specific **Application** object for each station you want to configure specifically.
- Place the Station-specific configuration key inside the **Application** object.
- Assign the **Application** object via a **BootstrapApp** parameter to the station.

Approach 2

- Add the Stations class to your project or site-specific **Application** object and drop all stations you want to configure underneath.
- Place the station-specific configuration key under the specific station.

The standard product configuration of PharmaSuite does not allow to use the first approach directly, as it requires more in-depth configuration change.

A station-specific **Application** object will never be used, because the **UserGroup MinimalAccess** has a **BootstrapApp** parameter configured, and once that is found the search for station-specific **Application** object stops.

Therefore, it is recommended to use the second approach, as it allows to keep the configuration at a single **Application** object. The drawback of the first approach is that you have to deal with a potentially large number of **Application** objects.

It is also recommended to use the most frequently used value of a specific configuration key as default. To configure a **default value** for a specific configuration key, place that key at the class level.

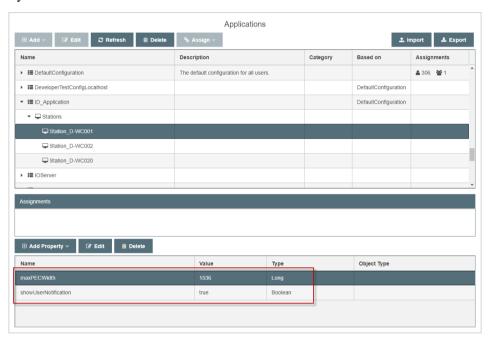


Figure 8: Application object with width configuration on specific stations (PS Administration)

TIP

When retrieving the configuration key, make sure to distinguish between this configured **default value** and the one that is used within the code. The configured **default value** can be changed by administration, while the one used within the code is used as fallback value if the configuration key is not found within the **Application** object.

Retrieving a Station-specific Configuration Key

The following example presents how to retrieve a station-specific configuration key by code:

Example: Retrieving Station-specific Configuration Key

TIP

Please be sure to use the name of your current station (**stationName**) within your query string.

Overriding Configuration Keys in Unit Tests

When unit testing a method that depends on configuration settings, it is sometimes desirable to set the value of a configuration key without changing the database. A typical use case is: you are about to test a method that depends on a Boolean key and you probably wish to call the method twice from your unit tests, once for true and once for false. So your test will cover the tested code completely.

Use the *ConfigurationUnitTestHelper* class to perform a unit test in this way:

```
// preset a certain configuration key to false
ConfigurationUnitTestHelper.getCache().setBoolean(theConfigKey, false);

// call method to test which depends on "theConfigKey" and check its result
...
```

TIP

Tests that run in the same Java process will see the modifications made to the configuration cache. Thus, when you write a unit test it is recommended to check which configuration keys will be read during the test and to set the values for all these keys to a defined value upfront. This approach has the additional advantage that the unit test is not affected if the default value for such a configuration key changes in the database.

Logging and Debugging

This section describes the configuration of the PharmaSuite logging capability and how it can be used for debugging purposes. We assume that the reader is familiar with the basic concept of log4j logging and the logging capabilities of FactoryTalk ProductionCentre in general.

Logging is typically used for the following reasons:

- to document certain events of the system. Typical events are startup, shutdown of an application, malfunction of specific function.
- to trace internal events for debugging purposes.

PharmaSuite is pre-configured to write logger events of the types mentioned under first bullet to a log file and the console. It does not automatically log other events. However, if you implement new functions or you wish to analyze a certain behavior in greater detail, you can use more elaborate log settings to have more information logged.

Configuring the Logging Capability

PharmaSuite logging capability uses **log4j**. For more information on the log4j package, please refer to Apache Logging Services Project [D1] (page 188).

PharmaSuite supports the configuration of log4j on different levels:

- 1. log4j.properties
 - This is the default, fallback configuration property file. Unfortunately, this file is one of quite a number of files of a Java package. For this reason, we cannot depend on this file alone.
- log4j_ftps.properties
 This is the PharmaSuite-specific property file. This file is part of the PharmaSuite delivery. It affects the logging behavior of all clients.
- 3. log4j_custom.properties
 - This property file is not part of the PharmaSuite delivery. A system integrator can create this file to override the default PharmaSuite settings. This property file will be searched on the classpath. In order to make PharmaSuite find it, it is sufficient to create a JAR file containing the desired *log4j_custom.properties* file. Then load the JAR file as library into Process Designer. It affects the logging behavior of all clients.

4. *log4j_custom_local.properties*This property file is optional. If it is stored in the log directory of a running process, it affects only the behavior of this process.

- Example: The EBR server has been started as a service on the server. log4j_custom_local.properties is stored in <installDirectory>\installation\services\PharmaSuite_EBR_Server\logs\ where <installDirectory> is the default installation path on the server (C:\Rockwell\PharmaSuite).
 - You can also create the file manually on the client.
- Examples: A Shop Operations Client has been started in a browser on the client.

log4j_custom_local.properties is stored in

- *C:\.FTPC\<MES-PS-HOST>\ProductionCentre\logs\PlantOpsClient* where *<MES-PS-HOST>* is the name of your PharmaSuite server.
- C:\Users\<Windows user>\AppData\Roaming\Rockwell Automation\FactoryTalk ProductionCentre\logs\PlantOpsClient\ where <Windows user> is the logged-in Windows user.

TIP

The *log4j* property files of levels 1 through 3 are only loaded when they exist when PharmaSuite is started.

The loading behavior related to a *log4j_custom_local.properties* file is as follows: the creation and changes are dynamically watched every 10 seconds. If the file does not exist on service start, it is also possible to create the file later, when the service is running. This is useful to trace the behavior of services with different log switch settings and without the necessity to restart the service.

The output of the logger is written to the console and the PharmaSuite log file for a Shop Operations Client. The log file name consists of a client prefix and *ftps.log*. Example: *ApplicationStart_ProductionExecutionClient-ftps.log*.

The log file name of a Shop Operations Server consists of *<PharmaSuite event sheet name>-ftps.log*. Example: *PharmaSuite_EBR_Server-ftps.log*.

In the default configuration, the **log file for clients** (e.g. Shop Operations) is located under

*C:\.FTPC\<MES-PS-HOST>\ProductionCentre\logs\PlantOpsClient\prefix>-ftps.log.
This directory also contains all the other <i>PlantOpsClient*-specific log files. For more information, please refer to the FactoryTalk ProductionCentre configuration documentation.

All log4j properties files have the same structure. When there are several properties files defined, the most general settings, as stated in the *log4j.properties* file, are overridden by the more specific settings stated in the other properties files. Thus, settings of *log4j.properties* are overridden by settings of *log4j_ftps.properties*, which in turn can be overridden by settings defined in *log4j_custom.properties* and so forth. This means a setting in the *log4j_custom_local.properties* file overrides any setting in a more general log4j properties file.

An example of the PharmaSuite-specific *log4j_ftps.properties* (page 28) file is given below.

Configuring log4j Properties Files

When configuring the log4j properties files you can set various log levels and use loggers to further refine your configuration.

LOG LEVELS

The following hierarchy applies to the log levels used by log4j:

ALL < TRACE < DEBUG < INFO < WARN < ERROR < FATAL < OFF

ALL is the most verbose setting. Each logger entry will be written to the log file. **OFF** is the least verbose setting, where no logger entry will be written to the log file. The **DEBUG** log level means that all logger entries with **DEBUG** or higher (**INFO**, **WARN**, **ERROR**, **FATAL**, **OFF**) will be written to the log file.

TIP

Due to a dependency to FactoryTalk ProductionCentre, currently the **TRACE** log level is only available to a limited extent. Therefore it will be mapped to the **DEBUG** log level. If **DEBUG** is your configured log level, also all **TRACE** messages are logged. Since the **TRACE** messages are logged with **DEBUG** as prefix, they cannot be distinguished from **DEBUG** logs.

LOGGERS

You can configure the effective log level for entire packages down to single Java source files. The default setting for all Java files that are part of *com.rockwell* is **WARN**, unless something else is specified in *log4_ftps.properties*. **WARN** means that logger entries with this log level or higher will be written to the log file.

To switch on the **DEBUG** level for the

log4j.logger.com.rockwell.mes.clientfw.pec.ifc.helper.InOutputPropertiesOfForm class, add the following line to the log4j properties file.

log4j.logger.com.rockwell.mes.clientfw.pec.ifc.helper.InOutputPropertiesOfForm=DEBUG

TIP

Please note the log4j.logger prefix that precedes the fully qualified class name.

If you wish this setting to be only temporary and to apply only to one specific station, add the line to the <code>log4j_custom_local.properties</code> file on the respective station.

SAMPLE CONFIGURATION FILE: LOG4J_FTPS.PROPERTIES

The default configuration of the PharmaSuite-specific *log4j_ftps.properties* file is as follows.

```
# This is the root configuring for logging
log4j.rootCategory=WARN, stdout, logfile
### direct log messages to stdout ###
log4j.appender.stdout=org.apache.log4j.ConsoleAppender
log4j.appender.stdout.Target=System.out
log4j.appender.stdout.layout=org.apache.log4j.PatternLayout
### log to file ###
log4j.appender.logfile=org.apache.log4j.RollingFileAppender
log4j.appender.logfile.File=${PCContext.logPath}/${PCContext.logFilePrefix}-ftps.log
log4j.appender.logfile.MaxFileSize=5MB
log4j.appender.logfile.MaxBackupIndex=10
log4j.appender.logfile.layout=org.apache.log4j.PatternLayout
log4j.appender.logfile.layout.ConversionPattern=%d{ISO8601} [%t] %5p %c{1}\:%L - %m%n
# If programmed properly the most messages would be at DEBUG and the least at FATAL.
log4j.logger.com.rockwell=WARN
# Control logging for other open source packages
log4j.logger.org.apache.commons=ERROR
```

The most important configuration properties are at the last two properties defined:

■ This line indicates that all logger entries higher than or equal to **WARN** will be written to the log file.

This setting affects all packages starting with com.rockwell.

```
log4j.logger.com.rockwell=WARN
```

This line indicates that all logger entries higher than or equal to **ERROR** will be written to the log file.

This setting affects all packages starting with org.apache.commons.

```
log4j.logger.org.apache.commons=ERROR
```

Debugging Support

This section describes some common use cases where it may be helpful to use special log settings for debug purposes.

Workflow Analysis

PharmaSuite uses activity sets to implement pre-defined workflows. If a specific workflow does not work as expected and even if you are developing a new workflow, you may wish to see which activity steps are executed and which data is being passed in and out of each activity step.

To feed this information to the log file, add the following line to your local *log4j_custom_local.properties* file:

```
log4j.logger.com.rockwell.mes.clientfw.pec.ifc.helper.InOutputPropertiesOfForm=DEBUG
```

If you start the **Material Receipt** workflow with this setting, the logging output will be similar to the sample log shown below. Each time a *FormActivity* (subclass of *BaseFormActivity*) is completed it dumps its output properties including the current values. The sample dump below shows a walk through the **Material Receipt** workflow

```
start thread=ActivitySet=GoodsReceipt/Step=asCheckStationIsSet
start thread=ActivitySet=GoodsReceipt/Step=asStepCreateTHContext
start thread=ActivitySet=as wip GoodsReceiptSelectPart/Step=asMarkUnfinished
start thread=activityControlThread
13:15:24,382 DEBUG InOutputPropertiesOfForm:159 - Form [pec FilterPartsForm] OutputItems:
13:15:24,413 DEBUG InOutputPropertiesOfForm:164 - Output [filter] Value: [ WHERE (
PART.part_number LIKE 'D001%' ) )
start thread=activityControlThread
13:15:29,444 DEBUG InOutputPropertiesOfForm:159 - Form [pec GoodsReceiptSelectPart]
OutputItems:
13:15:29,444 DEBUG InOutputPropertiesOfForm:164 - Output [GoodsReceipt selectedPart]
Value: [D001-11.1]
13:15:29,444 DEBUG InOutputPropertiesOfForm:164 - Output [nextStep] Value:[1]
13:15:29,444 DEBUG InOutputPropertiesOfForm:164 - Output [orderStep] Value:[null]
13:15:29,444 DEBUG InOutputPropertiesOfForm:164 - Output [partFilter] Value: [ WHERE
( PART.part number LIKE 'D001%' ) ) ]
13:15:29,444 DEBUG InOutputPropertiesOfForm:164 - Output [selectablePartsConstraint]
Value: [null]
```

```
start thread=ActivitySet=as wip GoodsReceiptSelectPart/Step=asMarkFinished
start thread=activityControlThread
13:15:35,226 DEBUG InOutputPropertiesOfForm:159 - Form [pec GoodsReceiptCreateBatch]
OutputItems:
13:15:35,226 DEBUG InOutputPropertiesOfForm:164 - Output [GoodsReceipt batch]
Value: [BX307]
13:15:35,226 DEBUG InOutputPropertiesOfForm:164 - Output [GoodsReceipt_selectedPart]
Value: [D001-11.1]
13:15:35,226 DEBUG InOutputPropertiesOfForm:164 - Output [orderStep] Value:[null]
start thread=ActivitySet=as wip GoodsReceiptSelectStorageLocation/Step=asMarkUnfinished
start thread=activityControlThread
13:15:43,616 DEBUG InOutputPropertiesOfForm:159 - Form [pec FilterLocationsForm]
OutputItems:
13:15:43,647 DEBUG InOutputPropertiesOfForm:164 - Output [filter] Value: [ WHERE ( (
LOCATION.location LIKE 'W%' ) AND ( UDA_Location.X_hierarchy_I=0 ) ) ]
start thread=activityControlThread
13:15:45,382 DEBUG InOutputPropertiesOfForm:159 - Form
[pec GoodsReceiptSelectStorageLocation] OutputItems:
13:15:45,382 DEBUG InOutputPropertiesOfForm:164 - Output [GoodsReceipt batch]
Value: [BX307]
13:15:45,382 DEBUG InOutputPropertiesOfForm:164 - Output [GoodsReceipt selectedLocation]
Value: [WD Location]
13:15:45,382 DEBUG InOutputPropertiesOfForm:164 - Output [GoodsReceipt selectedPart]
Value: [D001-11.1]
13:15:45,413 DEBUG InOutputPropertiesOfForm:164 - Output [locationFilter] Value: [WHERE
( (LOCATION.location LIKE 'W%' ) AND (UDA_Location.X_hierarchy_I=0 ) ) ) ]
13:15:45,413 DEBUG InOutputPropertiesOfForm:164 - Output [selectableLocationsConstraint]
Value: [null]
start thread=ActivitySet=as wip GoodsReceiptSelectStorageLocation/Step=asMarkFinished
start thread=ActivitySet=GoodsReceipt/Step=asStepPrepareSublotCreation
start thread=activityControlThread
13:15:57,460 DEBUG InOutputPropertiesOfForm:159 - Form [pec GoodsReceiptCreateSublots]
OutputItems:
13:15:57,460 DEBUG InOutputPropertiesOfForm:164 - Output [GoodsReceipt_batch]
Value: [BX307]
13:15:57,460 DEBUG InOutputPropertiesOfForm:164 - Output [GoodsReceipt selectedLocation]
Value:[WD Location]
13:15:57,460 DEBUG InOutputPropertiesOfForm:164 - Output [GoodsReceipt selectedPart]
Value: [D001-11.1]
13:15:57,460 DEBUG InOutputPropertiesOfForm:164 - Output [GoodsReceipt vectorSublots]
Value: [[SL00001284]]
13:15:57,460 DEBUG InOutputPropertiesOfForm:164 - Output [orderStep] Value:[null]
13:15:57,460 DEBUG InOutputPropertiesOfForm:164 - Output
[transactionHistoryClientContext] Value:[45c90ae2-a1ed-4c3e-a6dc-eb27c9df45b4]
start thread=activityControlThread
13:16:18,835 DEBUG InOutputPropertiesOfForm:159 - Form [pec GoodsReceiptPrintLabels]
OutputItems:
13:16:18,835 DEBUG InOutputPropertiesOfForm:164 - Output [GoodsReceipt batch]
Value: [BX307]
13:16:18,835 DEBUG InOutputPropertiesOfForm:164 - Output [GoodsReceipt selectedLocation]
Value:[WD Location]
13:16:18,835 DEBUG InOutputPropertiesOfForm:164 - Output [GoodsReceipt selectedPart]
Value: [D001-11.1]
13:16:18,835 DEBUG InOutputPropertiesOfForm:164 - Output [GoodsReceipt vectorSublots]
Value: [[SL00001284]]
13:16:18,835 DEBUG InOutputPropertiesOfForm:164 - Output [nextStep] Value:[null]
13:16:18,835 DEBUG InOutputPropertiesOfForm:164 - Output [orderStep] Value:[null]
```

31

Barcode Support

Barcode scanning is frequently used for various identification purposes. Software interprets a barcode scan operation as keyboard input. Each scan starts with a specific start key, followed by the barcode with its specific format, and ends with another specific end character.

To analyze how keyboard input is processed and how barcode scanning is being processed, switch on **DEBUG** logging for the *BarcodeListener*.

To feed this information to the log file, add the following line to your local *log4j_custom_local.properties* file:

```
log4j.logger.com.rockwell.mes.commons.base.ifc.BarcodeListener=DEBUG
```

If you start an EBR recipe like the following **Dispense**-related process with this setting, the logging output will be similar to the sample log shown below.

```
13:21:30,132 DEBUG BarcodeListener:643 - ignoreKeyEvents(false)
13:21:36,960 DEBUG BarcodeListener:643 - ignoreKeyEvents(true)
13:21:37,772 DEBUG BarcodeListener:643 - ignoreKeyEvents(false)
start thread=activityControlThread
13:21:37,819 DEBUG BarcodeListener:643 - ignoreKeyEvents(true)
13:21:46,866 DEBUG BarcodeListener:643 - ignoreKeyEvents(false)
13:21:53,147 DEBUG BarcodeListener:437 - Time: 1319541713147
13:21:55,585 DEBUG BarcodeListener:437 - Time: 1319541715585 ''
13:22:01,819 DEBUG BarcodeListener:294 -
java.awt.event.KeyEvent[KEY PRESSED, keyCode=524, keyText=Windows, keyChar=Undefined
keyChar, keyLocation=KEY LOCATION LEFT, rawCode=91, primaryLevelUnicode=0, scancode=91] on
ConfirmButton
13:22:02,335 DEBUG BarcodeListener:158 - startKey
13:22:02,335 DEBUG BarcodeListener:294
java.awt.event.KeyEvent[KEY RELEASED, keyCode=115, keyText=F4, keyChar=Undefined
keyChar, keyLocation=KEY LOCATION STANDARD, rawCode=115, primaryLevelUnicode=0, scancode=62
] on ConfirmButton
13:22:02,335 DEBUG BarcodeListener:295 - scanActive=true isIgnoreKeyEvents=false
13:22:02,351 DEBUG BarcodeListener:294
java.awt.event.KeyEvent[KEY PRESSED, keyCode=16, keyText=Shift, keyChar=Undefined
keyChar, modifiers=Shift, extModifiers=Shift, keyLocation=KEY LOCATION LEFT, rawCode=16, pri
maryLevelUnicode=0,scancode=42] on ConfirmButton
```

Focus Issues Analysis

Production Execution Client processes and workflows are designed to be operated without a pointing device such as a mouse. This requires the application to be sensitive to focus settings. To analyze this, you can switch on logging of the tabulation sequence when entering a **FormActivity**. In Process Designer, enable the developer-mode for the user you use and, in Process Designer, start the Production Execution Client. Press the CTRL+F2 key combination to get the current focus owner logged.

To feed this information to the log file, add the following line to your local $log4j_custom_local.properties$ file:

log4j.logger.com.rockwell.mes.clientfw.commons.ifc.helper.MesTabulationSequence=DEBUG

If you start the **Material Receipt** pre-defined workflow with this setting, the logging output will be similar to the sample log shown below. The tabulation sequence is printed after entering the **Filter Materials** step. In addition, the CTRL+F2 key combination was pressed once to display the current focus owner.

```
start thread=ActivitySet=GoodsReceipt/Step=asCheckStationIsSet
start thread=ActivitySet=GoodsReceipt/Step=asStepCreateTHContext
\verb|start thread=ActivitySet=as_wip_GoodsReceiptSelectPart/Step=asMarkUnfinished| \\
start thread=activityControlThread
13:46:50,554 DEBUG MesTabulationSequence:279 - 0. pec_FilterPartsForm(Form)
13:46:50,554 DEBUG MesTabulationSequence:261 - 1. 0 : panelData(Panel)
                                                                                                   1. 10 : comboboxPartName(ComboBox)
2. 15 : editPartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(PartName(P
                                                                                                  1. 27 : groupboxBasicData(GroupBox)
13:46:50,554 DEBUG MesTabulationSequence:261 -
13:46:50,554 DEBUG MesTabulationSequence:261 -
13:46:50,554 DEBUG MesTabulationSequence:261 - 13:46:50,554 DEBUG MesTabulationSequence:261 -
                                                                                                         3. 20:
13:46:50,554 DEBUG MesTabulationSequence:261 -
comboboxPartDescription(ComboBox)
13:46:50,554 DEBUG MesTabulationSequence:261 -
                                                                                                         4. 25 : editPartDescription(Edit)
13:46:50,585 DEBUG MesTabulationSequence:261 -
                                                                                                         5. 30 : comboboxPartType(ComboBox)
                                                                                                         6. 36 : labelMaxRows(FlatLabel)7. 37 : smartEditMaxRows(SmartEdit)
13:46:50,601 DEBUG MesTabulationSequence:261 -
13:46:50,601 DEBUG MesTabulationSequence:261 -
                                                                                                         8.38:
13:46:50,601 DEBUG MesTabulationSequence:261 -
activityControlPartType(ChoicelistFieldActivity)
13:46:50,601 DEBUG MesTabulationSequence:261 -
                                                                                                              1. 0 : comboBox (ComboBox)
13:46:50,601 DEBUG MesTabulationSequence:261 -
                                                                                                   2. 28 : groupboxSort(GroupBox)
13:46:50,601 DEBUG MesTabulationSequence:261 -
                                                                                                       1. 100 : comboboxSort(ComboBox)
13:49:58,147 DEBUG MesTabulationSequence:223 - Focus:
com.datasweep.compatibility.ui.Edit$EditTextField[,0,0,580x25,layout=javax.swing.plaf.b
asic.BasicTextUI$UpdateHandler,alignmentX=0.0,alignmentY=0.0,border=javax.swing.border.
CompoundBorder@159a197,flags=296,maximumSize=,minimumSize=,preferredSize=java.awt.Dimen
sion[width=75,height=25],caretColor=javax.swing.plaf.ColorUIResource[r=0,g=0,b=64],disa
bledTextColor=java.awt.Color[r=100,g=100,b=100],editable=true,margin=javax.swing.plaf.I
nsetsUIResource[top=2,left=3,bottom=2,right=2],selectedTextColor=javax.swing.plaf.Color
UIResource[r=0,q=0,b=64],selectionColor=javax.swing.plaf.ColorUIResource[r=158,q=191,b=
227],columns=0,columnWidth=0,command=,horizontalAlignment=LEFT](Edit$EditTextField)
```

Analysis of Expression Evaluation in Input Parameters during Execution

In order to model the information flow throughout your master recipe, master workflow, or building block, expressions containing references can be used to provide inputs to process parameter attributes. During execution, the references are evaluated and determine the result of the expression. To analyze the current values of the references and the result of the expression, you can switch on logging.

To feed this information to the log file, add the following line to your local $log4j_custom_local.properties$ file of the Production Execution Client or the Operation Execution Server that is intended to execute the phases that shall be debugged:

log4j.logger.com.rockwell.mes.services.s88.impl.execution.InputParameterLogger=DEBUG

When a phase is executed that has expressions as input parameters, the logging output will be similar to the sample log shown below.

With the following configuration to you can write this specific logging output to a different file:

```
log4j.appender.exprlog=org.apache.log4j.RollingFileAppender
log4j.appender.exprlog.File=perf.log
log4j.appender.exprlog.layout=org.apache.log4j.PatternLayout
log4j.appender.exprlog.layout.ConversionPattern=%d{ISO8601} [%t] %5p %c{1}\:%L - %m%n
log4j.logger.com.rockwell.mes.services.s88.impl.execution.InputParameterLogger=DEBUG,
exprlog
```

Configuring Logging for PharmaSuite Servers

PharmaSuite servers run as a Windows service and use messaging to communicate with a PharmaSuite client (e.g. Production Execution Client, Production Response Client). To change or configure the log levels related to a server, use the <installDirectory>\installation\services\PharmaSuite_<serverName>\bin\logs\log4j_cus to the default installation path on the

<installDirectory>\installation\services\PharmaSuite_<serverName>\bin\logs\log4j_cus
tom_local.properties file, where <installDirectory> is the default installation path on the
server (C:\Rockwell\PharmaSuite) and <serverName> is the name of the PharmaSuite
server (e.g. EBR_Server).

For each event sheet (of a PharmaSuite server), PharmaSuite provides a specific $\log 4j_custom_local.properties$ file with meaningful log switches.

```
-- Customer specific log property file for EBR Server
--
-- REMARK: This file is watched on changes. After about 10 seconds they take effect.
--
-- EBR Server
log4j.logger.com.rockwell.mes.apps.ebr.ifc.activities=INFO
--
-- Messaging, logged in a separate file by PharmaSuite default
log4j.logger.com.rockwell.mes.commons.messaging.ifc=INFO
```

TIP

Be aware, that changes made to this file take effect about 10 seconds after the change without restarting the service.

If a switch was dynamically set to a given value during a running process, it keeps its last state until you change it.

To change the value of an active switch (e.g. INFO), explicitly set it to a given value (ERROR) and do not comment the line, because this will have no effect on a running process.

Configuring Logging for ActiveMQ

You may also wish to change the log4j configuration for the ActiveMQ broker used by PharmaSuite. To do so, modify the *<installDirectory>\conf\log4j.properties* file where *<installDirectory>* is the directory where the ActiveMQ broker used by PharmaSuite is installed.

Below, there are two examples on how you can extend the logging of ActiveMQ to help investigate issues.

Log discarded messages

If you have activated the discardingDLQBrokerPlugin as recommended in "Technical Manual Installation" [A6] (page 187), the messages that are sent to the dead letter queue are directly discarded. If you are interested in monitoring which messages are discarded, add the following section to the log4j file.

```
# discarded messages
log4j.appender.dlq=org.apache.log4j.RollingFileAppender
log4j.appender.dlq.file=${activemq.data}/activemq_discardedToDLQ.log
log4j.appender.dlq.maxFileSize=20MB
log4j.appender.dlq.maxBackupIndex=20
log4j.appender.dlq.append=true
log4j.appender.dlq.layout=org.apache.log4j.PatternLayout
log4j.appender.dlq.layout.ConversionPattern=%d | %-5p | %m | %c | %t%n
log4j.logger.org.apache.activemq.plugin.DiscardingDLQBroker=DEBUG,dlq
log4j.additivity.org.apache.activemq.plugin.DiscardingDLQBroker=false
```

The discarded messages will be logged in a separate log file called *activemq_discardedToDLQ.log*.

Log all messages

If you experience issues with lost messages you may want to monitor when a message is sent and received via ActiveMQ. To do so, you first need to modify the *<installDirectory>\conf\activemq.xml* file of ActiveMQ. Add the following entry in the *<plugins>* sub-section of the *
broker>* section:

After that, add the following section to the log4j file.

processing of messages log4j.appender.misc=org.apache.log4j.RollingFileAppender log4j.appender.misc.file=\${activemq.data}/activemq misc.log log4j.appender.misc.maxFileSize=20MB log4j.appender.misc.maxBackupIndex=20 log4j.appender.misc.append=true log4j.appender.misc.layout=org.apache.log4j.PatternLayout log4j.appender.misc.layout.ConversionPattern=%d | %-5p | %m | %c | %t%n log4j.logger.org.apache.activemg.broker.util.LoggingBrokerPlugin=DEBUG,misc org.apache.activemg.broker.util.LoggingBrokerPlugin.Queue.SERVER PING REQUEST=WARN,misc log4j.logger.org.apache.activemq.broker.util.LoggingBrokerPlugin.Topic=WARN,misc log4j.additivity.org.apache.activemq.broker.util.LoggingBrokerPlugin=false # messages for EVENT_TRIGGERED_OPERATION_TEMPLATE_REQUEST queue log4j.appender.etotr=org.apache.log4j.RollingFileAppender log4j.appender.etotr.file=\${activemq.data}/activemq EVENT TRIGGERED OPERATION TEMPLATE REQUEST.log log4j.appender.etotr.maxFileSize=10MB log4j.appender.etotr.maxBackupIndex=10 log4j.appender.etotr.append=true log4j.appender.etotr.layout=org.apache.log4j.PatternLayout log4j.appender.etotr.layout.ConversionPattern=%d | %-5p | %m | %c | %t%n log4j.logger.org.apache.activemq.broker.util.LoggingBrokerPlugin.Queue.EVENT TRIGGERED OPERATION TEMPLATE REQUEST=DEBUG, etotr log4j.additivity.org.apache.activemq.broker.util.LoggingBrokerPlugin.Queue.EVENT TRIGGE RED OPERATION TEMPLATE REQUEST=false # messages for EVENT TRIGGERED OPERATION INSTANCE REQUEST queue log4j.appender.etoir=org.apache.log4j.RollingFileAppender log4j.appender.etoir.file=\${activemq.data}/activemq EVENT TRIGGERED OPERATION INSTANCE REQUEST.log log4j.appender.etoir.maxFileSize=10MB log4j.appender.etoir.maxBackupIndex=10 log4j.appender.etoir.append=true log4j.appender.etoir.layout=org.apache.log4j.PatternLayout log4j.appender.etoir.layout.ConversionPattern=%d | %-5p | %m | %c | %t%n log4j.logger.org.apache.activemq.broker.util.LoggingBrokerPlugin.Queue.EVENT TRIGGERED OPERATION INSTANCE REQUEST=DEBUG, etoir log4j.additivity.org.apache.activemq.broker.util.LoggingBrokerPlugin.Queue.EVENT TRIGGE RED_OPERATION_INSTANCE_REQUEST=false # messages for CONTROL RECIPE REQUEST queue log4j.appender.crr=org.apache.log4j.RollingFileAppender log4j.appender.crr.file=\${activemq.data}/activemq_CONTROL_RECIPE_REQUEST.log log4j.appender.crr.maxFileSize=10MB log4j.appender.crr.maxBackupIndex=10 log4j.appender.crr.append=true log4j.appender.crr.layout=org.apache.log4j.PatternLayout log4j.appender.crr.layout.ConversionPattern=%d | %-5p | %m | %c | %t%n log4j.logger.org.apache.activemq.broker.util.LoggingBrokerPlugin.Queue.CONTROL RECIPE R EQUEST=DEBUG, crr log4j.additivity.org.apache.activemq.broker.util.LoggingBrokerPlugin.Queue.CONTROL_RECI PE REQUEST=false # messages for UNIT PROCDURE REQUEST queue log4j.appender.upr=org.apache.log4j.RollingFileAppender log4j.appender.upr.file=\${activemq.data}/activemq UNIT PROCDURE REQUEST.log log4j.appender.upr.maxFileSize=10MB log4j.appender.upr.maxBackupIndex=10 log4j.appender.upr.append=true log4j.appender.upr.layout=org.apache.log4j.PatternLayout log4j.appender.upr.layout.ConversionPattern=%d | %-5p | %m | %c | %t%n log4j.logger.org.apache.activemq.broker.util.LoggingBrokerPlugin.Queue.UNIT PROCDURE RE QUEST=DEBUG, upr

PSCEV4-GR010C-EN-E, 1.0 35

log4j.additivity.org.apache.activemq.broker.util.LoggingBrokerPlugin.Queue.UNIT PROCDUR

E REQUEST=false

```
# messages for OPERATION REQUEST queue
log4j.appender.opr=org.apache.log4j.RollingFileAppender
log4j.appender.opr.file=${activemq.data}/activemq OPERATION REQUEST.log
log4j.appender.opr.maxFileSize=10MB
log4j.appender.opr.maxBackupIndex=10
log4j.appender.opr.append=true
log4j.appender.opr.layout=org.apache.log4j.PatternLayout
log4j.appender.opr.layout.ConversionPattern=%d | %-5p | %m | %c | %t%n
log4j.logger.org.apache.activemq.broker.util.LoggingBrokerPlugin.Queue.OPERATION REQUES
T=DEBUG.opr
log4j.additivity.org.apache.activemq.broker.util.LoggingBrokerPlugin.Queue.OPERATION RE
QUEST=false
# messages for EXCEPTION AND COMMENT REQUEST queue
log4j.appender.excr=org.apache.log4j.RollingFileAppender
log4j.appender.excr.file=${activemq.data}/activemq EXCEPTION AND COMMENT REQUEST.log
log4j.appender.excr.maxFileSize=10MB
log4j.appender.excr.maxBackupIndex=10
log4j.appender.excr.append=true
log4j.appender.excr.layout=org.apache.log4j.PatternLayout
log4j.appender.excr.layout.ConversionPattern=%d | %-5p | %m | %c | %t%n
log4j.logger.org.apache.activemq.broker.util.LoggingBrokerPlugin.Queue.EXCEPTION AND CO
MMENT REQUEST=DEBUG, excr
log4j.additivity.org.apache.activemq.broker.util.LoggingBrokerPlugin.Queue.EXCEPTION AN
D COMMENT REQUEST=false
```

When a message is sent to a specific queue (e.g. OPERATION_REQUEST), it will be logged in the corresponding log file. When a message is received and a reply is sent, this will be logged in the *activemq_misc.log* file.

TIP

Be aware that this change will generate a large number of log files. Only activate the logging if you need to investigate an issue. You can configure the maximum hard disk space that will be consumed by configuring the *maxFileSize* and *maxBackupIndex* settings for each appender that you add.

Configuration Keys of PharmaSuite

This section describes the configuration keys of PharmaSuite. They are listed by application area. For general information on configuration keys, see chapter "Managing Configurations" (page 11).

A configuration key is evaluated

- only when a PharmaSuite client is started or
- also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

TIP

Configuration keys are modified and defined in Process Designer.

Behavior of empty values:

- PharmaSuite treats a configuration key with an empty value like a non-existing configuration key. That means the default value of the configuration key is used, not the null value.
- To overwrite the default value of a configuration key of the String type, set its value to <RA_EMPTY_STRING>.

Global Configuration Keys

The global configuration keys describe and configure the basic behavior of the system.

Form/ComponentOrientation/RightToLeft

Type: Boolean

■ Value: False

■ **Description**: Defines the orientation of PharmaSuite related to left-to-right and right-to-left language features, respectively.

If the value is set to **true**, the right-to-left orientation is enabled and applied to the layout of PharmaSuite.

If the value is set to **false**, the left-to-right orientation is enabled and applied to the layout of PharmaSuite. This is the default setting.

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

LibraryHolder/commons-base-ifc.jar/BarcodeListener.endKey

- **Type**: Long
- Value: java.awt.event.KeyEvent.VK_ENTER (carriage return)
- **Description**: Defines the suffix key code for the barcode scanning. It is in a form of a constant from the Java KeyEvent class, rather than an ASCII code. If this constant is changed, all barcode scanning devices have to be reconfigured.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: See BarcodeListener.startKey configuration key (page 38).

LibraryHolder/commons-base-ifc.jar/BarcodeListener.startKey

- **Type**: Long
- Value: java.awt.event.KeyEvent.VK_F4 (function key F4)
- **Description**: Defines the prefix key code for the barcode scanning. It is in a form of a constant from the Java KeyEvent class, rather than an ASCII code. If this constant is changed, all barcode scanning devices have to be reconfigured.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: A key, which can be sent by a desired scanner (see the manual of the scanner). The key must not interfere with any of the accelerator keys used for the user interface of the Production Execution Client.

LibraryHolder/commons-base-ifc.jar/BarcodeListener.timeout

Type: Long

■ Value: 1000 (i.e. one second)

- **Description**: Defines the timeout for the barcode scanning in milliseconds (zero means no timeout). This is the maximum time span between receiving the start key and receiving the end key of a single. If more time elapses, the scanning is considered invalid and aborted. The value of **0** means that no timeout feature is active and the barcode scan may last incessantly.
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: [0... maxInt]

LibraryHolder/commons-base-ifc.jar/calculateScaleForPercentage

Type: Boolean

■ Value: True

Description: If the value is set to **true**, the scale of the result will be newly calculated on multiplications with the percentage measured values. The new scale will be calculated using the following formula:

ROUND_CEILING(scale_of_measured_value - log10(value_of_percent_multiplicator) + log10(100))

If the value is set to **false**, the scale of the measured value will not be changed.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [False, True]

LibraryHolder/commons-base-ifc.jar/calScaleDivMinimumPrecisionOffset

Type: Long

■ Value: 0

■ **Description**: Defines the offset scale for division results of measured values (MV). The scale is defined by the system, and then extended by the amount of this configuration.

Example:

■ **Definition**: MVcalc = 1.234; MVscale = 2; MinimumPrecisionOffset = 3

■ **Result**: **MVresult** = 1.23400

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: N/A

Library Holder/commons-base-if c. jar/Device Identification Pattern Terminal Services

Type: String

■ Value: %CLIENTNAME%

■ **Description**: Specifies the pattern used to generate a unique device ID with environment variables when Terminal Services is used.

The device ID is used to identify the physical device running a PharmaSuite application.

By default the device ID is assigned to the value of the COMPUTERNAME environment variable.

When Terminal Services is used (the SESSIONNAME environment variable exists and is not equal to Console), COMPUTERNAME is not unique. Then PharmaSuite uses this configuration key to calculate the device ID. If the default value is not unique, other information like USERNAME or SESSIONNAME can be used.

Environment variables must begin with % and end with %.

- **Evaluated:** Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: A concatenation of strings and existing environment variable names defined between %.

LibraryHolder/commons-base-ifc.jar/ServicesConfigFile

■ **Type**: String

■ Value: config.xml

- **Description**: Defines the services configuration file. The default value points to the *config.xml* file, which is included in the PharmaSuite standard. It includes references to all XML files that define service configurations. If you wish to add new services or modify existing services, this configuration key has to be changed to the new adapted services configuration file. We recommend to adapt the original *config.xml* file and rename it. The adapted file itself must be located in the Java classpath and must not collide with existing file names.
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: N/A

Suspended Transaction Time out

Type: Long **Value**: 600

Description: Specifies the timeout for a suspended user transaction in seconds.

TIP

A user transaction can be suspended if for some reason a user dialog is displayed to the user.

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: > 60

TransactionTimeout

Type: LongValue: 600

Description: Specifies the timeout for a user transaction in seconds.

Evaluated: Only when a PharmaSuite client is started.

■ Range: > 60

LibraryHolder/commons-messaging-ifc.jar/CheckForJMXConfigChanges.interval

■ **Type**: Long

■ Value: 60

- **Description**: The interval in seconds to check for changes in the *jmx_messagetypes_custom_local.properties* file that contains the message types that should be monitored via JMX. For more information, see chapter "Monitoring PharmaSuite and Related Components" in "Technical Manual Administration" [A7] (page 187).
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: > 1

MandatoryServerEventSheets

- **Type**: String List
- Value: PharmaSuite_AI_Server:AutomationIntegrationServer1
 PharmaSuite_EBR_Server
 PharmaSuite_OE_Server
 PharmaSuite_TOM_Server
 PharmaSuite Transition Server
- **Description**: List of mandatory PharmaSuite servers that are relevant to:
 - Heartbeat monitoring of the Production Execution Client.
 - Production Execution Client startup checks: OE server and TOM server checks are only performed if configured. The EBR server is always checked.
 - Production Execution Client startup: ETOs are loaded only if TOM server is configured.
 - About dialogs: Status information of OE, TOM, and AI servers is only displayed if configured. Status information of the EBR server is always displayed.

Remove servers from the list that are not used or needed, e.g. if only Dispense is used. The EBR server is always mandatory, so removing it has no effect. Add servers to the list if additional AI server are available and must be checked or if additional Shop Operations Servers must be checked, e.g. if EIG is applied.

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: Available PharmaSuite server event sheets that support server heartbeat.

Message Type Time Container. not Older Than Millis

Type: LongValue: 15000

- **Description**: The maximum age in milliseconds of messages used to calculate the **AverageTimeRecent** value for a message type that is monitored via JMX. For more information, see chapter "Monitoring PharmaSuite and Related Components" in "Technical Manual Administration" [A7] (page 187).
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: > 1

Message Type Time Container. recent Array Limit

■ **Type**: Long **Value**: 1000

- **Description**: The maximum number of messages used to calculate the **AverageTimeRecent** value for a message type that is monitored via JMX. For more information, see chapter "Monitoring PharmaSuite and Related Components" in "Technical Manual Administration" [A7] (page 187).
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: > 1

MessageTypeTimeContainer.smaArrayLimit

Type: Long

■ Value: 15

- **Description**: The maximum number of messages used to calculate the **AverageTimeRecent** value for a message type that is monitored via JMX. For more information, see chapter "Monitoring PharmaSuite and Related Components" in "Technical Manual Administration" [A7] (page 187).
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: > 1

SpecialUOMs

Type: Object - List

■ Value: specialUOMs

- **Description**: Pairs of units of measure (<sourceUOM, targetUOM>) specified in the configured list are guaranteed to be converted without loss of integer precision. If a special conversion in both directions is required, a second entry is needed with the units of measure listed in switched order.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: Only supported for units of measure of the Scalar type.

TrustedPackages

■ **Type**: String

■ Value: java,com.rockwell,org.apache.activemq,com.datasweep,sun,com.osisoft

■ **Description**: This configuration key is coupled with the security mechanisms used by ActiveMQ. For details, see ActiveMQ - Features - Message Features - ObjectMessage [D3] (page 188).

List of packages that are whitelisted in order to be used in serialized chiest.

List of packages that are whitelisted in order to be used in serialized object messages. This applies to the classes of the packages and their sub-packages. In order to bypass the security mechanism, i.e. to allow all classes, set the value to the * wildcard character.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

UoMsOfPotency

■ **Type**: Object - List

■ Value: UoMsOfPotency

Description: List of units of measure that can be used for potency.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

WarehouseIntegrationMessageReceiver

Type: StringValue: WHM

■ **Description**: Defines the logical name of the Warehouse Management application that receives messages from a PharmaSuite system and responds to them.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

WarehouseIntegrationMessageSender

Type: StringValue: MES

Description: Defines the logical name of a PharmaSuite system that sends messages to a Warehouse Management application.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

WarehouseManagementConnected

Type: BooleanValue: False

■ **Description**: Defines if PharmaSuite is configured to communicate with a Warehouse Management application.

If the value is set to **true**, the communication between PharmaSuite and a Warehouse Management application is enabled.

If the value is set to **false**, the communication between PharmaSuite and a Warehouse Management application is disabled. This is the default setting.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

Configuration Keys for User Interface

The following configuration keys are available for configuring the user interface of both the Production Management Client and Production Execution Client. They are distinguished by their respective prefixes.

Form/acceleratorKeysMessagePack

■ **Type**: String

■ Value: ui_AcceleratorKeys

Description: The message pack used to store the general accelerator keys.

Evaluated: Only the accelerator keys not stored in a Production Management- or Execution-specific message pack will be taken from the general message pack.

■ Range: N/A

Form/ApplicationStart/StyleSheet

Type: Object - List

■ Value: aps_StyleSheet

■ **Description**: Defines the style sheet used in the PharmaSuite welcome page (application start).

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

Form/ApplicationStart_ExceptionDashboard/StyleSheet

Type: Object - List

■ Value: prc_StyleSheet

■ **Description**: Defines the style sheet used in the Production Response Client.

Evaluated: Only when a PharmaSuite client is started.

Range: N/A

$Form/ApplicationStart_ProductionExecutionClient/acceleratorKeysMessagePack$

■ Type: String

■ Value: pec_AcceleratorKeys

■ **Description**: The message pack used to store the accelerator keys for the Production Execution Client.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

Form/ApplicationStart_ProductionExecutionClient/AlternateStyleSheet

■ **Type**: Object - List

■ Value: pec_StyleSheet_Alternate

■ **Description**: Defines the style sheet used in the Production Execution Client for activity sets of the **ActivitySetNamesUsingAlternateStyleSheet** list.

■ Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

■ Range: N/A

Form/ApplicationStart_ProductionExecutionClient/ApplicationStart_MainIcon

■ **Type**: String

■ Value: pec_MainIcon

■ **Description**: Contains the (base) name of the image to be displayed as the program icon for the Production Execution Client.

Evaluated: Only when a PharmaSuite client is started.

Range: N/A

Form/ApplicationStart_ProductionExecutionClient/doExitOnLogout

Type: Boolean

■ Value: True

- **Description**: If the value is set to **true**, the Production Execution Client will be closed after the logout. If the value is set to **false**, the logout will be performed, but the application will stay open.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [False, True]

$Form/ApplicationStart_ProductionExecutionClient/hideMenu$

Type: Boolean

Value: True

- **Description**: If the value is set to **true**, the Production Execution Client will hide the FactoryTalk ProductionCentre file menu.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Form/ApplicationStart_ProductionExecutionClient/onlineHelpPrefix

■ **Type**: String

■ Value: /PharmaSuite/documentationandhelp/

Description: The prefix is used to locate help pages for the Production Execution Client.

The URL consists of three parts: server name, this prefix, and page name taken from a message pack.

Example:

http://ServerName.com:port/ThisPrefix/NameOfThePage.html, or http://localhost:8080/PharmaSuite/documentationandhelp/index.htm.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: N/A

Form/ApplicationStart_ProductionExecutionClient/StyleSheet

Type: Object - List

■ Value: pec_StyleSheet

- **Description**: Defines the style sheet used in the Production Execution Client.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: N/A

$Form/ApplicationStart_ProductionManagementClient/acceleratorKeysMessagePack$

■ **Type**: String

■ Value: pmc_AcceleratorKeys

- **Description**: The message pack used to store the accelerator keys for the Production Management Client.
- **Evaluated**: Only when a PharmaSuite client is started.

Range: N/A

Form/ApplicationStart_ProductionManagementClient/ApplicationStart_MainIcon

■ **Type**: String

■ Value: pmc_MainIcon

- **Description**: Contains the (base) name of the image to be displayed as the program icon for the Production Management Client.
- **Evaluated**: Only when a PharmaSuite client is started.

Range: N/A

Form/ApplicationStart_ProductionManagementClient/doExitOnLogout

Type: Boolean

■ Value: True

- **Description**: If the value is set to **true**, the Production Management Client will be closed after the logout. If the value is set to **false**, the logout will be performed, but the application will stay open.
- **Evaluated**: Only when a PharmaSuite client is started.

Range: [False, True]

$Form/ApplicationStart_ProductionManagementClient/hideMenu$

Type: Boolean

■ Value: True

- **Description**: If the value is set to **true**, the Production Management Client will hide the FactoryTalk ProductionCentre file menu.
- **Evaluated**: Only when a PharmaSuite client is started.

Range: [False, True]

Form/ApplicationStart_ProductionManagementClient/onlineHelpPrefix

■ **Type**: String

■ Value: /PharmaSuite/documentationandhelp/

■ **Description**: The prefix is used to locate help pages for the Production Management Client.

The URL consists of three parts: server name, this prefix, and page name taken from a message pack.

Example:

http://ServerName.com:port/ThisPrefix/NameOfThePage.html, or http://localhost:8080/PharmaSuite/documentationandhelp/index.htm.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

Form/ApplicationStart_ProductionManagementClient/StyleSheet

Type: Object - List

■ Value: pmc_StyleSheet

Description: Defines the style sheet used in the Production Management Client.

Evaluated: Only when a PharmaSuite client is started.

Range: N/A

Form/doExitOnLogout

■ Type: Boolean

■ Value: True

- **Description**: If the value is set to **true**, the system will be closed after the logout. If the value is set to **false**, the logout will be performed, but the application will stay open.
- **Evaluated**: Only if the Production Execution- or Management-specific flag is not set.

■ **Range**: [False, True]

Form/hideMenu

■ **Type**: Boolean

Value: True

- **Description**: If the value is set to **true**, the system will hide the FactoryTalk ProductionCentre file menu.
- **Evaluated**: Only if the Production Execution- or Management-specific flag is not set.
- **Range**: [False, True]

Form/mes_DialogMessageBox

■ **Type**: String

■ Value: pmc-DialogMessageBox

- **Description**: Configures the form name of the standard dialog box, default is **pmc-DialogMessageBox**.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

■ Range: N/A

Form/StyleSheet

■ **Type**: Object - List

■ Value: N/A

Description: Defines the style sheet used for the general application start form.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

Forms/<formName>/configureTabSequence

- **Type**: Boolean
- Value: False for forms of the Production Execution Client, True for forms of the Production Management Client
- **Description**: Defines whether the TAB sequence of the specified form (=<formName>) is evaluated automatically (from left to right and top to bottom) or whether the form designer has to maintain the TAB sequence manually. The TAB sequence is the order in which the focus moves through the UI controls of a form when you press the TAB key (without using the mouse). If the value is set to **true**, the TAB sequence is evaluated automatically.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

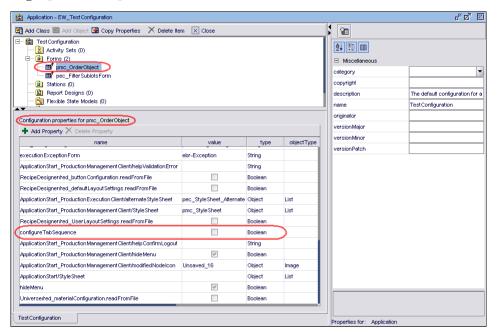


Figure 9: Disable automatically evaluated TAB sequence of the pmc_OrderObject form

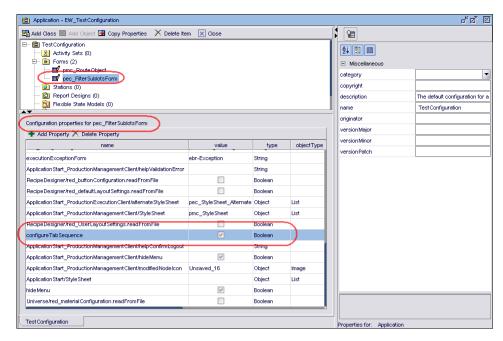


Figure 10: Enable automatically evaluated TAB sequence of the pec_FilterSublotsForm form

Station/hasTouchScreen

Type: Boolean

■ Value: True

- **Description**: Defines whether the station is equipped with a touch screen. If the value is set to **true**, the GridActivity doubles the row height.
- **Evaluated:** When a grid is refreshed in the Production Execution Client (e.g. a phase is switches from the **Preview** to the **Active** status).
- **Range**: [False, True]

Station/TouchScreen.MaximumDelayForDoubleClick

Type: Long

■ Value: 1000

- **Description**: Defines the maximum time interval in milliseconds between two mouse clicks for them to be considered a double click on a touch screen in an MES grid, such as the Batch Processing grid in the Production Execution Client.
- **Evaluated**: Only when a PharmaSuite client is started.

Range: [100..5000]

Configuration Keys Specific to the Production Management Client

The following configuration keys are available for the Production Management Client.

$Form/Application Start_Production Management Client/locked Object I constant and the production of t$

■ **Type**: Object - Image

■ Value: Locked_16

■ **Description**: Defines the icon that is displayed in the tree view for all use cases to indicate the objects, which are being currently locked by other users for edition.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

$Form/Application Start_Production Management Client/modified Node I constant and the production of t$

Type: Object - Image

■ Value: Unsaved_16

■ **Description**: Defines the icon that is displayed in the tree view for all use cases to indicate the objects, which have been modified and have not been saved yet.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

Form/ApplicationStart_ProductionManagementClient/StartupChecks

Type: List

■ Value: N/A

■ **Description**: List of configurable checks to be executed when the Production Management Client is started.

Each check must implement the *IStartupCheck* interface.

Evaluated: Only when a PharmaSuite client is started.

■ Range: Any valid name for a **List** object maintained in Process Designer or PS Administration.

Form/objectLockingRefreshInterval

■ **Type**: Long ■ **Value**: 10000

- **Description**: Defines the interval in milliseconds, after which the system rechecks if the objects that have been locked by other users are no longer locked.
- Additional information: This setting applies only to the displayed locks that have been released. It does not apply to new ones that have appeared. The parameter is checked, when a user selects an object.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: 1000∞ Be aware that applying a lower number will result in creating more database queries sent by each client automatically in the background. If you have many clients, you should avoid lowering the default value.

LibraryHolder/clientfw-pmc-ifc.jar/CSV_Separator

■ **Type**: String

■ Value: ,

- **Description**: Defines the separator to be used for the CSV file export action.
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: N/A

LibraryHolder/services-s88-impl.jar/SFCForceTransitionTimeout

■ **Type**: Long

■ Value: 3

- **Description**: Defines the timeout in seconds the system waits for a reply to a force execution transition request.
- **Evaluated**: Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

Range: > 0

LibraryHolder/services-s88-impl.jar/SFCTestForceTransitionTimeout

■ **Type**: Long

■ Value: 3

- **Description**: Defines the timeout in seconds the system waits for a reply to a test force execution transition request.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

■ Range: > 0

Configuration Keys Specific to the Production Execution Client

The following configuration keys are available for the Production Execution Client to configure the behavior of workflows, also referred to as activity sets.

ActivitySet/[ActivitySetName]/allowMultipleInstances

Type: Boolean

■ Value: N/A

- **Description**: Allows the activity set with an [ActivitySetName] name to be started multiple times from the same client. If this property exists, it overwrites the ActivitySet/allowMultipleInstances general property (page 58) for this activity set. This also allows you to disable the feature for selected activity sets.
- **Evaluated:** Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

Range: [False, True]

ActivitySet/[ActivitySetName]/allowResumeOnlySameStation

■ **Type**: Boolean

■ Value: N/A

- **Description**: Allows the activity set with the [ActivitySetName] name to be resumed only at the station, at which it has been started. If this property exists, it overwrites the ActivitySet/allowResumeOnlySameStation general property (page 58) for this activity set.
 - If the value is set to **false**, the Production Execution Client must be restarted in order to enable resuming at another station.
- **Evaluated:** Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [False, True]

ActivitySet/[ActivitySetName]/allowResumeOnlySameUser

Type: Boolean

■ Value: N/A

- **Description**: Allows the activity set with the [**ActivitySetName**] name to be resumed only by the user who has started it. If this property exists, it overwrites the **ActivitySet/allowResumeOnlySameUser** general property (page 59) for this activity set.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [False, True]

Activity Set Autostart List

■ **Type**: Object - List

■ Value: AutostartActivitySetNames

- **Description**: Defines which activity sets will be started automatically when a user logs in.
- **Evaluated**: Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

■ Range: N/A

ActivitySet/AdministrativeTasks

■ **Type**: String - List

- Value: (ReprintSimpleDispensingLabelAction, ReprintDispensingLabelAction, ReprintInventoryLabelAction, LogoutAction)
- **Description**: List of tasks for the **Administrative** task group.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Each string is a bean name that refers to a Java action class. Each action class must be extended by javax.swing.Action. The actions are instantiated through the PharmaSuite service factory.

ActivitySet/allowMultipleInstances

■ **Type**: Boolean

■ Value: False

- **Description**: If the value is set to **true**, it allows activity sets to be started multiple times from the same client.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [False, True]

ActivitySet/allowResumeOnlySameStation

■ **Type**: Boolean

■ Value: True

- **Description**: Allows activity sets to be resumed only at the station, at which they have been started.
 - If the value is set to **false**, the Production Execution Client must be restarted in order to enable resuming at another station.
- **Evaluated:** Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [False, True]

ActivitySet/allowResumeOnlySameUser

■ **Type**: Boolean

■ Value: False

- **Description**: Allows activity sets to be resumed only by the user who has started them.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [False, True]

ActivitySet/StartableItemGroupEbrExecution

■ **Type**: String

■ Value: StartableItemNamesProduction

- **Description**: Defines the name of the list of the group in which operations of the EBR execution shall be displayed.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

■ Range: N/A

ActivitySet/StartableItemGroups

Type: Object - List

■ Value: StartableItemGroups

■ **Description**: Defines the startable activity sets/actions, their group and order in the Cockpit. The Cockpit contains startable workflows and actions, which are grouped by task groups. For each group exists a list, which contains the workflows and actions of that group. The elements of the list will be displayed in exact the same order, in which they are configured. The value of this parameter references a list containing the names of the lists for each group. The groups will be displayed in exactly the same order in which they are listed. If the name of a group contains the string **Invisible**, the group will not be displayed in the Cockpit, but nevertheless the actions defined for the group are active. This is useful for scanner actions.

Actions are all names, which ends with the string **Action** e.g. **LogoutAction**. All other names are expected to be names of activity sets. This parameter defines which activity sets and actions will initially appear in the Cockpit, but further filtering of entries to be displayed can be done by **AccessPrivileges** and **UserGroups** settings.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: N/A

ActivitySet/StartableItemStartCampaignWeighing

- Type: String
- Value: StartCampaignWeighingAction
- **Description**: The startable item to start campaign weighing in the Production Execution Client.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: The startable item must be contained in any list of startable items.

ActivitySet/StartableItemStartRecipeWeighing

■ **Type**: String

■ Value: StartProcessingAction

- **Description**: The startable item to start batch processing in the Production Execution Client.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: The startable item must be contained in any list of startable items.

$Form/ApplicationStart_ProductionExecutionClient/ChangeUserOrStationChecks$

- **Type**: List
- Value: pec_ChangeUserOrStationChecks
- **Description**: List of configurable checks to be executed when the Change user or Register at station actions of the Production Execution Client are executed. Each check must implement the *IChangeUserOrStationCheck* interface.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Any valid name for a **List** object maintained in Process Designer or PS Administration.

Form/ApplicationStart_ProductionExecutionClient/NameOfCustomerLogo

- **Type**: String
- Value: ra_CustomerLogo
- **Description**: Image name of customer logo that is to be displayed on the left side of the status bar (header bar). Maximum size is 140 x 77 pixels.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: Any valid image name of an image present in the system.

Form/ApplicationStart_ProductionExecutionClient/StartupChecks

Type: List

■ Value: pec_StartupChecks

Description: List of configurable checks to be executed when the Production Execution Client is started.

Each check must implement the IStartupCheck interface.

- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Any valid name for a **List** object maintained in Process Designer or PS Administration.

Form/executionBatchRecordForm

■ **Type**: String

Value: ebr-BatchRecord

- **Description**: The name of the sub-form serving as the batch record form in the Production Execution Client.
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: N/A

Form/executionCockpitExceptionForm

■ **Type**: String

■ Value: ebr-CockpitException

- **Description**: The name of the sub-form serving as the Exception form within the Cockpit of the Production Execution Client.
- **Evaluated**: Only when a PharmaSuite client is started.

Range: N/A

Form/executionCockpitForm

■ **Type**: String

Value: ebr-Cockpit

■ **Description**: The name of the sub-form serving as the Cockpit form in the Production Execution Client.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

Form/executionExceptionForm

■ **Type**: String

■ Value: ebr-Exception

Description: The name of the sub-form serving as the Exception form in the Production Execution Client.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

Form/executionNavigationForm

■ Type: String

■ Value: ebr-Navigator

Description: The name of the sub-form serving as the Navigator form in the Production Execution Client.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

Form/executionPhaseActionForm

■ **Type**: String

■ Value: ebr-PhaseAction

■ **Description**: The name of the sub-form serving as execution window form in the Production Execution Client.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

Form/executionStartCampaignWeighingForm

■ **Type**: String

■ Value: ebr-StartCampaignWeighing

■ **Description**: The name of the sub-form serving as the form to start dispensing the materials of several order steps together as campaign weighing in the Production Execution Client.

■ Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

■ Range: N/A

Forms/UPButton3rdLineContentPath

■ **Type**: String

■ Value: OrderStep.ControlRecipe.ProcessOrderItem.UDA_X_treatmentID

- **Description**: Defines which information is displayed in a third line of text on a unit procedure button in the Cockpit of the PEC. The third line is only shown if the data is available for display. The value represents the path to the data object to be displayed. It is only possible to access data objects that have a unit procedure as root element. The default setting displays the treatment ID.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Any data object with a textual representation that has the unit procedure object as its root.

Examples:

Material identifier (part name):

OrderStep.ControlRecipe.ProcessOrderItem.Part.Name

Material description (part

description):OrderStep.ControlRecipe.ProcessOrderItem.Part.Description
Any UDA: OrderStep.ControlRecipe.ProcessOrderItem.UDA_<UDA_Name>

TIP

Please note that dynamic values are cached and will not necessarily be refreshed as expected.

LibraryHolder/apps-ebr-impl.jar/initialSortCriteriaIsAlphabetic

Type: Boolean

■ Value: True

■ **Description**: Defines the default sorting criterion of running unit procedures in the Cockpit.

If the value is set to **true**, the items are sorted alphabetically.

If the value is set to **false**, the items are sorted by their start times.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [False, True]

LibraryHolder/apps-ebr-impl.jar/initialSortCriterionUnitProcedures

■ **Type**: String

■ Value: UnitProcedureIdentifier

Description: Defines the initial sorting criterion for cockpit items.
Potential values are: UnitProcedureIdentifier, UnitProcedureStartTime,

TreatmentID.

The **TreatmentID** value will only be effective if the **Form/enableTreatmentIDUIExtensions** configuration key (page 185) is set to **true**.

- **Evaluated**: Only when a PharmaSuite client is started.
- Range: [UnitProcedureIdentifier, UnitProcedureStartTime, TreatmentID]

LibraryHolder/apps-ebr-impl.jar/initialSortOrderIsAscending

■ **Type**: Boolean

■ Value: True

Description: Defines the default sorting order of running unit procedures in the Cockpit.

If the value is set to **true**, the items are sorted in ascending order. If the value is set to **false**, the items are sorted in descending order.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [False, True]

LibraryHolder/apps-ebr-impl.jar/NavigatorViewActivity.useFlyweightRendering

Type: Boolean

Value: True

■ **Description**: Defines the method used for the rendering of the Production Execution Client's Navigator.

If the value is set to **true**, fast flyweight rendering is used for the Navigator. This is the default setting.

If the value is set to **false**, the legacy method is used.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: [False, True]We recommend to keep the default setting.

PSCEV4-GR010C-EN-E, 1.0 65

${\bf Library Holder/apps-ebr-impl.jar/Phase Panel Activity. MAX_COUNT_OF_COMPL\ ETED\ PHASES$

■ **Type**: Long

■ Value: -1

- Description: Defines the maximum number of completed runtime phases to be displayed in the Execution Window during resume. -1 means that all completed runtime phases are displayed.
- **Evaluated**: Only when a PharmaSuite client is started.

Range: Any number.

Default: -1

We highly recommend to use high numbers (>1000) with care, since performance and overall usability might be impacted.

LibraryHolder/apps-ebr-impl.jar/restrictStartableWorkflowByStation

Type: Boolean

■ Value: False

Description: Restricts the visibility of startable workflows.

If the value is set to **true**, the Cockpit displays only those workflows as startable that are assigned to the stations of the operations of the unit procedure. This setting requires that either the current station is assigned to the unit procedure or no stations are assigned to the unit procedure.

If the value is set to **false**, no station-specific restriction applies to the startable workflows.

- **Evaluated**: Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [False, True]

LibraryHolder/clientfw-commons.ifc.jar/StandardMouseTouchScrollingBehavior

■ **Type**: Boolean

■ Value: True

Description: In the default configuration (**true**), the content of a scroll pane within a phase UI is moved in the same direction as the cursor when the scrollbar is moved with a mouse button or a touch gesture. This scrolling mode is indicated by a special cursor.

To enable moving scrollbars inside a phase panel, set the value **false**. In this configuration, the content of the area within the **inner** scrollbar is moved in the opposite direction when the mouse button moves the **inner** scrollbar.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

LibraryHolder/clientfw-pec-ifc.jar/AutomaticLockTimeoutInSeconds

Type: Long

■ **Value**: 900 (=15 min)

- **Description**: Defines the timeout in seconds before the Production Execution Client is automatically locked due to user inactivity. If the value is 0 or negative, the automatic lock feature is disabled.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

Range: Any number.

PSCEV4-GR010C-EN-E, 1.0

Library Holder/services-wd-impl.jar/< usage Type>. Auto Consume Standalone Target Sublot

Type: Boolean

■ Value: N/A

■ **Description**: Applies to the specified usage type defined for shop floor-defined dispensing in the **RecipeUsageType** choice list:

If the value is set to **true**, the target sublots of a stand-alone weighing operation are consumed after the order step is completed.

If the value is set to **false**, they are not consumed.

See also section "Extension Use Case: Adding a Recipe-related Usage Type for Shop Floor-Defined Dispensing", chapter "Configuration and Extension" in "Technical Manual Phases of the Dispense Package" [A3] (page 187).

- **Evaluated**: Only when the EBR server is restarted.
- **Range**: [False, True]

LibraryHolder/services-wd-impl.jar/<usageType>.DispensingLabel

■ Type: Object - ReportDesign

■ Value: MESOrderRelatedSublotLabelRD

Description: Applies to the specified usage type defined for shop floor-defined dispensing in the **RecipeUsageType** choice list:

The report design of the dispensing label.

See also section "Extension Use Case: Adding a Recipe-related Usage Type for Shop Floor-Defined Dispensing", chapter "Configuration and Extension" in "Technical Manual Phases of the Dispense Package" [A3] (page 187).

- **Evaluated**: Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: Any valid report design (version 1).

TIP

In PharmaSuite, labels are based on the **ReportDesign** object of FactoryTalk ProductionCentre.

LibraryHolder/services-wd-impl.jar/<usageType>.LabelCount4TargetSublot

■ Type: Long

■ Value: 1

■ **Description**: Applies to the specified usage type defined for shop floor-defined dispensing in the **RecipeUsageType** choice list:

Number of dispensing or pallet labels to be printed by the **Weigh** phase for the target sublots.

See also section "Extension Use Case: Adding a Recipe-related Usage Type for Shop Floor-Defined Dispensing", chapter "Configuration and Extension" in "Technical Manual Phases of the Dispense Package" [A3] (page 187).

- **Evaluated**: Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: >= 0

LibraryHolder/services-wd-impl.jar/<usageType>.Main

■ **Type**: Object - ReportDesign

Value: PS-BatchReport-Main

■ **Description**: Applies to the specified usage type defined for shop floor-defined dispensing in the **RecipeUsageType** choice list:

The report design of the batch report.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: Any valid report design (version 1).

LibraryHolder/services-wd-impl.jar/<usageType>.PalletContainerSublotLabel

■ **Type**: Object - ReportDesign

■ Value: MESOrderRelatedSublotLabelPalletRD

- **Description**: Applies to the specified usage type defined for shop floor-defined dispensing in the **RecipeUsageType** choice list:

 The report design of the pallet or container sublot label.

 See also section "Extension Use Case: Adding a Recipe-related Usage Type for Shop Floor-Defined Dispensing", chapter "Configuration and Extension" in "Technical Manual Phases of the Dispense Package" [A3] (page 187).
- **Evaluated**: Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: Any valid report design (version 1).

TIP

In PharmaSuite, labels are based on the **ReportDesign** object of FactoryTalk ProductionCentre.

Library Holder/services-wd-impl.jar/Cost Center. Auto Consume Standalone Target Sublot

Type: Boolean

Value: False

Description: Applies to the **Cost center** usage type:

If the value is set to **true**, the target sublots of a stand-alone weighing operation are consumed after the order step is completed.

If the value is set to **false**, they are not consumed.

- **Evaluated**: Only when the EBR server is restarted.
- **Range**: [False, True]

LibraryHolder/services-wd-impl.jar/CostCenter.DispensingLabel

■ **Type**: Object - ReportDesign

■ Value: MESCostCenterRelatedSublotLabelRD

- **Description**: Applies to the **Cost center** usage type:

 The report design of the dispensing label.

 See also section "Extension Use Case: Adding a Recipe-related Usage Type for Shop Floor-Defined Dispensing", chapter "Configuration and Extension" in "Technical Manual Phases of the Dispense Package" [A3] (page 187).
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: Any valid report design (version 1).

TIP

In PharmaSuite, labels are based on the **ReportDesign** object of FactoryTalk ProductionCentre.

LibraryHolder/services-wd-impl.jar/CostCenter.LabelCount4TargetSublot

■ **Type**: Long

■ Value: 1

■ **Description**: Applies to the **Cost center** usage type:

Number of dispensing or pallet labels to be printed by the **Weigh** phase for the target sublots.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: >= 0

LibraryHolder/services-wd-impl.jar/CostCenter.Main

■ **Type**: Object - ReportDesign

■ Value: PS-BatchReport-CostCenter-Main

■ **Description**: Applies to the **Cost center** usage type:

The report design of the batch report.

See also section "Extension Use Case: Adding a Recipe-related Usage Type for Shop Floor-Defined Dispensing", chapter "Configuration and Extension" in "Technical Manual Phases of the Dispense Package" [A3] (page 187).

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: Any valid report design (version 1).

LibraryHolder/services-wd-impl.jar/CostCenter.PalletContainerSublotLabel

- **Type**: Object ReportDesign
- Value: MESCostCenterRelatedSublotLabelPalletRD
- **Description**: Applies to the **Cost center** usage type:

 The report design of the pallet or container sublot label.

 See also section "Extension Use Case: Adding a Recipe-related Usage Type for Shop Floor-Defined Dispensing", chapter "Configuration and Extension" in "Technical Manual Phases of the Dispense Package" [A3] (page 187).
- **Evaluated:** Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: Any valid report design (version 1).

TIP

In PharmaSuite, labels are based on the **ReportDesign** object of FactoryTalk ProductionCentre.

LibraryHolder/services-wd-impl.jar/Production.DispensingLabel

■ **Type**: Object - ReportDesign

■ Value: MESOrderRelatedSublotLabelRD

- **Description**: Applies to the **Production** usage type:
 The report design of the dispensing label.
 See also section "Extension Use Case: Adding a Recipe-related Usage Type for Shop Floor-Defined Dispensing", chapter "Configuration and Extension" in "Technical Manual Phases of the Dispense Package" [A3] (page 187).
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: Any valid report design (version 1).

TIP

In PharmaSuite, labels are based on the **ReportDesign** object of FactoryTalk ProductionCentre.

LibraryHolder/services-wd-impl.jar/Production.Main

■ **Type**: Object - ReportDesign

Value: PS-BatchReport-Main

- Description: Applies to the Production usage type:

 The report design of the batch report.

 See also section "Extension Use Case: Adding a Recipe-related Usage Type for Shop Floor-Defined Dispensing", chapter "Configuration and Extension" in "Technical Manual Phases of the Dispense Package" [A3] (page 187).
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: Any valid report design (version 1).

LibraryHolder/services-wd-impl.jar/Production.PalletContainerSublotLabel

■ **Type**: Object - ReportDesign

■ Value: MESOrderRelatedSublotLabelPalletRD

■ **Description**: Applies to the **Production** usage type:

The report design of the pallet or container sublot label.

See also section "Extension Use Case: Adding a Recipe-related Usage Type for Shop Floor-Defined Dispensing", chapter "Configuration and Extension" in "Technical Manual Phases of the Dispense Package" [A3] (page 187).

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: Any valid report design (version 1).

TIP

In PharmaSuite, labels are based on the **ReportDesign** object of FactoryTalk ProductionCentre.

ProductionExecutionClient/ShowTickerPanel

Type: Boolean

■ Value: False

- **Description**: If the value is set to true, the ticker panel is shown in the status bar of the Production Execution Client.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Station/clearPasswordsDelay

■ Type: Long

■ Value: 3

■ **Description**: The delay in seconds after which the phase completion signature panel loses the focus before entered passwords are cleared. A value of 0 means that there is no delay.

Evaluated: Only when a PharmaSuite client is started.

■ Range: >= 0

75

Station/showUserNotification

■ **Type**: Boolean

■ Value: True

■ **Description**: Defines if Production Execution Client displays the user notification panel. The class level configuration item defines the behavior for all stations without a station-specific override.

If the value is set to **true**, the user notification panel is displayed..

If the value is set to **false**, the user notification panel is not displayed.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [False, True]

Station/maxPECWidth

Type: LongValue: 1920

- **Description**: Defines the maximum width of the Production Execution Client window, including user notification panel, if enabled. The total width of Production Execution Client consists of a fixed part (1024 pixels) and a remaining flexible part for the user notification panel.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: Depending on the screen resolution of the device on which Production Execution Client is running.

PSCEV4-GR010C-EN-E, 1.0

Station/useOSK

Type: Boolean

■ Value: False

■ **Description**: Defines whether the built-in Microsoft OSK (On-Screen Keyboard) is displayed or not. The class level configuration item defines behavior for all stations without a station-specific override.

If the value is set to **true**, the OSK executable is started when operator taps inside a text box and is finished when he taps outside a text box.

If the value is set to **false**, the OSK is not displayed.

TIPS

Make sure that the configuration key of the former PharmaSuite virtual keyboard is set to false (if applicable).

For configuration details, see chapter "Configuration Keys of PharmaSuite" in Volume 4 of the "Technical Manual Configuration and Extension" [A8] (page 187).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Configuration Keys Specific to EBR

The following configuration keys are available for EBR.

Activity/ExceptionViewInputActivity/WithRiskClassNone

■ **Type**: Boolean

■ Value: False

■ **Description**: Defines the behavior in relation to the **None** risk level when recording a user-defined exception or adding a comment to an exception in the Production Execution Client.

If the value is set to **true**, the **None** risk level is available and a changed risk level is propagated to the related exception.

If the value is set to false, the system checks if the operator has the

EBR_AccessRight_SetRiskClassNone access privilege.

- If so, the **None** risk level is available and a changed risk level is propagated to the related exception.
- Otherwise, the None risk level is not available when recording a user-defined exception and the risk level is not editable at all when adding a comment to the related exception. This means, that no propagation takes place.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

LibraryHolder/apps-bulkchanges-ifc.jar/maxWaitForCompletion

Type: Long

■ Value: 60

Description: Maximum time in seconds to wait for completion of a running task in case of a shutdown.

Evaluated: At startup of the transition server.

Range: > 0

PSCEV4-GR010C-EN-E, 1.0 77

LibraryHolder/apps-bulkchanges-ifc.jar/longWaitBeforeNextPoll

■ **Type**: Long

■ Value: 5

■ **Description**: Time in seconds to wait before next poll if there was no change request available.

Evaluated: At startup of the transition server.

 \blacksquare Range: > 0

LibraryHolder/apps-bulkchanges-ifc.jar/shortWaitBeforeNextPoll

Type: Long

■ Value: 5

Description: Time in seconds to wait before next poll if there was a change request available.

Evaluated: At startup of the transition server.

■ Range: >= 0

LibraryHolder/apps-ebr-ifc.jar/CancelButtonEnabledOfExceptionDialog

Type: Boolean

Value: False

Description: Defines whether the **Cancel** button is available in the exception dialog of a system-triggered or user-triggered exception.

If the value is set to **true**, the **Cancel** button is available thus allowing the user to discard the creation of an exception at that time.

If the value is set to **false**, the **Cancel** button is not available thus forcing the user to create at least an **Exception canceled** exception.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

LibraryHolder/apps-ebr-ifc.jar/EBRServerRecoveryWorkerIntervalInMinutes

Type: Long

■ Value: 10

- **Description**: Defines the interval in minutes between runs of the EBR server recovery workers.
- **Evaluated**: Only when a PharmaSuite client is started.

Range: [1-60]

LibraryHolder/apps-ebr-ifc.jar/PhaseRepairModeBlackList

■ **Type**: Object - List

■ Value: PhaseRepairModeBlackList

Description: Applies to the recovery capabilities of the Production Execution Client.

The list contains the names (and optionally the revision) of phase system building blocks for which the repair capabilities are not available. If the revision is not included, all phase revisions are affected.

Example: D Tare (RS) [5.2], D Tare (RS).

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: A valid **List** object in Process Designer.

LibraryHolder/commons-messaging-ifc.jar/MessageTimeToLive

■ **Type**: Long

■ **Value**: 300000 (5 minutes)

■ **Description**: The default time in milliseconds from its dispatch time that a produced message should be retained by the message system. The value of **0** means that there is no limit.

For Automation Integration-specific settings see **MessageTimeToLive4AI** configuration key (page 113).

Evaluated: Only when a PharmaSuite client is started.

■ Range: >= 0

Library Holder/services-eto-ifc.jar/Template Observer Recovery Worker Interval In Minutes

■ Type: Long

■ Value: 5

Description: Interval in minutes between runs of the template observer recovery worker.

Evaluated: Only when the Operation Execution server is started.

Range: [1..60]

Library Holder/services-wip-impl.jar/DCSDefault Produced Material Location

■ **Type**: Object - Location

■ Value: N/A

■ **Description**: The default storage location used for sublots produced by a DCS.

■ Evaluated: When a produce sublot request is received from a DCS and the corresponding order step is not running. In case the order step is running, the storage location of the corresponding work center is used.

Range: Any storage location.

Message Broker URL

Type: String

■ Value: tcp://<hostname>:<port>

■ **Description**: Specifies the URL of the EBR server. Replace <hostname> with the name of the host to be used and <port> with the port number of the host to be used.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

MessagingTimeout

Type: Long

■ Value: 1000

Description: The messaging timeout in milliseconds. The default value is 1000.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

PhaseUIExtensionsPrefix

■ **Type**: String

■ Value: PhaseUIExtensions

■ **Description**: Prefix for the **UIExtensions** lists for phases.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

Configuration Keys for Recipe, Order, and Workflow Management

The following configuration keys are available for recipe, order, and workflow management.

LibraryHolder/services-order-ifc.jar/allowNonValidMasterRecipeForOrder

■ **Type**: Boolean

■ Value: False

Description: Allows to create orders for simulation master recipes (in a valid status or the Verification status) during order management and creates a separate control recipe with a complete copy of the underlying S88 structure during order explosion.

If the value is set to false, the PharmaSuite

X_RefSelMasterRecipeFilterValidOnly filter is applied, when assigning a master recipe to an order. Only master recipes in a valid status can be assigned. We recommend to use this configuration in a productive environment.

If the value is set to **true**, the PharmaSuite

X_RefSelMasterRecipeFilterSimulation filter is applied when assigning a master recipe to an order. Master recipes in a valid status or the **Verification** status can be assigned.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

Library Holder/services-order-ifc.jar/copy S88 Structure From Master Recipe Into Control Recipe

■ **Type**: Boolean

■ Value: False

■ **Description**: Defines if S88 recipe entities of a master recipe are copied during order explosion and thus enables modifying the entities.

If the value is set to **true**, the S88 recipe entities of a master recipe are copied and linked to the control recipe of its process order item. This configuration requires disk space.

If the value is set to **false**, no control recipe-specific copy of S88 recipe entities are created.

Evaluated: Each time an order is exploded.

Range: [False, True]

LibraryHolder/services-order-ifc.jar/CostCenters

■ **Type**: Object - List

■ Value: CostCenters

Description: Defines the name of the list of the cost centers available for shop floor-defined dispensing.

■ Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

Range: N/A

Library Holder/services-order-ifc.jar/create Separate Control Recipe From Valid Master Recipe

Type: Boolean

■ Value: False

■ **Description**: Creates a separate control recipe with a complete copy of the underlying S88 structure of a master recipe in a valid status during order explosion.

If the value is set to **false**, no copy of a master recipe in a valid status and its S88 structure is created during order explosion.

We recommend to use this configuration in a productive environment. If the value is set to **true**, a copy of the master recipe and its underlying S88 structure is created during order explosion (even if the master recipe is in a valid status).

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

LibraryHolder/services-order-ifc.jar/DefaultOrderPrefix

Type: StringValue: SFD

■ **Description**: Defines the default prefix of the automatically generated identifier of a shop floor-defined order (e.g., a cost center-related order).

Evaluated: Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

Range: Three characters.

LibraryHolder/services-order-ifc.jar/OrderNumberLength

Type: Long

■ **Value**: 12

■ **Description**: Defines the default length of the automatically generated identifier of a shop floor-defined order (e.g., a cost center-related order).

Evaluated: Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

Range: [6..16]

LibraryHolder/services-order-ifc.jar/ProductionReviewedMandatory

■ **Type**: Boolean

Value: False

■ **Description**: If the value is set to **true**, it is mandatory to have set an order to the **Production-reviewed** status before it can be moved to the **Reviewed** status. This means that the **Review** button in the Production Response Client is only enabled if the order is in the Production-reviewed status.

If the value is set to **false**, using the **Production-reviewed** status is optional, which means that the **Review** button in the Production Response Client is also enabled if an order is in the **Finished** status. Automatic review is not affected by this setting. The value is evaluated in the *isManualOrderReviewAllowed(...)* method of the *MESOrderService*, so additional customization is possible. For details, see the method's Java documentation ("PharmaSuite-related Java Documentation" [C1] (page 188)).

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

LibraryHolder/services-recipe-impl.jar/useECBHazardSymbols

Type: Boolean

■ Value: True

■ **Description**: If the value is set to **true**, ECB hazard symbols are used. If the value is set to **false**, NFPA hazard symbols are used instead.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

LibraryHolder/services-recipe-impl.jar/useExtendedHazardSymbols

Type: Boolean

Value: True

Description: If the value is set to **true**, extended hazard symbols are used.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

LibraryHolder/services-recipe-impl.jar/useGHSData

Type: Boolean

Value: True

- Description: If the value is set to true, GHS data (e.g. pictograms) is used. If the value is set to false, the useECBHazardSymbols configuration key (page 84) is evaluated. Additionally, you must
 - adapt the sublot labels in order to print ECB/NFPA-related data,
 - adapt the Manage Materials (ucRecipePart) user interface use case to display the ECB/NFPA-related tree node in the Production Management Client (see chapter "Using Forms in the Production Management Client" in Volume 1 of the "Technical Manual Configuration and Extension" [A8] (page 187)), and
 - adapt the Part (material) and PartRevisionInfoModel (audit trail) Data Dictionary classes in order to display the ECB/NFPA-related data in the Production Management Client (see chapter Adapting and Adding Field Attributes in Volume 2 of the "Technical Manual Configuration and Extension" [A4] (page 187)).
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

LibraryHolder/services-s88-ifc.jar/BatchRecipeVersioningFSMName

- **Type**: String
- Value: MESMasterRecipeVersionGraph
- **Description**: Name of the versioning flexible state model used for batch-specific master recipes.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Any versioning FSM configured for the MasterRecipe object in Process Designer.

LibraryHolder/services-s88-ifc.jar/MasterWorkflowVersioningFSMName

Type: String

■ Value: MESMasterWorkflowVersionGraph

- Description: Name of the versioning flexible state model used for master workflows.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Any versioning FSM configured for the MasterRecipe object in Process Designer. The MasterRecipe object is also used for master workflows.

LibraryHolder/services-S88-impl.jar/OneClickWorkflowOrderDefaultPrefix

■ **Type**: String

Value: WF

- **Description**: Defines the default prefix of the workflow order identifier for one-click workflows (see section Configuring Workflow Identifiers", chapter "Changing Number Generation Schemes" in Volume 2 of the "Technical Manual Configuration and Extension" ([A4] (page 187)).
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

■ Range: N/A

LibraryHolder/services-S88-impl.jar/OneClickWorkflowOrderSequenceLength

■ **Type**: Long

■ Value: 8

- **Description**: Defines the length of the workflow order identifier for one-click workflows (see section "Configuring Workflow Identifiers", chapter "Changing Number Generation Schemes" in Volume 2 of the "Technical Manual Configuration and Extension" ([A4] (page 187)).
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [8..15] (recommended)

Library Holder/services-wd-impl.jar/< usage Type>. Master Recipe Quantity Check Applicable

■ **Type**: Boolean

Value: True

- **Description**: Applies to the specified usage type defined for shop floor-defined dispensing in the **RecipeUsageType** choice list:

 If the value is set to **true**, the recipe structure-related *MasterRecipeQuantityCheck* check is executed (see **RecipeStructureChecks** configuration key (page 151)). If the value is set to **false**, the check is not executed unless material inputs or outputs have been assigned to the recipe.

 See also section "Extension Use Case: Adding a Recipe-related Usage Type for Shop Floor-Defined Dispensing", chapter "Configuration and Extension" in "Technical Manual Phases of the Dispense Package" [A3] (page 187).
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

LibraryHolder/services-wd-impl.jar/<usageType>.MasterRecipeUsageTypeStructureCheckApplicable

■ Type: Boolean

■ Value: False

■ **Description**: Applies to the specified usage type defined for shop floor-defined dispensing in the **RecipeUsageType** choice list:

If the value is set to **true**, the recipe structure-related

MasterRecipeUsageTypeStructureCheck check is executed (see

RecipeStructureChecks configuration key (page 151)).

If the value is set to **false**, the check is not executed.

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

${\bf Library Holder/services-wd\text{-}impl.jar/<} {\bf usage Type>.} {\bf Material Parameter Counts Check Applicable}$

■ **Type**: Boolean

■ Value: True

■ **Description**: Applies to the specified usage type defined for shop floor-defined dispensing in the **RecipeUsageType** choice list:

If the value is set to **true**, the recipe structure-related

MaterialParameterCountsCheck check is executed (see **RecipeStructureChecks** configuration key (page 151)).

If the value is set to **false**, the check is not executed.

See also section "Extension Use Case: Adding a Recipe-related Usage Type for Shop Floor-Defined Dispensing", chapter "Configuration and Extension" in "Technical Manual Phases of the Dispense Package" [A3] (page 187).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Library Holder/services-wd-impl.jar/Cost Center. Master Recipe Quantity Check Applicable

Type: Boolean

■ Value: False

Description: Applies to the **Cost center** usage type:

If the value is set to **true**, the recipe structure-related *MasterRecipeQuantityCheck* check is executed (see **RecipeStructureChecks** configuration key (page 151)). If the value is set to **false**, the check is not executed unless material inputs or outputs have been assigned to the recipe.

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

${\bf Library Holder/services-wd-impl.jar/Cost Center. Master Recipe Usage Type Structure Check Applicable}$

■ **Type**: Boolean

Value: True

Description: Applies to the Cost center usage type: If the value is set to true, the recipe structure-related MasterRecipeUsageTypeStructureCheck check is executed (see RecipeStructureChecks configuration key (page 151)). If the value is set to false, the check is not executed. See also section "Extension Use Case: Adding a Recipe-related Usage Ty

See also section "Extension Use Case: Adding a Recipe-related Usage Type for Shop Floor-Defined Dispensing", chapter "Configuration and Extension" in "Technical Manual Phases of the Dispense Package" [A3] (page 187).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Library Holder/services-wd-impl.jar/Cost Center. Material Parameter Counts Check Applicable

■ **Type**: Boolean

Value: False

■ **Description**: Applies to the **Cost center** usage type:

If the value is set to **true**, the recipe structure-related *MaterialParameterCountsCheck* check is executed (see **RecipeStructureChecks** configuration key (page 151)).

If the value is set to **false**, the check is not executed.

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Configuration Keys for Inventory Management

The following configuration keys are available for inventory management.

LibraryHolder/services-inventory-impl.jar/<usageType>.BatchPrefix

Type: StringValue: BX

Description: Applies to the specified usage type defined for shop floor-defined dispensing in the RecipeUsageType choice list: Defines the default prefix for batches.
See also section "Extension Use Case: Adding a Recipe-related Usage Type for Shop Floor-Defined Dispensing", chapter "Configuration and Extension" in "Technical Manual Phases of the Dispense Package" [A3] (page 187).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: Two characters.

TIP

When you modify this prefix, especially its length, you may influence the barcode-related configuration keys.

90 PSCEV4-GR010C-EN-E, 1.0

LibraryHolder/services-inventory-impl.jar/AreBatchIdentifiersUnique

■ **Type**: Boolean

■ Value: True

- Description: Defines whether pure batch identifiers (i.e. without material identifiers) are unique across PharmaSuite.
 If the value is set to false, you must adapt the following settings in addition to the configuration key itself:
 - Clear the setting of the Field length parameter of the batch data dictionary element of the OrderModel data dictionary class. For this purpose, in Process Designer, run the mes_DataDictManagerForm form to start the Data Dictionary Management tool. Otherwise compound batch identifiers cannot be displayed in the Order form of the Production Management Client.

 - If the sublot label shall display the compound batch identifier, you must adapt the design of the sublot label. By default, the batch field of the label displays only the batch-related part of the batch identifier and the material identifier in a separate field. To change this behavior, in the report design use ((com.datasweep.compatibility.client.Batch)\$P{P_BATCH}).getName() instead of \$P{P_BATCH_IDENTIFIER} to determine the value of the batch field.

Consider that additional layout changes may be required due to the length of the compound batch identifier.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [False, True]

LibraryHolder/services-inventory-impl.jar/BatchBarcodeTemplates

Type: List

■ Value: (<value of LibraryHolder/services-inventory-impl.jar/DefaultBatchBarcodeTemplate configuration key>)

- **Description**: Batch barcode templates. It must form a list of template strings, with each template string of the following form: cprefix><bbbb...b><pppp...p>
 For the exact syntax, see the description of the
 LibraryHolder/services-inventory-impl.jar/DefaultBatchBarcodeTemplate
 configuration key (page 93).
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: N/A

LibraryHolder/services-inventory-impl.jar/BatchNumberLeadingZeros

■ Type: Boolean

■ Value: False

- **Description**: Specifies if the numeric part of a generated batch number has leading zeros.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [False, True]

LibraryHolder/services-inventory-impl.jar/BatchNumberLength

Type: Long

■ Value: 10

- **Description**: Defines the maximum length of a batch number.
- **Evaluated**: Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

■ Range: N/A

TIP

When you modify this length, you may influence the barcode-related configuration keys.

LibraryHolder/services-inventory-impl.jar/CostCenter.BatchPrefix

■ **Type**: String

■ Value: CX

■ **Description**: Applies to the **Cost center** usage type:

Defines the default prefix for batches.

See also section "Extension Use Case: Adding a Recipe-related Usage Type for Shop Floor-Defined Dispensing", chapter "Configuration and Extension" in "Technical Manual Phases of the Dispense Package" [A3] (page 187).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: Two characters.

TIP

When you modify this prefix, especially its length, you may influence the barcode-related configuration keys.

LibraryHolder/services-inventory-impl.jar/DefaultBatchBarcodeTemplate

■ **Type**: String

■ Value: #bbbbbbbbbbbppppppppp

■ **Description**: Default template for batch barcodes.

The detail syntax is as follows:

■ Value: <prefix>

■ **Meaning**: Prefix of a barcode.

Position in string: Must be the first character, if present.

■ Length: 1

■ Mandatory: Yes, to allow scanning in the Cockpit and Start Processing views of the Production Execution Client

- Value: <bbbb...b>
 - **Meaning**: Batch identifier. The number of 'b' characters determines the number of characters available for the batch identifier (number). Leading and trailing spaces are cut off during processing.
 - **Position in string**: Arbitrary (apart from prefix, if present).
 - **Length**: Variable
 - Mandatory: Yes
- Value: <pppp...p>
 - Meaning: Material identifier. The number of 'p' characters determines the number of characters available for the material identifier (name). Leading and trailing spaces are cut off during processing.
 - **Position in string**: Arbitrary (apart from prefix, if present).
 - Length: Variable
 - Mandatory: No
- **Evaluated**: Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: N/A

LibraryHolder/services-inventory-impl.jar/DefaultBatchPrefix

- **Type**: String
- Value: BX
- **Description**: Defines the default prefix for batches.
- **Evaluated:** Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: N/A

TIP

When you modify this prefix, especially its length, you may influence the barcode-related configuration keys.

LibraryHolder/services-inventory-impl.jar/DefaultSublotBarcodeTemplate

■ **Type**: String

■ **Description**: Default template for sublot barcodes.

The detail syntax is as follows:

■ Value: <prefix>

■ **Meaning**: Prefix of a barcode.

Position in string: Must be the first character, if present.

Length: 1

Mandatory: No

■ Value: <ssss...s>

■ Meaning: Sublot identifier. The number of 's' characters determines the number of characters available for the sublot identifier. Leading and trailing spaces are cut off during processing.

Position in string: Arbitrary (apart from prefix, if present).

Length: Variable

■ Mandatory: Yes

■ Value: <bbbb...b>

■ **Meaning**: Batch identifier. The number of 'b' characters determines the number of characters available for the batch identifier (number). Leading and trailing spaces are cut off during processing.

Position in string: Arbitrary (apart from prefix, if present).

■ Length: Variable

Mandatory: Yes

PSCEV4-GR010C-EN-E, 1.0

- Value: <pppp...p>
 - **Meaning**: Material identifier. The number of 'p' characters determines the number of characters available for the material identifier (name). Leading and trailing spaces are cut off during processing.
 - **Position in string**: Arbitrary (apart from prefix, if present).
 - **Length**: Variable
 - Mandatory: No
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: N/A

TIP

The default sublot barcode template is always a part of the LibraryHolder/services-inventory-impl.jar/SublotBarcodeTemplates configuration key (page 98). Otherwise you will not be able to read (parse) your own sublot labels.

LibraryHolder/services-inventory-impl.jar/DefaultSublotPrefix

- **Type**: String
- Value: SL
- **Description**: Defines the default prefix for sublot identifiers to be used when creating new sublots.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: N/A

LibraryHolder/services-inventory-impl.jar/IntraMaterialBatchPrefix

- **Type**: String
- Value: IX
- **Description**: Defines the prefix for batches assigned to an intra material.
- **Evaluated**: Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: N/A

97

TIP

When you modify this prefix, especially its length, you may influence the barcode-related configuration keys.

LibraryHolder/services-inventory-impl.jar/isMaterialManagedInStock

Type: Boolean

■ Value: True

- **Description**: The value is set to **true**, if the system manages material in stock, otherwise the value is set to *false*.
 - If the value is set to **false**, the following checks are never executed, regardless of whether any of them is configured somewhere else:
 - CheckBatchExpiryDate
 - CheckBOMSpecificMaterial
 - CheckMaterialForIntermediateOSI
 - CheckSublotBlockedByProcessing
 - CheckSublotProducedByOtherOS
 - CheckBatchQualityStatus
 - CheckSublotQuantity
 - CheckUndefinedBatchExpiryDate
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

LibraryHolder/services-inventory-impl.jar/OutputSeparator

■ **Type**: String

Value: , (comma)

- Description: The separator character to be used in the list of identifiers of the created sublots in the Sublot identifiers output variable of the Produce material, D Weigh, and O Weigh phases.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

Range: N/A

PSCEV4-GR010C-EN-E, 1.0

LibraryHolder/services-inventory-impl.jar/SublotBarcodeTemplates

■ Type: List

■ Value: (<value of

LibraryHolder/services-inventory-impl.jar/DefaultSublotBarcodeTemplate configuration key>)

Description: Sublot barcode templates. It must form a list of template strings, with each template string of the following form:

<prefix><ssss...s><bbbb...b><pppp...p>.

For the exact syntax, see the description of the

LibraryHolder/services-inventory-impl.jar/DefaultSublotBarcodeTemplate configuration key (page 95).

- **Evaluated:** Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: N/A

LibraryHolder/services-inventory-impl.jar/SublotIdentificationChecks

Type: List

■ Value: (CheckSublotNotContainedInLoadCarrier,

CheckSublotQuantity,

CheckBOMSpecificMaterial,

CheckUndefinedBatchExpiryDate,

CheckBatchExpiryDate,

CheckBatchQualityStatus,

CheckSublotBlockedByProcessing,

Check Material Batch Suggested Material Batches,

CheckMaterialForIntermediateOSI,

CheckSublotProducedByOtherOS)

- This list can be extended if new check classes are added during system configuration and extension.
- **Description**: A set of available sublot identification checks. A subset of these checks can be configured on the **OrderStepInput** level.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: Any element of the power set built from the allowed values.

Configuration Keys for Barcodes

The following configuration keys are available for barcodes.

Forms/2DBarcodeImages/characterSet

■ **Type**: String

■ Value: ISO-8859-1

- **Description**: Specifies the character set to be used to encode the barcode with the iText library of 2D barcode images on buttons. For the ZXing library, a character set cannot be defined.
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: N/A

Forms/2DBarcodeImages/DataMatrixShapeSquare

Type: Boolean

Value: True

■ **Description**: Defines the shape of data matrix barcodes generated with Apache ZXing.

TIP

Please note that the key is ignored if the barcode is generated with iText.

If the value is set to **true**, the shape is forced to be square.

If the value is set to **false**, the shape can either be rectangular or square, depending on the decision of the underlying ZXing library.

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Forms/2DBarcodeImages/encodingByIText

■ **Type**: Boolean

■ Value: False

■ **Description**: Defines whether the AGPL iText or Apache ZXing library is used to encode 2D barcode images on buttons.

If the value is set to **true**, PharmaSuite uses iText.

If the value is set to **false**, PharmaSuite uses ZXing.

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

PSCEV4-GR010C-EN-E, 1.0 99

LabelDesigns/2DBarcodeImages/characterSet

Type: StringValue: UTF-16

- **Description**: Specifies the character set to be used to encode the barcode with the iText library of 2D barcode images on labels and reports. For the ZXing library, a character set cannot be defined.
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: N/A

LabelDesigns/2DBarcodeImages/encodingByIText

Type: Boolean

Value: False

■ **Description**: Defines whether the AGPL iText or Apache ZXing library is used to encode 2D barcode images on labels and reports.

If the value is set to **true**, PharmaSuite uses iText. If the value is set to **false**, PharmaSuite uses ZXing.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

Library Holder/commons-base-ifc.jar/Barcode Listener. alternative Start Character

Type: Long
Value: 130

■ **Description**: The alternative first character of a barcode scan.

Only usable for printable characters (such as &), since printable characters have different key codes for different keyboard locales.

If this constant is changed, all barcode scanning devices have to be reconfigured. This configuration key takes precedence over the setting in the

LibraryHolder/commons-base-ifc.jar/BarcodeListener.alternativeStartKey configuration key (page 101).

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

LibraryHolder/commons-base-ifc.jar/BarcodeListener.alternativeStartKey

- **Type**: Long
- Value: java.awt.event.KeyEvent.VK_DEAD_CIRCUMFLEX (ASCII 130 or 0x82)
- **Description**: Defines the alternative prefix key code to the **LibraryHolder/commons-base-ifc.jar/BarcodeListener.startKey** configuration key (page 103) for barcode scanning.

This allows to use different barcode scanners with two different scanner prefixes in one PharmaSuite system.

This configuration key is ignored if the

LibraryHolder/commons-base-ifc.jar/BarcodeListener.alternativeStartChar acter configuration key (page 100) is set.

- **Evaluated**: Only when a PharmaSuite client is started.
- Range: A key that can be sent by the scanner to be used (see scanner documentation). The key must not interfere with any of the accelerator keys used for the user interface of the Production Execution Client.

LibraryHolder/commons-base-ifc.jar/BarcodeListener.endCharacter

Type: Long

■ Value: 10

Description: The last character of a barcode scan.

Only usable for printable characters (such as *), since printable characters have different key codes for different keyboard locales.

If this constant is changed, all barcode scanning devices have to be reconfigured. This configuration key takes precedence over the setting in the

LibraryHolder/commons-base-ifc.jar/BarcodeListener.endKey configuration key (page 102).

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

· '

LibraryHolder/commons-base-ifc.jar/BarcodeListener.endKey

■ **Type**: Long

■ Value: java.awt.event.KeyEvent.VK_ENTER (carriage return)

■ **Description**: Defines the suffix key code for barcode scanning. It is a constant from the *Java KeyEvent* class, not an ASCII code. If this constant is changed, all barcode scanning devices have to be reconfigured.

This configuration key is ignored if the

LibraryHolder/commons-base-ifc.jar/BarcodeListener.endCharacter configuration key (page 101) is set.

Recommended for non-printable keys like function keys or ENTER.

- **Evaluated**: Only when a PharmaSuite client is started.
- Range: A key that can be sent by the scanner to be used (see scanner documentation). The key must not interfere with any of the accelerator keys used for the user interface of the Production Execution Client.

LibraryHolder/commons-base-ifc.jar/BarcodeListener.startCharacter

Type: Long

■ Value: 115

■ **Description**: The first character of a barcode scan.

Only usable for printable characters (such as #), since printable characters have different key codes for different keyboard locales.

If this constant is changed, all barcode scanning devices have to be reconfigured. This configuration key takes precedence over the setting in the

LibraryHolder/commons-base-ifc.jar/BarcodeListener.startKey configuration key (page 103).

Evaluated: Only when a PharmaSuite client is started.

Range: N/A

LibraryHolder/commons-base-ifc.jar/BarcodeListener.startKey

- **Type**: Long
- **Value**: java.awt.event.KeyEvent.VK_F4 (F4 function key)
- **Description**: Defines the prefix key code for barcode scanning. It is a constant from the *Java KeyEvent* class, not an ASCII code. If this constant is changed, all barcode scanning devices have to be reconfigured.

This configuration key is ignored if the

LibraryHolder/commons-base-ifc.jar/BarcodeListener.startCharacter configuration key (page 102) or the

LibraryHolder/commons-base-ifc.jar/BarcodeListener.alternativeStartChar acter configuration key (page 100) are set.

Recommended for non-printable keys like function keys or ENTER.

- **Evaluated**: Only when a PharmaSuite client is started.
- Range: A key that can be sent by the scanner to be used (see scanner documentation). The key must not interfere with any of the accelerator keys used for the user interface of the Production Execution Client.

Configuration Keys for the Batch Report

The following configuration keys are available for the batch report.

LibraryHolder/services-batchreport-impl.jar/<usagetype>.WorkflowOrder-Main

- **Type**: Object ReportDesign
- Value: PS-BatchReport-WorkflowOrder-Main
- **Description**: Applies to the specified usage type defined for shop floor-defined dispensing in the **RecipeUsageType** choice list:

 The report design of the workflow order report.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: Any valid report design.

• '

LibraryHolder/services-batchreport-impl.jar/FontDirectory

Type: String

■ Value: %SystemRoot%/Fonts

- **Description**: The name of the directory containing the fonts to be used by PDF export. Usually *SystemRoot* is *c:/windows*.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: Any valid directory containing fonts.

LibraryHolder/services-batchreport-impl.jar/ImageNameOfBatchReportLogo

■ **Type**: String

■ Value: FTPS_Logo_BatchReport

- **Description**: The name of the FactoryTalk ProductionCentre image object used as logo within the batch production report and workflow report.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: Any valid image name of an image present in the system.

LibraryHolder/services-batchreport-impl.jar/ImageNameOfMRReportLogo

■ Type: String

■ Value: FTPS_Logo_MRReport

- **Description**: The name of the FactoryTalk ProductionCentre image object used as logo within the master recipe report and the master workflow report.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: Any valid image name of an image present in the system.

LibraryHolder/services-batchreport-impl.jar/Main

Type: Object - ReportDesign

■ Value: PS-MRReport-Main

Description: The report design of the master recipe report.

Evaluated: Only when a PharmaSuite client is started.

Range: Any valid report design (version 1).

TIP

Since PharmaSuite 7.0, the configuration key is no longer supported. It is replaced by the LibraryHolder/services-batchreport-impl.jar/PS-MRReport-Main configuration key (page 105).

LibraryHolder/services-batchreport-impl.jar/PS-MRReport-Main

Type: Object - ReportDesign

■ Value: PS-MRReport-Main

- **Description**: The report design of the master recipe report (for batch production).
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: Any valid report design (version 1).

LibraryHolder/services-batchreport-impl.jar/Workflow-Main

■ **Type**: Object - ReportDesign

■ Value: PS-MRReport-Workflow-Main

Description: The report design of the workflow report.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: Any valid report design (version 1).

ReportPreview.useAlwaysPagination

■ **Type**: Boolean

■ Value: False

■ **Description**: Defines whether the report in the preview (Show report) includes pagination. The print preview always includes pagination.

If the value is set to **true**, the preview includes pagination.

If the value is set to **false**, the preview does not include pagination. This is the default setting.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

Configuration Keys for S88-specific Equipment

The following configuration keys are available for the S88-specific equipment processing.

Equipment/AIServerMessagingTimeoutInSeconds

Type: Long

■ **Value**: 60

■ **Description**: The timeout for replies from the Automation Integration server for accessing FactoryTalk Live Data in seconds.

Note: A FactoryTalk Live Data access itself may take more than 30 seconds in failure situations. However normal accesses only take milliseconds.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: We recommend to keep the default setting.

 Lowering the default setting may result in general timeout messages in case of FactoryTalk Live Data failure situations.

Equipment/DefaultAutomationIntegrationServerName

■ Type: String

■ Value: AutomationIntegrationServer1

- **Description**: Specifies the logical name of the default Automation Integration server.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

Range: N/A

Equipment/DefaultHistorianAccessServerName

■ Type: String

■ Value: HistorianAccessServer1

- **Description**: Specifies the logical name of the default Historian access server. If the provider is OSI PI, it is called **PI SQL Data Access Server**.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

■ Range: N/A

Equipment/DefaultHistorianAIServerName

■ **Type**: String

■ Value: AutomationIntegrationServer1

- **Description**: Specifies the logical name of the default Historian AI (Automation Integration) server.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

■ Range: N/A

Equipment/DefaultHistorianServerName

■ **Type**: String

■ Value: HistorianServer1

- **Description**: Specifies the logical name of the default Historian server. If the provider is OSI PI, it is called **PI-Server**.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

Range: N/A

• '

Equipment/defaultLabelPrinter

Type: StringValue: N/A

- **Description**: Defines the name of the default printer that is used for printing barcode labels for equipment entities.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: A valid (local or network printer) name including double backslashes.

Equipment/DefaultLiveDataAreaPath

■ **Type**: String

■ Value: RNA://\$Global/LiveDataArea

- **Description**: Path to the default FactoryTalk Live Data area (e.g. *RNA://@Global/...*).
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: Any valid path.

Equipment/DefaultTagUpdateRateInMilliseconds

Type: LongValue: 2000

Description: Update rate of tag values in milliseconds (msec).

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: N/A

Equipment/equipmentEntityBarcode.prefix

Type: String

■ Value: N/A

Description: Defines the prefix of the barcode label for equipment entities.

Evaluated: Only when a PharmaSuite client is started.

Range: N/A

Equipment/equipmentEntityLabel.reportDesign

■ **Type**: Object - ReportDesign

■ Value: s88EquipmentEntityLabelRD

Description: The report design of the barcode label for equipment entities.

Evaluated: Only when a PharmaSuite client is started.

■ Range: Any valid report design.

TIP

In PharmaSuite, labels are based on the **ReportDesign** object of FactoryTalk ProductionCentre.

Equipment/equipmentEntityLabel.showPrinterSelection

■ **Type**: Boolean

■ Value: True

■ **Description**: If the value is set to **true**, a print dialog box is displayed before printing.

If the value is set to **false**, no print dialog box is displayed before printing.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

Equipment/equipmentEntityLabel.subroutine

Type: Object - Subroutine

■ Value: s88EquipmentEntityLabelSR

■ **Description**: The subroutine to retrieve the data required according to the report design for equipment entities.

Evaluated: Only when a PharmaSuite client is started.

■ Range: Any valid subroutine that supports all used equipment entity label report designs.

• ' •

Equipment/equipmentEntityLabel.usePreviewWindowForTouchscreen

Type: Boolean

Value: False

- Description: If the value is set to true, Data Manager uses the preview window for touch screens (used in Production Execution Client).
 If the value is set to false, Data Manager uses the standard preview window (also used in Production Execution Client or Recipe and Workflow Designer).
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Equipment/HistorianAccessPassword.<HistorianAccessServerName>

■ **Type**: String

Value: N/A

- **Description**: Encrypted password to log in to the specified Historian access server.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: N/A

Equipment/HistorianAccessUser.<HistorianAccessServerName>

■ **Type**: String

■ Value: N/A

- **Description**: User name to log in to the specified Historian access server.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: N/A

Equipment/LiveDataPassword

■ **Type**: String

■ Value: null (the logged-in Windows user is used)

Description: Encrypted or unencrypted password to connect to FactoryTalk Live

This is also used by the Automation Integration server.

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: Password of a user configured in FactoryTalk Live Data.

5 • Configuration Keys of PharmaSuite

Equipment/LiveDataUsername

Type: String

Value: null (the logged-in Windows user is used)

Description: User name to connect to FactoryTalk Live Data. This is also used by the Automation Integration server.

Evaluated: Only when a PharmaSuite client is started.

Range: Name of a user configured in FactoryTalk Live Data.

Equipment/PI_JDBC_DCA_OPTION

Type: String Value: INIT

Description: Applies only if the provider is OSI PI.

Defines the behavior (ignore or reuse) of persisted authentication (filename.dca) for PI SQL DAS:

INIT: clears persisted authentication information,

REUSE: reuses persisted authentication,

file name: uses specific authentication file,

SAVE: persists a DCA file from values specified in user and password properties.

For details, see OSIsoft PI JDBC 2017 Administrator Guide, [D2] (page 188).

Evaluated: Only when a PharmaSuite client is started.

Range: N/A

Equipment/PI_JDBC_Property_LogConsole

Type: Boolean

Value: False

Description: Applies only if the provider is OSI PI. Specifies if log messages of the PI JDBC driver are printed to the console. For details, see OSIsoft PI JDBC 2017 Administrator Guide, [D2] (page 188).

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

Equipment/PI_JDBC_Property_LogFile

Type: StringValue: N/A

■ **Description**: Applies only if the provider is OSI PI. Specifies the full log file path/name of the PI JDBC driver. For details, see OSIsoft PI JDBC 2017 Administrator Guide, [D2] (page 188).

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

Equipment/PI_JDBC_Property_LogLevel

■ **Type**: Long

■ Value: 0

■ **Description**: Applies only if the provider is OSI PI. Specifies the granularity of messages to be logged by the PI JDBC driver. For details, see OSIsoft PI JDBC 2017 Administrator Guide, [D2] (page 188).

Evaluated: Only when a PharmaSuite client is started.

Range: [0..5]

Equipment/PI_JDBC_URL

■ Type: String

■ Value: jdbc:pisql://{0}/Data Source={1}; Integrated Security=SSPI

■ **Description**: Applies only if the provider is OSI PI.

Specifies the URL to connect the PI JDBC driver, where the first parameter is the name of the PI DA server and the second parameter is the name of the PI server.

For details, see OSIsoft PI JDBC 2017 Administrator Guide, [D2] (page 188).

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

Equipment/TagQualityGoodList

Type: List

■ Value: TagGoodQuality

Description: List holding all numeric values that are considered good tag quality.

■ Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

■ Range: Values of FTLDConstants.OPCQuality* constants.

LibraryHolder/commons-messaging-ifc.jar/MessageTimeToLive4AI

■ **Type**: Long

■ **Value**: 3000 (3 seconds)

Description: For Automation Integration, the default time in milliseconds from its dispatch time that a produced message should be retained by the message system. The value of **0** means that there is no limit.

Evaluated: Only when a PharmaSuite client is started.

■ Range: >= 0

LibraryHolder/services-eqm-ifc.jar/FallBackToJavaXCommLibrary

■ Type: Boolean

■ Value: False

■ **Description**: Defines whether the outdated *javax.comm* library is used for the serial communication with scale drivers.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

LibraryHolder/services-eqm-ifc.jar/FilterNULBytes

Type: Boolean

■ Value: True

■ **Description**: Defines whether to filter out NUL bytes from an input stream when data is interpreted as a string. We recommend to set the value to **true** in case the scale communication is unreliable when running in a Citrix environment.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

LibraryHolder/services-eqm-ifc.jar/RegisterSerialEventHandler

■ Type: Boolean

■ Value: True

- **Description**: Defines whether the event handler for serial ports shall be registered. We recommend to set the value to **false** in case the scale communication is unreliable when running in a Citrix environment. This setting only works for scale drivers provided with PharmaSuite. For other drivers, contact the supplier.
- **Evaluated**: Only when a PharmaSuite client is started.

Range: [False, True]

LibraryHolder/services-eqm-impl.jar/RoomCleaningRules

■ Type: List

- Value: (CleaningRuleInputMaterialHasChanged, CleaningRulePredecessorWasActiveSubstance, CleaningRulePredecessorMaterialUnknown)
 - This list can be extended if new check classes are added during system configuration and extension.
- **Description**: A set of rules (checks) to determine the cleaning demand of an intended binding for the current room.

By default, the following checks are available:

- CleaningRuleInputMaterialHasChanged: Checks whether the input material to be dispensed has been changed.
- CleaningRulePredecessorWasActiveSubstance: Checks whether the input material to be dispensed has been changed and the previous input material was an active substance.
- CleaningRulePredecessorMaterialUnknown: Checks whether the input material is known and the predecessor material is unknown or does not exist at all.
- **Evaluated**: Only when a PharmaSuite client is started.

Range: N/A

LibraryHolder/services-externaleqm-ifc.jar/ExternalEqmReceiver

Type: StringValue: MES

- **Description**: Defines the logical name of a PharmaSuite system that receives messages from an external system for equipment management and processes them.
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: N/A

Library Holder/services-s88 eqmreport-impl.jar/ImageNameOfEQMReportLogo

■ Type: String

■ Value: FTPS_Logo

- **Description**: The name of the FactoryTalk ProductionCentre image object used as logo within the equipment entity logbook report.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: Any valid image name of an image present in the system.

${\bf Library Holder/services-s88 equipment-ifc.jar/Flexible State Model S88 Equipment Classian Control of Cont$

■ **Type**: String

■ Value: S88EquipmentClassStatusGraph

- **Description**: Name of the flexible state model used for the status management of S88 equipment classes.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Any valid name for an FSM object in Process Designer.

Library Holder/services-s 88 equipment-if c. jar/Flexible State Model S88 Equipment Entity

■ Type: String

■ Value: S88EquipmentEntityStatusGraph

- **Description**: Name of the flexible state model used for the status management of S88 equipment entities.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Any valid name for an **FSM** object in Process Designer.

LibraryHolder/services-s88equipment-ifc.jar/FlexibleStateModelS88StatusGraph

■ **Type**: String

■ Value: S88StatusGraphChangeControl

- **Description**: Name of the flexible state model used for the status management of S88 equipment status graphs.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Any valid name for an **FSM** object in Process Designer.

Library Holder/services-s 88 equipment-impl.jar/Generated Entity Barco de Prefix

■ **Type**: String

■ Value: "" (i.e. empty string)

- **Description**: Defines the default barcode prefix for equipment entities generated from a template entity during processing.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: Any character or none (i.e. empty string)

LibraryHolder/services-s88equipment-impl.jar/GeneratedEntityIdentifierPrefix

Type: String

Value: EQ

- **Description**: Defines the default identifier prefix of the automatically generated identifier for equipment entities generated from a template entity during processing.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: N/A

The prefix should be shorter than the length defined with the **LibraryHolder/services-s88equipment-impl.jar/GeneratedEntityLengthOfNu mericPartOfIdentifier** configuration key (page 117).

Library Holder/services-s 88 equipment-impl.jar/Generated Entity Length Of Numeric Part Of Identifier

Type: Long

■ **Value**: 10

- **Description**: Defines the default length of the numeric part of the automatically generated identifier for equipment entities generated from a template entity during processing.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [5..80]

The minimum depends on the

LibraryHolder/services-s88equipment-impl.jar/GeneratedEntityIdentifierPr efix configuration key (page 116).

LibraryHolder/services-s88-ifc.jar/expiryDateTransitionCheckInterval

Type: Long

■ Value: 5

- **Description**: Defines the interval in minutes, after which the Transition server checks if the expiry date of equipment entities has elapsed. If so, a transition according to the assigned equipment transition graph is forced. If the value is smaller than 1, the Transition server does not check the expiry date.
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: >= 1

LibraryHolder/services-s88-impl,jar/expiryDateTransitionCheckEntitiesOption

Type: String

■ Value: Active

- **Description**: Specifies the equipment entities for which the Transition server checks if their expiry date has elapsed. Equipment entities in a status that holds the **mes.S88Equipment.Retired** semantic property are always excluded.
 - Active: Equipment entities in a status that holds the mes.S88Equipment.Active semantic property are checked.
 - **All**: All equipment entities are checked.
 - **ReadOnly**: Equipment entities in a status that does not hold the **mes.statusControlled.Editable** semantic property are checked.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Active, All, ReadOnly

• '

Library Holder/services-s 88-impl.jar/Identify Already Bound Eqm From Appended Workflow

■ **Type**: Boolean

■ Value: True

■ **Description**: If the value is set to **true**, equipment identification in a workflow is allowed if the equipment is bound to the order to which the workflow is appended.

If the value is set to **false**, equipment identification is not allowed in a workflow if the equipment is bound to the order to which the workflow is appended.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

LibraryHolder/services-s88-impl.jar/showEquipmentListEntitiesStatusOption

■ **Type**: String ■ **Value**: Active

Description: Specifies the equipment entities which are retrieved and displayed in the Show equipment list phase. Equipment entities in a status that holds the mes.S88Equipment.Retired semantic property are always excluded.

 Active: Equipment entities in a status that holds the mes.S88Equipment.Active semantic property are retrieved.

■ **All**: All equipment entities are retrieved.

 ReadOnly: Equipment entities in a status that does not hold the mes.statusControlled.Editable semantic property are retrieved.

Evaluated: Only when a PharmaSuite client is started.

■ Range: Active, All, ReadOnly

services-s88equipment-ifc.jar/FlexibleStateModelBinding

■ **Type**: String

■ Value: S88EquipmentBinding

■ **Description**: Name of the flexible state model used for S88 equipment binding.

Evaluated: Only when a PharmaSuite client is started.

■ Range: Name of the flexible state model assigned to the binding FSM relationship.

Station/defaultLabelPrinter

Type: StringValue: N/A

- **Description**: Defines the name of the default printer that is used for printing barcode labels for stations.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: A valid (local or network printer) name including double backslashes.

Station/stationBarcode.prefix

■ **Type**: String

■ Value: &

- **Description**: Defines the prefix of the barcode label for stations.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: N/A

Station/stationLabel.reportDesign

■ **Type**: Object - ReportDesign

Value: MESStationLabelRD

- **Description**: The report design of the barcode label for stations.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: Any valid report design.

TIP

In PharmaSuite, labels are based on the **ReportDesign** object of FactoryTalk ProductionCentre.

Station/stationLabel.showPrinterSelection

Type: Boolean

■ Value: True

■ **Description**: If the value is set to **true**, a print dialog box is displayed before printing.

If the value is set to **false**, no print dialog box is displayed before printing.

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Station/stationLabel.subroutine

■ **Type**: Object - Subroutine

■ Value: MESStationLabelSR

- **Description**: The subroutine to retrieve the data required according to the report design for stations.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: Any valid subroutine.

Station/stationLabel.usePreviewWindowForTouchscreen

Type: Boolean

Value: False

- Description: If the value is set to true, Data Manager uses the standard preview window (also used in Production Execution Client or Recipe and Workflow Designer).
 - If the value is set to **false**, Data Manager uses the preview window for touch screens (used in Production Execution Client).
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Configuration Keys for Exception Recording

The following configuration keys are available for exception recording.

Libraries/apps-ebr-impl.jar/ContainerStatusFailureExcRisk

■ **Type**: Long

■ **Value**: 30

(Value of the **High risk** level)

- Description: When a source sublot is identified that is associated with a container entity, the phase checks if the approval status of the container is Approved. A Container status check system-triggered exception is displayed automatically if the check has failed. The configuration key defines the exception-specific risk level of the exception.
 - Applies only to the **D Identify material (RS) [5.0] (MR1)** phase.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: The meaning of the elements of the **RiskClass** choice list.

LibraryHolder/apps-ebr-ifc.jar/PhaseExecutionSkippedExcRisk

Type: Long

■ Value: 30

(Value of the **High risk** level)

Description: Applies to the recovery capabilities within the Production Execution Client.

The exception-specific risk level of a system-triggered exception added to an active phase, when aborting the phase is confirmed.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: The values of the elements of the **RiskClass** choice list.

LibraryHolder/apps-ebr-ifc.jar/PhaseRepairModeExcRisk

■ **Type**: Long

■ Value: 30

(Value of the **High risk** level)

Description: Applies to the recovery capabilities within the Production Execution Client.

The exception-specific risk level of a system-triggered exception added to an active phase, when the repair mode of a phase is started or when process parameters have been edited in the repair mode of a phase.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: The values of the elements of the RiskClass choice list.

LibraryHolder/apps-ebr-impl.jar/AbortOperationExcRisk

Type: Long

■ Value: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of a system-triggered exception added to all active phase when an operation is aborted.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The meaning of the elements of the **RiskClass** choice list.

Library Holder/apps-ebr-impl.jar/Automatic Exception On Resume Of Server Run Operation Exc Risk

Type: Long

■ Value: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an automatic exception added to all active operations that have been resumed, when the Operation Execution (OE) server is restarted.
- **Evaluated**: Only when the Operation Execution (OE) server is started.
- Range: The values of the elements of the RiskClass choice list.

LibraryHolder/apps-ebr-impl.jar/CanceledExceptionRisk

Type: Long

■ Value: 10

(Value of the Low risk level)

- **Description**: The exception-specific risk level of the "Exception canceled" exception.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The values of the elements of the **RiskClass** choice list.

LibraryHolder/apps-ebr-impl.jar/HoldOrResumeOESOperationExcRisk

■ **Type**: Long

■ Value: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an exception added to the active runtime operation, when the operation is held or resumed with the PharmaSuite Administrator Console. For more information, see chapter "Monitoring PharmaSuite and Related Components" in "Technical Manual Administration" [A7] (page 187).
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The values of the elements of the **RiskClass** choice list.

LibraryHolder/apps-ebr-impl.jar/OperationUnlockedByAdminExcRisk

Type: Long

■ **Value**: 30

(Value of the **High risk** level)

- Description: The exception-specific risk level of an exception added to all active phases of an operation, when the operation is unlocked and unregistered with the Remove Object Locks task in the Production Management Client.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The values of the elements of the **RiskClass** choice list.

Library Holder/apps-ebr-impl.jar/OSC anceled While Phase Active ExcRisk

■ **Type**: Long

■ **Value**: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of a system-triggered exception added to all active phases when an order or workflow is canceled or a unit procedure is aborted.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: The values of the elements of the RiskClass choice list.

LibraryHolder/apps-ebr-impl,jar/RoomTriggerStatusTransitionFailureExcRisk

■ **Type**: Long

■ **Value**: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of a system-triggered exception in case a room-specific status transition fails. Applies to system phase building blocks of the Dispense package that do not hold the **Status transition failed** process parameter.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The values of the elements of the **RiskClass** choice list.

Library Holder/apps-ebr-impl.jar/S equential Phase Completion User Already Signed ExcRisk

■ **Type**: Long

■ Value: 35

(Value of the **High risk with mandatory comment** level)

- **Description**: The exception-specific risk level of an exception added to a phase if a sequential completion signature is enabled and a user who has already signed for a previous phase completion within this operation signs for the phase completion.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: The values of the elements of the RiskClass choice list.

LibraryHolder/apps-ebr-impl.jar/UnloadOrderFromEBRExcRisk

■ **Type**: Long

■ Value: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of the exceptions added to the active runtime unit procedures when an order (workflow) is unloaded or loaded with the PharmaSuite Administrator Console. For more information, see chapter "Monitoring PharmaSuite and Related Components" in "Technical Manual Administration" [A7] (page 187).
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The values of the elements of the **RiskClass** choice list.

LibraryHolder/apps-masterdata-impl.jar/ForceUnbindEquipmentExcRisk

Type: Long

■ Value: 30

(Value of the **High risk** level)

- Description: The exception-specific risk level of an automatic exception added to the runtime unit procedure of a bound entity, when the Force unbinding of equipment entity function in Data Manager has been performed.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The values of the elements of the **RiskClass** choice list.

LibraryHolder/commons-deviation-impl.jar/ExceptionSequencerLength

■ **Type**: Long

■ Value: 9

- **Description**: The minimum length of generic exception record identifiers.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: Any value greater than 3, since **EXC** is the common prefix used by exception records created through this service.

Library Holder/services-eto-impl.jar/Automatic Exception On Failure At Creation Of Run Of ETO Exc Risk

■ **Type**: Long

■ Value: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an automatic exception added to an event-triggering phase, when the creation of an ETO run fails e.g. because the Triggered Operation Management (TOM) server does not run.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The values of the elements of the **RiskClass** choice list.

$Library Holder/services-eto-impl.jar/Automatic Exception On Resume Of Template Exc\\Risk$

Type: Long

■ Value: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an automatic exception added to all active event-triggered operations (templates) that have been resumed, when the Triggered Operation Management (TOM) server is restarted.
- **Evaluated**: Only when the Triggered Operation Management (TOM) server is started.
- **Range**: The values of the elements of the **RiskClass** choice list.

LibraryHolder/services-order-ifc.jar/ForceTransitionExecutionOrderExcRisk

Type: Long

■ Value: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an exception added to the corresponding runtime entity (runtime unit procedure, operation, or phase), when a transition is forced for orders (workflows) in the Production Management Client.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The values of the elements of the **RiskClass** choice list.

LibraryHolder/services-order-ifc.jar/IncreaseOSIQuantityExcRisk

Type: Long

■ Value: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an exception added to the corresponding unit procedure, when the quantity of an order step input is increased in the Production Management Client.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The values of the elements of the **RiskClass** choice list.

LibraryHolder/services-order-ifc.jar/NewCorrectiveOSIExcRisk

Type: Long

■ Value: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an exception added to the corresponding unit procedure, when new additional order step input is added to the order-related items in the Production Management Client.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The values of the elements of the **RiskClass** choice list.

LibraryHolder/services-order-ifc.jar/OrderChangesExceptionRisk

■ **Type**: Long

■ **Value**: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an exception added to the corresponding unit procedure, when an order or workflow detects during its status change from **In process** to **Finished** that order or workflow changes performed in the Production Management Client have been tracked.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: The values of the elements of the RiskClass choice list.

LibraryHolder/services-order-ifc.jar/ReactivateOSIExcRisk

Type: Long

■ Value: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an exception added to the corresponding unit procedure, when an order step input is reactivated in the Production Management Client.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: The values of the elements of the RiskClass choice list.

LibraryHolder/services-order-ifc.jar/ReleaseOSILockExcRisk

Type: Long

■ **Value**: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of a system-triggered exception added to a runtime phase as owner of an order step input lock when the order step input position is unlocked manually.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The meaning of the elements of the **RiskClass** choice list.

LibraryHolder/services-order-ifc.jar/ReplaceTargetSublotExcRisk

Type: Long

■ Value: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an exception added to the corresponding unit procedure, when a target sublot is replaced in the Production Management Client.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The values of the elements of the **RiskClass** choice list.

LibraryHolder/services-order-ifc.jar/UnitProcedureAbortByAdminExcRisk

Type: Long

■ Value: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an exception added to the active runtime unit procedure, when the corresponding non-Dispense order step has been aborted in the Production Management Client.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range:** The values of the elements of the **RiskClass** choice list.

LibraryHolder/services-order-ifc.jar/UnitProcedureFinalAbortByAdminExcRisk

Type: Long

■ **Value**: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of a system-triggered exception added to all active phase when a unit procedure is final aborted.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: The meaning of the elements of the RiskClass choice list.

Library Holder/services-order-ifc.jar/Unit Procedure Finish With Aborted By Admin ExcRisk

Type: Long

■ Value: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an exception added to the aborted runtime unit procedures, when the corresponding order has been finished in the Production Management Client.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: The values of the elements of the RiskClass choice list.

Library Holder/services-order-ifc. jar/Unit Procedure Reactivated By Admin ExcRisk

Type: Long

■ Value: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an exception added to the active runtime unit procedure, when the corresponding non-Dispense order step has been reactivated in the Production Management Client.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: The values of the elements of the RiskClass choice list.

LibraryHolder/services-s88equipment-impl.jar/SaveReadOnlyEquipmentExcRisk

Type: String

Value: High

(Meaning of the **RiskClass** choice list)

- **Description**: The exception-specific risk level of an exception added to the runtime unit procedure of a bound entity (in a read-only status, e.g. **Verification**, **Approved**), when runtime data, such as runtime properties, graph-related data (e.g. status, expiry date), and grouping situations, of the equipment entity was changed in Data Manager.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The meaning of the elements of the **RiskClass** choice list.

LibraryHolder/services-S88-ifc.jar/ExternalExceptionHandlingReceiver

Type: StringValue: QMS

- **Description**: Defines the logical name of an external system that receives exceptions from a PharmaSuite system and responds to them.
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: N/A

LibraryHolder/services-S88-ifc.jar/ExternalExceptionHandlingSender

Type: StringValue: MES

- **Description**: Defines the logical name of a PharmaSuite system that sends exceptions to an external system.
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: N/A

LibraryHolder/services-S88-impl.jar/ActivateExceptionClassification

■ **Type**: Boolean

■ Value: True

■ **Description**: Defines whether exception classification is available when adding a comment to an exception in the Production Execution Client and the Production Response Client, visible in reports, and sent to an external QMS (if activated). If the value is set to **true**, exceptions must be classified when a comment is added. This is the default setting.

If the value is set to **false**, the exception classification is neither activated nor visible.

We highly recommend to avoid a user-specific configuration, since the behavior related to the exception classification should be the same for all users.

Evaluated: Only when a PharmaSuite client is started.

■ Range: Range: [False, True]

LibraryHolder/services-S88-impl.jar/ActivateExternalExceptionHandling

■ **Type**: Boolean

■ Value: False

- **Description**: Defines if an exception is sent to an external QMS for review in case a defined criterion (e.g. minimal risk level) is fulfilled. If the value is set to **true**, exceptions are sent to an external QMS. Additionally, the **Communication status** and the **External ID** are shown in the UI. If the value is set to **false**, exceptions are not sent to an external system. This is the default setting.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Range: [False, True]

Library Holder/services-S88-impl.jar/Append Workflows From Rt Unit Procedure In PECExcRisk

■ **Type**: Long

■ **Value**: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an exception added to the active runtime unit procedure when orders (workflows) are appended by the unit procedure's context menu to the corresponding order step in the Production Execution Client.
 - Whether an electronic signature is required for the action is configured with the LibraryHolder/services-S88-impl.jar/AppendWorkflowsFromRtUnitProcedu reInPECSignatureEnabled configuration key (page 134).
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: The values of the elements of the RiskClass choice list.

· '

LibraryHolder/services-S88-impl.jar/AppendWorkflowsToOrderInPECExcRisk

Type: Long

■ Value: 30

(Value of the **High risk** level)

- Description: The exception-specific risk level of an exception added to the active runtime unit procedure when orders (workflows) are appended to a running order step when starting the workflow in the Production Execution Client. Whether an electronic signature is required for the action is configured with the LibraryHolder/services-S88-impl.jar/AppendWorkflowsToOrderInPECSign atureEnabled configuration key (page 132).
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The values of the elements of the **RiskClass** choice list.

${\bf Library Holder/services-S88-impl.jar/Append Workflows ToOrder In PECS ignature Enabled}$

Type: Boolean

Value: False

■ **Description**: Defines whether an electronic signature is required when orders (workflows) are appended to a running order step when starting the workflow in the Production Execution Client.

If the value is set to **true**, the Production Execution Client requests to record an electronic signature.

If the value is set to **false**, orders (workflows) can be appended without signing for the action. This is the default setting.

The risk level for the exception is configured with the

LibraryHolder/services-S88-impl.jar/AppendWorkflowsToOrderInPECExc Risk configuration key (page 132).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

LibraryHolder/services-S88-impl.jar/CancelWorkflowInPECExcRisk

■ **Type**: Long

■ **Value**: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an exception added to the corresponding runtime unit procedure, when a workflow order is canceled in the Production Execution Client.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The meaning of the elements of the **RiskClass** choice list.

Library Holder/services-S88-impl.jar/Cancel Workflow In PEC Signature Enabled

■ **Type**: Boolean

Value: True

- Description: Defines whether electronic signature is required when a workflow order is canceled in the Production Execution Client.
 If the value is set to true, the Production Execution Client requests to record an electronic signature. This is the default setting.
 If the value is set to false, workflows can be canceled without signing for the action.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

${\bf Library Holder/services-S88-impl.jar/Communication States To Allow Manual Exception Sending}$

- **Type**: String List
- Value: Not sent, Error (meanings of the *ExceptionCommunicationStatus* choice list)
- **Description**: Specifies the possible communication states for which it is allowed to send an exception to an external QMS. The states are defined as meanings of the corresponding choice elements of the *ExceptionCommunicationStatus* choice list.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The values of the meaning of the *ExceptionCommunicationStatus* choice list.

Library Holder/services-S88-impl.jar/Minimal Risk Class For External Exception Handling

Type: String

■ Value: High

(Meaning of the RiskClass choice list)

- **Description**: The minimum risk class of an exception to be handled externally.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The values of the elements of the **RiskClass** choice list.

LibraryHolder/services-S88-impl.jar/OrdersAssignedByAdminExcRisk

■ **Type**: Long

■ Value: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an exception added to the active runtime unit procedure, when the set of orders (workflows) appended to the corresponding order step has been changed in the Production Management Client.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: The values of the elements of the **RiskClass** choice list.

Library Holder/services-S88-impl.jar/Append Workflows From Rt Unit Procedure In PECS ignature Enabled

Type: Boolean

■ Value: False

■ **Description**: Defines whether an electronic signature is required when orders (workflows) are appended by the unit procedure's context menu to the corresponding order step in the Production Execution Client.

If the value is set to **true**, the Production Execution Client requests to record an electronic signature.

If the value is set to **false**, orders (workflows) can be appended without signing for the action. This is the default setting.

The risk level for the exception is configured with the

LibraryHolder/services-S88-impl.jar/AppendWorkflowsFromRtUnitProcedu reInPECExcRisk configuration key (page 131).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

LibraryHolder/services-s88-impl.jar/PredefinedTextHeaderLength

■ **Type**: Long

■ Value: 40

■ **Description**: The maximum text length of the search range for the separator character (from the beginning through the first occurrence of the separator character).

If the separator character cannot be found, the complete text is used as the pre-defined header.

The separator character is defined with the

LibraryHolder/services-s88-impl.jar/PredefinedTextSeparator configuration key (page 135).

Evaluated: Only when a PharmaSuite client is started.

Range: [3..64]

Library Holder/services-s88-impl.jar/Predefined Text Separator

Type: String

■ Value: -

■ **Description**: Defines the character whose first occurrence is used as a separator to define the pre-defined header for exception descriptions and exception comment descriptions.

See also LibraryHolder/services-s88-impl.jar/PredefinedTextHeaderLength configuration key (page 135).

Evaluated: Only when a PharmaSuite client is started.

Range: One character

LibraryHolder/services-s88-impl.jar/S88ExceptionSequencerLength

Type: Long

■ Value: 3

Description: The minimum length of exception record identifiers.

■ Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

Range: Any value greater than 0.

Phase/GetDCSAlarms/TooLongAlarmExceptionRisk

Type: Long

■ **Value**: 30

(Value of the **High risk** level)

- **Description**: The exception-specific risk level of an automatic exception added to a **Get DCS alarms** phase when a too long alarm is received.
- **Evaluated**: When the **Get DCS alarms** phase is started in the Production Execution Client.
- Range: The meaning of the elements of the RiskClass choice list.

Configuration Keys for Dispense

The following configuration keys are available for Dispense-related processes.

LabelDesign/defaultPrinter

Type: String

■ Value: N/A

- **Description**: Defines the name of the default printer that is used for printing labels.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: A valid (local or network printer) name including double backslashes.

TIP

In PharmaSuite, labels are based on the **ReportDesign** object of FactoryTalk ProductionCentre, although a **LabelDesign** prefix is used.

Label Design/dispensing Label. print.print Label When Target Sublot Created

■ **Type**: Boolean

■ Value: False

Description: Defines whether a target sublot label will be printed when a target sublot is created.

If the value is set to **true**, a target sublot label will be printed when a target sublot is created.

If the value is set to **false**, no target sublot label will be printed when a target sublot is created.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [False, True]

TIP

This setting can be combined with the LabelDesign/dispensingLabel.print.printLabelWhenTargetSublotFinished configuration key (page 137).

In PharmaSuite, labels are based on the **ReportDesign** object of FactoryTalk ProductionCentre, although a **LabelDesign** prefix is used.

LabelDesign/dispensingLabel.print.printLabelWhenTargetSublotFinished

Type: Boolean

■ Value: True

Description: Defines whether a target sublot label will be printed when a target sublot is finished.

If the value is set to **true**, a target sublot label will be printed when a target sublot is finished.

If the value is set to **false**, no target sublot label will be printed when a target sublot is finished.

- **Evaluated**: Also when the **Change User** or **Register at Station** actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [False, True]

TIP

This setting can be combined with the LabelDesign/dispensingLabel.print.printLabelWhenTargetSublotCreated configuration key (page 137).

In PharmaSuite, labels are based on the **ReportDesign** object of FactoryTalk ProductionCentre, although a **LabelDesign** prefix is used.

LabelDesign/dispensingLabel.reprint.showPreview

Type: Boolean

Value: True

■ **Description**: If the value is set to **true**, label reprints will be opened in preview mode.

If the value is set to **false**, label reprints will be printed without preview.

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

TIP

In PharmaSuite, labels are based on the **ReportDesign** object of FactoryTalk ProductionCentre, although a **LabelDesign** prefix is used.

Label Design/inventory Label. print. printInv Label When Source Sublot Consumed

Type: Boolean

Value: False

Description: Defines whether a source sublot label will be printed when a target sublot is consumed.

If the value is set to **true**, a source sublot label will be printed when a target sublot is consumed.

If the value is set to **false**, no source sublot label will be printed when a target sublot is consumed.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: [False, True]

TIP

In PharmaSuite, labels are based on the **ReportDesign** object of FactoryTalk ProductionCentre, although a **LabelDesign** prefix is used.

LabelDesign/jasperReportViewerPanelClass

■ **Type**: String

■ Value:

com.rockwell.mes.commons.base.ifc.labeling.MESJasperReportViewerPanel

- **Description**: Defines the class, in this a case a panel, to be used in order to show the preview of a label.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- Range: A fully qualified class name of a subclass of *MESJasperReportViewerPanel* or the *MESJasperReportViewerPanel* class itself.

TIP

In PharmaSuite, labels are based on the **ReportDesign** object of FactoryTalk ProductionCentre, although a **LabelDesign** prefix is used.

LabelDesign/simpleWeighingLabel.reprint.showPreview

■ **Type**: Boolean

■ Value: True

■ **Description**: If the value is set to **true**, label reprints will be opened in preview mode.

If the value is set to **false**, label reprints will be printed without preview.

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

TIP

In PharmaSuite, labels are based on the **ReportDesign** object of FactoryTalk ProductionCentre, although a **LabelDesign** prefix is used.

LabelDesign/simpleWeighingLabel.reprint.showPrinterSelection

Type: Boolean

■ Value: False

Description: If the value is set to **true**, a print dialog box will be displayed before reprinting.

If the value is set to **false**, no print dialog box will be displayed before reprinting.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

TIP

In PharmaSuite, labels are based on the **ReportDesign** object of FactoryTalk ProductionCentre, although a **LabelDesign** prefix is used.

LibraryHolder/apps-wd-impl.jar/BatchQualityFSMName

■ Type: String

Value: BatchQuality

- **Description**: Defines the FSM name configured for the batch-related **BatchQuality** FSM relationship. The default value is **BatchQuality**. Used by the **Batch check definition** process parameter of the **D Identify material** and **Identify material** phases.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: A valid FSM name.

ReportDesign/defaultPrinter

■ **Type**: String

Value: N/A

- **Description**: Defines the name of the default printer that is used for printing reports.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: A valid (local or network printer) name including double backslashes.

Station/GrossWeighing.weighMode

Type: Long

■ Value: 0

■ **Description**: Defines the behavior of the scales control, when displaying weighing values. It can be defined separately for each weighing method (net weighing, gross weighing, and removal weighing).

If the value is set to **0**, the weighing value is displayed from zero, and the starting point is zero.

If the value is set to 1, the weighing value is displayed against zero, and the starting point is the negative nominal quantity.

Values other than 0 and 1 are not specified.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: 0, 1

Station/NetWeighing.weighMode

■ **Type**: Long

■ Value: 0

■ **Description**: Defines the behavior of the scales control, when displaying weighing values. It can be defined separately for each weighing method (net weighing, gross weighing, and removal weighing).

If the value is set to $\mathbf{0}$, the weighing value is displayed from zero, and the starting point is zero.

If the value is set to 1, the weighing value is displayed against zero, and the starting point is the negative nominal quantity.

Values other than 0 and 1 are not specified.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: 0, 1

• '

Station/RemovalWeighing.weighMode

■ **Type**: Long

■ Value: 0

■ **Description**: Defines the behavior of the scales control, when displaying weighing values. It can be defined separately for each weighing method (net weighing, gross weighing, and removal weighing).

If the value is set to $\mathbf{0}$, the weighing value is displayed from zero, and the starting point is zero.

If the value is set to 1, the weighing value is displayed against zero, and the starting point is the negative nominal quantity.

Values other than 0 and 1 are not specified.

- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.
- **Range**: 0, 1

Configuration Keys for Recipe and Workflow Designer

The following configuration keys are available for Recipe and Workflow Designer.

AccessPrivilege/ConfidentialObject.Modifiable.WhenCreatingRecipeStructure

■ Type: Boolean

Value: False

■ **Description**: Applies only if the PharmaSuite system is configured for confidential objects.

If an access privilege is defined for a material or an ERP BOM and a new master recipe, master workflow, or building block is created, the access privilege can be taken over to the new master recipe, master workflow, or building block.

If the value is set to **true**, the access privilege taken over from the material or ERP BOM can be changed.

If the value is set to **false**, the access privilege taken over from the material or ERP BOM cannot be changed. This is the default setting.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

Form/ApplicationStart_RecipeDesigner/StartupChecks

Type: List

■ Value: N/A

- **Description**: List of configurable checks to be executed when Recipe and Workflow Designer is started. Each check must implement the *IStartupCheck* interface.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Any valid name for a **List** object maintained in Process Designer or PS Administration.

Form/ApplicationStart_RecipeDesigner/StyleSheet

■ **Type**: Object - List

■ Value: red_StyleSheet

- **Description**: Defines the style sheet used in Recipe and Workflow Designer.
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: N/A

$Form/Recipe Designer/ps_Expression Editor Shortcuts. customer Name$

■ Type: String

■ Value: N/A

- Description: Defines the name of the XML configuration that is used to configure the shortcuts of the Expression editor.
 For this configuration, you need a development environment in order to modify List objects in Process Designer or XML files located in the classpath (e.g. Eclipse).
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: A valid name for a **List** object in Process Designer.

• ' •

$Form/Recipe Designer/ps_Expression Editor Shortcuts. read From File$

Type: Boolean

■ Value: False

Description: Defines whether the XML configuration of the shortcuts of the Expression editor is read from a file.

If the value is set to **true**, Recipe and Workflow Designer reads the XML configuration from the *ps_ExpressionEditorShortcuts.xml* file. This configuration is recommended only for developers. For this configuration, you need a development environment in order to modify XML files located in the classpath (e.g. Eclipse).

If the value is set to **false**, Recipe and Workflow Designer reads the XML configuration from the database (**ps_ExpressionEditorShortcuts** list).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Form/RecipeDesigner/red_buttonConfiguration.customerName

■ **Type**: String

■ Value: N/A

- Description: Defines the name of the XML configuration that is used to configure the menu bar, toolbar, and context menus.
 For this configuration, you need a development environment in order to modify List objects in Process Designer or XML files located in the classpath (e.g. Eclipse).
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: A valid name for a **List** object in Process Designer.

Form/RecipeDesigner/red_buttonConfiguration.readFromFile

Type: Boolean

■ Value: False

■ **Description**: Defines whether the XML configuration of the menu bar, toolbar, and context menus is read from a file.

If the value is set to **true**, Recipe and Workflow Designer reads the XML configuration from the *red_buttonConfiguration.xml* file. This configuration is recommended only for developers. For this configuration, you need a development environment in order to modify XML files located in the classpath (e.g. Eclipse).

If the value is set to **false**, Recipe and Workflow Designer reads the XML configuration from the database (**red_buttonConfiguration** list).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Form/RecipeDesigner/red_defaultLayoutSettings.customerName

■ Type: String

Value: N/A

- **Description**: Defines the name of the XML configuration that is used to configure the UI configuration of the floating windows. For this configuration, you need a development environment in order to modify **List** objects in Process Designer or XML files located in the classpath (e.g. Eclipse).
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: A valid name for a **List** object in Process Designer.

• '

Form/RecipeDesigner/red_defaultLayoutSettings.readFromFile

Type: Boolean

Value: False

Description: Defines whether the UI configuration of the floating windows is read from a file.

If the value is set to **true**, Recipe and Workflow Designer reads the configuration from the *red_defaultLayoutSetting.ini* file located in the user-specific directory. This configuration is recommended only for developers.

If the value is set to **false**, Recipe and Workflow Designer reads the configuration from the database (**red_defaultLayoutSetting** list).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Form/RecipeDesigner/red_expressionContextFunctionConfiguration.customerName

- Type: String
- Value: red_expressionContextFunctionConfiguration
- Description: Defines the name of the XML configuration that is used to configure the context-related functions of the Expression editor. For this configuration, you need a development environment in order to modify List objects in Process Designer or XML files located in the classpath (e.g. Eclipse).
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: A valid name for a **List** object in Process Designer.

Form/RecipeDesigner/red_ExpressionEditor.showErrorIconMargin

Type: Boolean

■ Value: True

Description: Defines whether the Expression editor shows error icons.
If the value is set to true, the Expression editor shows an error icon to the left of each affected line.

If the value is set to **false**, no error icons are shown.

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Form/RecipeDesigner/red_ExpressionEditor.showLineNumbers

Type: Boolean

■ Value: False

Description: Defines whether the Expression editor shows line numbers. If the value is set to **true**, the Expression editor shows a line number to the left of each line.

If the value is set to **false**, no line numbers are shown.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

Form/Universe/red_materialConfiguration.customerName

Type: String

■ Value: N/A

Description: Defines the name of the XML configuration that is used to configure the Material dialog for Recipe Designer.
For this configuration, you need a development environment in order to modify List objects in Process Designer or XML files located in the classpath (e.g. Eclipse).

Evaluated: Only when a PharmaSuite client is started.

■ Range: A valid name for a **List** object in Process Designer.

Form/Universe/red_materialConfiguration.readFromFile

Type: Boolean

■ Value: False

■ **Description**: Defines whether the XML configuration is read from a file. If the value is set to **true**, Recipe and Workflow Designer reads the XML configuration of the **Material** dialog from the *red_materialConfiguration.xml* file. This configuration slows down the system and is recommended only for developers. For this configuration, you need a development environment in order to modify XML files located in the classpath (e.g. Eclipse). If the value is set to **false**, Recipe and Workflow Designer reads the XML configuration from the database (**red_materialConfiguration** list).

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

• '

Form/Universe/red_materialConfiguration.refreshAlways

Type: Boolean

Value: False

Description: Defines whether the XML configuration is updated. If the value is set to **true**, the **Material** dialog re-reads the XML configuration when the user clicks the **Refresh** button. This configuration slows down the system and is recommended only for developers. For this configuration, you need a development environment in order to modify **List** objects in Process Designer or XML files located in the classpath (e.g. Eclipse).

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

Form/Universe/red_openConfiguration.customerName

Type: String

Value: N/A

■ **Description**: Defines the name of the XML configuration that is used to configure the **Open** dialog.

For this configuration, you need a development environment in order to modify **List** objects in Process Designer or XML files located in the classpath (e.g. Eclipse).

Evaluated: Only when a PharmaSuite client is started.

Range: A valid name for a **List** object in Process Designer.

Form/Universe/red_openConfiguration.readFromFile

■ **Type**: Boolean

■ Value: False

■ **Description**: Defines whether the XML configuration is read from a file. If the value is set to **true**, Recipe and Workflow Designer reads the XML configuration of the **Open** dialog from the *red_openConfiguration.xml* file. This configuration slows down the system and is recommended only for developers. For this configuration, you need a development environment in order to modify XML files located in the classpath (e.g. Eclipse).

If the value is set to **false**, Recipe and Workflow Designer reads the XML configuration from the database (**red_openConfiguration** list).

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

Form/Universe/red_openConfiguration.refreshAlways

■ **Type**: Boolean

■ Value: False

■ **Description**: Defines whether the XML configuration is updated. If the value is set to **true**, the **Open** dialog re-reads the XML configuration when the user clicks the **Refresh** button. This configuration slows down the system and is recommended only for developers. For this configuration, you need a development environment in order to modify **List** objects in Process Designer or XML files located in the classpath (e.g. Eclipse).

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

$Form/Universe/red_universeConfiguration.readFromFile$

Type: BooleanValue: False

■ **Description**: Defines whether the XML configuration is read from a file. If the value is set to **true**, Recipe and Workflow Designer reads the XML configuration of the Universe window from the *red_universeConfiguration.xml* file. This configuration slows down the system and is recommended only for developers. For this configuration, you need a development environment in order to modify XML files located in the classpath (e.g. Eclipse). If the value is set to **false**, Recipe and Workflow Designer reads the XML configuration from the database (**red_universeConfiguration** list).

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

Form/Universe/red_universeConfiguration.refreshAlways

Type: Boolean

■ Value: False

■ **Description**: Defines whether the XML configuration is updated. If the value is set to **true**, the Universe window re-reads the XML configuration when the user clicks the **Refresh** button. This configuration slows down the system and is recommended only for developers. For this configuration, you need a development environment in order to modify **List** objects in Process Designer or XML files located in the classpath (e.g. Eclipse).

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

• '

Form/Universe/red_universeConfiguration.customerName

Type: StringValue: N/A

Description: Defines the name of the XML configuration that is used to configure the Universe window.

For this configuration, you need a development environment in order to modify **List** objects in Process Designer or XML files located in the classpath (e.g. Eclipse).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: A valid name for a **List** object in Process Designer.

${\bf Library Holder/apps-recipeed itor-impl.jar/Enable Unresolved External References In Approved CBBs}$

■ **Type**: Boolean

■ Value: True

■ **Description**: Enable the approval of custom building blocks with unresolved external references even if the parameter is locked.

If the value is set to **true**, custom building blocks can be approved even if they contain unresolved external references in locked parameters. This is the default setting.

If the value is set to **false**, custom building blocks with unresolved external references in locked parameters cannot be approved.

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

LibraryHolder/apps-recipeeditor-impl.jar/InlineWeighingPhaseLibs

Type: Object - List

■ Value: InlineWeighingPhaseLibs

Description: The list contains the name (and revision) of Inline Weighing-specific system building blocks for which the Inline Weighing-specific recipe structure checks are evaluated if a material parameter is specified for a phase in this list. Additionally, the unit procedure and operation must not be Dispense-specific.

Example: D Identify Material (RS) [3.0], D Identify Material (RS) [5.0]

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: A valid **List** object in Process Designer.

Library Holder/apps-recipee ditor-impl.jar/Only One MFC Input Per Dispense Confluence

Type: Boolean

■ Value: True

■ **Description**: Determines if a confluence in a Dispense unit procedure may have only one or more than one incoming link.

If the value is set to **true**, a confluence in a Dispense unit procedure may have only one incoming link (non-layered dispensing).

If the value is set to **false**, a confluence in a Dispense unit procedure may have more than one incoming link (layered dispensing).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

LibraryHolder/apps-recipeeditor-impl.jar/OutputWeighingPhaseLibs

■ **Type**: Object - List

■ Value: OutputWeighingPhaseLibs

■ **Description**: The list contains the name (and revision) of Output Weighing-specific system building blocks for which the Output Weighing-specific recipe structure checks are evaluated if a material parameter is specified for a phase in this list.

Example: O Weigh (RS) [1.0], O Weigh (RS) [5.0]

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: A valid **List** object in Process Designer.

LibraryHolder/apps-recipeeditor-impl.jar/RecipeStructureChecks

■ **Type**: Object - List

■ Value: (AtMostOneAutostartableOperationUnderSimultaneousForkCheck

BOMPositionNotEmptyCheck

CapabilityCombinationCheck

CapabilityEscalationDurationsCheck

CapabilityRisksMatchedByPrivilegeUsagesCheck

Capability Triggerable Has Child Check

ChildrenCapabilititesCombinationCheck

DispenseFlagCapabilityParameterCheck

EquipmentPropertyRequirementsCheck

EquipmentPropertyRequirementIdentifierCheck

EquipmentRequirementParameterCountsCheck

EquipmentRequirementParameterUniqueBOEPositionCheck

Equipment Requirement Unique Class Check

EquipmentRuleExpressionCheck

ERPBomAllPositionsUsedInActualBomCheck

ERPBomContainsAllActualBomPositionsCheck

ERPBomItemConsistentMaterialParameterAttributesCheck

ERPBomPackagingLevelsCheck

ERPBomQuantityCheck

ERPBomUniqueMFCPositionCheck

Group Root Element Parameters Check

GroupValidityCheck

InputExpressionsCheck

MasterRecipeMinMaxQuantityCheck

Master Recipe Packaging Inventory Level Check

MasterRecipePackagingLevelsConsistencyCheck

MasterRecipeQuantityCheck

Master Recipe Usage Type Structure Check

Material Parameter Active Planned Potency For In line Check

Material Parameter Allowed Weighing Material Type For Inline Weighing Check

Material Parameter Allowed Weighing Methods For Inline Weighing Check

Material Parameter As Defined Planned Quantity And Tolerances For Inline Weighing Check

MaterialParameterAsDefinedPlannedQuantityAndTolerancesForOutputWeighing Check

Material Parameter As Produced Requires Tolerances Check

Material Parameter As Produced Requires Tolerances For Inline Weighing Check

MaterialParameterCountsCheck

MaterialParameterDispenseCheck

Material Parameter Empty MFC Position For In line Weighing Check

MaterialParameterFixedQuantityCheck

MaterialParameterNumericMFCPositionCheck

MaterialParameterPackagingInventoryLevelCheck

MaterialParameterPackagingLevelsCheck

MaterialParameterPackagingLevelsConsistencyCheck

MaterialParameterPlannedPotencyUomCheck

MaterialParameterPlannedQuantityCheck

Material Parameter Planned Quantity Mode As Produced Check

Material Parameter Planned Quantity Mode For Dispense Check

MaterialParameterPlannedQuantityModeNoneCheck

Material Parameter Planned Quantity Mode Of Transfer In For In line Weighing Check and the property of the p

MaterialParameterQuantityUomCheck

MaterialParametersWithSameMFCPositionConsistencyCheck

Material Parameter Target Weight Quantity And Tolerances Check

MaterialParameterTargetWeightQuantityUomCheck

MaterialParameterTargetWeightToleranceCheck

Material Parameter Target Weight Tolerance Uom Check

MaterialParameterToleranceCheck

MaterialParameterToleranceUomCheck

MaterialParameterWeighingMaterialTypeForInlineWeighingCheck

MaterialParameterWeighingSequenceCheck

MaterialParameterWeighingSequenceUsageTypeCheck

MFCBomPositionsUsageCheck

MFCC onfluence Open End Check

MFCFinalOutputsGenericCheck

MFCFinalOutputsMasterRecipeSpecificCheck

MFCMergeToFinalOutputNotInDispenseUPCheck

MFCP lanned Quantity Equal For Corresponding Transfers Check

MFCSwitchOpenEndCheck

MFCTransferNotIntoDispenseUPCheck

MFCUoMOfMaterial Convertions Dispense Check

NestedGroupsCheck

NoLoopInProcedureGraphCheck

NoMFCOutputInInputOnlyMFCStructureCheck

NullStepsCheck

Phase Lib Usable In Structure Type Check

PrivilegeParametersCheck

ServerRunCapabilityPhaseCheck

ServerRunCapabilityStationCheck

ServerRunPhaseParameterCheck

SFCGraphCheck

TransitionConditionsExpressionsCheck

Transition Conditions Of Transitions Below Xor Check

TriggerPhaseIsReferencedCheck

TriggerPhaseReferenceCheck

TriggerPhaseReferenceIdentifierCheck

TriggerPhaseReferenceUniqueCheck

WaitForEventOESPhaseAbortEnsuredCheck

WeighAndDispenseFlagCheck

WorkCenterStationAssignmentCheck

WorkflowAppendableDuringProcessingPossibleCheck

WorkflowCapabilityParameterCheck

WorkflowCockpitNameCheck

WorkflowTypeCheck

- This list can be extended if new check classes are added during system configuration and extension.
- New check classes must implement the *IRecipeStructureCheck* interface. In fact, it is recommended that new check classes are subclasses of the abstract *AbstractRecipeStructureCheck* base class.

- **Description**: A set of checks that is used to validate the structure and the properties of a master recipe, workflow, or building block generated by Recipe and Workflow Designer. The checks are performed when an object is validated. Mandatory checks are required to enable a correct execution within the Production Execution Client. We highly recommend not to disable these checks. By default, the following checks are available:
 - AtMostOneAutostartableOperationUnderSimultaneousForkCheck Mandatory: no
 Checks that each simultaneous fork of a unit procedure SFC graph has at

Checks that each simultaneous fork of a unit procedure SFC graph has at most one immediate successor operation that holds the **Auto-startable** capability.

■ BOMPositionNotEmptyCheck

Mandatory: yes

Checks that the MFC positions of direct MFC input items are not empty.

CapabilityCombinationCheck

Mandatory: yes

Checks for each capability parameter:

- if it needs another capability in the same recipe element and
- if it is compatible with all other capabilities in the same recipe element.
- CapabilityEscalationDurationsCheck

Mandatory: yes

Checks for each capability parameter with the **Escalation-enabled** capability:

- if at least one duration is set (due, overdue, expired),
- when a duration is set, if the exception is enabled, and
- if the entered durations are consistent (in ascending order: due < overdue < expired).
- CapabilityRisksMatchedByPrivilegeUsagesCheck

Mandatory: yes

Checks that for each capability parameter with Exception enabled, a matching privilege parameter is defined (risk class must match the usage type of the privilege parameter).

CapabilityTriggerableHasChildCheck

Mandatory: yes

Checks that for a **Trigger-enabled** capability parameter at least one child (i.e. trigger phase reference) is defined.

ChildrenCapabilititesCombinationCheck

Mandatory: yes

Checks that for each capability parameter of a recipe entity if it is compatible with all capabilities of the recipe entity's children.

DispenseFlagCapabilityParameterCheck

Mandatory: yes, enabled only for the PharmaSuite Dispense application Checks that none of the **Abort-and-reactivate-enabled**, **Auto-startable**, **Detachable**, **Escalation-enabled**, **Event-triggered**, **Server-run**, and **Trigger-enabled** capabilities is assigned to a Dispense operation.

■ EquipmentPropertyRequirementIdentifierCheck

Mandatory: yes

Checks that the identifier of an equipment property requirement is not empty and unique within the equipment requirement parameter.

■ EquipmentPropertyRequirementsCheck

Mandatory: yes

Checks that the property requirements of an equipment parameter match the equipment class/entity of that instance.

EquipmentRequirementParameterCountsCheck

Mandatory: yes

Checks that the number of assigned equipment requirement parameters is valid.

■ EquipmentRequirementParameterUniqueBOEPositionCheck

Mandatory: yes

Checks that each BOE position defined in the equipment requirement parameters is unique within the master recipe, master workflow, or building block.

■ EquipmentRequirementUniqueClassCheck

Mandatory: no

Checks that each equipment class is unique within the equipment requirements of a phase.

■ EquipmentRuleExpressionCheck

Mandatory: yes

Checks that the equipment requirement rule has an expression, there are no syntactic or semantic errors and no reference errors in the rule.

ERPBomAllPositionsUsedInActualBomCheck Mandatory: no, enabled for Recipe Designer If the master recipe is based on an ERP BOM, the system checks all MFC inputs of the master recipe against the ERP BOM items. Each material position in the ERP BOM must correspond to an MFC input with that position.

■ ERPBomContainsAllActualBomPositionsCheck Mandatory: no, enabled for Recipe Designer If the master recipe is based on an ERP BOM, the system checks all MFC inputs of the master recipe against the ERP BOM items. Each MFC input with a given position must correspond to the material in the ERP BOM.

ERPBomItemConsistentMaterialParameterAttributesCheck
Mandatory: no, enabled for Recipe Designer
If the master recipe is based on an ERP BOM, the system checks all of the materials assigned to any phase within the master recipe against the ERP BOM items. Each material with a given position must have the same common attributes (e.g. quantity, unit of measure) as the material in the ERP BOM.

If this check is extended in order to consider common custom attributes of material parameters and the ERP BOM item, we recommend to use a custom implementation of

IMaterialParameterCustomAttributesHandler.copyCustomAttributes(erpBom Item, parameter, copyMode) since the **Resolve issue** function of the check calls this method with SYNC as copyMode. For details, see chapter "Configuring the Initialization of Material Parameters in Recipe and Workflow Designer" in Volume 3 of the "Technical Manual Configuration and Extension" [A5] (page 187).

ERPBomPackagingLevelsCheck Mandatory: no, enabled for Recipe Designer If the master recipe is based on an ERP BOM, the system checks that the packaging levels of master recipe are equal to the packaging levels of the ERP BOM header.

ERPBomQuantityCheck
 Mandatory: no, enabled for Recipe Designer
 If the master recipe is based on an ERP BOM, the system checks that the planned quantity of the master recipe is equal to the base quantity of the ERP

BOM header (if there is an ERP BOM).

■ ERPBomUniqueMFCPositionCheck

Mandatory: yes, enabled for Recipe Designer

The system checks that all MFC positions defined in the MFC-relevant material parameters of an execution path are unique.

Duplicate positions that are also ERP BOM positions are reported differently.

■ GroupRootElementParametersCheck

Mandatory: yes

Checks for operation and phase groups if there are properties defined for their root. If yes, corresponding error or info messages are added to the messages window, since parameters are not retained when the group is used in a recipe or workflow.

GroupValidityCheck

Mandatory: yes

Checks for operation and phase groups that their top-level graph is valid, i.e. that it fulfills certain constraints.

■ InputExpressionsCheck

Mandatory: yes

Checks that there are no invalid expressions that provide input values for parameter attributes within the underlying recipe structure.

MasterRecipeMinMaxQuantityCheck

Mandatory: yes, enabled for Recipe Designer

Checks the minimum/maximum quantity of the master recipe. It may be empty; but if it is not empty, a unit of measure must be assigned that can be converted to the unit of measure defined with the material's master data.

■ MasterRecipePackagingInventoryLevelCheck

Mandatory: yes

Applies only to material output parameters that refer to the material (product) of the master recipe.

Checks the inventory level attributes of the packaging levels of master recipes and their corresponding material output parameters.

- A **Sublot** inventory level is defined only once.
- A **Logistic unit** inventory level is defined only once.

- A **Sublot and Logistic unit** inventory level is defined only once.
- If a Sublot and Logistic unit inventory level is defined, no Sublot or Logistic unit inventory level is defined.
- If both **Sublot** and **Logistic unit** inventory levels are defined, the **Sublot** inventory level is defined at a lower packaging level.
- MasterRecipePackagingLevelsConsistencyCheck
 Mandatory: yes
 Checks the consistency of the packaging levels of a master recipe (e.g. if the meaning is missing for a defined contained number).
- MasterRecipeQuantityCheck Mandatory: yes, enabled for Recipe Designer Checks the planned quantity of the master recipe. It must not be empty and a unit of measure must be assigned that can be converted to the unit of measure defined with the material's master data.
- MasterRecipeUsageTypeStructureCheck Mandatory: yes, enabled for Recipe Designer If the usage type is Cost center (not Production): checks that the recipe structure matches the following structure of one procedure, one unit procedure, and one operation.
- MaterialParameterActivePlannedPotencyForInlineCheck Mandatory: yes, applies to phase building blocks, see InlineWeighingPhaseLibs configuration key (page 150) For phases of an Inline Weighing operation, checks that a planned potency is defined for MFC-relevant material input parameters of the Active weighing material type.
- MaterialParameterAllowedWeighingMaterialTypeForInlineWeighingCheck Mandatory: yes, applies to phase building blocks, see InlineWeighingPhaseLibs configuration key (page 150) For phases of an Inline Weighing operation, checks the weighing material type.
 - For ingoing MFC transfer items:
 - **Active** is **not** allowed,
 - Compensator and Filler are allowed if they were not set to one of these weighing material types before in at least one preceding material position.

- MaterialParameterAllowedWeighingMethodsForInlineWeighingCheck
 Mandatory: yes, applies to phase building blocks, see
 InlineWeighingPhaseLibs configuration key (page 150)
 For phases of an Inline Weighing operation, checks that Pallet weighing is not one of the allowed the weighing methods of MFC-relevant material parameters.
- MaterialParameterAsDefinedPlannedQuantityAndTolerancesForInlineWeigh ingCheck
 Mandatory: yes, applies to phase building blocks, see
 InlineWeighingPhaseLibs configuration key (page 150)
 For phases of an Inline Weighing operation, checks for each MFC-relevant material parameter with As defined as planned quantity mode that the planned quantity and tolerances are specified.
- MaterialParameterAsDefinedPlannedQuantityAndTolerancesForOutputWeig hingCheck
 Mandatory: yes, applies to phase building blocks, see
 OutputWeighingPhaseLibs configuration key (page 151)
 For phases of an Output Weighing operation, checks for each MFC-relevant material parameter with As defined as planned quantity mode that the planned quantity, tolerances, and allowed weighing methods are specified.
- MaterialParameterAsProducedRequiresTolerancesForInlineWeighingCheck Mandatory: yes.
 Checks for Inline Weighing that tolerances are specified for each MFC-relevant material parameter with **As produced** as planned quantity mode.
- MaterialParameterCountsCheck
 Mandatory: yes
 Checks that the number of assigned material parameters is valid.
- MaterialParameterDispenseCheck Mandatory: yes, enabled only for the PharmaSuite Dispense application Checks, for Dispense unit procedures, that the Dispense-specific attributes (allowed weighing methods, default weighing method, weighing type, planned potency, tolerances) are available and consistent for MFC-relevant material input parameters.

• ' •

> MaterialParameterEmptyMFCPositionForInlineWeighingCheck Mandatory: yes, applies to phase building blocks, see InlineWeighingPhaseLibs configuration key (page 150) For phases of an Inline Weighing operation, checks that the MFC positions of MFC-relevant material input parameters are not empty. (The MFC positions of direct MFC inputs are covered by the BOMPositionNotEmptyCheck check (page 154).)

- MaterialParameterFixedQuantityCheck Mandatory: no
 - Checks for each MFC-relevant material parameter that the fixed quantity is not set for an output item.
 - Checks for each MFC-relevant material input parameter whose weighing material type is **Active** or **Compensator** that the fixed quantity is not set.
- MaterialParameterNumericMFCPositionCheck Mandatory: yes, enabled only for the PharmaSuite Dispense application Checks that the MFC positions of MFC-relevant input material parameters are not empty or are numeric, if at least one MFC-relevant material input parameter is a filler.
- MaterialParameterPackagingInventoryLevelCheck Mandatory: yes

Applies only to material parameters that do not refer to the material (product) of the master recipe.

Checks the inventory level attributes of the packaging levels of the material output parameters.

- A **Sublot** inventory level is defined only once.
- A **Logistic unit** inventory level is defined only once.
- A **Sublot and Logistic unit** inventory level is defined only once.
- If a Sublot and Logistic unit inventory level is defined, no Sublot or Logistic unit inventory level is defined.
- If both **Sublot** and **Logistic unit** inventory levels are defined, the **Sublot** inventory level is defined at a lower packaging level.
- MaterialParameterPackagingLevelsCheck

Mandatory: no

Checks that the packaging levels of the material parameter are equal to the packaging levels of the material (part).

MaterialParameterPackagingLevelsConsistencyCheck
 Mandatory: yes
 Checks the consistency of the packaging levels of a material parameter (e.g. if the meaning is missing for a defined contained number).

- MaterialParameterPlannedPotencyUomCheck Mandatory: yes, enabled only for the PharmaSuite Dispense application Checks that the unit of measure of the planned potency of a material parameter is contained in the UoMsOfPotency list (see UoMsOfPotency configuration key (page 44)).
- MaterialParameterPlannedQuantityCheck
 Mandatory: yes
 Checks that each MFC-relevant material input parameter has a planned quantity, if its planned quantity mode is not None.
- MaterialParameterPlannedQuantityModeAsProducedCheck Mandatory: yes Checks for each MFC-relevant material parameter that the As produced planned quantity mode is set only for ingoing MFC transfer items. The As produced planned quantity mode is not allowed for MFC input, MFC output, and outgoing MFC transfer items.
- MaterialParameterPlannedQuantityModeForDispenseCheck Mandatory: yes Checks for each MFC-relevant material parameter that the planned quantity mode cannot be set to **None** for a Dispense unit procedure.
- MaterialParameterPlannedQuantityModeNoneCheck Mandatory: yes Checks for each MFC-relevant material parameter that the None planned quantity mode is set only for the Auxiliary substance weighing material type (or if no weighing material type is set). The None planned quantity mode is not allowed for the Active, Compensator, or Filler weighing material types.
- MaterialParameterPlannedQuantityModeOfTransferInForInlineWeighingChe ck Mandatory: yes, applies to phase building blocks, see InlineWeighingPhaseLibs configuration key (page 150) For phases of an Inline Weighing operation, checks for each ingoing MFC transfer item that the As produced planned quantity mode is not set for the Compensator and Filler substance weighing material types.

MaterialParameterQuantityUomCheck

Mandatory: yes

Checks that there is no invalid planned quantity assigned (i.e. without a UoM, with a UoM that cannot be converted to a target UoM, negative quantity).

■ MaterialParametersWithSameMFCPositionConsistencyCheck

Mandatory: yes

Checks that for material parameters with the same MFC position all attributes are identical.

■ MaterialParameterTargetWeightQuantityAndTolerancesCheck

Mandatory: yes

Only if a target weight has been defined for a material output parameter. Checks that the corresponding target weight tolerance (i.e. upper or lower) is also available.

■ MaterialParameterTargetWeightQuantityUomCheck

Mandatory: yes

Only if a target weight has been defined for a material output parameter. Checks that there is no invalid target weight assigned (i.e. without a UoM, with a UoM that cannot be converted to the material's UoM, negative quantity).

MaterialParameterTargetWeightToleranceCheck

Mandatory: yes

Only if a target weight has been defined for a material output parameter. If the material output parameter has one target weight tolerance (absolute or relative) defined (i.e. lower or upper): Checks that the corresponding target weight tolerance (i.e. upper or lower) is also available.

■ MaterialParameterTargetWeightToleranceUomCheck

Mandatory: yes

Only if a target weight has been defined for a material output parameter. Checks that the target weight absolute tolerances are not negative and compatible with the unit of measure of the material and that the target weight relative tolerances are not negative and have % as unit of measure.

MaterialParameterToleranceCheck

Mandatory: yes

If a material input parameter has one tolerance (absolute or relative) defined (i.e. lower or upper): Checks that the corresponding tolerance (i.e. upper or lower) is also available.

MaterialParameterToleranceUomCheck

Mandatory: yes

Checks that absolute tolerances are not negative and compatible with the unit of measure of the material and the relative tolerances are not negative and have % as unit of measure.

- MaterialParameterWeighingMaterialTypeForInlineWeighingCheck
 Mandatory: yes, applies to phase building blocks, see
 InlineWeighingPhaseLibs configuration key (page 150)
 For phases of an Inline Weighing operation, checks that for each
 MFC-relevant material parameter a weighing material type is defined.
- MaterialParameterWeighingSequenceCheck Mandatory: no, applies to phase building blocks, see WeighingSequencePhaseLibs configuration key (page 168) Checks that all MFC-relevant material inputs have a weighing sequence configured in a consistent way, i.e. all items or none have a non-null weighing sequence.
- MaterialParameterWeighingSequenceUsageTypeCheck Mandatory: no, applies to phase building blocks. Checks that only recipes with the **Production** usage type have material parameters with a weighing sequence that is not null.
- MFCBomPositionsUsageCheck
 Mandatory: yes, applies only to procedure building blocks and master recipes
 Checks that the same BOM positions are used in each execution path.
- MFCConfluenceOpenEndCheck
 Mandatory: yes, applies only to procedure building blocks and master recipes
 Checks that for all MFC items each confluence has an incoming and an
 outgoing connector (or is merged with the final output).
- MFCFinalOutputsGenericCheck Mandatory: yes, applies only to procedure building blocks Checks that all unit procedures with MFC items are Dispense unit procedures.

If not, then it checks that there are no unit procedures with non-final MFC output items and that, for each execution path, a final MFC output item is defined.

• '

MFCFinalOutputsMasterRecipeSpecificCheck Mandatory: yes, applies only to master recipes Checks that all unit procedures with MFC items are Dispense unit procedures.

If not, then it checks that

- there are no unit procedures with non-final MFC output items,
- for each execution path, a final output item is defined,
- the material of each final output item matches the material to be produced according to the master recipe, and
- the quantity of each final MFC output matches the planned quantity to be produced by the master recipe.
- MFCMergeToFinalOutputNotInDispenseUPCheck Mandatory: yes, enabled only for the PharmaSuite Dispense application Checks that there is no confluence merged with the final output of a Dispense unit procedure.
- MFCPlannedQuantityEqualForCorrespondingTransfersCheck Mandatory: no Checks for each MFC-relevant material parameter that the planned quantities of the corresponding ingoing and outgoing MFC transfer items are equivalent.
- MFCSwitchOpenEndCheck Mandatory: yes, applies only to procedure building blocks and master recipes Checks that for all execution paths each switch has an incoming and an outgoing connector.
- MFCTransferNotIntoDispenseUPCheck
 Mandatory: yes, enabled only for the PharmaSuite Dispense application
 Checks that there are no MFC transfer items into a Dispense unit procedure.
- MFCUoMOfMaterialConvertionsDispenseCheck Mandatory: yes, enabled only for the PharmaSuite Dispense application Checks, for Dispense unit procedures, that the unit of measure of the output material must be convertible into the unit of measure of the referenced input material if the only allowed weighing method does not imply usage of a scale (e.g. Quantity entry).

NestedGroupsCheck

Mandatory: yes

Checks for operation and phase groups that there are no nested read-only groups on top-level.

■ NoLoopInProcedureGraphCheck

Mandatory: yes

Checks if the graph does not contain loops between unit procedures in the procedure of a master recipe or building block.

NoMFCOutputInInputOnlyMFCStructureCheck

Mandatory: yes, enabled for Workflow Designer

Checks that no MFC outputs are defined for a master workflow.

NullStepsCheck

Mandatory: yes

Checks that there are no dummy steps (null steps) in the recipe or workflow.

■ PhaseLibUsableInStructureTypeCheck

Mandatory: yes

Checks that the usage context of a phase in a recipe structure matches the corresponding structure type.

PrivilegeParametersCheck

Mandatory: yes

Checks that a usage type is assigned to each privilege parameter.

Checks that the same usage type is not assigned to multiple privilege parameters.

Checks that no privilege parameters with the **High** usage type are assigned to building blocks that have no pre-defined exceptions.

Checks that neither the **Phase completion** nor the **Phase completion** (**sequential**) usage types are assigned to multiple privilege parameters.

Checks for privilege parameters with the **Phase completion** (sequential) usage type that no double signature is configured.

ServerRunCapabilityPhaseCheck

Mandatory: yes

Checks that all phases of an operation with the **Server-run** capability run on a server.

Checks that none of the phases of an operation without the **Server-run** capability run on a server.

ServerRunCapabilityStationCheck

Mandatory: no

Checks that no stations are assigned to operations with the **Server-run** capability.

ServerRunPhaseParameterCheck

Mandatory: no

Checks that no privilege parameter with the **Phase completion**, **Phase completion** (sequential), or * (comment mandatory) usage types is assigned to a phase of an operation with the **Server-run** capability.

■ SFCGraphCheck

Mandatory: yes

Checks the structure of the entire SFC graph of the recipe for errors.

TransitionConditionsExpressionsCheck

Mandatory: yes

Checks transition conditions that have been edited in Recipe and Workflow Designer so that - in a succeeding step - they can be transformed into transition conditions that can be evaluated by the activity set engine of FactoryTalk ProductionCentre.

■ TransitionConditionsOfTransitionsBelowXorCheck

Mandatory: yes

Checks if each transition succeeding a selection branch has a non-empty transition condition.

■ TriggerPhaseIsReferencedCheck

Mandatory: no

Checks that each ETO trigger phase is referenced by at least one child of a **Trigger-enabled** capability parameter (i.e. ETO template).

TriggerPhaseReferenceCheck

Mandatory: yes

Checks that there are no invalid phase references in the children of a **Trigger-enabled** capability parameter (filled, (still) valid (available, suitable phase type), no external references, minimal path).

■ TriggerPhaseReferenceIdentifierCheck

Mandatory: yes

Checks that the identifiers of trigger phase references are filled and unique within the **Trigger-enabled** capability parameter.

■ TriggerPhaseReferenceUniqueCheck

Mandatory: yes

Checks that the phase references are unique for all children of a **Trigger-enabled** capability parameter.

WaitForEventOESPhaseAbortEnsuredCheck

Mandatory: yes, applies to phase building blocks, see **SendEventPhaseLibs** configuration key (page 168), see **WaitForEventOESPhaseLibs** configuration key (page 168)

Checks that for a unit procedure that holds a **Wait for event (OES)** phase at least one **Send event** phase is available within the unit procedure.

■ WeighAndDispenseFlagCheck

Mandatory: yes, enabled only for the PharmaSuite Dispense application Checks that there is no unit procedure that contains a Dispense-flagged operation whose SFC (= Sequential Function Chart) graph has more than one operation step.

■ WorkCenterStationAssignmentCheck

Mandatory: yes

Checks the consistency of the work center and station assignments to unit procedures and operations, respectively.

- WorkflowAppendableDuringProcessingPossibleCheck Mandatory: yes, enabled for Workflow Designer Checks that a master workflow can only be marked as appendable during processing if it is marked as production-relevant.
- WorkflowCapabilityParameterCheck Mandatory: yes, enabled for Workflow Designer Checks that the **Abort-and-reactivate-enabled** capability is not assigned to the unit procedure of a workflow.
- WorkflowCockpitNameCheck
 Mandatory: yes, enabled for Workflow Designer
 Checks that a processing name for the workflow is defined.
- WorkflowTypeCheck
 Mandatory: yes, enabled for Workflow Designer
 Checks that a workflow type is defined.
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: At least all mandatory checks.

• '

LibraryHolder/apps-recipeeditor-impl.jar/SendEventPhaseLibs

■ Type: Object - List

■ Value: SendEventPhaseLibs

Description: The list contains the name (and revision) of the Send event system building block for which the Wait for event (OES)-specific recipe structure check is evaluated (see also WaitForEventOESPhaseLibs configuration key (page 168)).

Example: Send Event (RS) [1.0]

Evaluated: Only when a PharmaSuite client is started.

Range: A valid **List** object in Process Designer.

LibraryHolder/apps-recipeeditor-impl.jar/WaitForEventOESPhaseLibs

■ **Type**: Object - List

■ Value: WaitForEventOESPhaseLibs

Description: The list contains the name (and revision) of the **Wait for event** (**OES**) system building block for which the Wait for event (OES)-specific recipe structure check is evaluated (see also **SendEventPhaseLibs** configuration key (page 168)).

Example: Wait for Event (OES) (RS) [1.0]

Evaluated: Only when a PharmaSuite client is started.

Range: A valid **List** object in Process Designer.

LibraryHolder/apps-recipeeditor-impl.jar/WeighingSequencePhaseLibs

Type: List

■ Value: D Identify Material \(RS\) \[\d+?\.\d+?\]

- Description: Used by the MaterialParameterWeighingSequenceCheck check (page 163) to define the phase libraries to which the check applies. Only if the name of a phase library matches a regular expression of the value, will the check be performed. For details about regular expressions see Java API Specification (https://docs.oracle.com/javase/8/docs/api/java/util/regex/Pattern.html).
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Any valid name for a **List** object maintained in Process Designer or PS Administration.

LibraryHolder/commons-versioning-impl.jar/versionTransitionSignature

Type: Object - List

■ Value: versionTransitionSignature

Description: Defines a list of the signatures for status transitions.

Evaluated: Only when a PharmaSuite client is started.

Range: N/A

LibraryHolder/services-s88-ifc.jar/MaterialParameterCustomAttributesHandler

■ **Type**: String

■ Value:

com. rockwell. mes. services. s88. if c. recipe. MESM aterial Parameter Custom Attribute s Handler

■ **Description**: Defines an implementation class for a customizable class to copy or initialize customer attributes related to material parameters in Recipe and Workflow Designer This applies to the "part (material) to material parameter" and "material parameter to ProcessBomItem" relations.

The value must be set. It must be the fully qualified name of a java class implementing the *IMaterialParameterCustomAttributesHandler* interface. The class can extend the *MESMaterialParameterCustomAttributesHandler* standard class, and thus allows to change only one method.

A method is called when a material parameter object is created in Recipe and Workflow Designer and a part (material) object is assigned. The second method is called when a ProcessBomItem object for the material parameter is created. The methods may copy attributes from the corresponding part (material) object to the material parameter object and from the material parameter object to the ProcessBomItem object.

Additionally, attributes can be initialized. The method may only set custom attributes of the corresponding objects. Make sure to observe this restriction. The class must be added to the java class path. For this configuration, you need to create a JAR file containing the class and add it as a **Library** object in Process Designer. The changes will take effect when you restart the client.

TIP

In the current version of PharmaSuite, **ProcessBom** and **ProcessBomItem** objects are not visible, however they are still components of master recipes. The **ProcessBomItem** objects provide the data of the order step inputs. That is why the *copyCustomAttributes* handler is important to transfer data from material parameters (master data) to order step inputs (processing data).

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

$services \hbox{-}s88 \hbox{-}ifc. jar/Flexible State Model Change Request Batch Recipes$

■ Type: String

■ Value: MESChangeRequestStatusGraph

- **Description**: Name of the flexible state model used for change requests of batch-specific master recipes.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Any valid name for an **FSM** object in Process Designer.

services-s88-ifc.jar/FlexibleStateModelChangeRequestMasterWorkflows

■ Type: String

■ Value: MESChangeRequestMasterWorkflowStatusGraph

- **Description**: Name of the flexible state model used for change requests of master workflows.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Any valid name for an FSM object in Process Designer.

Configuration Keys Specific to the Production Execution Viewer

The following configuration keys are available for the Production Execution Viewer.

Form/ApplicationStart_ProductionExecutionViewer/StyleSheet

Type: Object - List

■ Value: pev_StyleSheet

■ **Description**: Defines a style sheet that is used in Production Execution Viewer.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

170

Form/ProductionExecutionViewer/pev_buttonConfiguration.customerName

■ **Type**: String

■ Value: pev_buttonConfiguration

■ **Description**: Defines the name of the XML configuration that is used to configure a menu bar, toolbar, and context menus in Production Execution Viewer.

For this configuration, you need a development environment in order to modify **List** objects in Process Designer or XML files located in the classpath (e.g. Eclipse).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: A valid name for a **List** object in Process Designer.

Form/Universe/pev_openConfiguration.customerName

■ **Type**: String

■ Value: pev_openConfiguration

■ **Description**: Defines the name of the XML configuration that is used to configure a menu bar, toolbar, and context menus in Production Execution Viewer.

For this configuration, you need a development environment in order to modify **List** objects in Process Designer or XML files located in the classpath (e.g. Eclipse).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: A valid name for a **List** object in Process Designer.

Configuration Keys for Data Manager

The following configuration keys are available for Data Manager.

Equipment/filterAvailableFSMsForPropertyType

■ **Type**: Object - Filter

■ Value: s88_eqm_availableFSMsForPropertyType

Description: Defines the named filter for available FSMs of a property type.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

Equipment/filterAvailableImagesForEquipmentClass

Type: Object - Filter

■ Value: s88_eqm_availableImagesForEquipmentClass

Description: Defines the named filter for available images of an equipment class.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

Equipment/filter Available Semantic Properties For Fsm Property Type

Type: Object - Filter

■ Value: s88_eqm_availableSemanticPropertiesForFSMPropertyType

■ **Description**: Defines the named filter for available semantic properties of a property type.

Evaluated: Only when a PharmaSuite client is started.

Range: N/A

Form/ApplicationStart_DataManager/StartupChecks

Type: List

■ Value: N/A

■ **Description**: List of configurable checks to be executed when Data Manager is started.

Each check must implement the IStartupCheck interface.

Evaluated: Only when a PharmaSuite client is started.

■ Range: Any valid name for a **List** object maintained in Process Designer or PS Administration.

Form/ApplicationStart_DataManager/StyleSheet

■ **Type**: Object - List

■ Value: mdt_StyleSheet

Description: Defines the style sheet used in Data Manager.

Evaluated: Only when a PharmaSuite client is started.

Range: N/A

Form/MasterDataEditor/BasicSearch.hideArchivedObjectsInitially

Type: Boolean

■ Value: False

■ **Description**: Defines whether equipment objects in the **Archived** status are initially hidden in the search result of the **Basic search** mode of Data Manager - Equipment.

If the value is set to **true**, Data Manager - Equipment - Basic Search hides equipment objects in the **Archived** status in its search results.

If the value is set to **false**, Data Manager - Equipment - Basic Search displays equipment objects in the **Archived** status its search results. This is the default setting.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

Form/MasterDataEditor/BasicSearch.maximumNumberOfSelectedObjects

Type: Long

■ Value: 500

■ **Description**: Specifies the maximum number of objects that can be selected at a time in Data Manager - Equipment - Basic Search.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

Form/MasterDataEditor/mdt_buttonConfiguration.customerName

Type: StringValue: N/A

- Description: Defines the name of the XML configuration that is used to configure the menu bar, toolbar, and context menus.
 For this configuration, you need a development environment in order to modify List objects in Process Designer or XML files located in the classpath (e.g. Eclipse).
- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: A valid name for a **List** object in Process Designer.

$Form/Master Data Editor/mdt_button Configuration.read From File$

Type: BooleanValue: False

■ **Description**: Defines whether the XML configuration of the menu bar, toolbar, and context menus is read from a file.

If the value is set to **true**, Data Manager reads the XML configuration from the *mdtbuttonConfiguration.xml* file. This configuration is recommended only for developers. For this configuration, you need a development environment in order to modify XML files located in the classpath (e.g. Eclipse).

If the value is set to **false**, Data Manager reads the XML configuration from the database (**mdt buttonConfiguration** list).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Form/MasterDataEditor/mdt_defaultLayoutSettings.customerName

Type: StringValue: N/A

■ **Description**: Defines the name of the XML configuration that is used to configure the UI configuration of the floating windows.

For this configuration, you need a development environment in order to modify **List** objects in Process Designer or XML files located in the classpath (e.g. Eclipse).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: A valid name for a **List** object in Process Designer.

Form/MasterDataEditor/mdt_defaultLayoutSettings.readFromFile

Type: Boolean

■ Value: False

■ **Description**: Defines whether the UI configuration of the floating windows is read from a file.

If the value is set to **true**, Data Manager reads the configuration from the *mtd_defaultLayoutSetting.ini* file located in the user-specific directory. This configuration is recommended only for developers.

If the value is set to **false**, Data Manager reads the configuration from the database (**mdt_defaultLayoutSetting** list).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Form/MasterDataEditor/ps_ExpressionEditorShortcuts.customerName

■ **Type**: String

■ Value: N/A

Description: Defines the name of the XML configuration that is used to configure the shortcuts of the Expression editor.

For this configuration, you need a development environment in order to modify **List** objects in Process Designer or XML files located in the classpath (e.g. Eclipse).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: A valid name for a **List** object in Process Designer.

Form/MasterDataEditor/ps_ExpressionEditorShortcuts.readFromFile

Type: Boolean

■ Value: False

Description: Defines whether the XML configuration of the shortcuts of the Expression editor is read from a file.

If the value is set to **true**, Data Manager reads the XML configuration from the *ps_ExpressionEditorShortcuts.xml* file. This configuration is recommended only for developers. For this configuration, you need a development environment in order to modify XML files located in the classpath (e.g. Eclipse).

If the value is set to **false**, Data Manager reads the XML configuration from the database (**ps_ExpressionEditorShortcuts** list).

- **Evaluated**: Only when a PharmaSuite client is started.
- **Range**: [False, True]

Form/MasterDataEditor/SmartSearch.includeArchivedGeneratedEntities

Type: Boolean

■ Value: False

Description: Defines whether generated equipment entities in the Archived status are included in the search result of the Smart search mode of Data Manager - Equipment.

If the value is set to **true**, Data Manager - Equipment - Smart Search includes generated equipment entities in the **Archived** status in its search results. This configuration may have an impact on the performance of Data Manager. If the value is set to **false**, Data Manager - Equipment - Smart Search does not include generated equipment entities in the **Archived** status its search results. This is the default setting.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

Form/MasterDataEditor/SmartSearch.includeNonArchivedGeneratedEntities

Type: Boolean

Value: True

Description: Defines whether generated equipment entities in a status other than Archived are included in the search result of the Smart search mode of Data Manager - Equipment.

If the value is set to **true**, Data Manager - Equipment - Smart Search includes generated equipment entities in a status other than **Archived** in its search result. This configuration may have an impact on the performance of Data Manager. This is the default setting.

If the value is set to **false**, Data Manager - Equipment - Smart Search does not include generated equipment entities in a status other than **Archived** in its search result.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

LibraryHolder/services-s88equipment-ifc.jar/CapabilityValidator.Room

■ **Type**: String

■ Value:

com. rock well. mes. services. s 88 equipment. if c. capability validation. I Equipment Capability Validator Room

- **Description**: Defines the name of the validator interface used for the **Room** (**RS**) equipment type validation. Generally, the suffix after the dot (here: **Room**) corresponds to the meaning of the **EquipmentType** choice list element.
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: N/A

LibraryHolder/services-s88equipment-ifc.jar/CapabilityValidator.Scales

■ **Type**: String

■ Value:

com. rock well. mes. services. s88 equipment. if c. capability validation. I Equipment Capability Validator Scales

- **Description:** Defines the name of the validator interface used for the **Scale (RS)** equipment type validation. Generally the suffix after the dot (here: **Scales**) corresponds to the meaning of the **EquipmentType** choice list element.
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: N/A

Configuration Keys for the Exception Dashboard

The following configuration keys are available for the Exception Dashboard.

Form/ApplicationStart_ExceptionDashboard/StartupChecks

Type: List

Value: N/A

■ **Description**: List of configurable checks to be executed when the Production Response Client is started.

Each check must implement the IStartupCheck interface.

- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Any valid name for a **List** object maintained in Process Designer or PS Administration.

• ' •

Form/ExceptionDashboard/prc_Additional_Filter_Attributes.customerName

■ **Type**: String

Eclipse).

■ Value: prc_Additional_Filter_Attributes

■ **Description**: Defines the name of the filter configuration that is used to configure additional filters in the Production Response Client.

For this configuration, you need a development environment in order to modify **List** objects in Process Designer or XML files located in the classpath (e.g.

Evaluated: Only when a PharmaSuite client is started.

■ Range: A valid name for a **List** object in Process Designer.

Form/ExceptionDashboard/prc_Additional_Filter_Attributes.readFromFile

Type: Boolean

■ Value: False

■ **Description**: Defines whether the filter configuration for additional filters is read from a file.

If the value is set to **true**, the Production Response Client reads the filter configuration from the *prc_Additional_Filter_Attributes.xml* file. This configuration is recommended only for developers. For this configuration, you need a development environment in order to modify XML files located in the classpath (e.g. Eclipse).

If the value is set to **false**, the Production Response Client reads the filter configuration from the database (**prc_Additional_Filter_Attributes** list).

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

Form/ExceptionDashboard/prc Standard Filter Attributes.customerName

Type: String

■ Value: prc_Standard_Filter_Attributes

■ **Description**: Defines the name of the filter configuration that is used to configure standard filters in the Production Response Client. They are always visible on the UI.

For this configuration, you need a development environment in order to modify **List** objects in Process Designer or XML files located in the classpath (e.g. Eclipse).

Evaluated: Only when a PharmaSuite client is started.

Range: A valid name for a **List** object in Process Designer.

Form/ExceptionDashboard/prc_Standard_Filter_Attributes.readFromFile

Type: Boolean

■ Value: False

■ **Description**: Defines whether the filter configuration for standard filters is read from a file. They are always visible on the UI.

If the value is set to **true**, the Production Response Client reads the filter configuration from the *prc_Standard_Filter_Attributes.xml* file. This configuration is recommended only for developers. For this configuration, you need a development environment in order to modify XML files located in the classpath (e.g. Eclipse).

If the value is set to **false**, the Production Response Client reads the filter configuration from the database (**prc_Standard_Filter_Attributes** list).

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

LibraryHolder/apps-exceptiondashboard-impl.jar/CustomizableColumnCreator

Type: StringValue: N/A

■ **Description**: Defines an implementation class for a customizable column in the Overview panel of the Exception Dashboard. The column will be displayed as the first column. For more information, see chapter "Adding a Column to the Overview Panel of the Exception Dashboard" in Volume 3 of the "Technical Manual Configuration and Extension" [A5] (page 187).

If a value is set, it must be the fully qualified name of a java class implementing the *ICustomizableColumnCreator* interface. The class must be added to the java class path. For this configuration, you need to create a JAR file containing the class and add it as a **Library** object in Process Designer. The changes will take effect when you restart the client.

If no value is set, no additional column will be displayed. This is the default setting.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

· '

Library Holder/apps-exception dashboard-impl.jar/Enable Automatic Review Of Workflow With Order

■ Type: Boolean

■ Value: True

- **Description**: Defines if workflows attached to orders automatically move to the Reviewed status when the order is set to reviewed. If the value is set to true, workflows attached to an order are automatically set to Reviewed when the order is set to Reviewed. If the value is set to false, workflows attached to an order first need to be moved to Reviewed before their order can be set to Reviewed.
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: [FALSE, TRUE]

LibraryHolder/apps-exceptiondashboard-impl.jar/HideCapaID

■ **Type**: Boolean

■ Value: False

- Description: Defines whether CAPA ID is shown in the UI.
 If the value is set to true, the CAPA ID is shown in the UI.
 If the value is set to false, the CAPA ID is not visible in the UI. This is the default setting.
- **Evaluated**: Only when a PharmaSuite client is started.

Range: [False, True]

Library Holder/apps-exception dashboard-impl.jar/Reviewer Multiple Exceptions Text

S

Type: List

■ Value: N/A

- **Description**: List of pre-defined texts to be added as a review comment to the exception comment in case multiple exceptions are selected for adding a comment.
- **Evaluated**: Only when a PharmaSuite client is started.
- Range: Any valid name for a **List** object maintained in Process Designer or PS Administration.

$Library Holder/apps-exception dashboard-impl.jar/selectable Exceptions For Commen \ tLinking Error Limit$

Type: Long

■ Value: 50

■ **Description**: Defines the maximum number of exceptions that can be multi-selected in order to add comments to the exceptions. In case the number of selected exceptions is higher than the defined value, the system displays an error message and does not add comments.

Evaluated: Only when a PharmaSuite client is started.

Range: [50..100]

Configuration Keys for Archive and Purge

The following configuration keys are available for archive and purge.

LibraryHolder/services-archivepurge-ifc.jar/AuditTrailTablesToPurge

■ **Type**: Object - List

■ Value: OBJECT_STATE_A

■ **Description**: List of audit trail tables that are automatically purged if the associated table is purged.

Evaluated: Only when a PharmaSuite client is started.

Range: N/A

LibraryHolder/services-archivepurge-ifc.jar/DefaultArchiveDirectory-OrderBatch

■ **Type**: String

■ Value: <Windows default user directory>/Batch

■ **Description**: Defines the default directory on your file system to which the batch record is exported for archiving. We recommend to configure the access rights to the directory to comply with your archiving procedures.

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

${\bf Library Holder/services-archive purge-ifc.jar/Default Archive Directory-Order Workflow}$

■ Type: String

■ Value: <Windows default user directory>/Workflow

- **Description**: Defines the default directory on your file system to which the workflow record is exported for archiving. We recommend to configure the access rights to the directory to comply with your archiving procedures.
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: N/A

Library Holder/services-archive purge-ifc. jar/create Compressed Record Container and the container of the

■ **Type**: Boolean

■ Value: False

- **Description**: Defines whether the record container (e.g. for batch records) is created as a compressed file.
- **Evaluated**: Only when a PharmaSuite client is started.

Range: [False, True]

LibraryHolder/services-archivepurge-impl.jar/MaxPurgeChunkSize

Type: Long

■ Value: 100

- **Description**: Defines the maximum number of purge operations within a single transaction. The setting affects the size of the redo log file.
- Evaluated: Also when the Change User or Register at Station actions of the Production Execution Client are executed. The operator must not have been logged into the current Production Execution Client session before.

Range: [1..1000]

service-archivepurge-impl.jar/PrerequisitesOrderArchive

■ **Type**: Object - List

■ Value: ap_PrerequisitesOrderArchive

 Description: List of prerequisites that must be fulfilled before an order or workflow can be exported for archive.
 By default, the following prerequisites are checked:

- OrderArchivePrerequisiteOrderStatus Asserts that the order or workflow status allows the export for archive. The assertion is based on the archivePurge.allow.Export semantic property.
- OrderArchivePrerequisiteParentOrdersOfAppendedWorkflowAreInTerminal State

Asserts that all orders to which a workflow is appended have reached a final status. (This could be a logically final status, see **archivePurge.status.logicallyTerminal** semantic property.)

For a description of the semantic properties, please refer to chapter "Configuring Flexible State Models" in Volume 2 of the "Technical Manual Configuration and Extension" [A4] (page 187).

Evaluated: Only when a PharmaSuite client is started.

■ Range: N/A

• '

service-archivepurge-impl.jar/PrerequisitesOrderPurge

■ **Type**: Object - List

■ Value: ap_PrerequisitesOrderPurge

■ **Description**: List of prerequisites that must be fulfilled before an order or workflow can be purged.

By default, the following prerequisites are checked:

- OrderPurgePrerequisiteNoS88EquipmentBound
 Asserts that the order or workflow has no binding relation to S88 equipment anymore.
- OrderPurgePrerequisiteNoS88EquipmentWithGxPContext
 Asserts that the order has no current context relation to S88 equipment anymore.
- OrderPurgePrerequisiteOrderStatus
 Asserts that the order or workflow status allows to purge. This is the case if
 the status allows to export (see
 service-archivepurge-impl.jar/PrerequisitesOrderArchive configuration
 key (page 183)) or the status is marked with the
 archivePurge.allow.PurgeWithoutExport semantic property.
 For a description of the semantic properties, please refer to chapter
 "Configuring Flexible State Models" in Volume 2 of the "Technical Manual
 Configuration and Extension" [A4] (page 187).
- OrderPurgePrerequisiteOrderExported
 Asserts that the order or workflow has been exported successfully unless the status allows purging without export or the workflow is not production-relevant.
- OrderPurgePrerequisiteParentOrdersOfAppendedWorkflowAlreadyPurged Asserts that all orders to which a workflow is appended have been purged before the workflow is purged.
- OrderPurgePrerequisiteNoIdentifiedSublots
 Asserts that there is no relation to a sublot that was identified for the order.
- **Evaluated**: Only when a PharmaSuite client is started.

■ Range: N/A

Configuration Keys for Treatment ID Use

The following keys are available to configure the use of treatment IDs throughout the system.

Form/enableTreatmentIDUIExtensions

■ **Type**: Boolean

Value: False

■ **Description**: Defines if treatment ID-related actions regarding sorting and filtering are available on the user interface of the Production Execution Client and the Production Response Client.

If the value is set to **true**, the actions are visible.

If the value is set to **false**, the actions are not visible. This is the default setting.

Evaluated: Only when a PharmaSuite client is started.

Range: [False, True]

Phase/TreatmentIDSupport

■ Type: String

■ Value: Off

Description: Specifies if and how treatment IDs of batches and orders are checked.

Additionally, it is used to pass the treatment ID of a batch or master workflow on to a new workflow created with the **Create workflow** phase.

- Evaluated: During the identification of material in the Identify material and D Identity material phases and during workflow creation with the Create workflow phase.
- Range: [Off, TreatmentIDMandatory, TreatmentIDOptional].

Reference Documents

The following documents are available from the Rockwell Automation Download Site.

No.	Document Title	Part Number
A1	PharmaSuite Implementation Guide PS Administration	PSAC-IN002C-EN-E
A2	PharmaSuite Technical Manual Developing System Building Blocks	PSBB-PM010B-EN-E
А3	PharmaSuite Technical Manual Phases of the Dispense Package	PSDI-PM007A-EN-E
A4	PharmaSuite Technical Manual Configuration & Extension - Volume 2	PSCEV2-GR010C-EN-E
A5	PharmaSuite Technical Manual Configuration & Extension - Volume 3	PSCEV3-GR010C-EN-E
A6	PharmaSuite Technical Manual Installation	PSES-IN010C-EN-E
A7	PharmaSuite Technical Manual Administration	PSAD-RM010C-EN-E
A8	PharmaSuite Technical Manual Configuration & Extension - Volume 1	PSCEV1-GR010C-EN-E

TIP

To access the Rockwell Automation Download Site, you need to acquire a user account from Rockwell Automation Sales or Support.

The following documents are distributed with the FactoryTalk ProductionCentre installation.

No.	Document Title / Section
B1	Process Designer Online Help

TIP

To access the "Process Designer Online Help", use the following syntax: http://<MES-PS-HOST>:8080/PlantOperations/docs/help/pd/index.htm, where <MES-PS-HOST> is the name of your PharmaSuite server. To view the online help, the Apache Tomcat of the FactoryTalk ProductionCentre installation must be running.

The following documents are distributed with the PharmaSuite installation.

No.	Document Title / Section
C1	PharmaSuite-related Java Documentation: Interfaces of PharmaSuite

TIP

To access the "PharmaSuite-related Java Documentation", use the following syntax: http://<MES-PS-HOST>:8080/PharmaSuite/javadoc/, where <MES-PS-HOST> is the name of your PharmaSuite server.

The following third-party documentation is available online as reference:

No.	Document Title / Web Site
D1	Apache Logging Services Project: Apache log4j (http://logging.apache.org/log4j/)
D2	OSIsoft (http://www.osisoft.com/) PI JDBC 2017 Administrator Guide Configuring PI Server Security
D3	ActiveMQ - Features - Message Features - ObjectMessage (http://activemq.apache.org/objectmessage.html)

Revision History

The following tables describe the history of this document.

Changes related to the document:

Object	Description	Document

Changes related to "Introduction" (page 1):

Object	Description	Document

Changes related to "Extension and Naming Conventions" (page 7):

Object	Description	Document

Changes related to "Managing Configurations" (page 11):

Object	Description	Document
Defining a Station-specific Configuration Key (page 21)	Added a new section on defining a "Station-specific Configuration Key" via two, different approaches. Added a new section on deciding which of the following two approaches to take. Added a tip section.	1.0
Retrieving a Station-specific Configuration Key (page 23)	Added a new section on "Retrieving Station-specific Configuration Key". Added a code example. Added a tip section.	1.0

Changes related to "Logging and Debugging" (page 25):

Object	Description	Document

Changes related to "Configuration Keys of PharmaSuite" (page 37):

Object	Description	Document
Configuration Keys Specific to the Production Execution Client (page 56)	Added configuration key: Station/showUserNotification Station/maxPECWidth	1.0
	Updated description of the Station/useOSK to: "Defines whether the built-in Microsoft OSK (On-Screen Keyboard) is displayed or not. The class level configuration item defines behavior for all stations without a station-specific override. If the value is set to true, the OSK executable is started when operator taps inside a text box and is finished when he taps outside a text box. If the value is set to false, the OSK is not displayed."	
Configuration Keys for Exception Recording (page 120)	Configuration key identifier corrected: LibraryHolder/services-S88-impl.jar/PEC_Signature_AppendW orkflowsFromRtUnitProcedure changed to LibraryHolder/services-S88-impl.jar/AppendWorkflowsFromRt UnitProcedureInPECSignatureEnabled	1.0
Configuration Keys for Recipe and Workflow Designer (page 142)	Removed configuration key: LibraryHolder/apps-recipeeditor-impl.jar/ImportRecipeBuildi ngBlockIgnoreNonExistingEquipment	1.0
Configuration Keys for Production Execution Viewer (page 170)	Added configuration keys: Form/ApplicationStart_ProductionExecutionViewer/StyleShee t Form/ProductionExecutionViewer/pev_buttonConfiguration.c ustomerName Form/Universe/pev_openConfiguration.customerName	1.0

allowResumeOnlySameStation [ActivitySetName] (configuration key) • 51 <usageType>.AutoConsumeStandaloneTargetSublot allowResumeOnlySameUser (configuration key) • 53 (configuration key) • 61 allowResumeOnlySameUser [ActivitySetName] <usageType>.BatchPrefix (configuration key) • 79 (configuration key) • 52 <usageType>.DispensingLabel (configuration key) • 61 AppendWorkflowsFromRtUnitProcedureInPECExcRisk <usageType>.LabelCount4TargetSublot (configuration (configuration key) • 115 key) • 62 AppendWorkflowsFromRtUnitProcedureInPECSignatureE<usageType>.Main (configuration key) • 62 nabled (configuration key) • 118 <usageType>.MasterRecipeQuantityCheckApplicable AppendWorkflowsToOrderInPECExcRisk (configuration (configuration key) • 76 key) • 115 <usageType>.MasterRecipeUsageTypeStructureCheckApp AppendWorkflows To Order In PECS ignature Enabledlicable (configuration key) • 77 (configuration key) • 116 <usageType>.MaterialParameterCountsCheckApplicable Application configuration • 11 (configuration key) • 77 ApplicationStart/StyleSheet (configuration key) • 42 <usageType>.PalletContainerSublotLabel (configuration ApplicationStart_DataManager/StyleSheet (configuration key) • 62 key) • 153 <usagetype>.WorkflowOrder-Main (configuration key) • ApplicationStart_ExceptionDashboard/StyleSheet 90 (configuration key) • 43 ApplicationStart_ProductionExecutionClient/acceleratorKe Α ysMessagePack (configuration key) • 43 AbortOperationExcRisk (configuration key) • 106 ApplicationStart_ProductionExecutionClient/AlternateStyl acceleratorKeysMessagePack (configuration key) • 42 eSheet (configuration key) • 43 AccessPrivilege (buildtime object) • 17 ApplicationStart_ProductionExecutionClient/ApplicationSt Account (buildtime object) • 17 art MainIcon (configuration key) • 43 ActivateExceptionClassification (configuration key) • 114 ApplicationStart_ProductionExecutionClient/doExitOnLog ActivateExternalExceptionHandling (configuration key) • out (configuration key) • 44 115 ApplicationStart_ProductionExecutionClient/hideMenu ActivitySet (buildtime object) • 17 (configuration key) • 44 ActivitySetAutostartList (configuration key) • 52 ApplicationStart_ProductionExecutionClient/NameOfCust AdministrativeTasks (configuration key) • 52 omerLogo (configuration key) • 55 allowMultipleInstances (configuration key) • 53 ApplicationStart_ProductionExecutionClient/onlineHelpPr allowMultipleInstances [ActivitySetName] (configuration efix (configuration key) • 44 ApplicationStart_ProductionExecutionClient/StyleSheet allowNonValidMasterRecipeForOrder (configuration key) (configuration key) • 44 • 71 ApplicationStart_ProductionExecutionViewer/StyleSheet allowResumeOnlySameStation (configuration key) • 53 (configuration key) • 151

F

BarcodeListener.endCharacter (configuration key) • 88 ApplicationStart ProductionManagementClient/accelerator KeysMessagePack (configuration key) • 45 BarcodeListener.endKey (configuration key) • 36, 89 BarcodeListener.startCharacter (configuration key) • 89 ApplicationStart_ProductionManagementClient/Applicatio nStart MainIcon (configuration key) • 45 BarcodeListener.startKey (configuration key) • 36, 89 ApplicationStart_ProductionManagementClient/doExitOn BarcodeListener.timeout (configuration key) • 36 Logout (configuration key) • 45 Barcode-specific configuration keys ApplicationStart_ProductionManagementClient/hideMenu BarcodeListener.alternativeStartKey • 88 (configuration key) • 45 BarcodeListener.endCharacter • 88 ApplicationStart_ProductionManagementClient/onlineHel BarcodeListener.endKey • 89 pPrefix (configuration key) • 46 BarcodeListener.startCharacter • 89 ApplicationStart_ProductionManagementClient/StyleSheet BarcodeListener.startKey • 89 (configuration key) • 46 characterSet (form) • 86 ApplicationStart_RecipeDesigner/StyleSheet characterSet (label design) • 87 (configuration key) • 125 Copy of BarcodeListener.alternativeStartCharacter • 88 Archive and purge-specific configuration keys DataMatrixShapeSquare (form) • 86 AuditTrailTablesToPurge • 161 encodingByIText (form) • 87 createCompressedRecordContainer • 161 encodingByIText (label design) • 87 BasicSearch.hideArchivedObjectsInitially (configuration DefaultArchiveDirectory-OrderBatch • 161 key) • 153 DefaultArchiveDirectory-OrderWorkflow • 161 MaxPurgeChunkSize • 162 BasicSearch.maximumNumberOfSelectedObjects PrerequisitesOrderArchive • 162 (configuration key) • 154 PrerequisitesOrderPurge • 162 Batch report-specific configuration keys AreBatchIdentifiersUnique (configuration key) • 79 <usagetype>.WorkflowOrder-Main • 90 ATDefinition (buildtime object) • 17 FontDirectory • 90 AtMostOneAutostartableOperationUnderSimultaneousFor ImageNameOfBatchReportLogo • 90 kCheck (recipe structure check) • 135 ImageNameOfMRReportLogo • 91 Audience • 5 Main • 91 AuditTrailTablesToPurge (configuration key) • 161 PS-MRReport-Main • 91 AutomaticExceptionOnFailureAtCreationOfRunOfETOEx ReportPreview.useAlwaysPagination • 92 cRisk (configuration key) • 110 Workflow-Main • 91 AutomaticExceptionOnResumeOfServerRunOperationExc BatchBarcodeTemplates (configuration key) • 80 Risk (configuration key) • 107 BatchNumberLeadingZeros (configuration key) • 80 AutomaticExceptionOnResumeOfTemplateExcRisk BatchNumberLength (configuration key) • 80 (configuration key) • 110 BatchQualityFSMName (configuration key) • 123 AutomaticLockTimeoutInSeconds (configuration key) • 60 BatchRecipeVersioningFSMName (configuration key) • 75 BillOfMaterials (buildtime object) • 17 В BOMPositionNotEmptyCheck (recipe structure check) • BarcodeListener.alternativeStartCharacter (configuration 135 kev) • 88 Buildtime object (configuration key) BarcodeListener.alternativeStartKey (configuration key) • AccessPrivilege • 17 88 Account • 17

ActivitySet • 17	CancelButtonEnabledOfExceptionDialog (configuration	
ATDefinition • 17	key) • 69	
BillOfMaterials • 17	CanceledExceptionRisk (configuration key) • 107	
Carrier • 17	CancelWorkflowInPECExcRisk (configuration key) • 116	
CarrierClass • 17	$Cancel Workflow In PECS ignature Enabled\ (configuration$	
Equipment • 17	key) • 116	
EquipmentClass • 17	CapabilityCombinationCheck (recipe structure check) •	
FlexibleStateModel • 17	136	
Form • 17	CapabilityEscalationDurationsCheck (recipe structure	
Hierarchy • 17	check) • 136	
LabelDataDefinition • 17	$Capability Risks Matched By Privilege Usages Check\ (recipe$	
LabelDesign • 17	structure check) • 136	
LibraryHolder • 17	$Capability Triggerable Has Child Check\ (recipe\ structure$	
List • 17	check) • 136	
Locale • 17	CapabilityValidator.Room (configuration key) • 157	
Location • 17	CapabilityValidator.Scales (configuration key) • 157	
MasterRecipe • 17	Carrier (buildtime object) • 17	
Messages • 17	CarrierClass (buildtime object) • 17	
Part • 17	ChangeUserOrStationChecks (configuration key) • 55	
PartClass • 17	characterSet (form, configuration key) • 86	
ProcessBom • 17	characterSet (label design, configuration key) • 87	
ProductionLine • 17	$Check For JMX Config Changes. interval\ (configuration\ key)$	
ProductionQueue • 17	• 39	
ReportDataDefinition • 17	$Children Capabilitites Combination Check\ (recipe\ structure$	
ReportDesign • 17	check) • 136	
ResourceCondition • 17	clearPasswordsDelay (configuration key) • 66	
ResourceRoute • 17	Communication States To Allow Manual Exception Sending	
Route • 17	(configuration key) • 117	
SemanticProperty • 17	$Component Orientation/Right To Left \ (configuration \ key) \bullet$	
SemanticPropertySet • 17	35	
Station • 17	Confidential Object. Modifiable. When Creating Recipe Struct and the confidential Object. Modifiable and the confidence of the confidenc	
TestDefinition • 17	ure (configuration key) • 125	
User • 17	Configuration key • 11	
UserGroup • 17	Characteristics • 14	
WorkCenter • 17	Customer-specific • 18	
WorkInstruction • 17	Defining • 19	
	Logging • 18	
•	Lookup mechanism • 15	
calculateScaleForPercentage (configuration key) • 36	Modifying • 35	
$cal Scale Div Minimum Precision Of f set \ (configuration \ key) \ \bullet$	Override for unit test • 22	
37	Phase building block • 15	

PSCEV4-GR010C-EN-E, 1.0

C

Station-specific • 20	Cost Center. Master Recipe Quantity Check Applicable
Supported buildtime objects • 17	(configuration key) • 77
Configuration keys for global use	Cost Center. Master Recipe Usage Type Structure Check Application (Cost Center) and the cost Center (Cost
BarcodeListener.endKey • 36	able (configuration key) • 78
BarcodeListener.startKey • 36	Cost Center. Material Parameter Counts Check Applicable
BarcodeListener.timeout • 36	(configuration key) • 78
calculateScaleForPercentage • 36	CostCenter.PalletContainerSublotLabel (configuration
calScaleDivMinimumPrecisionOffset • 37	key) • 64
CheckForJMXConfigChanges.interval • 39	CostCenters (configuration key) • 72
ComponentOrientation/RightToLeft • 35	$create Compressed Record Container (configuration key) \bullet $
DeviceIdentificationPatternTerminalServices • 37	161
MandatoryServerEventSheets • 39	create Separate Control Recipe From Valid Master Recipe
MessageTypeTimeContainer.notOlderThanMillis • 39	(configuration key) • 73
MessageTypeTimeContainer.recentArrayLimit • 40	CSV_Separator (configuration key) • 50
MessageTypeTimeContainer.smaArrayLimit • 40	CustomizableColumnCreator (configuration key) • 159
ServicesConfigFile • 38	_
SpecialUOMs • 40	D
SuspendedTransactionTimeout • 38	Data Manager-specific configuration keys
TransactionTimeout • 38	ApplicationStart_DataManager/StyleSheet • 153
TrustedPackages • 41	BasicSearch.hideArchivedObjectsInitially • 153
UoMsOfPotency • 41	BasicSearch.maximumNumberOfSelectedObjects • 154
WarehouseIntegrationMessageReceiver • 41	CapabilityValidator.Room • 157
WarehouseIntegrationMessageSender • 41	CapabilityValidator.Scales • 157
WarehouseManagementConnected • 42	filterAvailableFSMsForPropertyType • 152
configureTabSequence (configuration key) • 47	filterAvailableImagesForEquipmentClass • 152
Configuring	filter Available Semantic Properties For Fsm Property Type
Logging • 23	• 152
ContainerStatusFailureExcRisk (configuration key) • 105	$mdt_buttonConfiguration.customerName \bullet 154$
Conventions • 7	$mdt_buttonConfiguration.readFromFile \bullet 154$
Conventions (typographical) • 5	mdt_defaultLayoutSettings.customerName • 154
copyS88StructureFromMasterRecipeIntoControlRecipeallo	$mdt_defaultLayoutSettings.readFromFile \bullet 155$
wNonValidMasterRecipeForOrder (configuration key)	ps_ExpressionEditorShortcuts.customerName • 155
• 72	$ps_ExpressionEditorShortcuts.readFromFile \bullet 155$
CostCenter.AutoConsumeStandaloneTargetSublot	SmartSearch.includeArchivedGeneratedEntities • 156
(configuration key) • 63	$Smart Search. include Non Archived Generated Entities \bullet \\$
CostCenter.BatchPrefix (configuration key) • 81	156
CostCenter.DispensingLabel (configuration key) • 63	StartupChecks • 153
CostCenter.LabelCount4TargetSublot (configuration key) •	DataMatrixShapeSquare (form, configuration key) • 86
64	$DCSDefault Produced Material Location\ (configuration\ key)$
CostCenter.Main (configuration key) • 64	• 70
••	Debugging • 26

Barcode support • 28	dispensingLabel.print.printLabelWhenTargetSublotFinishe
Configuring logging for ActiveMQ • 31	d (configuration key) • 120
Configuring logging for PharmaSuite Servers • 30	dispensingLabel.reprint.showPreview (configuration key)
Focus issues analysis • 29	121
Workflow analysis • 27	doExitOnLogout (configuration key) • 46
DefaultArchiveDirectory-OrderBatch (configuration key) •	Download Site • 165
161	Dynamic change of configuration • 19
DefaultArchiveDirectory-OrderWorkflow (configuration key) • 161	E
DefaultBatchBarcodeTemplate (configuration key) • 81	EBRS erver Recovery Worker Interval In Minutes
DefaultBatchPrefix (configuration key) • 82	(configuration key) • 69
DefaultOrderPrefix (configuration key) • 73	EBR-specific configuration keys
defaultPrinter - label (configuration key) • 119	CancelButtonEnabledOfExceptionDialog • 69
defaultPrinter - report (configuration key) • 123	DCSDefaultProducedMaterialLocation • 70
DefaultSublotBarcodeTemplate (configuration key) • 82	EBRServerRecoveryWorkerIntervalInMinutes • 69
DefaultSublotPrefix (configuration key) • 84	longWaitBeforeNextPoll • 69
DeviceIdentificationPatternTerminalServices	maxWaitForCompletion • 68
(configuration key) • 37	MessageBrokerURL • 71
DispenseFlagCapabilityParameterCheck (recipe structure	MessageTimeToLive • 70
check) • 136	MessagingTimeout • 71
Dispense-specific configuration keys	PhaseRepairModeBlackList • 70
BatchQualityFSMName • 123	PhaseUIExtensionsPrefix • 71
defaultPrinter - label • 119	shortWaitBeforeNextPoll • 69
defaultPrinter - report • 123	$Template Observer Recovery Worker Interval In Minutes \\ \bullet$
dispensing Label.print.print Label When Target Sublot Cre	70
ated • 120	WithRiskClassNone • 68
dispensing Label.print.print Label When Target Sublot Fini	ECBHazardSymbols (configuration key) • 74
shed • 120	Enable Automatic Review Of Workflow With Order
dispensingLabel.reprint.showPreview • 121	(configuration key) • 159
GrossWeighing.weighMode • 123	enableTreatmentIDUIExtensions (configuration key) • 163
inventory Label. print. print Inv Label When Source Sublot C	Enable Unresolved External References In Approved CBBs
onsumed • 121	(configuration key) • 131
jasperReportViewerPanelClass • 122	encodingByIText (form, configuration key) • 87
NetWeighing.weighMode • 124	encodingByIText (label design, configuration key) • 87
RemovalWeighing.weighMode • 124	Equipment (buildtime object) • 17
simpleWeighingLabel.reprint.showPreview • 122	Equipment/AIServerMessagingTimeoutInSeconds
$simple Weighing Label. reprint. show Printer Selection \bullet $	(configuration key) • 92
122	Equipment/Default Automation Integration Server Name
dispensing Label.print.print Label When Target Sublot Created	(configuration key) • 93
(configuration key) • 120	Equipment/DefaultHistorianAccessServerName
	(configuration key) • 93

- Equipment/DefaultHistorianAlServerName (configuration key) 93
- Equipment/DefaultHistorianServerName (configuration key) 93
- Equipment/defaultLabelPrinter (configuration key) 94
- Equipment/DefaultLiveDataAreaPath (configuration key) •
- Equipment/DefaultTagUpdateRateInMilliseconds (configuration key) 94
- Equipment/equipmentEntityBarcode.prefix (configuration key) 94
- Equipment/equipmentEntityLabel.reportDesign (configuration key) 95
- Equipment/equipmentEntityLabel.showPrinterSelection (configuration key) 95
- Equipment/equipmentEntityLabel.subroutine (configuration key) 95
- Equipment/equipmentEntityLabel.usePreviewWindowFor Touchscreen (configuration key) 95
- Equipment/HistorianAccessPassword.<HistorianAccessSer verName> (configuration key) 96
- Equipment/HistorianAccessUser.<HistorianAccessServerN ame> (configuration key) 96
- Equipment/LiveDataPassword (configuration key) 96
- Equipment/LiveDataUsername (configuration key) 96
- Equipment/PI_JDBC_DCA_OPTION (configuration key)
 97
- Equipment/PI_JDBC_Property_LogConsole (configuration key) 97
- Equipment/PI_JDBC_Property_LogFile (configuration key) 97
- Equipment/PI_JDBC_Property_LogLevel (configuration key) 98
- Equipment/PI JDBC URL (configuration key) 98
- Equipment/TagQualityGoodList (configuration key) 98
- EquipmentClass (buildtime object) 17
- EquipmentPropertyRequirementIdentifierCheck (recipe structure check) 136
- EquipmentPropertyRequirementsCheck (recipe structure check) 137

- EquipmentRequirementParameterCountsCheck (recipe structure check) 137
- EquipmentRequirementParameterUniqueBOEPositionChe ck (recipe structure check) 137
- EquipmentRequirementUniqueClassCheck (recipe structure check) 137
- EquipmentRuleExpressionCheck (recipe structure check) 137
- ERPBomAllPositionsUsedInActualBomCheck (recipe structure check) 137
- ERPBomContainsAllActualBomPositionsCheck (recipe structure check) 137
- ERPBomItemConsistentMaterialParameterAttributesCheck (recipe structure check) 137
- ERPBomPackagingLevelsCheck (recipe structure check) 138
- ERPBomQuantityCheck (recipe structure check) 138
- ERPBomUniqueMFCPositionCheck (recipe structure check) 138
- Exception Dashboard-specific configuration keys
 - CustomizableColumnCreator 159
 - EnableAutomaticReviewOfWorkflowWithOrder 159 HideCapaID • 160
 - prc Additional Filter Attributes.customerName 158
 - prc Additional Filter Attributes.readFromFile 158
 - prc Standard Filter Attributes.customerName 158
 - prc Standard Filter Attributes.readFromFile 159
 - ReviewerMultipleExceptionsTexts 160
 - $selectable Exceptions For Comment Linking Error Limit \\ \bullet \\ 160$
 - StartupChecks 157
- Exception recording-specific configuration keys
 - AbortOperationExcRisk 106
 - ActivateExceptionClassification 114
 - ActivateExternalExceptionHandling 115
 - AppendWorkflowsFromRtUnitProcedureInPECExcRis
 - AppendWorkflowsFromRtUnitProcedureInPECSignatu reEnabled 118
 - AppendWorkflowsToOrderInPECExcRisk 115

AppendWorkflowsToOrderInPECSignatureEnabled • UnitProcedureFinalAbortByAdminExcRisk • 113 UnitProcedureFinishWithAbortedByAdminExcRisk • AutomaticExceptionOnFailureAtCreationOfRunOfETO 113 ExcRisk • 110 UnitProcedureReactivatedByAdminExcRisk • 113 AutomaticExceptionOnResumeOfServerRunOperation UnloadOrderFromEBRExcRisk • 109 ExcRisk • 107 ExceptionSequencerLength (configuration key) • 109 AutomaticExceptionOnResumeOfTemplateExcRisk • executionBatchRecordForm (configuration key) • 56 110 executionCockpitExceptionForm (configuration key) • 56 CanceledExceptionRisk • 107 executionCockpitForm (configuration key) • 56 CancelWorkflowInPECExcRisk • 116 executionExceptionForm (configuration key) • 56 CancelWorkflowInPECSignatureEnabled • 116 executionNavigationForm (configuration key) • 57 CommunicationStatesToAllowManualExceptionSendin executionPhaseActionForm (configuration key) • 57 g • 117 executionStartCampaignWeighingForm (configuration ContainerStatusFailureExcRisk • 105 key) • 57 ExceptionSequencerLength • 109 expiryDateTransitionCheckEntitiesOption (configuration ExternalExceptionHandlingReceiver • 114 key) • 102 ExternalExceptionHandlingSender • 114 expiryDateTransitionCheckInterval (configuration key) • ForceTransitionExecutionOrderExcRisk • 110 ForceUnbindEquipmentExcRisk • 109 ExtendedHazardSymbols (configuration key) • 74 HoldOrResumeOESOperationExcRisk • 107 Extension conventions • 7 IncreaseOSIQuantityExcRisk • 111 ExternalEqmReceiver (configuration key) • 100 MinimalRiskClassForExternalExceptionHandling • 117 ExternalExceptionHandlingReceiver (configuration key) • 114 NewCorrectiveOSIExcRisk • 111 OperationUnlockedByAdminExcRisk • 108 ExternalExceptionHandlingSender (configuration key) • 114 OrderChangesExceptionRisk • 111 OrdersAssignedByAdminExcRisk • 117 F OSCanceledWhilePhaseActiveExcRisk • 108 FallBackToJavaXCommLibrary (configuration key) • 99 PhaseExecutionSkippedExcRisk • 106 filterAvailableFSMsForPropertyType (configuration key) • PhaseRepairModeExcRisk • 106 152 PredefinedTextHeaderLength • 118 filterAvailableImagesForEquipmentClass (configuration PredefinedTextSeparator • 118 key) • 152 ReactivateOSIExcRisk • 111 filterAvailableSemanticPropertiesForFsmPropertyType ReleaseOSILockExcRisk • 112 (configuration key) • 152 ReplaceTargetSublotExcRisk • 112 FilterNULBytes (configuration key) • 99 RoomTriggerStatusTransitionFailureExcRisk • 108 FlexibleStateModel (buildtime object) • 17 S88ExceptionSequencerLength • 119 FlexibleStateModelBinding (configuration key) • 103 SaveReadOnlyEquipmentExcRisk • 113 FlexibleStateModelChangeRequestBatchRecipes Sequential Phase Completion User Already Signed ExcRisk(configuration key) • 151 • 108 FlexibleStateModelChangeRequestMasterWorkflows TooLongAlarmExceptionRisk • 119 (configuration key) • 151 UnitProcedureAbortedByAdminExcRisk • 112

```
FT PharmaSuite® - Technical Manual Configuration and Extension - Volume 4
  FlexibleStateModelS88EquipmentClass (configuration
                                                                       InputExpressionsCheck (recipe structure check) • 138
     key) • 100
                                                                       Intended audience • 5
  FlexibleStateModelS88EquipmentEntity (configuration
                                                                       IntraMaterialBatchPrefix (configuration key) • 84
     key) • 101
                                                                       Inventory management-specific configuration keys
  FlexibleStateModelS88StatusGraph (configuration key) •
                                                                          <usageType>.BatchPrefix • 79
     101
                                                                          AreBatchIdentifiersUnique • 79
  FontDirectory (configuration key) • 90
                                                                          BatchBarcodeTemplates • 80
  ForceTransitionExecutionOrderExcRisk (configuration
                                                                          BatchNumberLeadingZeros • 80
     key) • 110
                                                                          BatchNumberLength • 80
  ForceUnbindEquipmentExcRisk (configuration key) • 109
                                                                          CostCenter.BatchPrefix • 81
  Form (buildtime object) • 17
                                                                          DefaultBatchBarcodeTemplate • 81
                                                                          DefaultBatchPrefix • 82
G
                                                                          DefaultSublotBarcodeTemplate • 82
  GeneratedEntityBarcodePrefix (configuration key) • 101
                                                                          DefaultSublotPrefix • 84
  GeneratedEntityIdentifierPrefix (configuration key) • 101
                                                                          IntraMaterialBatchPrefix • 84
  GeneratedEntityLengthOfNumericPartOfIdentifier
                                                                          isMaterialManagedInStock • 84
     (configuration key) • 102
                                                                          OutputSeparator • 85
  GHSData (configuration key) • 74
                                                                          SublotBarcodeTemplates • 85
  GrossWeighing.weighMode (configuration key) • 123
                                                                          SublotIdentificationChecks • 86
  GroupRootElementParametersCheck (recipe structure
                                                                       inventory Label.print.printInv Label When Source Sublot Cons\\
     check) • 138
                                                                          umed (configuration key) • 121
  GroupValidityCheck (recipe structure check) • 138
                                                                       isMaterialManagedInStock (configuration key) • 84
Н
  hasTouchScreen (configuration key) • 48
                                                                       jasperReportViewerPanelClass (configuration key) • 122
  HideCapaID (configuration key) • 160
                                                                    L
  hideMenu (configuration key) • 46
  Hierarchical configuration • 11
                                                                       LabelDataDefinition (buildtime object) • 17
  Hierarchy (buildtime object) • 17
                                                                       LabelDesign (buildtime object) • 17
  HoldOrResumeOESOperationExcRisk (configuration key)
                                                                       LibraryHolder (buildtime object) • 17
     • 107
                                                                       List (buildtime object) • 17
                                                                       Locale (buildtime object) • 17
ı
                                                                       Location (buildtime object) • 17
  IdentifyAlreadyBoundEqmFromAppendedWorkflow
                                                                       lockedObjectIcon (configuration key) • 49
     (configuration key) • 103
                                                                       log4j
  ImageNameOfBatchReportLogo (configuration key) • 90
                                                                          Properties file • 23
  ImageNameOfEQMReportLogo (configuration key) • 100
                                                                          Sample file • 26
  ImageNameOfMRReportLogo (configuration key) • 91
                                                                       Logging • 23
  IncreaseOSIQuantityExcRisk (configuration key) • 111
                                                                          Configuration key • 18
```

Configuring • 23

DEBUG log level • 25

ERROR log level • 25

initialSortCriteriaIsAlphabetic (configuration key) • 58

initialSortOrderIsAscending (configuration key) • 59

InlineWeighingPhaseLibs (configuration key) • 132

FATAL log level • 25	Material Parameter As Defined Planned Quantity And I oleranc
INFO log level • 25	$esForOutputWeighingCheck\ (recipe\ structure\ check) \bullet$
Log level • 25	140
log4j • 23	Material Parameter As Produced Requires Tolerances For Inlin
log4j.properties • 23	eWeighingCheck (recipe structure check) • 140
log4j_custom.properties • 23	MaterialParameterCountsCheck (recipe structure check) •
log4j_custom_local.properties • 23	141
log4j_ftps.properties • 23	$Material Parameter Custom Attributes Handler\ (configuration$
Logger • 25	key) • 150
TRACE log level • 25	MaterialParameterDispenseCheck (recipe structure check)
WARN log level • 25	• 141
Logo	Material Parameter Empty MFCP osition For In line Weighing C
Batch/device history/workflow report • 90	heck (recipe structure check) • 141
Equipment entity logbook report • 100	MaterialParameterFixedQuantityCheck (recipe structure
Master recipe/workflow report • 91	check) • 141
Production Execution Client • 55	MaterialParameterNumericMFCPositionCheck (recipe
longWaitBeforeNextPoll (configuration key) • 69	structure check) • 141
	MaterialParameterPackagingInventoryLevelCheck (recipe
M	structure check) • 141
Main (configuration key) • 91	MaterialParameterPackagingLevelsConsistencyCheck
MandatoryServerEventSheets (configuration key) • 39	(recipe structure check) • 142
MasterRecipe (buildtime object) • 17	MaterialParameterPlannedPotencyUomCheck (recipe
MasterRecipeMinMaxQuantityCheck (recipe structure	structure check) • 142
check) • 139	MaterialParameterPlannedQuantityCheck (recipe structure
MasterRecipePackagingInventoryLevelCheck (recipe	check) • 142
structure check) • 139	MaterialParameterPlannedQuantityModeAsProducedChec
MasterRecipePackagingLevelsConsistencyCheck (recipe	k (recipe structure check) • 142
structure check) • 139	MaterialParameterPlannedQuantityModeForDispenseChec
MasterRecipeUsageTypeStructureCheck (recipe structure	k (recipe structure check) • 142
check) • 139	MaterialParameterPlannedQuantityModeNoneCheck
MasterWorkflowVersioningFSMName (configuration key)	(recipe structure check) • 142
• 75	Material Parameter Planned Quantity Mode Of Transfer In For I
MaterialParameterActivePlannedPotencyForInlineCheck	nlineWeighingCheck (recipe structure check) • 143
(recipe structure check) • 139	MaterialParameterQuantityUomCheck (recipe structure
Material Parameter Allowed Weighing Material Type For Inlin	check) • 143
eWeighingCheck (recipe structure check) • 140	MaterialParametersWithSameMFCPositionConsistencyCh
Material Parameter Allowed Weighing Methods For In line Weight Methods Fo	eck (recipe structure check) • 143
ghingCheck (recipe structure check) • 140	MaterialParameterTargetWeightQuantityAndTolerancesCh
Material Parameter As Defined Planned Quantity And Toleranc	eck (recipe structure check) • 143
esForInlineWeighingCheck (recipe structure check) •	MaterialParameterTargetWeightQuantityUomCheck
140	(recipe structure check) • 143
	· • • · · · · · · · · · · · · · · · · ·

MaterialParameterTargetWeightToleranceCheck (recipe structure check) • 143 MaterialParameterTargetWeightToleranceUomCheck (recipe structure check) • 144 MaterialParameterToleranceUomCheck (recipe structure check) • 144 MaterialParameterWeighingMaterialTypeForInlineWeighi ngCheck (recipe structure check) • 144 MaterialParameterWeighingSequenceCheck (recipe structure check) • 144 MaterialParameterWeighingSequenceUsageTypeCheck (recipe structure check) • 144 MAX_COUNT_OF_COMPLETED_PHASES (configuration key) • 59 maxPECWidth (configuration key) • 67 MaxPurgeChunkSize (configuration key) • 162 maxWaitForCompletion (configuration key) • 68 mdt_buttonConfiguration.customerName (configuration key) • 154 mdt_buttonConfiguration.readFromFile (configuration key) • 154 mdt_defaultLayoutSettings.customerName (configuration key) • 154 mdt_defaultLayoutSettings.readFromFile (configuration key) • 155 mes DialogMessageBox (configuration key) • 47 MessageBrokerURL (configuration key) • 71 Messages (buildtime object) • 17 MessageTimeToLive (configuration key) • 70 MessageTimeToLive4AI (configuration key) • 98 MessageTypeTimeContainer.notOlderThanMillis (configuration key) • 39 MessageTypeTimeContainer.recentArrayLimit (configuration key) • 40 MessageTypeTimeContainer.smaArrayLimit (configuration key) • 40 MessagingTimeout (configuration key) • 71

MFCFinalOutputsGenericCheck (recipe structure check) • 145 MFCFinalOutputsMasterRecipeSpecificCheck (recipe structure check) • 145 MFCMergeToFinalOutputNotInDispenseUPCheck (recipe structure check) • 145 MFCP lanned Quantity Equal For Corresponding Transfers Chieck (recipe structure check) • 145 MFCSwitchOpenEndCheck (recipe structure check) • 145 MFCTransferNotIntoDispenseUPCheck (recipe structure check) • 145 MFCUoMOfMaterialConvertionsDispenseCheck (recipe structure check) • 145 MinimalRiskClassForExternalExceptionHandling (configuration key) • 117 modifiedNodeIcon (configuration key) • 49

Naming conventions • 7
NavigatorViewActivity.useFlyweightRendering
(configuration key) • 59
NestedGroupsCheck (recipe structure check) • 146
NetWeighing.weighMode (configuration key) • 124
NewCorrectiveOSIExcRisk (configuration key) • 111
NoLoopInProcedureGraphCheck (recipe structure check) • 146
NoMFCOutputInInputOnlyMFCStructureCheck (recipe structure check) • 146
NullStepsCheck (recipe structure check) • 146

0

objectLockingRefreshInterval (configuration key) • 50
OneClickWorkflowOrderDefaultPrefix (configuration key) • 75
OneClickWorkflowOrderSequenceLength (configuration key) • 76
OnlyOneMFCInputPerDispenseConfluence (configuration key) • 132
OperationUnlockedByAdminExcRisk (configuration key) • 108
OrderChangesExceptionRisk (configuration key) • 111

OrderNumberLength (configuration key) • 73

144

144

200

MFCBomPositionsUsageCheck (recipe structure check) •

MFCConfluenceOpenEndCheck (recipe structure check) •

OrdersAssignedByAdminExcRisk (configuration key) •	allowResumeOnlySameStation • 53
117	allowResumeOnlySameStation [ActivitySetName] • 5
OSCanceledWhilePhaseActiveExcRisk (configuration key)	allowResumeOnlySameUser • 53
• 108	allowResumeOnlySameUser [ActivitySetName] • 52
OutputSeparator (configuration key) • 85	ApplicationStart_ProductionExecutionClient/NameOf
OutputWeighingPhaseLibs (configuration key) • 132	ustomerLogo • 55
D	AutomaticLockTimeoutInSeconds • 60
P	ChangeUserOrStationChecks • 55
Part (buildtime object) • 17	clearPasswordsDelay • 66
PartClass (buildtime object) • 17	$Cost Center. Auto Consume Standalone Target Sublot \bullet 63$
PhaseExecutionSkippedExcRisk (configuration key) • 106	CostCenter.DispensingLabel • 63
PhaseLibUsableInStructureTypeCheck (recipe structure	CostCenter.LabelCount4TargetSublot • 64
check) • 146	CostCenter.Main • 64
PhaseRepairModeBlackList (configuration key) • 70	CostCenter.PalletContainerSublotLabel • 64
PhaseRepairModeExcRisk (configuration key) • 106	executionBatchRecordForm • 56
PhaseUIExtensionsPrefix (configuration key) • 71	executionCockpitExceptionForm • 56
prc_Additional_Filter_Attributes.customerName	executionCockpitForm • 56
(configuration key) • 158	executionExceptionForm • 56
prc_Additional_Filter_Attributes.readFromFile	executionNavigationForm • 57
(configuration key) • 158	executionPhaseActionForm • 57
prc_Standard_Filter_Attributes.customerName	executionStartCampaignWeighingForm • 57
(configuration key) • 158	initialSortCriteriaIsAlphabetic • 58
prc_Standard_Filter_Attributes.readFromFile	initialSortOrderIsAscending • 59
(configuration key) • 159	MAX_COUNT_OF_COMPLETED_PHASES • 59
PredefinedTextHeaderLength (configuration key) • 118	maxPECWidth • 67
PredefinedTextSeparator (configuration key) • 118	NavigatorViewActivity.useFlyweightRendering • 59
PrerequisitesOrderArchive (configuration key) • 162	Production.DispensingLabel • 65
PrerequisitesOrderPurge (configuration key) • 162	Production.Main • 65
PrivilegeParametersCheck (recipe structure check) • 146	Production.PalletContainerSublotLabel • 66
ProcessBom (buildtime object) • 17	restrictStartableWorkflowByStation • 60
Production Execution Client-specific configuration keys	ShowTickerPanel • 66
$<\!\! usage Type \!\!>\!\! . Auto Consume Standalone Target Sublot \bullet$	ShowUserNotification • 67
61	StandardMouseTouchScrollingBehavior • 60
<usagetype>.DispensingLabel • 61</usagetype>	StartableItemGroupEbrExecution • 54
<usagetype>.LabelCount4TargetSublot • 62</usagetype>	StartableItemGroups • 54
<usagetype>.Main • 62</usagetype>	StartableItemStartCampaignWeighing • 54
<usagetype>.PalletContainerSublotLabel • 62</usagetype>	StartableItemStartRecipeWeighing • 55
ActivitySetAutostartList • 52	StartupChecks • 55
AdministrativeTasks • 52	UPButton3rdLineContentPath • 57
allowMultipleInstances • 53	useOSK • 67
allowMultipleInstances [ActivitySetName] • 51	Production Execution Viewer specific configuration keys

$Application Start_Production Execution Viewer/Style She$	FlexibleStateModelChangeRequestBatchRecipes • 151
et • 151	$Flexible State Model Change Request Master Work flows \ \bullet \\$
ProductionExecutionViewer/pev_buttonConfiguration.c	151
ustomerName • 151	InlineWeighingPhaseLibs • 132
Universe/pev_openConfiguration.customerName • 152	MaterialParameterCustomAttributesHandler • 150
Production Management Client-specific configuration keys	OnlyOneMFCInputPerDispenseConfluence • 132
CSV_Separator • 50	OutputWeighingPhaseLibs • 132
lockedObjectIcon • 49	ps_ExpressionEditorShortcuts.customerName • 126
modifiedNodeIcon • 49	ps_ExpressionEditorShortcuts.readFromFile • 126
objectLockingRefreshInterval • 50	RecipeStructureChecks • 133
SFCForceTransitionTimeout • 50	red_buttonConfiguration.customerName • 126
SFCTestForceTransitionTimeout • 51	red_buttonConfiguration.readFromFile • 127
StartupChecks • 50	red_defaultLayoutSettings.customerName • 127
Production.DispensingLabel (configuration key) • 65	red_defaultLayoutSettings.readFromFile • 127
Production.Main (configuration key) • 65	$red_expressionContextFunctionConfiguration.customer$
Production.PalletContainerSublotLabel (configuration key)	Name • 128
• 66	red_ExpressionEditor.showErrorIconMargin • 128
ProductionExecutionViewer/pev_buttonConfiguration.cust	red_ExpressionEditor.showLineNumbers • 128
omerName (configuration key) • 151	red_materialConfiguration.customerName • 128
ProductionLine (buildtime object) • 17	red_materialConfiguration.readFromFile • 129
ProductionQueue (buildtime object) • 17	red_materialConfiguration.refreshAlways • 129
ProductionReviewedMandatory (configuration key) • 74	red_openConfiguration.customerName • 129
$ps_ExpressionEditorShortcuts.customerName\ (Data$	red_openConfiguration.readFromFile • 130
Manager, configuration key) • 155	red_openConfiguration.refreshAlways • 130
ps_ExpressionEditorShortcuts.customerName (Recipe and	red_universeConfiguration.customerName • 131
Workflow Designer, configuration key) • 126	red_universeConfiguration.readFromFile • 130
ps_ExpressionEditorShortcuts.readFromFile (Data	red_universeConfiguration.refreshAlways • 131
Manager, configuration key) • 155	SendEventPhaseLibs • 149
$ps_ExpressionEditorShortcuts.readFromFile\ (Recipe\ and$	StartupChecks • 125
Workflow Designer, configuration key) • 126	versionTransitionSignature • 150
PS-MRReport-Main (configuration key) • 91	WaitForEventOESPhaseLibs • 149
D	WeighingSequencePhaseLibs • 149
R	Recipe-, order-, and workflow-specific configuration keys
ReactivateOSIExcRisk (configuration key) • 111	$<\!\! usage Type \!\! > \!\! . Master Recipe Quantity Check Applicable \bullet$
Recipe and Workflow Designer-specific configuration	76
keys	$<\!\!usage Type\!\!>\!\!. Master Recipe Usage Type Structure Check$
ApplicationStart_RecipeDesigner/StyleSheet • 125	Applicable • 77
Confidential Object. Modifiable. When Creating Recipe Str	<usagetype>.MaterialParameterCountsCheckApplicab</usagetype>
ucture • 125	e • 77
Enable Unresolved External References In Approved CBBs	allowNonValidMasterRecipeForOrder • 71
• 131	BatchRecipeVersioningFSMName • 75

copyS88StructureFromMasterRecipeIntoControlRecipe ERPBomPackagingLevelsCheck • 138 allowNonValidMasterRecipeForOrder • 72 ERPBomQuantityCheck • 138 CostCenter.MasterRecipeQuantityCheckApplicable • ERPBomUniqueMFCPositionCheck • 138 77 GroupRootElementParametersCheck • 138 CostCenter. Master Recipe Usage Type Structure Check Apple Type StructureGroupValidityCheck • 138 plicable • 78 InputExpressionsCheck • 138 CostCenter.MaterialParameterCountsCheckApplicable • MasterRecipeMinMaxQuantityCheck • 139 78 MasterRecipePackagingInventoryLevelCheck • 139 CostCenters • 72 MasterRecipePackagingLevelsConsistencyCheck • 139 createSeparateControlRecipeFromValidMasterRecipe • MasterRecipeUsageTypeStructureCheck • 139 73 MaterialParameterAllowedWeighingMaterialTypeForIn DefaultOrderPrefix • 73 lineWeighingCheck • 140 MasterWorkflowVersioningFSMName • 75 MaterialParameterAllowedWeighingMethodsForInline OneClickWorkflowOrderDefaultPrefix • 75 WeighingCheck • 140 OneClickWorkflowOrderSequenceLength • 76 Material Parameter As Defined Planned Quantity And Toler OrderNumberLength • 73 ancesForInlineWeighingCheck • 140 ProductionReviewedMandatory • 74 Material Parameter As Defined Planned Quantity And ToleruseECBHazardSymbols • 74 ancesForOutputWeighingCheck • 140 useExtendedHazardSymbols • 74 MaterialParameterAsProducedRequiresTolerancesForIn useGHSData • 74 lineWeighingCheck • 140 RecipeStructureChecks (configuration key) • 133 MaterialParameterCountsCheck • 141 At Most One Autostartable Operation Under SimultaneousMaterialParameterDispenseCheck • 141 ForkCheck • 135 MaterialParameterEmptyMFCPositionForInlineWeighi BOMPositionNotEmptyCheck • 135 ngCheck • 141 CapabilityCombinationCheck • 136 MaterialParameterFixedQuantityCheck • 141 MaterialParameterNumericMFCPositionCheck • 141 CapabilityEscalationDurationsCheck • 136 CapabilityRisksMatchedByPrivilegeUsagesCheck • 136 MaterialParameterPackagingInventoryLevelCheck • CapabilityTriggerableHasChildCheck • 136 ChildrenCapabilititesCombinationCheck • 136 MaterialParameterPackagingLevelsConsistencyCheck • 142 DispenseFlagCapabilityParameterCheck • 136 EquipmentPropertyRequirementIdentifierCheck • 136 MaterialParameterPlannedPotencyUomCheck • 142 EquipmentPropertyRequirementsCheck • 137 MaterialParameterPlannedQuantityCheck • 142 EquipmentRequirementParameterCountsCheck • 137 MaterialParameterPlannedQuantityModeAsProducedCh eck • 142 Equipment Requirement Parameter Unique BOEP osition CMaterial Parameter Planned Quantity Mode For Dispense C heck • 142 EquipmentRequirementUniqueClassCheck • 137 EquipmentRuleExpressionCheck • 137 MaterialParameterPlannedQuantityModeNoneCheck • ERPBomAllPositionsUsedInActualBomCheck • 137 ERPBomContainsAllActualBomPositionsCheck • 137 Material Parameter Planned Quantity Mode Of Transfer In FERPBomItemConsistentMaterialParameterAttributesChorInlineWeighingCheck • 143 eck • 137 MaterialParameterQuantityUomCheck • 143

MaterialParametersWithSameMFCPositionConsistency Check • 143

MaterialParameterTargetWeightQuantityAndTolerance sCheck • 143

MaterialParameterTargetWeightQuantityUomCheck • 143

MaterialParameterTargetWeightToleranceCheck • 143

MaterialParameterTargetWeightToleranceUomCheck • 144

MaterialParameterToleranceUomCheck • 144

MaterialParameterWeighingMaterialTypeForInlineWei ghingCheck • 144

MaterialParameterWeighingSequenceCheck • 144

Material Parameter Weighing Sequence Usage Type Check

• 144

MFCBomPositionsUsageCheck • 144

MFCConfluenceOpenEndCheck • 144

MFCFinalOutputsGenericCheck • 145

MFCFinalOutputsMasterRecipeSpecificCheck • 145

MFCMergeToFinalOutputNotInDispenseUPCheck • 145

MFCPlannedQuantityEqualForCorrespondingTransfers Check • 145

MFCSwitchOpenEndCheck • 145

MFCTransferNotIntoDispenseUPCheck • 145

MFCUoMOfMaterialConvertionsDispenseCheck • 145

NestedGroupsCheck • 146

 $No Loop In Procedure Graph Check \bullet 146$

 $NoMFCOutputInInputOnlyMFCStructureCheck \bullet 146$

NullStepsCheck • 146

PhaseLibUsableInStructureTypeCheck • 146

PrivilegeParametersCheck • 146

ServerRunCapabilityPhaseCheck • 146

ServerRunCapabilityStationCheck • 147

SFCGraphCheck • 147

 $Transition Conditions Expressions Check \bullet 147$

TransitionConditionsOfTransitionsBelowXorCheck • 147

 $Trigger Phase Is Referenced Check \bullet 147$

TriggerPhaseReferenceCheck • 147

TriggerPhaseReferenceIdentifierCheck • 147

TriggerPhaseReferenceUniqueCheck • 148

WaitForEventOESPhaseAbortEnsuredCheck • 148

WeighAndDispenseFlagCheck • 148

WorkCenterStationAssignmentCheck • 148

WorkflowAppendableDuringProcessingPossibleCheck
• 148

WorkflowCapabilityParameterCheck • 148

WorkflowTypeCheck • 148

red_buttonConfiguration.customerName (configuration key) • 126

red_buttonConfiguration.readFromFile (configuration key)127

red_defaultLayoutSettings.customerName (configuration key) • 127

red_defaultLayoutSettings.readFromFile (configuration key) • 127

red_expressionContextFunctionConfiguration.customerNa me (configuration key) • 128

red_ExpressionEditor.showErrorIconMargin (configuration key) • 128

red_ExpressionEditor.showLineNumbers (configuration key) • 128

red_materialConfiguration.customerName (configuration key) • 128

red_materialConfiguration.readFromFile (configuration key) • 129

red_materialConfiguration.refreshAlways (configuration key) • 129

red_openConfiguration.customerName (configuration key)

red_openConfiguration.readFromFile (configuration key) •

red_openConfiguration.refreshAlways (configuration key)
• 130

red_universeConfiguration.customerName (configuration key) • 131

red_universeConfiguration.readFromFile (configuration key) • 130

red_universeConfiguration.refreshAlways (configuration key) • 131

Reference documents • 165

205

RegisterSerialEventHandler (configuration key) • 99	Equipment/HistorianAccessUser. <historianaccessserv< th=""></historianaccessserv<>
ReleaseOSILockExcRisk (configuration key) • 112	erName> • 96
RemovalWeighing.weighMode (configuration key) • 124	Equipment/LiveDataPassword • 96
ReplaceTargetSublotExcRisk (configuration key) • 112	Equipment/LiveDataUsername • 96
ReportDataDefinition (buildtime object) • 17	Equipment/PI_JDBC_DCA_OPTION • 97
ReportDesign (buildtime object) • 17	Equipment/PI_JDBC_Property_LogConsole • 97
ReportPreview.useAlwaysPagination (configuration key) •	Equipment/PI_JDBC_Property_LogFile • 97
92	Equipment/PI_JDBC_Property_LogLevel • 98
ResourceCondition (buildtime object) • 17	Equipment/PI_JDBC_URL • 98
ResourceRoute (buildtime object) • 17	Equipment/TagQualityGoodList • 98
$restrict Startable Workflow By Station \ (configuration \ key) \bullet$	expiryDateTransitionCheckEntitiesOption • 102
60	expiryDateTransitionCheckInterval • 102
$Reviewer Multiple Exceptions Texts \ (configuration \ key) \ \bullet$	ExternalEqmReceiver • 100
160	FallBackToJavaXCommLibrary • 99
Rockwell Automation Download Site • 165	FilterNULBytes • 99
RoomCleaningRules (configuration key) • 99	FlexibleStateModelBinding • 103
Room Trigger Status Transition Failure ExcRisk	FlexibleStateModelS88EquipmentClass • 100
(configuration key) • 108	FlexibleStateModelS88EquipmentEntity • 101
Route (buildtime object) • 17	FlexibleStateModelS88StatusGraph • 101
c	GeneratedEntityBarcodePrefix • 101
S	GeneratedEntityIdentifierPrefix • 101
S88ExceptionSequencerLength (configuration key) • 119	$Generated Entity Length Of Numeric Part Of Identifier \bullet$
S88-specific equipment (configuration keys)	102
Equipment/AIServerMessagingTimeoutInSeconds • 92	$Identify Already Bound Eqm From Appended Work flow \ \bullet \\$
Equipment/DefaultAutomationIntegrationServerName •	103
93	ImageNameOfEQMReportLogo • 100
Equipment/DefaultHistorianAccessServerName • 93	MessageTimeToLive4AI • 98
Equipment/DefaultHistorianAIServerName • 93	RegisterSerialEventHandler • 99
Equipment/DefaultHistorianServerName • 93	RoomCleaningRules • 99
Equipment/defaultLabelPrinter • 94	show Equipment List Entities Status Option • 103
Equipment/DefaultLiveDataAreaPath • 94	Station/defaultLabelPrinter • 104
Equipment/DefaultTagUpdateRateInMilliseconds • 94	Station/stationBarcode.prefix • 104
Equipment/equipmentEntityBarcode.prefix • 94	Station/stationLabel.reportDesign • 104
Equipment/equipmentEntityLabel.reportDesign • 95	Station/stationLabel.showPrinterSelection • 104
Equipment/equipment Entity Label. show Printer Selection	Station/stationLabel.subroutine • 105
• 95	Station/station Label. use Preview Window For Touch screen with the property of the property
Equipment/equipmentEntityLabel.subroutine • 95	n • 105
Equipment/equipment Entity Label. use Preview Window F	$Save Read Only Equipment ExcRisk\ (configuration\ key) \ \bullet$
orTouchscreen • 95	113
Equipment/HistorianAccessPassword. <historianaccess< td=""><td>selectable Exceptions For Comment Linking Error Limit</td></historianaccess<>	selectable Exceptions For Comment Linking Error Limit
ServerName> • 96	(configuration key) • 160

SemanticProperty (buildtime object) • 17 SemanticPropertySet (buildtime object) • 17 SendEventPhaseLibs (configuration key) • 149 SequentialPhaseCompletionUserAlreadySignedExcRisk (configuration key) • 108 ServerRunCapabilityPhaseCheck (recipe structure check) • ServerRunCapabilityStationCheck (recipe structure check) 147 ServicesConfigFile (configuration key) • 38 SFCForceTransitionTimeout (configuration key) • 50 SFCGraphCheck (recipe structure check) • 147 SFCTestForceTransitionTimeout (configuration key) • 51 shortWaitBeforeNextPoll (configuration key) • 69 showEquipmentListEntitiesStatusOption (configuration key) • 103 ShowTickerPanel (configuration key) • 66 showUserNotification (configuration key) • 67 simpleWeighingLabel.reprint.showPreview (configuration kev) • 122 SmartSearch.include Archived Generated Entities(configuration key) • 156 SmartSearch.includeNonArchivedGeneratedEntities (configuration key) • 156 SpecialUOMs (configuration key) • 40 StandardMouseTouchScrollingBehavior (configuration key) • 60 StartableItemGroupEbrExecution (configuration key) • 54 StartableItemGroups (configuration key) • 54 StartableItemStartCampaignWeighing (configuration key) • 54 StartableItemStartRecipeWeighing (configuration key) • StartupChecks (DM, configuration key) • 153 StartupChecks (PEC, configuration key) • 55 StartupChecks (PMC, configuration key) • 50

StartupChecks (PRC, configuration key) • 157 StartupChecks (RWD, configuration key) • 125

Station/defaultLabelPrinter (configuration key) • 104

Station/stationBarcode.prefix (configuration key) • 104

Station (buildtime object) • 17

Station/stationLabel.reportDesign (configuration key) • 104
Station/stationLabel.showPrinterSelection (configuration key) • 104
Station/stationLabel.subroutine (configuration key) • 105
Station/stationLabel.usePreviewWindowForTouchscreen (configuration key) • 105
StyleSheet (configuration key) • 47
SublotBarcodeTemplates (configuration key) • 85
SublotIdentificationChecks • 86
SuspendedTransactionTimeout (configuration key) • 38

т

TemplateObserverRecoveryWorkerIntervalInMinutes
(configuration key) • 70

TestDefinition (buildtime object) • 17

TooLongAlarmExceptionRisk (configuration key) • 119

TouchScreen.MaximumDelayForDoubleClick
(configuration key) • 49

TransactionTimeout (configuration key) • 38

TransitionConditionsExpressionsCheck (recipe structure

TransitionConditionsExpressionsCheck (recipe structure check) • 147

TransitionConditionsOfTransitionsBelowXorCheck (recipe structure check) • 147

Treatment ID use
enableTreatmentIDUIExtensions • 163
TreatmentIDSupport • 164

TreatmentIDSupport (configuration key) • 164

TriggerPhaseIsReferencedCheck (recipe structure check) • 147

TriggerPhaseReferenceCheck (recipe structure check) • 147

TriggerPhaseReferenceIdentifierCheck (recipe structure check) • 147

TriggerPhaseReferenceUniqueCheck (recipe structure check) • 148

TrustedPackages (configuration key) • 41

U

Unit test - overriding configuration keys • 22
UnitProcedureAbortedByAdminExcRisk (configuration key) • 112

UnitProcedureFinalAbortByAdminExcRisk (configuration	ApplicationStart_ProductionManagementClient/hideMe
key) • 113	nu • 45
UnitProcedureFinishWithAbortedByAdminExcRisk	$Application Start_Production Management Client/on line$
(configuration key) • 113	HelpPrefix • 46
UnitProcedureReactivatedByAdminExcRisk	$Application Start_Production Management Client/Style Sh$
(configuration key) • 113	eet • 46
Universe/pev_openConfiguration.customerName	configureTabSequence • 47
(configuration key) • 152	doExitOnLogout • 46
UnloadOrderFromEBRExcRisk (configuration key) • 109	hasTouchScreen • 48
UoMsOfPotency (configuration key) • 41	hideMenu • 46
UPButton3rdLineContentPath (configuration key) • 57	mes_DialogMessageBox • 47
useECBHazardSymbols (configuration key) • 74	StyleSheet • 47
useExtendedHazardSymbols (configuration key) • 74	TouchScreen.MaximumDelayForDoubleClick • 49
useGHSData (configuration key) • 74	UserGroup (buildtime object) • 17
useOSK (configuration key) • 67	V
User	V
Buildtime object • 17	Version information • 14
User interface-specific configuration keys	versionTransitionSignature (configuration key) • 150
acceleratorKeysMessagePack • 42	W
ApplicationStart/StyleSheet • 42	
ApplicationStart_ExceptionDashboard/StyleSheet • 43	WaitForEventOESPhaseAbortEnsuredCheck (recipe
ApplicationStart_ProductionExecutionClient/accelerato	structure check) • 148
rKeysMessagePack • 43	WaitForEventOESPhaseLibs (configuration key) • 149
ApplicationStart_ProductionExecutionClient/AlternateS	WarehouseIntegrationMessageReceiver (configuration
tyleSheet • 43	key) • 41
$Application Start_Production Execution Client/Applicatio$	WarehouseIntegrationMessageSender (configuration key) •
nStart_MainIcon • 43	41
$Application Start_Production Execution Client/do Exit On$	WarehouseManagementConnected (configuration key) •
Logout • 44	42
ApplicationStart_ProductionExecutionClient/hideMenu • 44	WeighAndDispenseFlagCheck (recipe structure check) • 148
ApplicationStart_ProductionExecutionClient/onlineHel	WeighingSequencePhaseLibs (configuration key) • 149
pPrefix • 44	WithRiskClassNone (configuration key) • 68
ApplicationStart_ProductionExecutionClient/StyleSheet	WorkCenter (buildtime object) • 17
• 44	WorkCenterStationAssignmentCheck (recipe structure
ApplicationStart_ProductionManagementClient/acceler	check) • 148
atorKeysMessagePack • 45	Workflow Appendable During Processing Possible Check
ApplicationStart_ProductionManagementClient/Applic	(recipe structure check) • 148
ationStart MainIcon • 45	WorkflowCapabilityParameterCheck (recipe structure
ApplicationStart_ProductionManagementClient/doExit	check) • 148
OnLogout • 45	Workflow-Main (configuration key) • 91
$\boldsymbol{\omega}$	

FT PharmaSuite® - Technical Manual Configuration and Extension - Volume 4

•

WorkflowTypeCheck (recipe structure check) • 148 WorkInstruction (buildtime object) • 17