


VERSION HISTORY


Version	Date	Revision
1.0.0	April 30, 2026	Created

INTEGRATION OF BLUEPRINT SENSORS INTO THE IFM MIOTY GATEWAY

Step 1: Commission the gateway. Follow the instructions provided by ifm. You should see the following screenshot below.

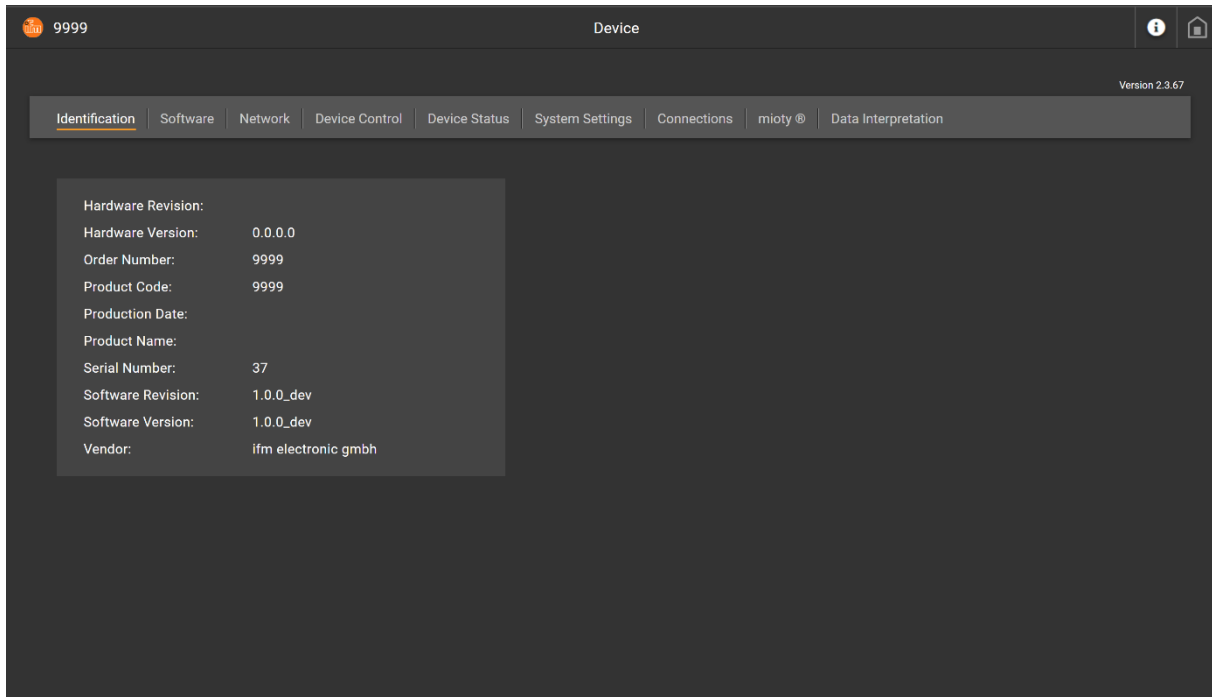


Step 2: Navigate to the “Data Interpretation” tab and then to the “Blueprint” tab.

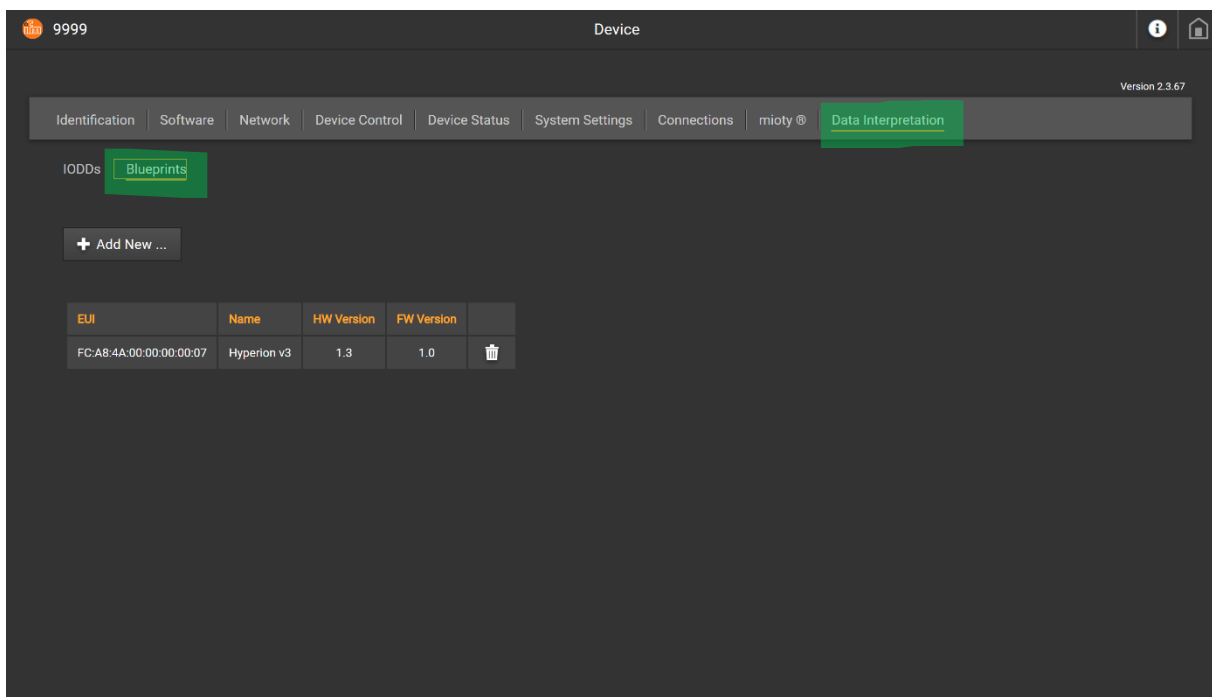


Step 3: Download the Blueprint for your selected sensor. To do this, go to <https://docs.sentinum.de> and search for your sensor and the corresponding

Blueprint. In this case, we are setting up a Juno temperature and relative humidity sensor

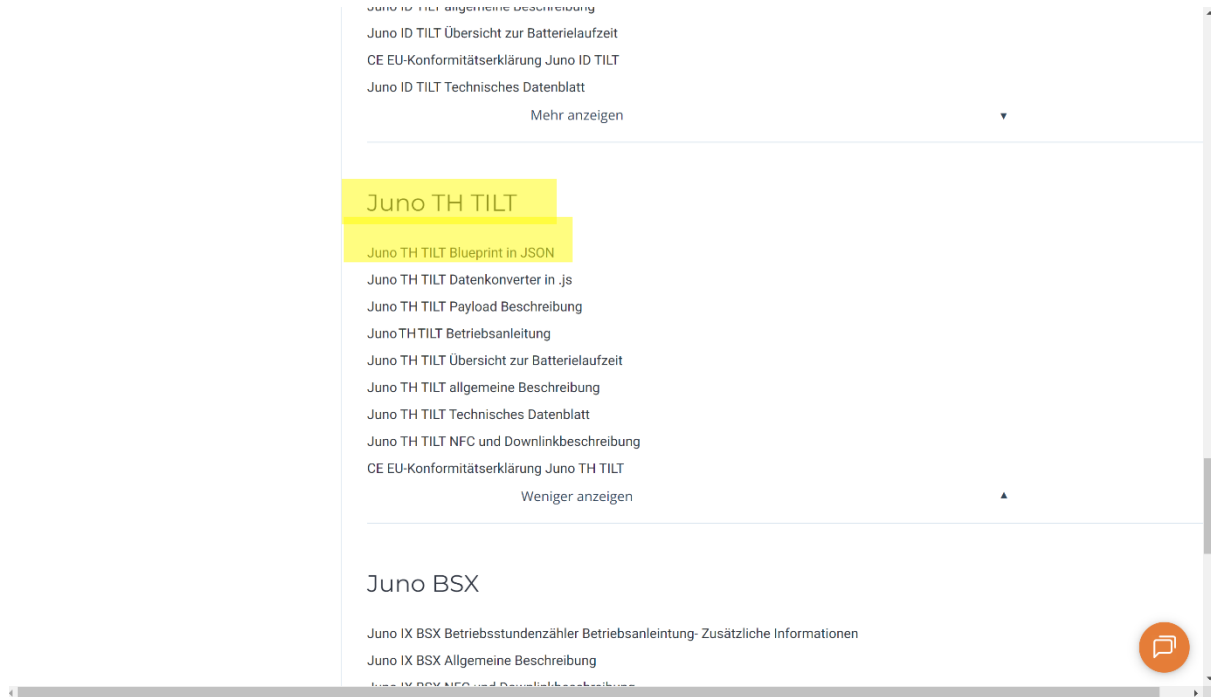


Step 4: Click on the entry and then click the JSON File button. (Alternatively, a .txt file can be downloaded further down)

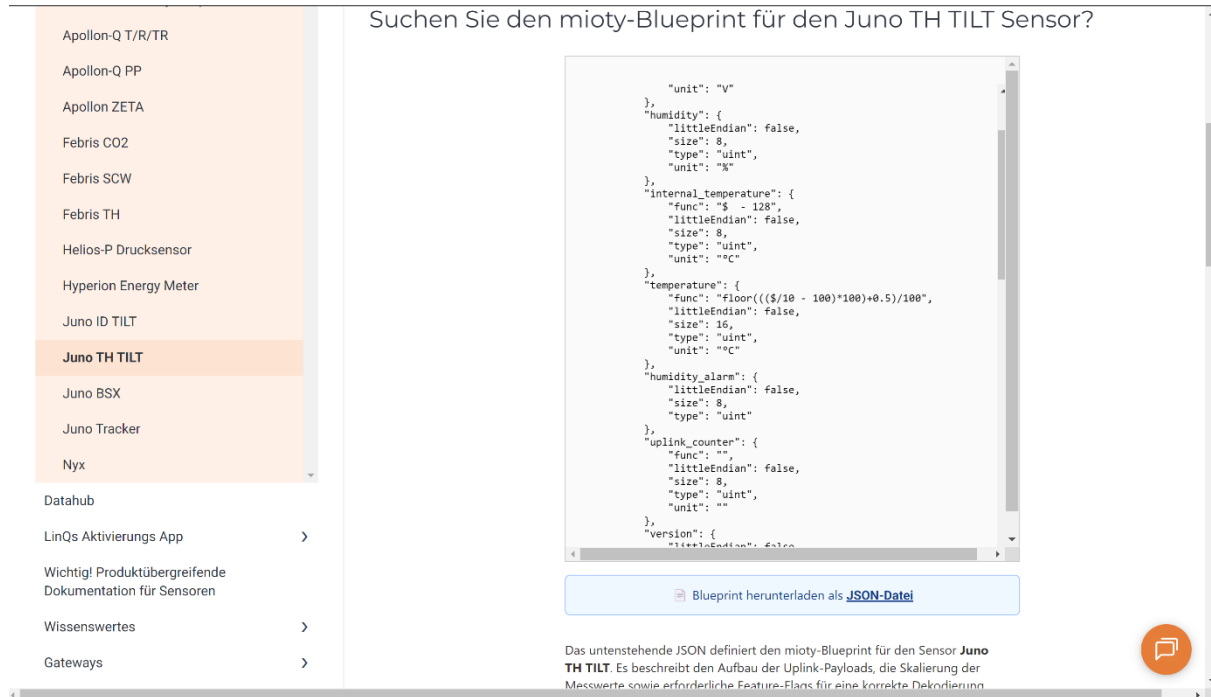


Step 5: The blueprint should now open. Right-click to save this file to a folder (Save As...).

```
{
  "component": {
    "bat_voltage": {
      "func": "$/1000",
      "littleEndian": false,
      "size": 16,
      "type": "uint",
      "unit": "V"
    },
    "humidity": {
      "littleEndian": false,
      "size": 8,
      "type": "uint",
      "unit": "%"
    },
    "internal_temperature": {
      "func": "$ - 128",
      "littleEndian": false,
      "size": 8,
      "type": "uint",
      "unit": "°C"
    },
    "temperature": {
      "func": "floor(((($/10 - 100)*100)+0.5)/100)",
      "littleEndian": false,
      "size": 16,
      "type": "uint",
      "unit": "°C"
    },
    "humidity_alarm": {
      "littleEndian": false,
      "size": 8,
      "type": "uint"
    },
    "uplink_counter": {
      "func": "",
      "littleEndian": false,
      "size": 8,
      "type": "uint",
      "unit": ""
    },
    "version": {
      "littleEndian": false,
      "size": 4,
      "type": "uint",
      "unit": ""
    }
  },
  "meta": {
    "firmwareVersion": "1.0",
    "hardwareVersion": "1.0",
    "name": "Juno"
  }
}
```

Step 6: Now return to the gateway interface. Here, click on the “Data Interpretation” tab and then on the “Blueprint” tab, and click the “+ Add New...” button. Upload the saved blueprint file as a .json file.

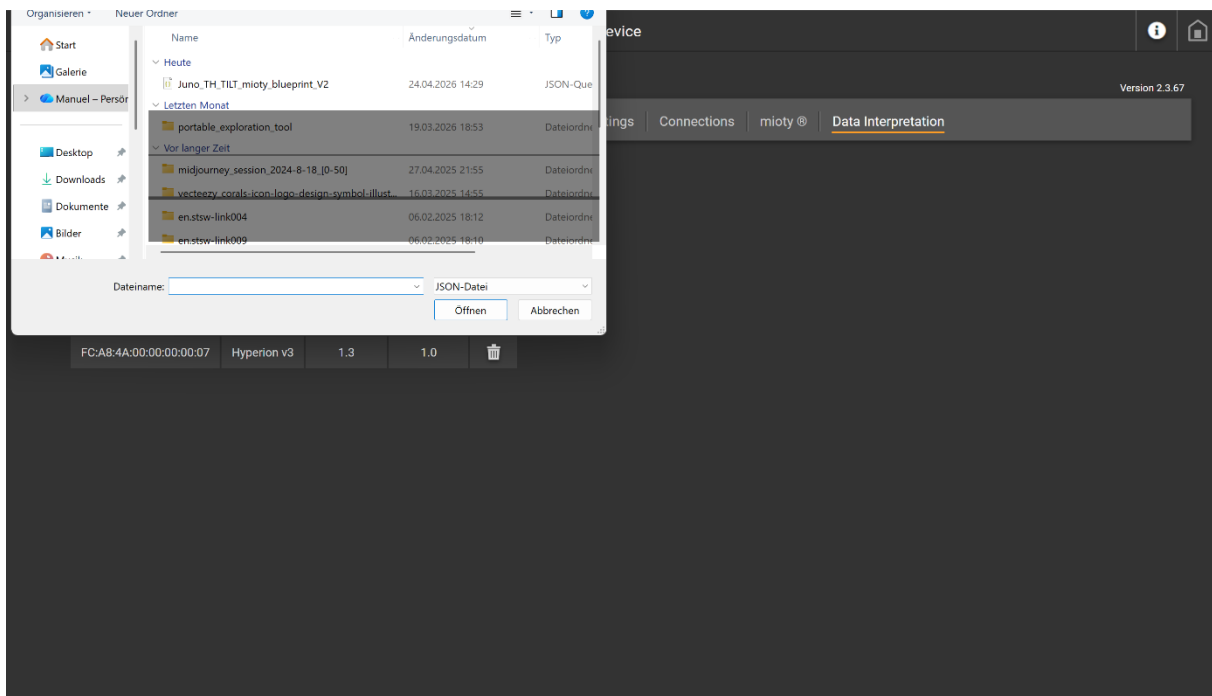

Step 7: You should now see a newly created blueprint (in this case, Juno). An EUI is automatically assigned to the blueprint. Copy this EUI and save/copy it. We'll need it later.

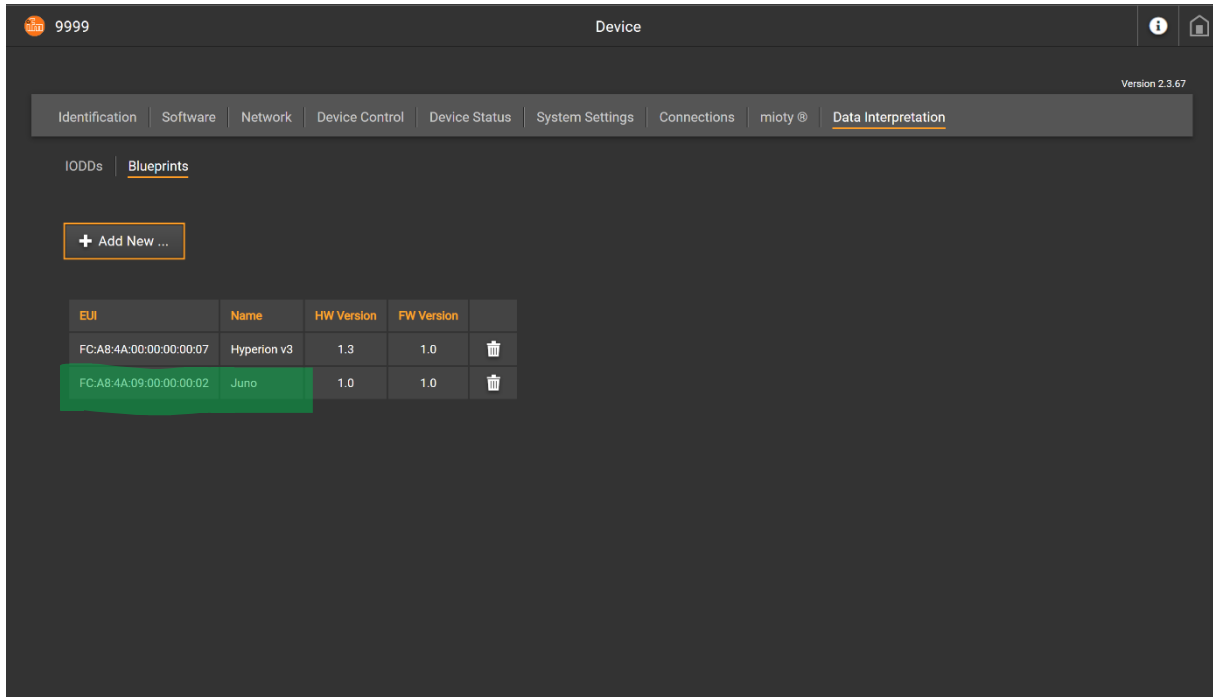

9999 Device

Version 2.3.67


Identification Software Network Device Control Device Status System Settings Connections mioty @ Data Interpretation

IODDs Blueprints

+ Add New ...

EUI	Name	HW Version	FW Version	
FC:A8:4A:00:00:00:00:07	Hyperion v3	1.3	1.0	
FC:A8:4A:09:00:00:00:02	Juno	1.0	1.0	

Step 8: Let's now integrate the sensor. To do this, navigate to the mioty tab on the gateway interface and click "+ Attach New."

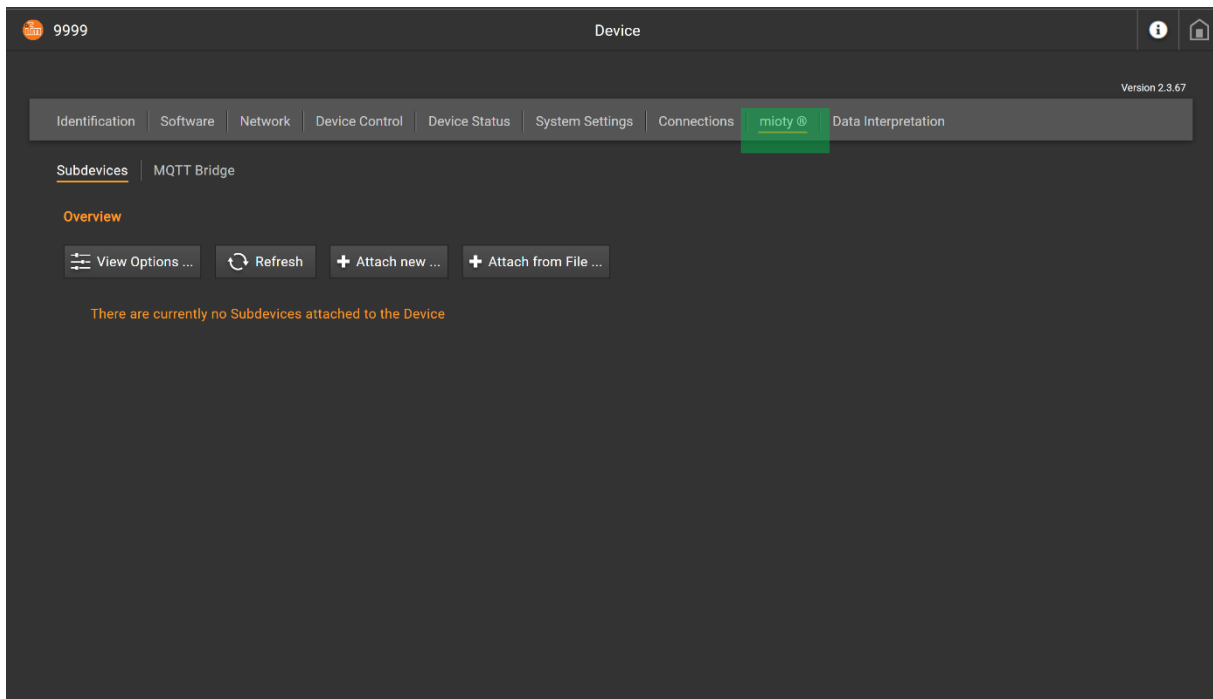

9999 Device

Version 2.3.67

Identification Software Network Device Control Device Status System Settings Connections mioty @ Data Interpretation

Subdevices MQTT Bridge

Overview


View Options ... Refresh + Attach new ... + Attach from File ...

There are currently no Subdevices attached to the Device


Step 9: The following window will now appear. Click the "Blueprint" checkbox at the top so that you see the "Blueprint EUI" input field at the bottom. Enter the required information here and then click "OK"

You can find this in the packaging as a QR code, or you can conveniently request it as a .csv file at info@sentinum.de


IMPORTANT: You will need the Blueprint EUI again for this step.

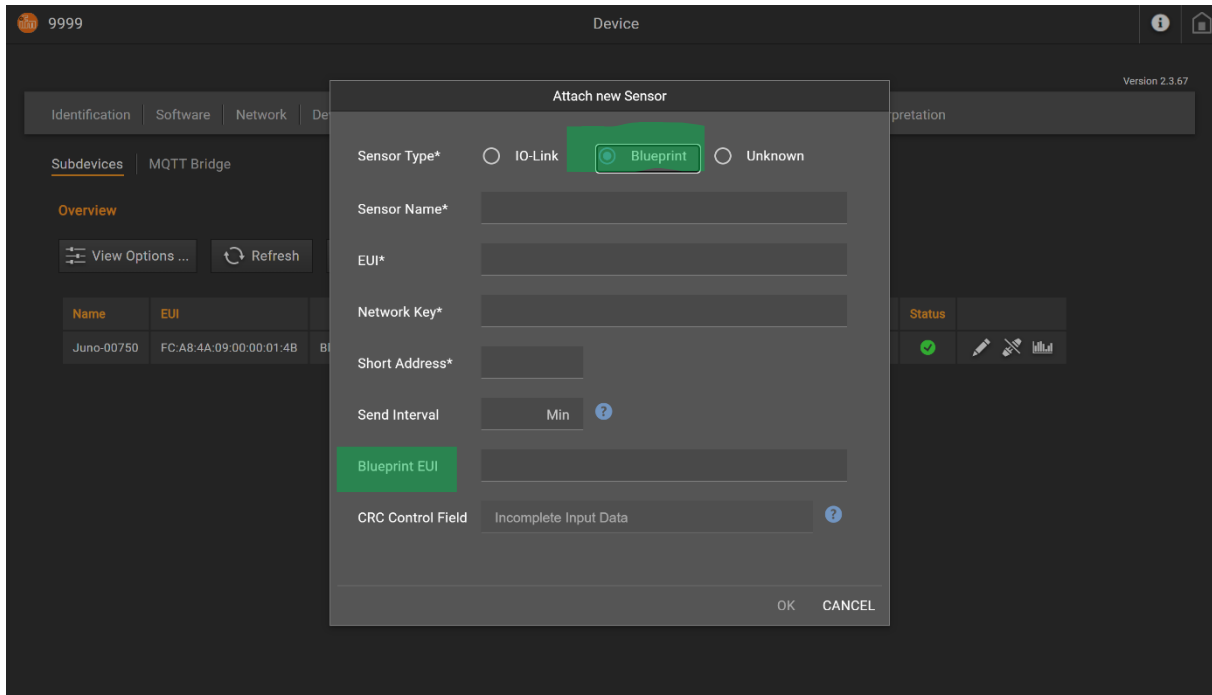

Step 10: You have now successfully added the sensor.

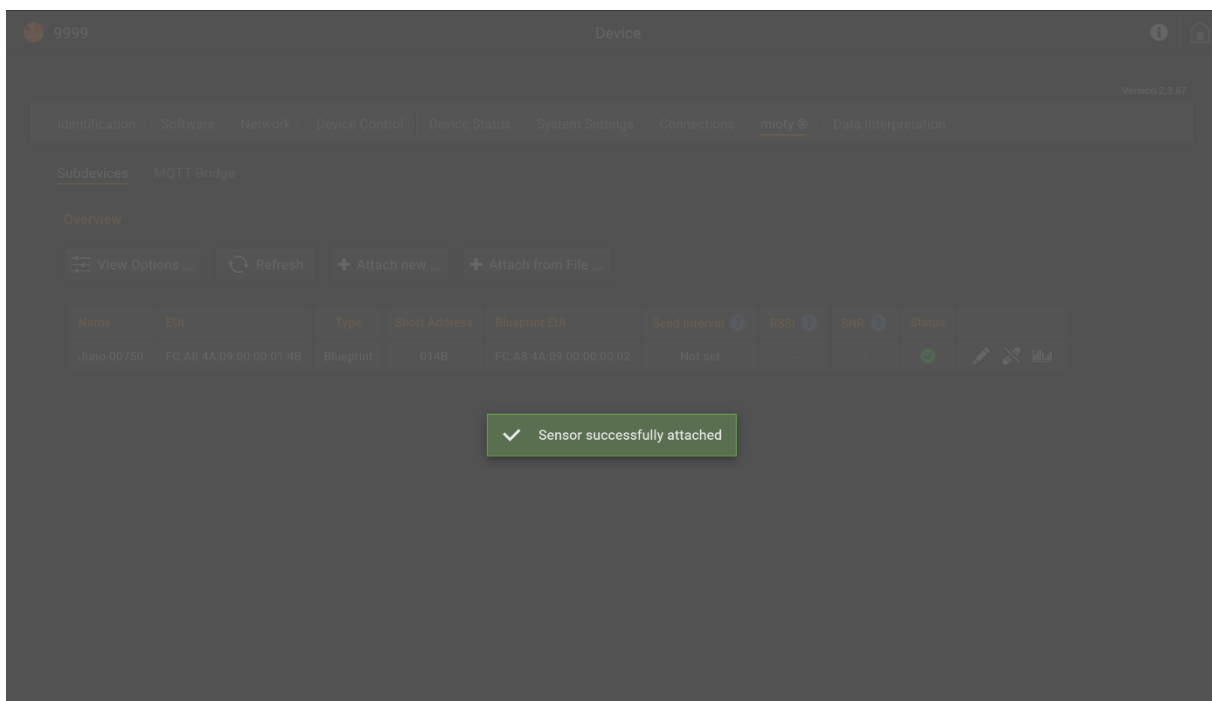


Step 11: You should now see the sensor with all the necessary information.

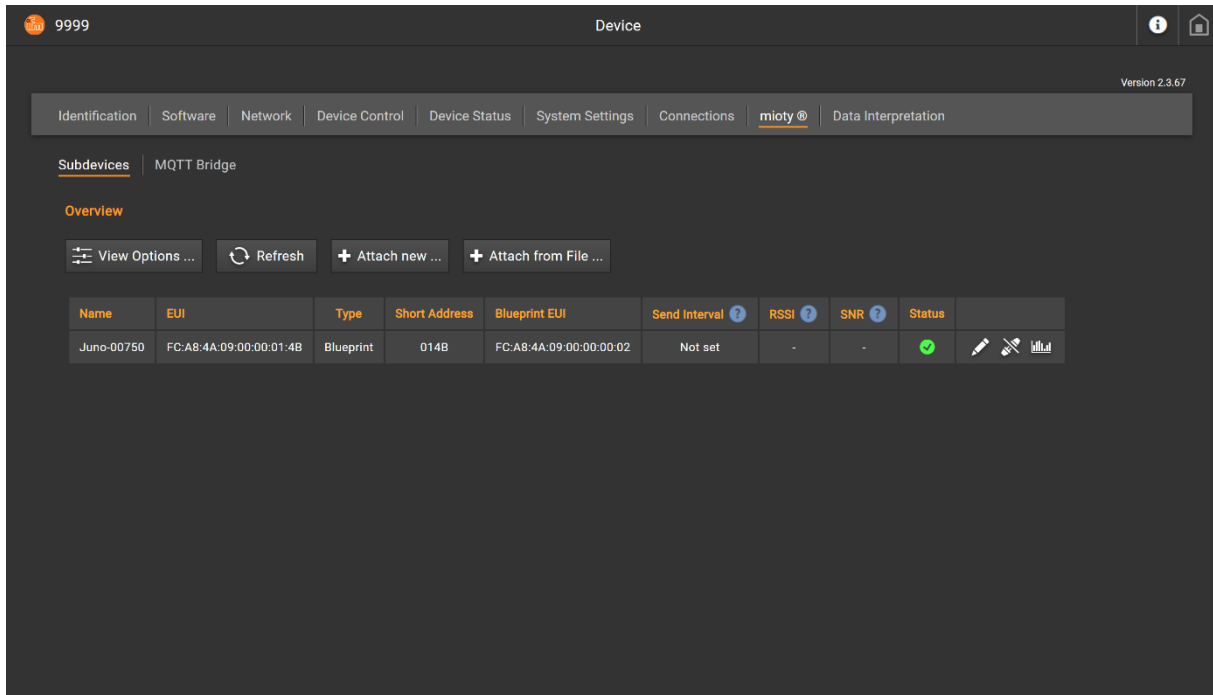

The screenshot shows the 'Device' page for '9999' in the Sentinum interface. The 'mioty @' tab is selected. Below the navigation bar, there are buttons for 'View Options ...', 'Refresh', 'Attach new ...', and 'Attach from File ...'. A table displays the sensor information:

Name	EUI	Type	Short Address	Blueprint EUI	Send Interval ?	RSSI ?	SNR ?	Status	
Juno-00750	FC:A8:4A:09:00:00:01:4B	Blueprint	014B	FC:A8:4A:09:00:00:00:02	Not set	-	-	OK	  


Step 11: Activate the sensor now using a magnet or NFC. Wait a moment, then click the “Refresh” button. You should then see the following values.

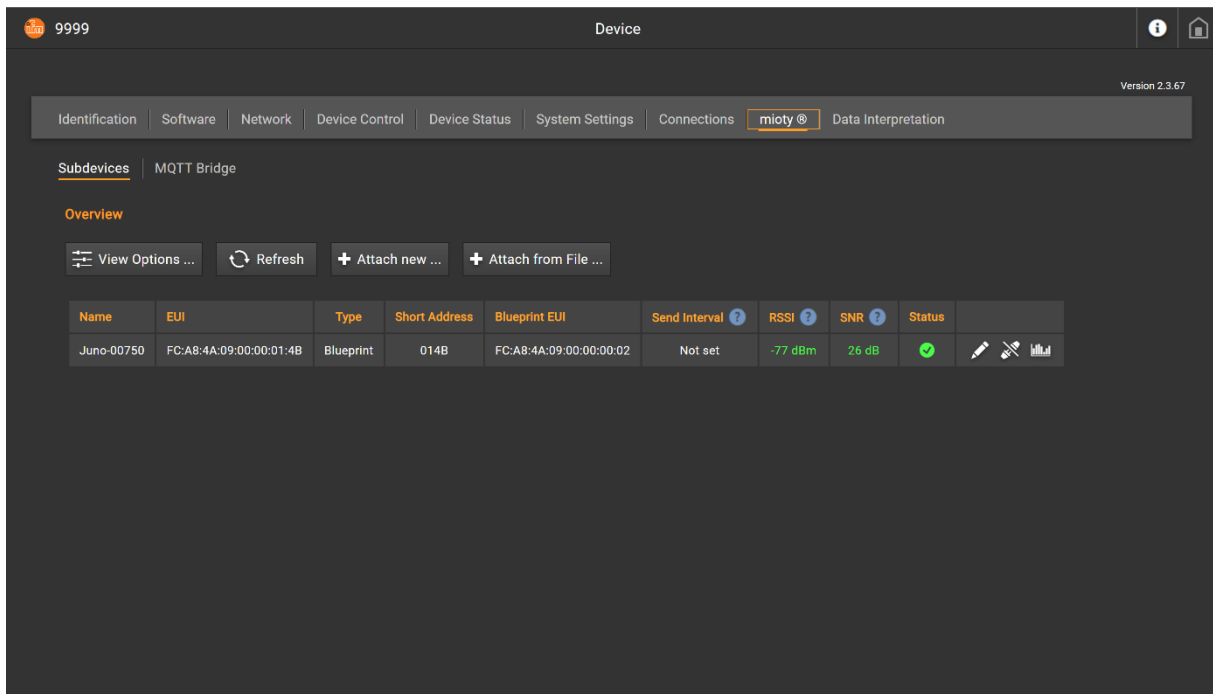

The screenshot shows the 'Device' page for '9999' in the Sentinum interface. The 'mioty @' tab is selected. Below the navigation bar, there are buttons for 'View Options ...', 'Refresh', 'Attach new ...', and 'Attach from File ...'. A table displays the sensor information with updated values:

Name	EUI	Type	Short Address	Blueprint EUI	Send Interval ?	RSSI ?	SNR ?	Status	
Juno-00750	FC:A8:4A:09:00:00:01:4B	Blueprint	014B	FC:A8:4A:09:00:00:00:02	Not set	-77 dBm	26 dB	OK	  

Step 12: By clicking on the graph on the right in the Actions column, you can view the sensor values.

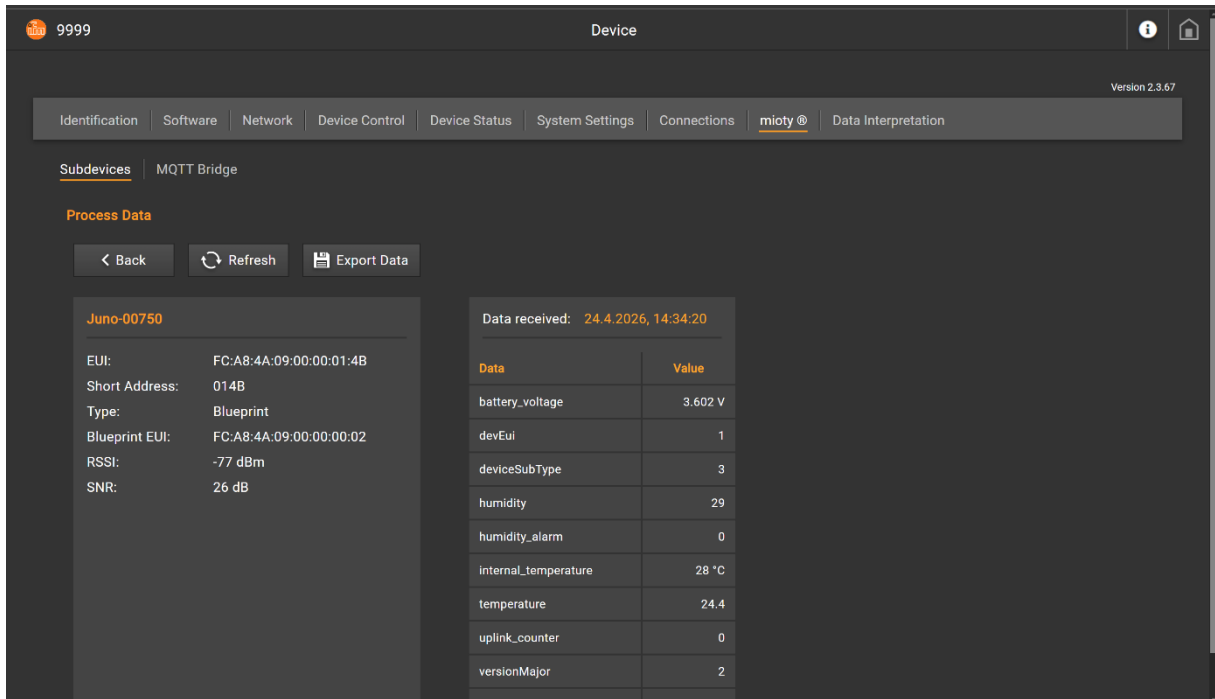

The screenshot shows the Sentinum web interface for a device named 'Juno-00750'. The interface includes a top navigation bar with tabs for Identification, Software, Network, Device Control, Device Status, System Settings, Connections, **mioty**, and Data Interpretation. Below this, there are sub-tabs for Subdevices and MQTT Bridge. The main content area is titled 'Process Data' and contains a 'Back' button, a 'Refresh' button, and an 'Export Data' button. The device information section displays the following details:

- EUI: FC:A8:4A:09:00:00:01:4B
- Short Address: 014B
- Type: Blueprint
- Blueprint EUI: FC:A8:4A:09:00:00:00:02
- RSSI: -77 dBm
- SNR: 26 dB

To the right, a table titled 'Data received: 24.4.2026, 14:34:20' lists various sensor values:

Data	Value
battery_voltage	3.602 V
devEui	1
deviceSubType	3
humidity	29
humidity_alarm	0
internal_temperature	28 °C
temperature	24.4
uplink_counter	0
versionMajor	2