

How to perform complete offline diagnostic tests using HP SPP

1. Download current SPP release from the HP Site as bootable image.

http://h18013.www1.hp.com/products/servers/service_packs/en/index.html

The latest version is 2013.09.0(B):

Name: 2013.09.0(B), Full ISO Image 2.93 GB

MD5 Checksum: 77c78141ee98b44a902005d1018abffb

HP Passport is REQUIRED to download the image

SPP ISO should be copied to **USB Flash Drive or DVD** with using **HP USB-Key Utility**.

HP USB-Key Utility is the part of the SPP and located inside of SPP:


/usb/hpusbkey/hpusbkey.exe

Permanent link to the HP USB-Key Utility on HP Site:


<http://h18004.www1.hp.com/products/servers/management/systemsoftware/utilities.html>

Also you can use iLO Remote Media for booting the server from the ISO.

2. Boot your server from the SPP in **interactive Mode** .

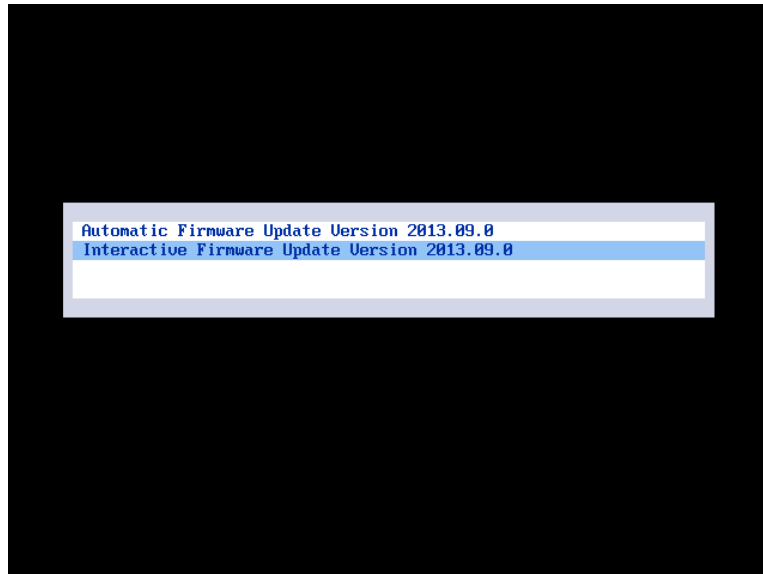

3. Go to **Insight Diagnostics**:

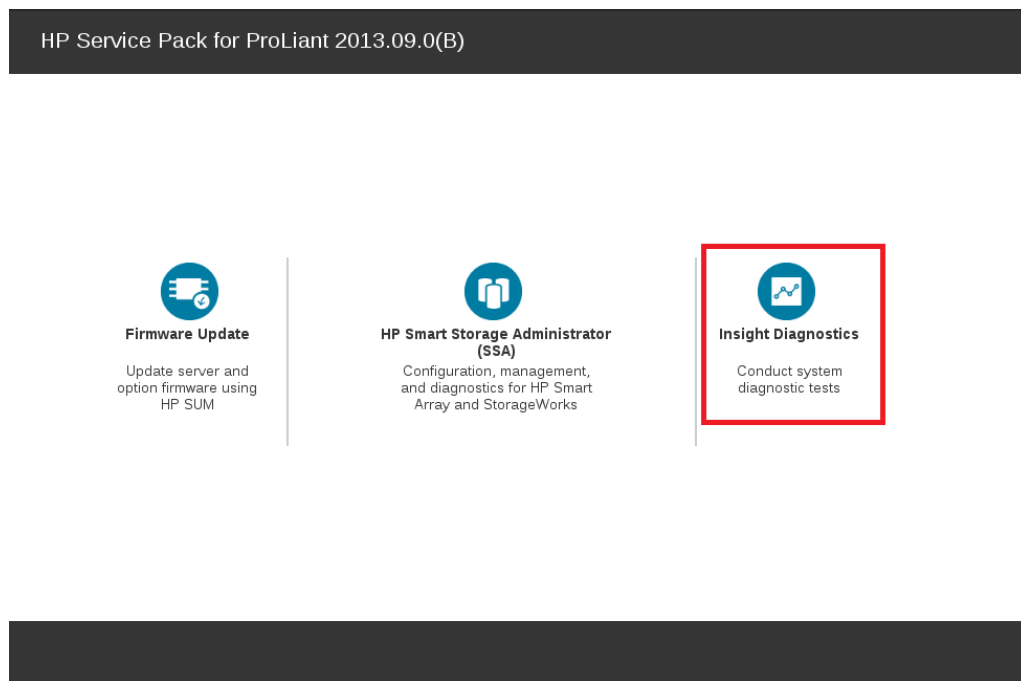

4. Go to **Test**

5. Go to **Complete Test Tab**

Survey **Test** Status Log Admin Help

Diagnostics Test Quick Test **Complete Test** Custom Test Reload About

Select a device from the list and press "Begin Testing" to run a complete test of the selected device.
Select "All Devices" to run a complete test of all devices.
You may also schedule this test to run at a specified time.

Test Mode: ☐ Interactive **Duration of Test:** ☒ Number of Loops
☒ Unattended ☐ Total Test Time(minutes)
☐ Stop on First Error

Select a device to test:

☒ All Devices

- ☒ Serial Port 1 - (Address 2F8h)
- ☒ Serial Port 0 - (Address 3F8h)
- ☒ USB Device 1 - USB 1.10 Controller UHCI
- ☒ USB Device 5 - USB 2.00 EHCI Host Controller
- ☒ Total memory - Test all available memory
- ☒ CMOS Device - CMOS non-volatile memory
- ☒ Processor Package 1 -
- ☒ Processor Subsystem -
- ☒ PCI Bus 0 - Device
- ☒ PCI Bus 2 - Device

[Exit Diagnostics](#) [Begin Testing](#)

6. Set **Number of loops** or **Total Test Time** value requested by HP Support

If nothing mentioned by HP Support= set Number of Loops to 7

7. Set type of Test mode to Unattended.

8. Check to test ALL Devices

9. Click Begin Testing

10. After all test completed go to Log and choose Test Log tab

Survey Test Status **Log** Admin Help

Log

TestLog Error Log Reload About

✔ Denotes passed tests ⚠ Denotes tests that passed with warnings ✖ Denotes failed tests

Device, Test	Number of Times Tested	Failed Count	Test Time	Last Completion	
Processor Subsystem - L1 Cache Coherency Test	2	0	00:00:28	10/24/2013 8:21:20 PM	✔
CMOS Device - Random Data Pattern Test	224	0	< 1 ms	10/24/2013 8:24:41 PM	✔

Exit Diagnostics Clear Logs **Save Logs**

Note: If you are accessing the server from remote location, then you can make use of Virtual media feature of iLO. First you need to connect a USB key to your computer, then launch iLO of your Gen8 Server from the same computer.

From iLO, launch Remote Console, click Virtual Media, then select Floppy/USB key and select the drive letter of the USB key connected.

11. Click Save and send Test log to **HP Support**

Permanent link to the document:

ftp://iss_tool:{IU7yy+Q@ftp.usa.hp.com/OfflineTestLogSPP.pdf