
BLOCK WALL BW01 - COLUMN LIGHTS: DRILL AND CUT PATTERN FOR THE TOP COURSE OF EACH COLUMN

PRELIMINARY - CHECK AGAINST YOUR BLOCKS AND WITH THE ELECTRICIAN


13 NOV 2026 · Havit Curva on both faces of all 7 columns (14 lights), centred on each face, bottom of the light on the bed joint under the top block · 200 series blocks 390 x 190 x 190, two a course, turned each course · cut the blocks on the ground before laying

1. COLUMN FACE - FRONT OR BACK, SAME ON EVERY COLUMN - 1:4

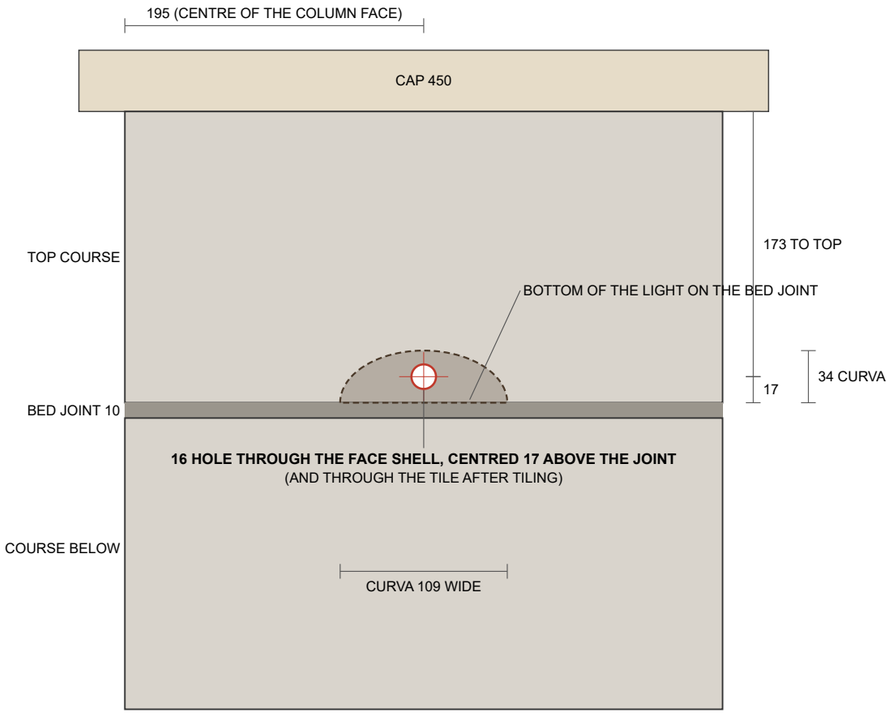

CUT AWAY, BOTTOM 50 OF THE BLOCK ONLY
DRILLED THROUGH, 30
16 HOLE IN THE FACE, BEHIND THE LIGHT
25 CONDUIT STUB, FRONT HALF (AS BUILT)
HOLLOW CORE

2. TOP COURSE, PAIR RUNNING ALONG THE WALL - PLAN 1:6

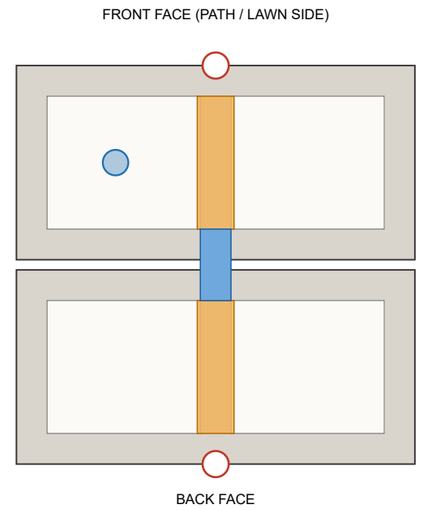


A CUT THE BOTTOM 50 OF THE MIDDLE WEB
OUT, FULL DEPTH, IN BOTH BLOCKS

B DRILL 30 THROUGH BOTH TOUCHING SHELLS
AT THE CENTRE, 25 ABOVE THE BOTTOM

C 16 HOLE IN EACH FACE (PART 1)

3. TOP COURSE, PAIR RUNNING FRONT TO BACK - PLAN 1:6

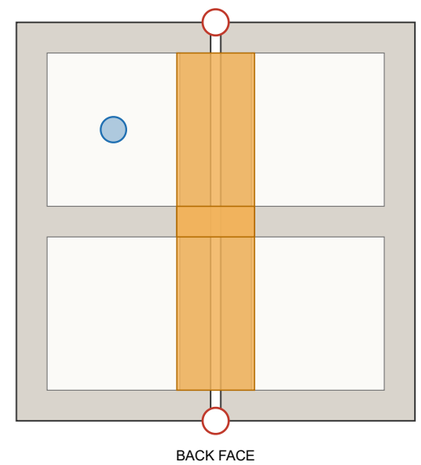

A CUT THE BOTTOM 50 OFF BOTH TOUCHING SIDE
SHELLS, FULL LENGTH - A CHANNEL FRONT TO
BACK DOWN THE CENTRE OF THE COLUMN

B CUT THE BOTTOM 50 OF EACH MIDDLE WEB
WHERE IT MEETS THE CHANNEL

C 16 HOLE IN EACH FACE ON THE JOINT
BETWEEN THE TWO BLOCK ENDS (PART 1)

WHY THE CUTS ARE NEEDED

The light is centred on each column face. Behind that point there is no hollow core: with the pair running along the wall it is the block's middle web; with the pair running front to back it is the joint between the two blocks. The cuts open a passage 50 high at the bottom of the top course, down the centre line of the column from the front face to the back face, joining the core that holds the stub to both light holes. The face shells stay whole except for the 16 holes.

WHICH WAY THE TOP COURSE RUNS

Column	Courses (200 each) from the footing	Top course runs
C1	7	same way as the first course
C2	9	same way as the first course
C3	9	same way as the first course
C4	9	same way as the first course
C5	8	TURNED from the first course
C6	9	same way as the first course
C7	9	same way as the first course

From the footing tops in the 3D model; count on site. Use part 2 or part 3 to match the way the top course actually runs.

STEPS FOR EACH COLUMN (2 BLOCKS)

1. Before laying the top course, set out the two blocks as they will sit and mark FRONT, BACK and the centre line (195 from the column's side) on both faces.
2. Cut the passage (orange) with a grinder and bolster: the bottom 50 only, as shown in part 2 or part 3. Keep the face shells whole.
3. Drill the 16 hole in each face (red): on the centre line, 17 above the bottom of the block (its edge 9 above the bottom). Use a sharp masonry bit, rotary only (no hammer), from the face side, to avoid spalling the bottom edge. Pair along the wall only: drill the 30 hole (blue) through both touching shells at the centre, 25 above the bottom.
4. Bring flexible 20 conduit from the 25 stub up the core into the passage and out to each 16 hole before core fill, so the core fill cannot block the route. The electrician decides the cable and where the joints are; joints must stay reachable, never buried in core fill.
5. Tile, then drill the tile at the same point with a diamond core bit. Fit the Curva base plate over the hole, bottom on the joint line, and fix it as Havit's sheet says.
6. The hole sits 17 above the joint because the Curva is only 34 high; the hole must stay hidden behind it. Hold the base plate on a spare block first and check its cable entry lines up; move the hole up to 25 above the joint at most.

Not checked: the shell and web thickness of your blocks (drawn about 30); the Curva base plate's own cable entry; the light's distance from the 240 V supply (electrician - see the wiring schematic).