


ATtiny1616

20-pin SOIC | Top view | GrrCon badge reference

Orient the badge: printed text upright, battery holder below the chip.

Pin 1 dot at upper-left. Numbers run counterclockwise. Diagram not to scale.

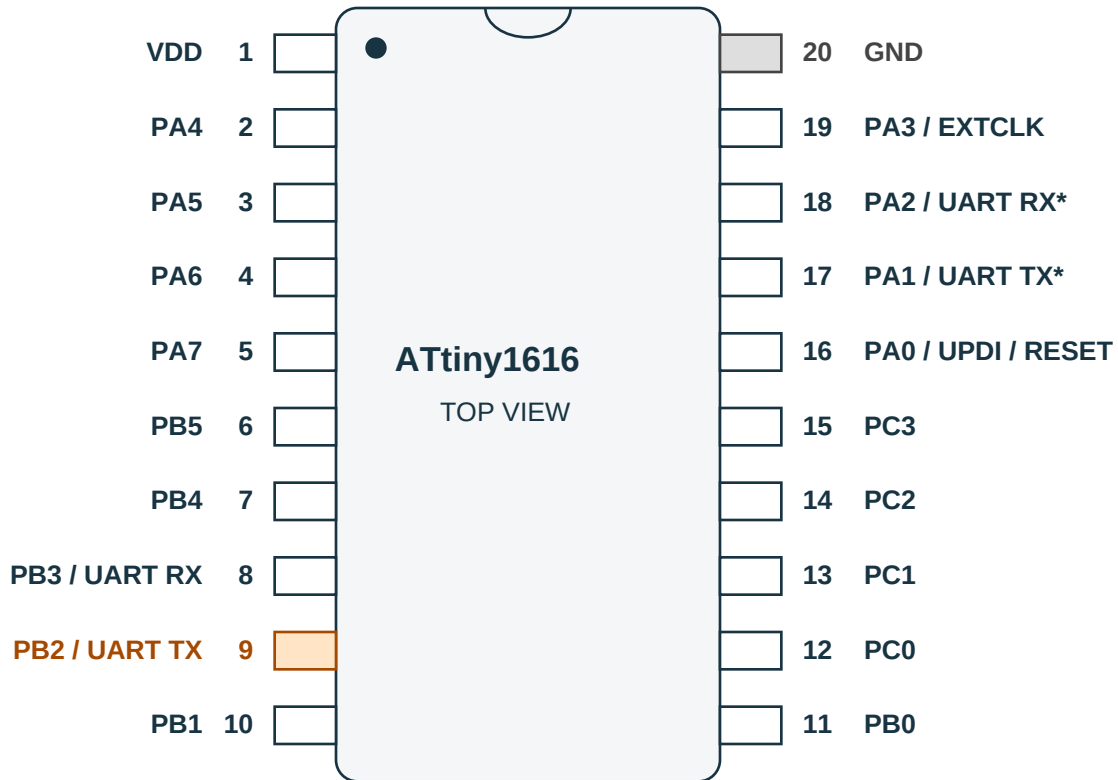

* Alternate UART routing; firmware selects the active UART pins.

YOUR TWO SOLDER CONNECTIONS

ORANGE: pin 9 / PB2 - left side, second leg from bottom.

GRAY: pin 20 / GND - right side, top leg.

Receive-only connection to Flipper Zero

Badge TX -- 10 kOhm -- midpoint -- 10 kOhm -- badge GND

Midpoint -> Flipper pin 14 (RX); badge GND -> Flipper pin 11 (GND).

Leave Flipper TX and power disconnected. Verify midpoint ~2.7 V before RX.

Badge measured ~5.5 V: do not connect raw TX to a 3.3 V input.

USB unplugged with CR2032 cells installed. Remove power before soldering.

Source: Microchip DS40001893B, section 4.2 (p. 15), table 5-1 (p. 18).

Pin functions are chip capabilities; badge firmware behavior is not yet confirmed.