KPS PUBLIC SCHOOLS • STUDENT TECH BENCH PROGRAM

Certification Guide

Tier 2 — Challenging Repair

T2

Screens, cameras, hinges and palm rests: the delicate parts of the lid and case.

In this guide

1 About this certification and how to earn it

2 What you need to know (study modules)

3 Skills checklist

4 Supervised practice log

5 Knowledge check

6 Practical exam

7 Sign-off

Name: _____ Started: _____

Rev 1.0 • October 2026


1 About this certification

What it lets you do

- Take Tier 2 tickets on your own: screens, cameras, hinges, palm rests and body damage.
- Replace display cables, speakers and Wi-Fi cards.
- Remove and refit a whole display assembly.
- Act as the second pair of eyes (QA check) on Tier 1 repairs.

Before you start. Tier 1 — Basic Repair, held for at least 2 weeks with no comebacks.

How to earn it

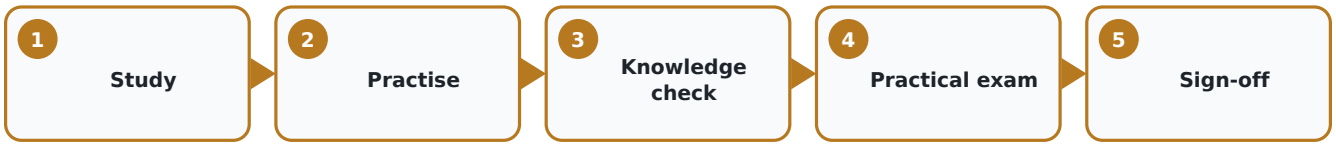


Step	What you do
Study	Modules 1–4 below, plus the display, camera and hinge sections of the guides for the models your bench sees most.
Practise	Do 8 supervised Tier 2 repairs: at least 2 screens, 1 camera, 1 hinge, 1 display cable or palm rest; at least two brands.
Knowledge check	Score 85% or better (13 of 15).
Practical exam	Pass the observed practical with no automatic-fail items.
Sign-off	Lead tech or manager signs and awards the certification in the portal.

Certification is earned, not given for time served. Every requirement below must be signed off by a lead tech or manager.

A certification can be paused by a manager after a safety violation or repeated comebacks (repairs that come back with the same fault).

When every box is signed, the manager awards the certification on the portal's Certifications page. That's what unlocks the matching tickets and guides.

2 What you need to know

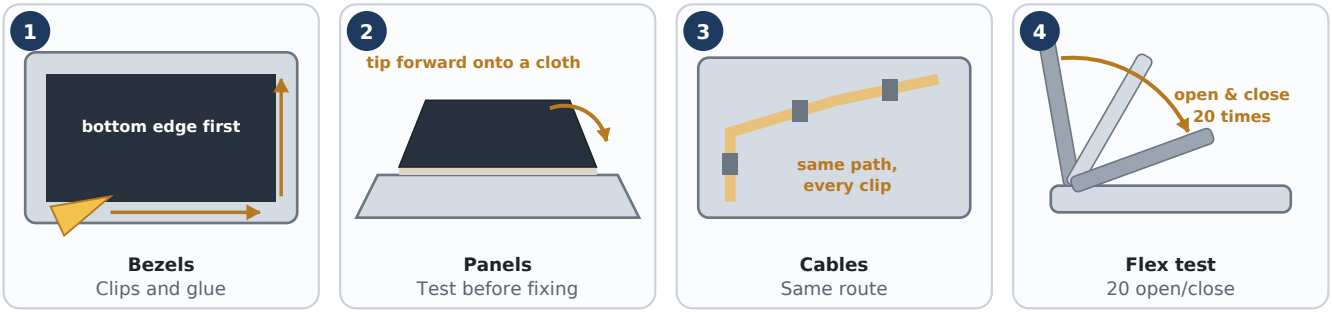

Repairs in this tier, and where the guides are

Open the device in the portal's Learn tab and pick the topic. Each topic opens at the right section of that model's repair guide. Read the device's guide every time: screw counts and steps differ between models.

Learn tab topic	Covers
LCD Screen Repair	LCD panel
LCD Cable Repair	Display cable
Camera Board / Camera Cable Replacement	Camera module
Hinge Replacement	Hinges
Top Assembly / Midframe Assembly	Palm rest (where it isn't Level 3 on that model)
Speaker Replacement	Speakers
Network Board Replacement / Wifi Technical Difficulties	Wi-Fi card
(guide section) Display assembly removal	Whole lid on and off

Module 1 — What counts as Tier 2

- The district fee schedule puts these in **Tier 2**: screen, camera, palm rest assembly, hinges, body damage to two or more areas, and other standard parts as assessed.
- Two or more Tier 1 items on one device can also be billed at Tier 2. One Tier 2 item plus a Tier 1 item, or two Tier 2 items, can move a claim to Tier 3. Let the lead tech set the tier when a ticket has several parts.

Module 2 — Working on the lid

- **Bezels** clip on, screw on, or are glued. Check the guide: a glued bezel needs gentle warmth and new adhesive.
- **Panels** are held by small screws or stretch-release tape. Pull tape tabs slowly and flat. On the CTL PX121E the tabs are at the top left and right, and the strips must be replaced.
- **Touch vs non-touch.** Read the part number on the back of the old panel and order an exact match. A convertible's touch layer is usually part of the panel.
- **Test before you fix it down.** Connect the new panel, power on, check the picture, then fasten it.
- **Cracked glass:** safety glasses on, tape across the crack before lifting.

Module 3 — Cables through the hinge

- The display cable and the Wi-Fi antennas run through the hinge. Photograph their route before you move anything.
- Route a new cable exactly along the old path, through every clip. A pinched cable fails again in weeks.
- Flex test: open and close the lid 20 times while watching the picture. Flicker that changes with the angle means the cable is pinched or not seated.
- Weak Wi-Fi after a lid repair almost always means an antenna wire was pinched or not reconnected.

Module 4 — Hinges, palm rests and quality

- Left and right hinges are mirror images; they are not interchangeable.
- A screw that spins without tightening means a stripped post: that's a cover replacement, not a hinge.
- A palm rest swap moves every part to the new case. Use one screw-mat section per part, and photograph each step.
- Do a QA check on your own work before handing it to a mentor: every verify item in the guide, plus a full S2 diagnostics run.

3 Skills checklist

An evaluator initials each skill after watching you do it correctly, on your own, at least once. Practice repairs count.

#	Skill	Date	Evaluator
1	Removes a clip-on and a glued bezel without damage		
2	Identifies the correct replacement panel from the old part number		
3	Replaces an LCD panel held by screws		
4	Replaces an LCD panel held by stretch-release tape, fitting new strips		
5	Replaces a display cable along the original route		
6	Replaces a camera module		
7	Replaces a hinge (correct side) and checks lid tension		
8	Removes and refits a display assembly, reconnecting antennas		
9	Replaces speakers and a Wi-Fi card		
10	Performs a lid flex test and full diagnostics before close-out		
11	Does a QA check on another student's Tier 1 repair		

4 Supervised practice log

Log every supervised practice repair (or front-desk transaction). The supervisor signs each line.

#	Date	Device / asset tag	Repair or task	Ticket #	Supervisor
1					
2					
3					
4					
5					
6					
7					
8					

5 Knowledge check

15 questions. Circle one answer for each. Closed book. The evaluator marks it with the key. Pass mark is on page 1.

1. Which of these is a Tier 2 repair?

A Battery
B Motherboard
C Screen
D Charger

2. How do you choose a replacement panel?

A Match the part number on the old panel's label
B Any panel the same size
C The cheapest one
D A touch panel always

3. When do you fasten the new panel down?

A Before connecting it
B After the bezel
C It doesn't matter
D After testing the picture

4. How do you pull a stretch-release tape tab?

A Quickly, straight up toward you
B Slowly, flat along the lid
C With pliers, twisting
D Heat it until it melts

5. The picture flickers only when the lid is at certain angles. Most likely cause?

A Bad panel
B Display cable pinched or not seated
C Battery
D Wrong keyboard layout

6. After a lid repair, Wi-Fi is weak. What do you check?

A The battery
B The keyboard
C Diagnostics only
D The antenna wires: pinched or unplugged

7. Can a left hinge be fitted on the right side?

A No, they're mirror images
B Yes, they're the same
C Only on HP
D Only with longer screws

8. A hinge screw spins without tightening. What does that mean?

A Use a bigger screw
B Add glue
C The post is stripped: cover replacement
D Tighten harder

9. What do you do before lifting a cracked panel?

A Nothing
B Press it flat
C Heat it
D Safety glasses and tape across the crack

10. How many times do you open and close the lid in a flex test?

A Once
B About 20
C 100
D Not needed

11. A ticket has a screen and a camera to replace. What tier is it likely?

A Tier 1
B Tier 2
C Tier 3 (two Tier 2 items)
D Tier 4

12. A glued bezel won't release. What do you do?

A Warm the edge gently and use a thin plastic pick
B Pry harder with metal
C Cut it
D Pull from the camera window

13. Before moving the display cable, what should you do?

A Photograph its route and clips
B Nothing
C Cut the tape off
D Remove the battery from the room

14. Your own repair is done. What's the QA check?

A Look at it
B Ask the student
C Every verify item plus a full diagnostics run
D Shake it

15. A convertible's screen is cracked but touch still works. What part do you order?

A Plain LCD only
B A digitizer sheet
C A bezel
D The touch panel assembly for that model

Score	Pass mark	Result	Evaluator / date
____ / 15	85% or better (13 of 15)	Pass / Retake	

6 Practical exam

An evaluator watches you do each task. Time allowed: about 75 minutes. You may use the repair guides and your notes, but you work on your own.

Task	What you'll do	To pass	P / F
Bezel	Remove and refit the bezel on the evaluator's chosen model.	No cracks or bent clips; flush fit; camera window aligned.	
Panel	Replace an LCD panel (screw or tape type).	Correct part, tested before fastening, new tape strips if needed.	
Display cable / camera	Replace the display cable or camera module.	Original route and clips, both ends seated and taped, flex test passes.	
Hinge	Replace one hinge.	Correct side, even tension, no pinched cables, Wi-Fi strength normal.	
QA	Check a planted faulty repair (e.g. antenna unplugged, cable unlatched) and find the fault.	Finds and fixes it, notes it on the ticket.	

Automatic fail. Any one of these ends the exam: Pressing on or prying against the screen glass; Fastening a panel before testing it; Pinching a cable in the hinge; Working inside with the battery connected; Fitting the wrong-side hinge. You can retake it after a week of extra practice.

7 Sign-off

Requirement	Done	Signed
Study	☐	
Practise	☐	
Knowledge check	☐	
Practical exam	☐	
Prerequisite: Tier 1 — Basic Repair	☐	

Candidate	
Evaluator (lead tech or manager)	
Date awarded	
Awarded in the portal (Certifications page) by	

Managers: award it on the portal's Certifications page so it shows on the student's portfolio and unlocks the matching tickets and guides.