
EXPLODED VIEW – MODULE A (module B is built the same way)

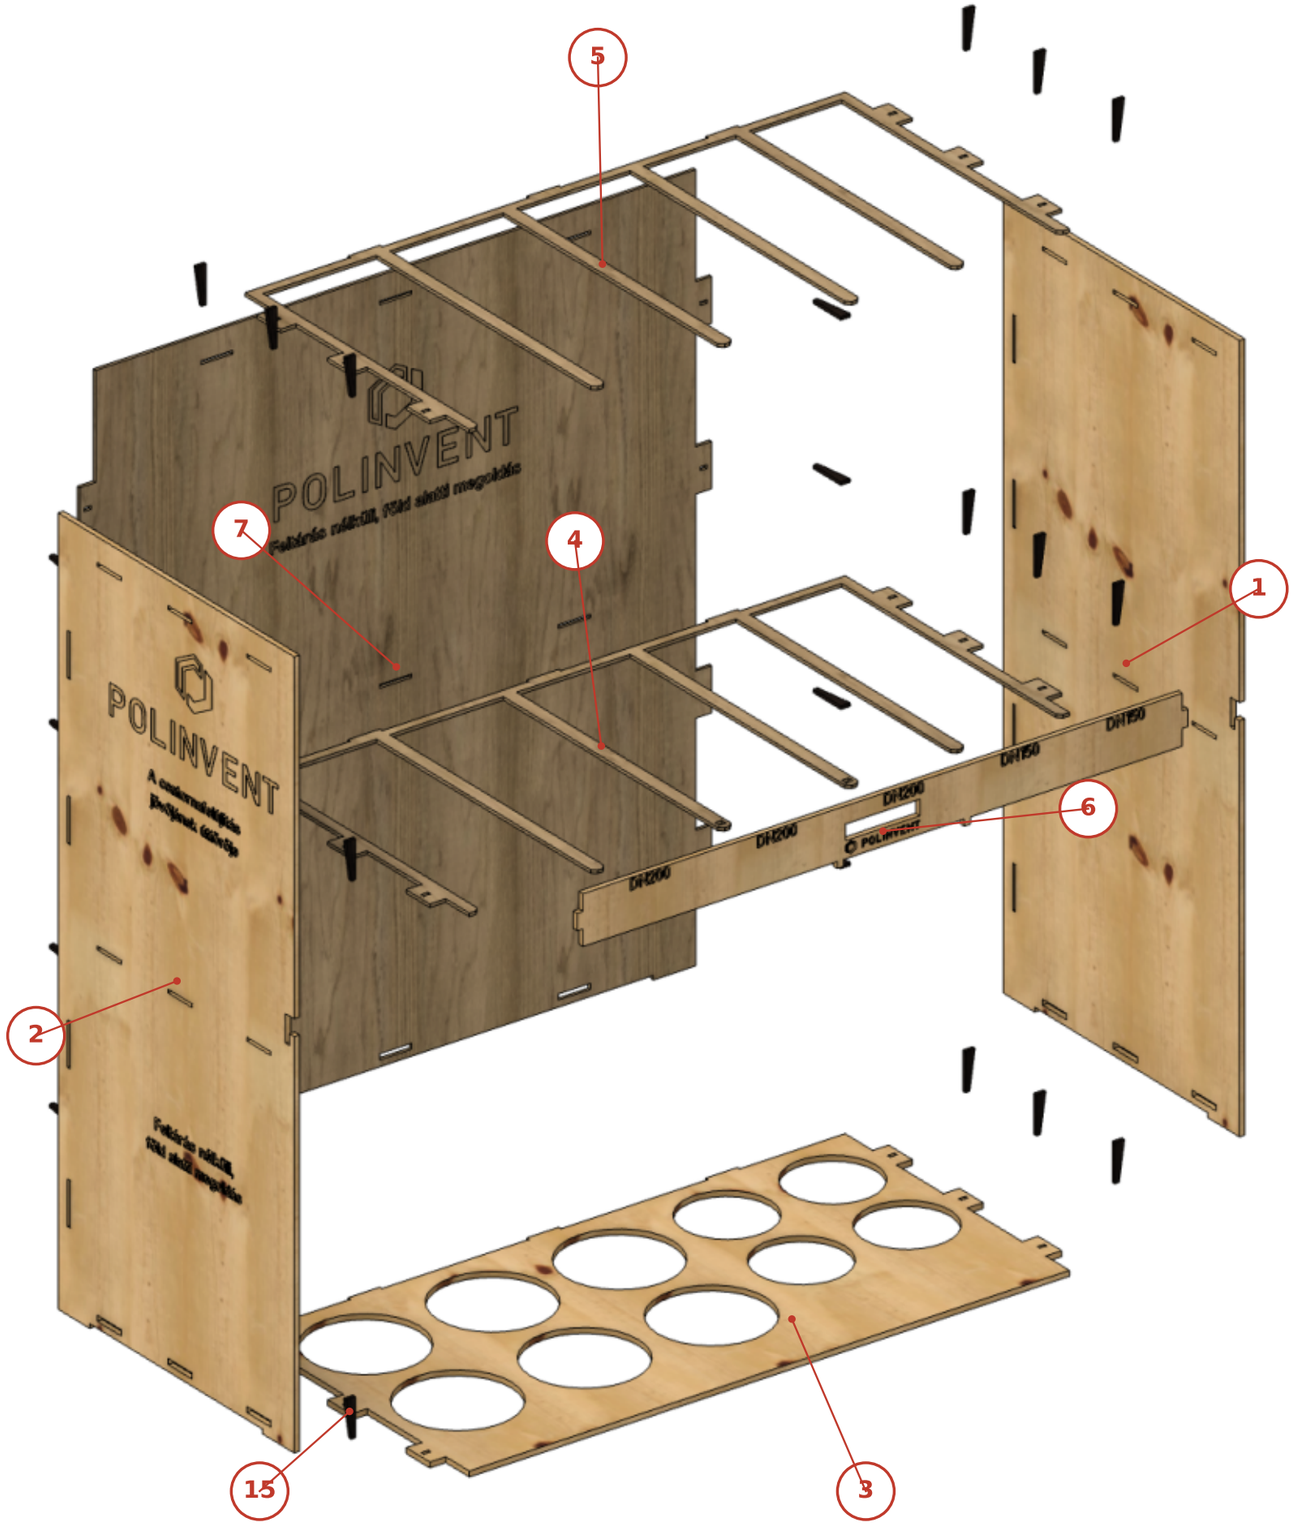

BILL OF MATERIALS – LASER-CUT PARTS

#	ID	Part	Qty	Size (mm)	Note
1	A-OLDALFAL	Side wall	1	600 × 1350 × 10	wedge slots, rail L-slot
2	A-OLDALFAL-KULSO	Outer side wall	1	600 × 1350 × 10	wedge slots, rail L-slot
3	A-PADLO	Base / pipe seat	1	1190 × 576 × 10	wedged tenons, pipe seats
4	A-FESU-ALSO	Guide comb (lower)	1	1190 × 576 × 6	wedged tenons
5	A-FESU-FELSO	Guide comb (upper)	1	1190 × 576 × 6	wedged tenons
6	A-ZAROLEC	Front rail	1	1150 × 102 × 10	hooks into side walls, lifts out
7	A-HATFAL	Back panel	1	1190 × 1350 × 6	wedged tenons
8	B-OLDALFAL	Side wall	1	600 × 1350 × 10	wedge slots, rail L-slot
9	B-OLDALFAL-KULSO	Outer side wall	1	600 × 1350 × 10	wedge slots, rail L-slot
10	B-PADLO	Base / pipe seat	1	1069 × 576 × 10	wedged tenons, pipe seats
11	B-FESU-ALSO	Guide comb (lower)	1	1069 × 576 × 6	wedged tenons
12	B-FESU-FELSO	Guide comb (upper)	1	1069 × 576 × 6	wedged tenons
13	B-ZAROLEC	Front rail	1	1029 × 102 × 10	hooks into side walls, lifts out
14	B-HATFAL	Back panel	1	1069 × 1350 × 6	wedged tenons
15	EK	Wedge	56	18 × 70 × 6	incl. 4 spares

MATERIAL – 100% WOOD

Material	Qty	Use
Hardware: none	–	no screws, nails, glue or brackets
Plywood sheet 1400×1400×6 mm	3 sheets	laser cutting
Plywood sheet 1400×1400×10 mm	3 sheets	laser cutting

PIPE RACK – KG DN100/150/200

Exploded assembly view (module A) + bill of materials	2026-11-03
Material: plywood 10 / 6 mm, laser cut, all wood · Scale: NTS	Sheet: 1/2

ASSEMBLY – 6×DN200 + 8×DN150 + 16×DN100 (2 m)



ASSEMBLY SEQUENCE (per module)

1. Test cut: 1 tenon + slot + 1 wedge; the tenon should slide in with light force (CLR).
2. Lay the outer left side wall (2) flat, engraving down. Stand the base (3),
   the back panel (7), the lower (4) and upper (5) combs in it – tenons into slots.
3. Lower the inner side wall (1) onto all tenons from above.
4. Tap the wedges (15) in from outside: base + combs top to bottom,
   back panel front to back. Tight with a mallet, don't split them!
5. Stand it up; build module B the same way (outer wall on the right). 46 mm gap.
6. Pipes: socket up, through the base holes, standing on the floor.
7. Front rail (6): push its end tenons into the L-slots of the side walls,
   then let it drop 20 mm – the lip stops it coming forward.
   To take a pipe: lift the rail 20 mm and pull it forward.

No screws, nails, glue or brackets: everything is wood.

Disassembly: knock the wedges out from below / behind.

Material: 6 sheets (3×10 mm + 3×6 mm) – combs cut in pairs, nested.

A – Base wedged tenon (wedge vertical)




B – Engraving on the outer side wall



C – Front rail hooked into the side wall



Complete rack, exploded (2 modules)

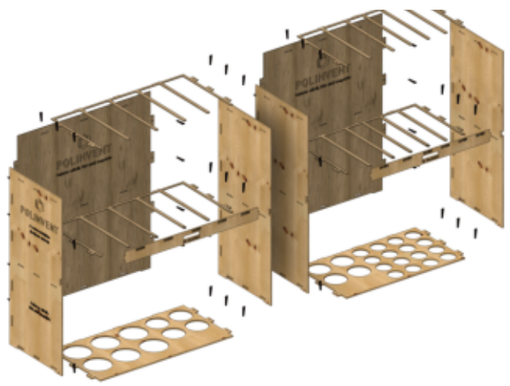

PIPE RACK – KG DN100/150/200	
Assembly, joints, assembly sequence	2026-11-03
Material: plywood 10 / 6 mm, laser cut, all wood · Scale: NTS	Sheet: 2/2