
BETOBULLET

4 HP · EURORACK FORMAT
FOR VCV RACK 2

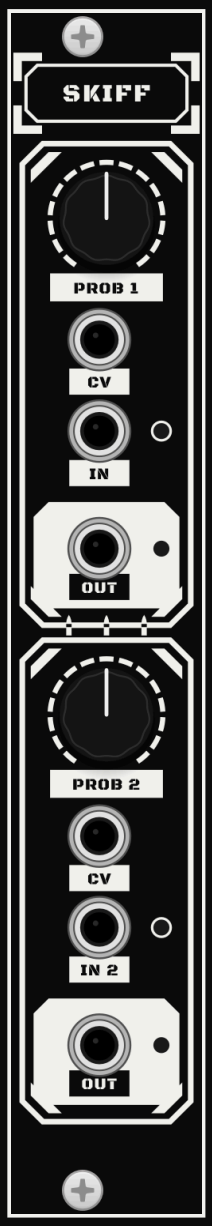

SKIFF

DUAL PROBABILITY SKIPPER

USER MANUAL · v2.0.0 · October 2026

CONTENTS

1. Introduction
2. Panel overview
3. Operation
4. Jumpers (context menu)
5. Specifications

Skiff lets every gate at its input through with a probability. Two channels, a shared or separate input, an exclusive mode that sends each pulse to only one output, and a choice between pure and ”regular” randomness.

1. INTRODUCTION


A probability skipper is the simplest way to make a clock breathe: some pulses pass, some do not. Skiff has two of them in 4 HP. Each channel has a probability knob, a CV input that the knob attenuates, a gate input with an LED and a gate output with an LED. The input of channel 2 is normalled from channel 1, so a single clock feeds both.

Skiff recreates the published behaviour of the Ladik S-090 Dual Probability Skipper. The two jumpers on the back of the original are options in the context menu.

INSTALLATION

Copy `Skiff-2.0.0-win-x64.vcvplugin` to `Documents/Rack2/plugins` and restart VCV Rack. The module is listed under the brand **betobullet**.

2. PANEL OVERVIEW

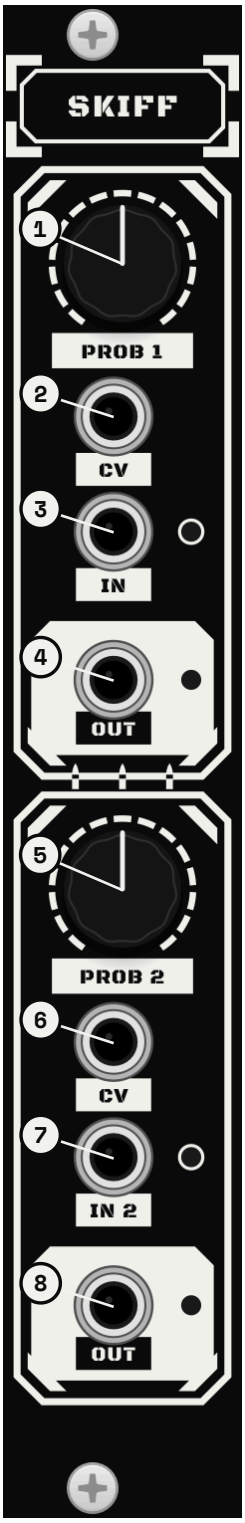

1. **PROB 1**
   Probability of channel 1, from 0 % (no gate passes) to 100 % (all gates pass).
2. **CV 1**
   Probability CV. With a cable patched the knob becomes its attenuator.
3. **IN 1**
   Gate input of channel 1. The LED beside it follows the gate.
4. **OUT 1**
   Gate output of channel 1 (10 V). The LED beside it lights while a gate passes.
5. **PROB 2**
   Probability of channel 2.
6. **CV 2**
   Probability CV of channel 2.
7. **IN 2**
   Gate input of channel 2, normalled from IN 1.
8. **OUT 2**
   Gate output of channel 2.

3. OPERATION

PROBABILITY

On every rising edge at its input, a channel decides whether this gate passes. The probability runs from 0 % (nothing passes) to 100 % (everything passes). When a gate passes, the output follows the input gate for its whole length, so gates keep their duration and triggers stay triggers.

CV CONTROL

With a cable in the CV input, the knob works as an attenuator for the CV. With the knob fully clockwise, **0 V or lower gives 0 %** and **5 V or higher gives 100 %**; in between the probability is proportional.

NORMALLED INPUT

With nothing patched into IN 2, channel 2 reads the gate of IN 1 and makes its own independent decision. One clock then drives two different random rhythms.

LEDS

The LED beside each input shows the incoming gate; the LED beside each output shows the gates that pass.

4. JUMPERS (CONTEXT MENU)

The original module has two jumpers on its back. In Skiff they are options in the context menu (right click).

OPTION	BEHAVIOUR
Exclusive	Only one output can pass a given pulse. With a shared input, channel 1 has priority: channel 2 only gets a chance when channel 1 skipped the pulse. With separate inputs, an output that is busy blocks the other one. Off: both channels work independently.
Regular randomness	Makes clusters of passed or skipped pulses less likely, so the randomness sounds more even. With this option 0 % and 100 % are **not** reliable; switch it off when you need the extremes.

PATCH IDEAS

- **Human hi-hat**: a 16th-note clock into IN 1, PROB 1 at about 70 %.
- **Random switch**: Exclusive on, one clock into IN 1, OUT 1 and OUT 2 to two drums. Every pulse goes to one of them, never both.
- **Growing fills**: a slow rising ramp into CV 2 with the knob fully up.
- **Ghost notes**: OUT 1 to a drum at full level and OUT 2 (low probability) to the same drum through a quieter VCA.

5. SPECIFICATIONS

ITEM	VALUE
Width	4 HP
Channels	2
Probability	0–100 %, knob or CV × knob
CV range	0 V = 0 %, 5 V = 100 % (knob fully up)
Gate threshold	about 1.5 V on, 0.5 V off
Outputs	10 V gates following the input gate length
Options	Exclusive, Regular randomness, Theme

CREDITS

Design and panel: betobullet. Behaviour modelled on the published description of the Ladik S-090 Dual Probability Skipper; this is an independent recreation. Fonts: Black Ops One, Space Mono, Space Grotesk (SIL OFL).