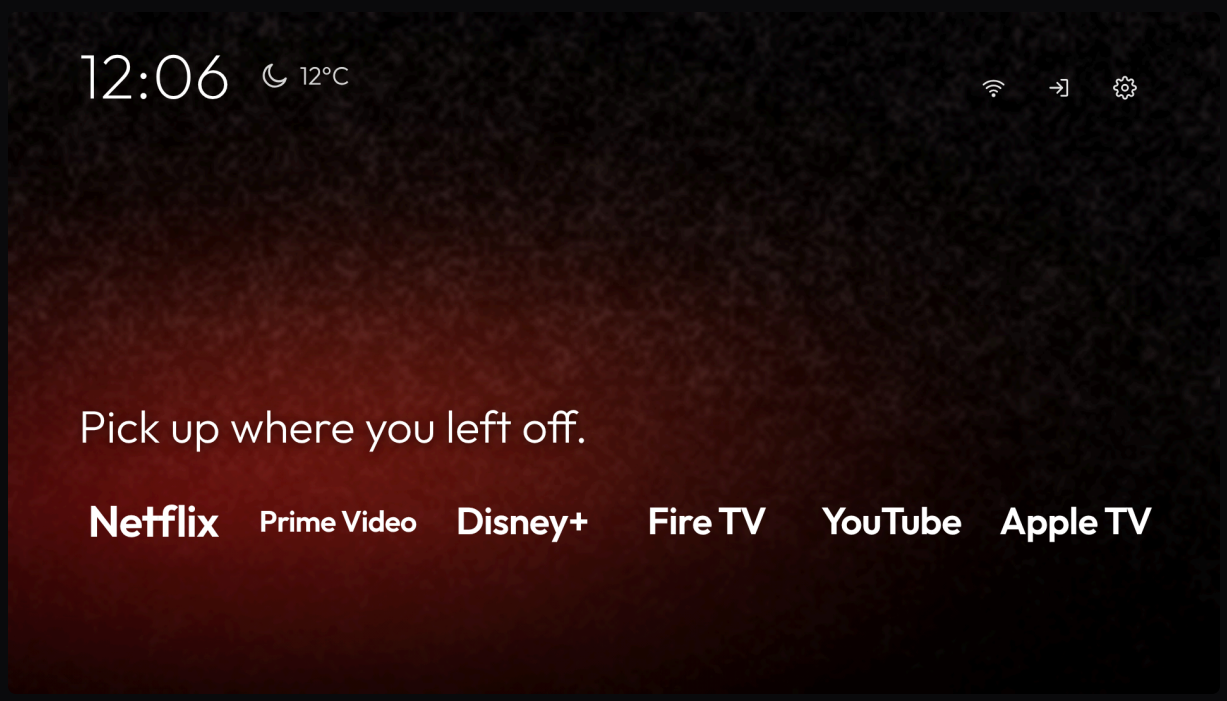


STEP-BY-STEP GUIDE

TV Home for LG webOS


A clean, minimal home screen for your LG TV, with a dock, My Favourites, mood cards that pick a show for you, chess and background music.

Works on webOS 5 (2020) and newer · Free and open source (MIT) · github.com/bharycr7/tv-home-lg

CONTENTS

1. What you get
2. What you need
3. Turn on Developer Mode on the TV
4. Install TV Home (Mac, Windows, Linux)
5. Using it with the remote
6. Make it yours
7. Keep it running
8. Troubleshooting
9. Credits and legal

1. What you get

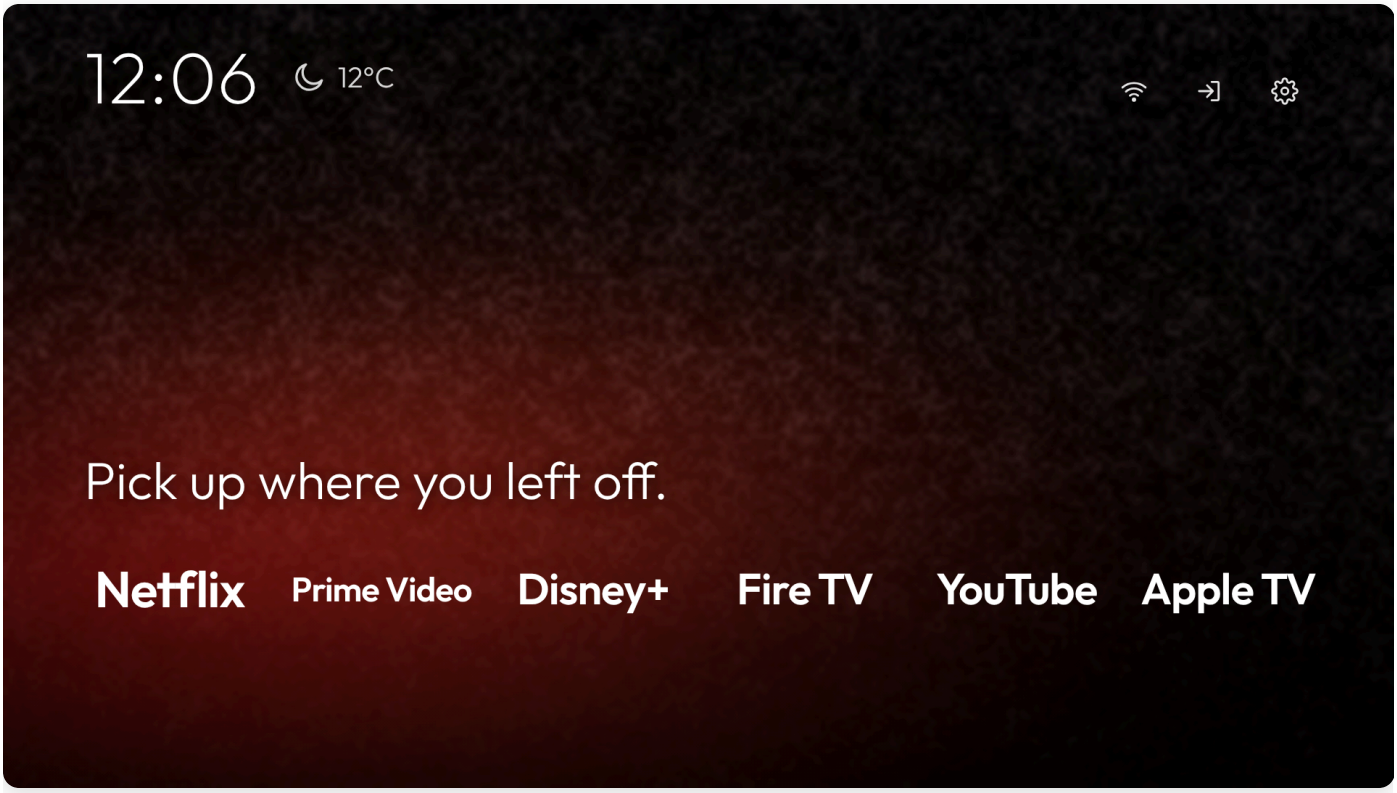


Home: the clock and weather, your apps in a dock, and a short line for the selected app.

- **Top left:** the time and the weather (from Open-Meteo; no account needed).
- **Top right:** Wi-Fi, an **Inputs** menu (HDMI 1–4 and Live TV) and Settings.
- **The dock:** your streaming apps. The selected one grows and gets a soft glow, with its own line of text above it.
- **My Favourites:** your favourite characters standing together like a poster. The selected one turns to colour, and OK opens their show.

- **Don't have time to browse?:** mood cards you swipe like a dating app. Right spins a reel of posters that lands on one title and opens it after 3 seconds.
- **More apps:** every other app as icon tiles. **Shadow Chess:** play the TV at four levels. **Background music:** your own song, switched on or off with Play/Pause.




My Favourites (shown with placeholder figures; you add your own).

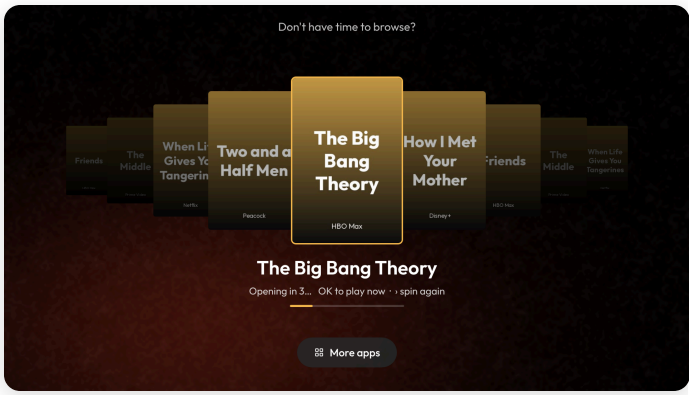

Mood cards: the reel lands on one title.



More apps.

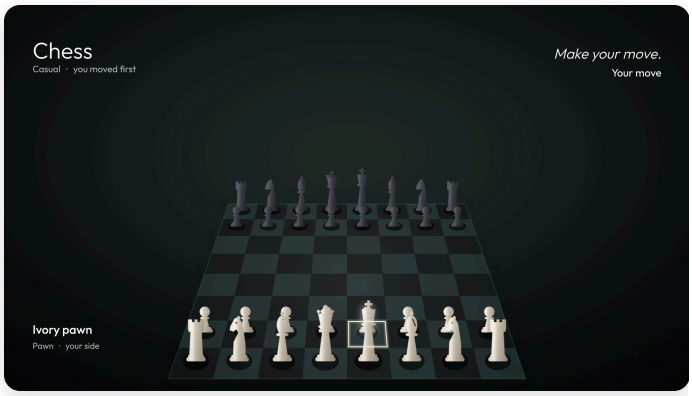

Shadow Chess.

2. What you need

- An **LG TV with webOS 5 or newer**, connected to Wi-Fi. TVs from 2020 onwards (for example the BX, CX, C1, C2, C3 and G-series) run webOS 5 or newer.
- A **computer** (Mac, Windows or Linux) on the **same Wi-Fi** as the TV.
- **Node.js** (free, from nodejs.org). The installer uses it to set up LG's command-line tools.
- A free **LG developer account**.
- About **15 minutes**.

> **Is this safe?** Yes. TV Home installs like any other app, using LG's own Developer Mode. Nothing on the TV is modified, and you can remove it any time like a normal app.

3. Turn on Developer Mode on the TV

1. **Create a developer account.** On your phone or computer, go to **webostv.developer.lge.com**, choose **Sign In → Create Account** and verify your email. Your user ID is that email.
2. **Install the Developer Mode app.** On the TV, open the **LG Content Store** (Apps), search for **Developer Mode**, then install and open it.
3. **Sign in** with your developer account (the email and password).
4. Switch **Dev Mode Status** to ON. The TV restarts.
5. Open the Developer Mode app again and switch **Key Server** to ON.
6. Note the **IP address** (for example `192.168.1.20`) and the **passphrase** (6 characters, for example `A1B2C3`) shown on screen.

4. Install TV Home

a. Download the project

Go to **github.com/bharycr7/tv-home-lg**, click **Code → Download ZIP** and unzip it. If you use git, run `git clone https://github.com/bharycr7/tv-home-lg` instead.

b. Run the installer

Keep the TV on with **Key Server ON**. Open a terminal in the project folder and run the command for your computer, using your own IP address and passphrase:

Mac / Linux (Terminal)

```
cd tv-home-lg
./scripts/install.sh 192.168.1.20 A1B2C3
```

Windows (PowerShell)

```
cd tv-home-lg
Set-ExecutionPolicy -Scope Process Bypass
.\scripts\install.ps1 -TvIp 192.168.1.20 -Passphrase A1B2C3
```

The installer sets up LG's tools (`@webos-tools/cli`), connects to the TV, builds the app and installs it. TV Home then opens on your TV, and you'll find it in your apps as **TV Home**.

> **Prefer to do it by hand?** Download the ready-made `.ipk` from the GitHub **Releases** page, then run:
> `npm install -g @webos-tools/cli`
> `ares-setup-device -a lgtv -i "host=TV-IP" -i "port=9922" -i "username=prisoner"`
> `ares-novacom --device lgtv --getkey` (type the passphrase when asked)
> `ares-install --device lgtv com.tvhome.lg_1.0.0_all.ipk`

c. Make it easy to reach

LG doesn't let any app take over the Home button, so set up one of these shortcuts:

- **First in the app row:** press Home, highlight TV Home, press and hold OK (or choose **Edit**) and move it to the far left. After that, **Home → OK** opens it.
- **Number key:** with TV Home open, press and hold a number key from **1 to 8** and assign it. Holding that key then opens TV Home from anywhere. Key 0 is reserved by LG.

5. Using it with the remote

Button	What it does
Up / Down	Move one row: top icons, dock, My Favourites (two rows of characters), mood cards, More apps, chess.
Left / Right	Move along a row. On a mood card, Left means nope (next mood) and Right means yes (spin).
OK	Open the app, show or input. During the countdown, OK opens the show now.
Back	Return to the dock. Back again leaves TV Home.
Play / Pause	Turn the background music on or off.

6. Make it yours

Everything you'd want to change is in two files: `app/config.js` (apps, lines, moods, weather, music) and `app/data.js` (your favourites and the titles in each mood). After editing, run `./scripts/update.sh` on Mac or Linux, or the install script again on Windows.

To change	Do this
Wallpaper	Replace `app/img/wallpaper.jpg` with your own 1920×1080 image.
Dock apps	Edit `dock` in `config.js`. Each entry is an app (`svc`) plus one or more lines of text. To show a logo instead of the name, add a white PNG to `app/img/icon/` and set `icon`.
HDMI tile	`ps5Hdmi` sets the HDMI port it switches to. Its `name` sets the label, for example "Fire TV" or "PS5".
Weather	`weather.unit`: `'celsius'` or `'fahrenheit'`. Add `lat` and `lon` to fix the location.
Background music	Copy your own song to `app/audio/bgm.mp3`.
New Tamil & Malayalam titles	Set `freshFeed: true`. A mood card then refreshes itself weekly with new titles on US streaming services.

My Favourites

1. Pick a photo of each favourite character, with the person clearly visible.
2. Make a cut-out with the helper: `pip install "rembg[cpu]" pillow`, then `python3 tools/make-cutout.py photo.jpg fav1`. It saves `cast_fav1.png` and a black-and-white copy.
3. In `data.js`, edit that entry in `shows`:
   - `title`: the show's name.
   - `app`: one of netflix, prime, disney, hulu, appletv.
   - `target`: the show's link or ID.
   - `box`: where the character stands, as fractions of the group frame (left, top, right, bottom).

- `lane` : 0 for the back row, 1 for the front row.
- `glow` : the colour of the light behind them.

Finding a show's link

App	What to put in `target`
Netflix	The number in `netflix.com/title/70143836`
Prime Video	The `amzn1.dv.gti.…` ID from the title's page link
Disney+, Hulu, Apple TV	The full web link to the title

A free site like **JustWatch** shows which service streams a title in your country and links to it.

Mood cards

Add a mood in `moods` (`config.js`) with an id, a name and a colour. Then add titles to `titles` in `data.js` with `moods: ['your-id']` . Put a poster at `app/img/poster/<art>.jpg` (300×450). Titles from apps that aren't installed on your TV are hidden automatically.

> **Use your own pictures and music for personal use only.** Studio posters, character photos, logos and songs belong to their owners. Don't publish them in a fork or share them publicly.

7. Keep it running

- **Developer Mode lasts 50 hours.** Open the Developer Mode app every couple of days and press **Extend**. If it runs out, the TV turns Developer Mode off and removes TV Home; turn it back on and reinstall.
- **Updating:** download the new version and run the installer again. Your settings in `config.js` and `data.js` stay as you set them.
- **Removing:** uninstall TV Home like any app, or switch Dev Mode Status off.

8. Troubleshooting

Problem	Fix
"Failed to get ssh private key"	Key Server is off. Turn it ON in the Developer Mode app and run the installer again.
"All configured authentication methods failed"	The passphrase is wrong or has changed. Re-run the installer with the passphrase now shown on the TV.
The installer can't find the TV	Check that the TV and computer are on the same Wi-Fi and that the IP address matches the Developer Mode app.
TV Home won't open or looks frozen	Run `ares-launch --device lgtv --close com.tvhome.lg`, then open it again.
A show opens on the app's home page	Some apps ignore links from other apps on webOS. Choose your profile and search, or check the link in `data.js`.
A mood card is missing	None of its titles are on apps installed on this TV.
No weather	Weather needs the internet. It updates every 30 minutes while TV Home is open.
No music	Add `app/audio/bgm.mp3` and reinstall, then press Play/Pause once.

9. Credits and legal

- **Inspiration:** *TV Home*, a fan-made Android TV launcher. This webOS version was rebuilt from scratch for LG TVs.
- **Licences:** code under MIT; the Outfit font under the SIL Open Font License.
- **Data sources:** weather from Open-Meteo and approximate location from GeoJS. The optional title feed uses JustWatch's public website data.
- **Artwork:** the wallpaper, placeholder figures, posters, chess pieces and icon were made for this project.
- **No affiliation:** TV Home is not affiliated with or endorsed by LG Electronics, or by any streaming service or studio. App and title names are used only to open those apps.