



ASSEMBLY INSTRUCTION

- Please follow the instructions to assemble the items correctly.
- Please ensure the safety of the glass when assembling.
- Do not make the screws too loose or too tight.
- As shown in the figure, Insert the screw into the hole. The arrow in the picture, Then rotate 90° or 180° clockwise.
- The accessory bag contains some small accessories, which should be kept away from children.
- The remaining parts are spare parts.
- Warm reminder white backboard please install the white side inward
- The operating instruction of RGB light is included in the package , please read it carefully when assembling


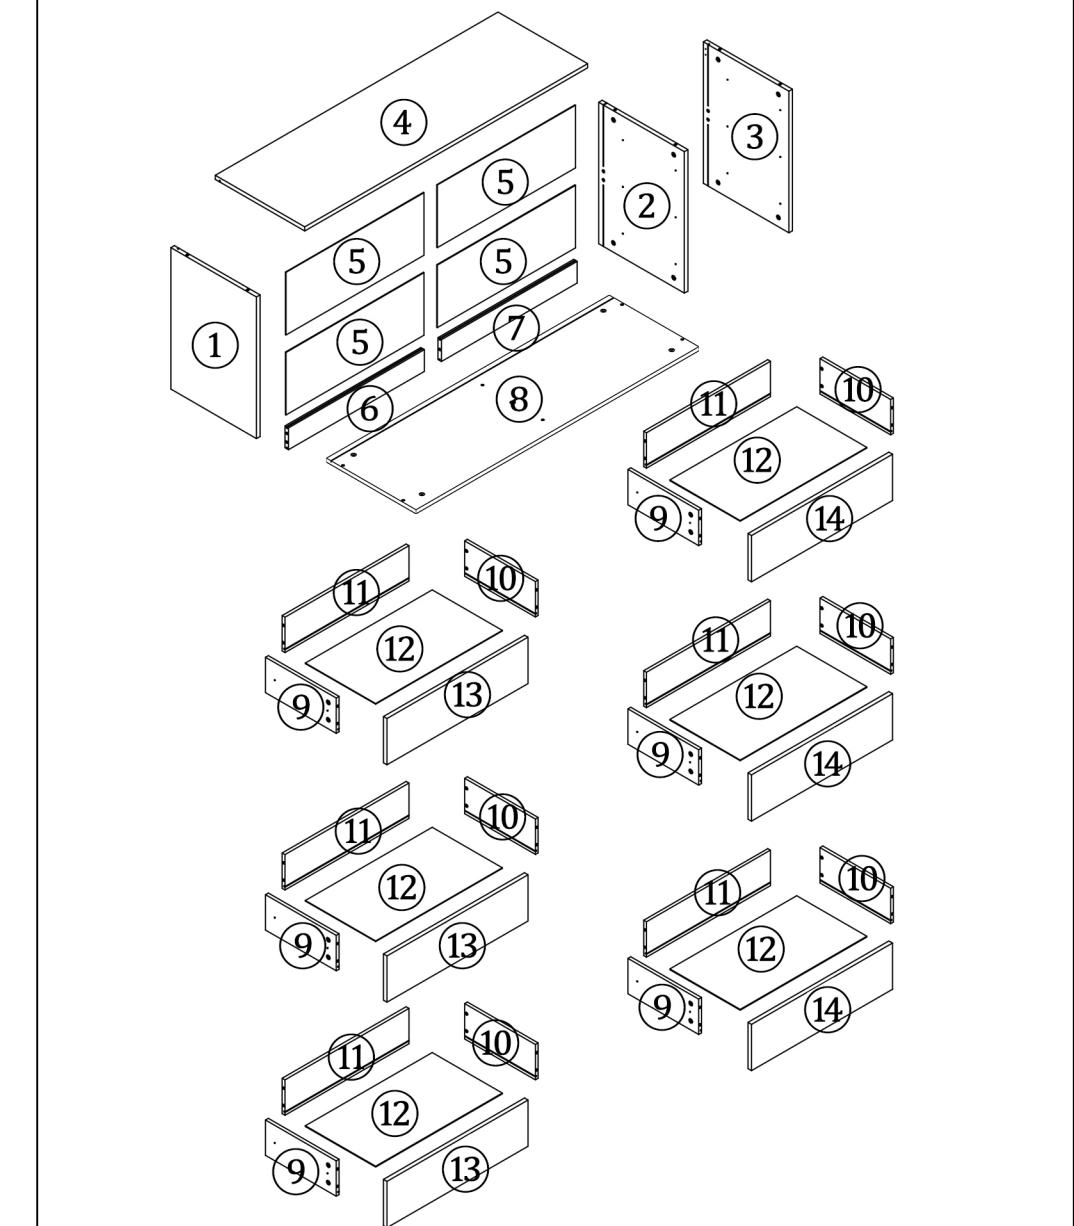


A 19pcs	A1 48pcs	B 19pcs	B1 48pcs	C 16pcs	C1 60pcs	F 6pcs
X 2pcs	Y 16pcs	Z4 5pcs	KA 12pcs	AE 4pcs	AE 1pcs	AM Decorative paper 28pcs

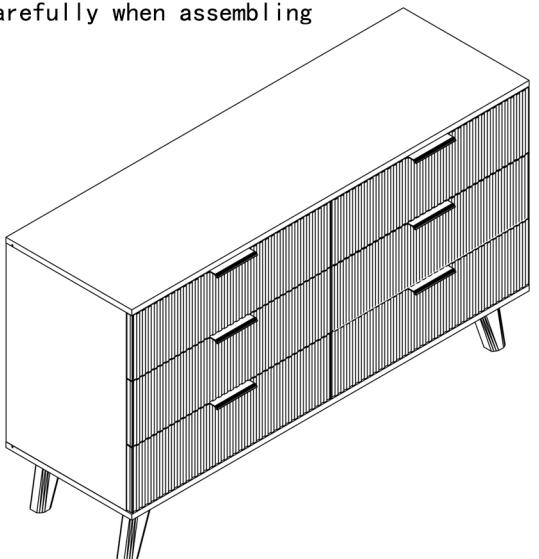


Hardware installation demonstration

- Please make sure "A" hardware tightened and can't be pulled out

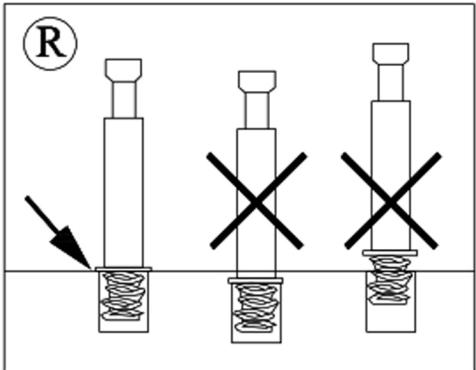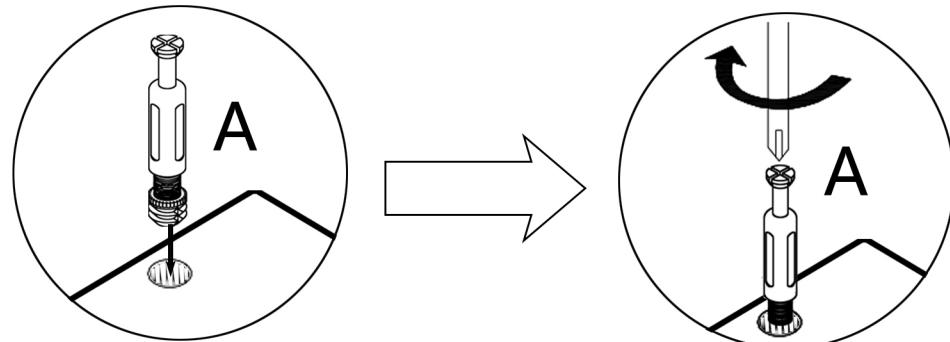

Hardware installation demonstration


- When inserting cam ensure arrowhead on cam points toward to the hole on the panel edge

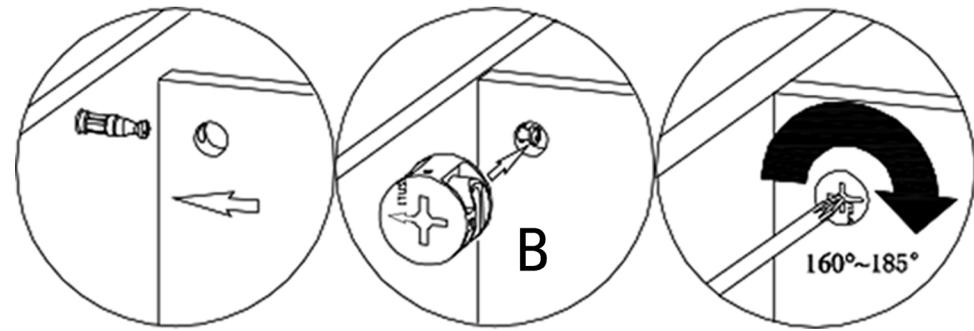




Hardware installation demonstration


- Before installing the drawer rail,
you need to separate the KA1 and KA2 first.

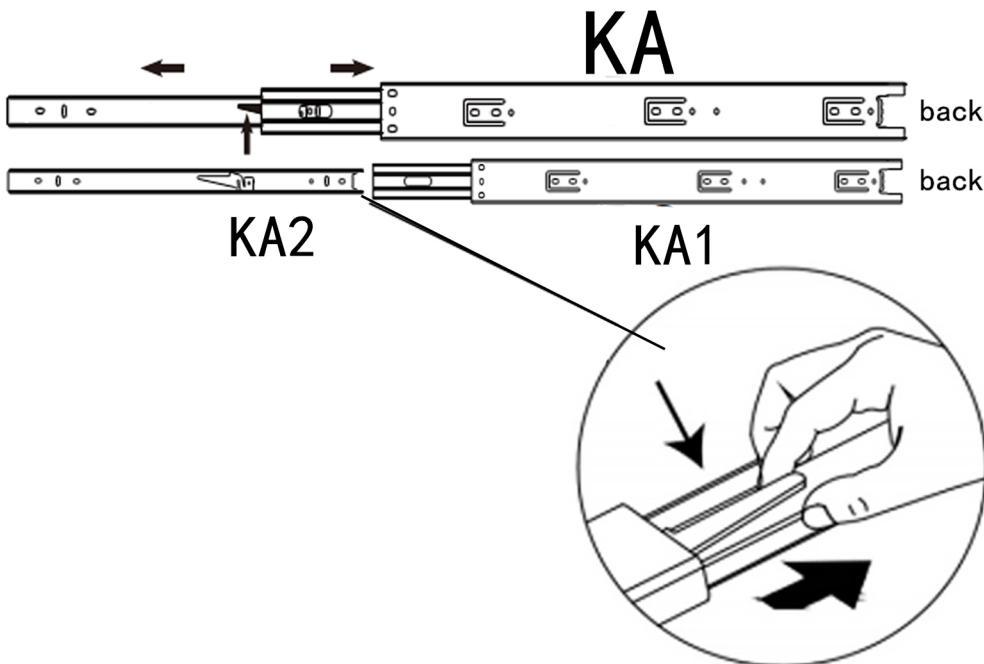


Hardware installation demonstration




The first screw hole should correspond with the board location hole

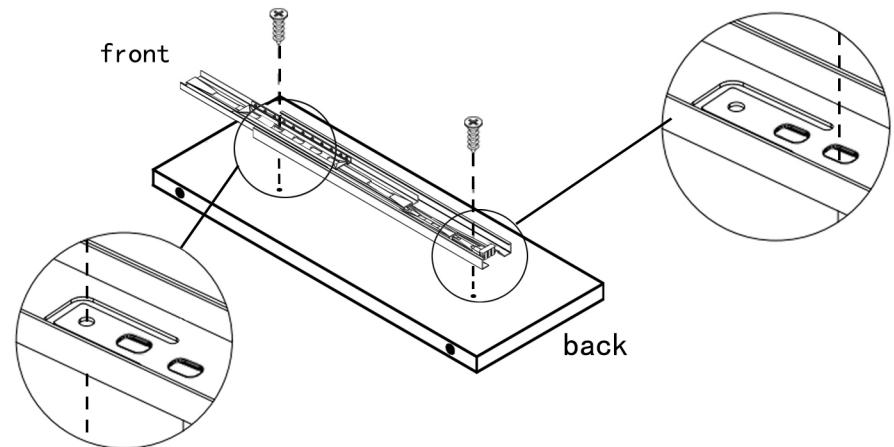


The first screw hole should correspond with the board location hole

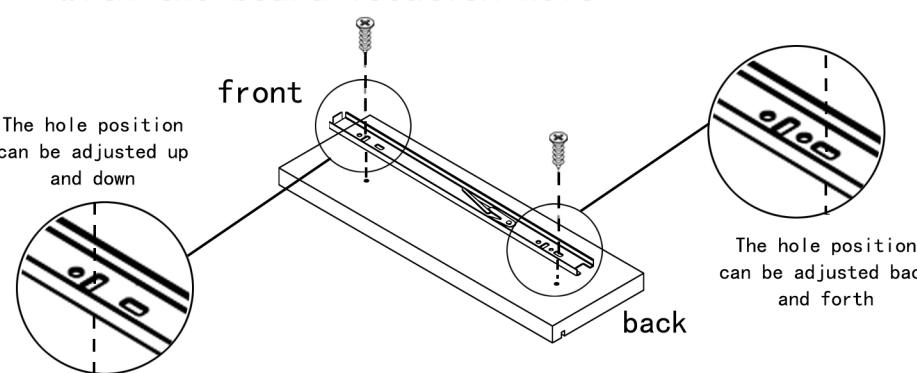

STEP 1

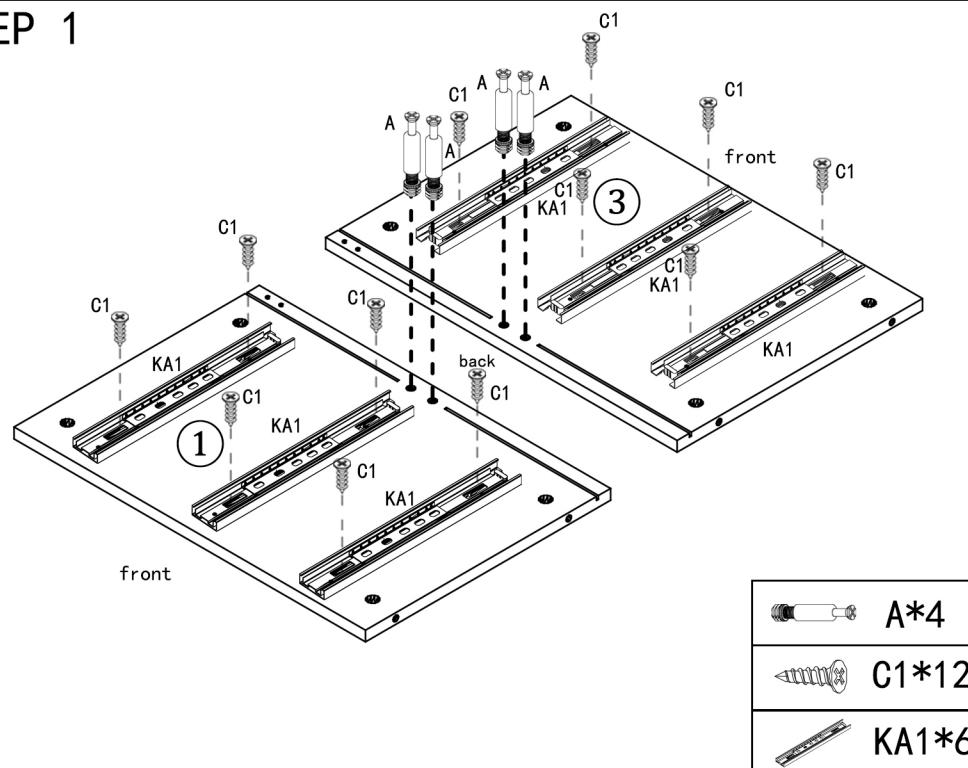


STEP 2

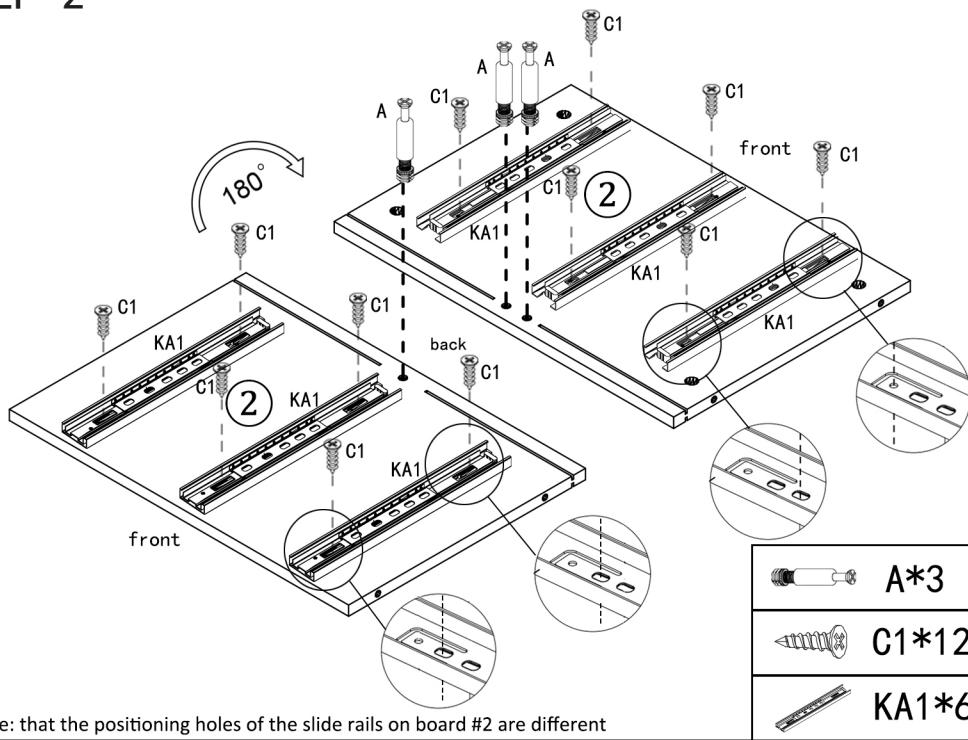


Notice: that the positioning holes of the slide rails on board #2 are different


STEP 3

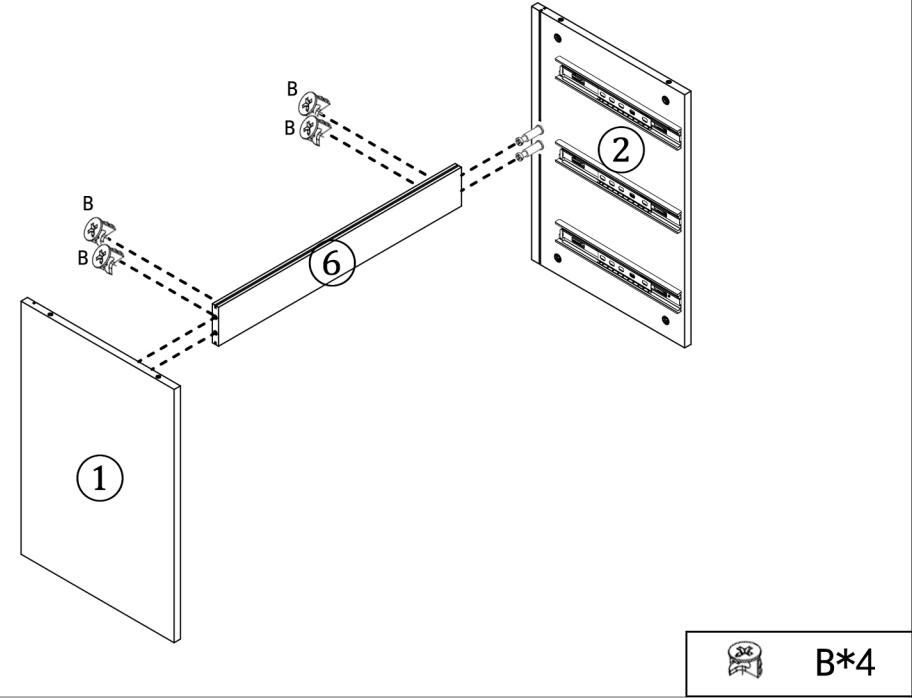


STEP 4

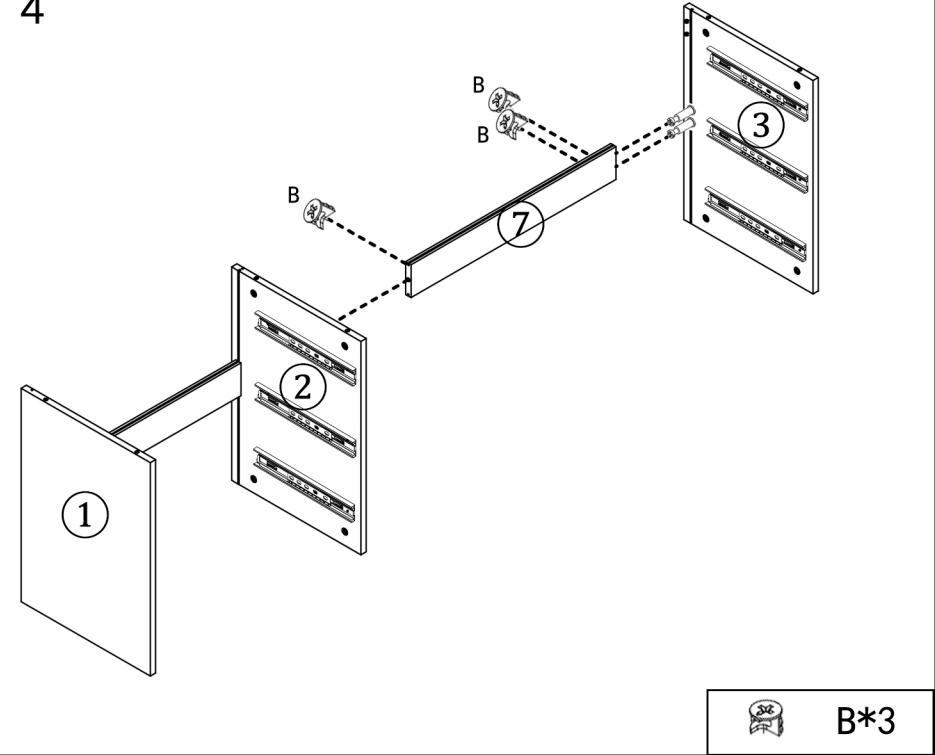

STEP 5

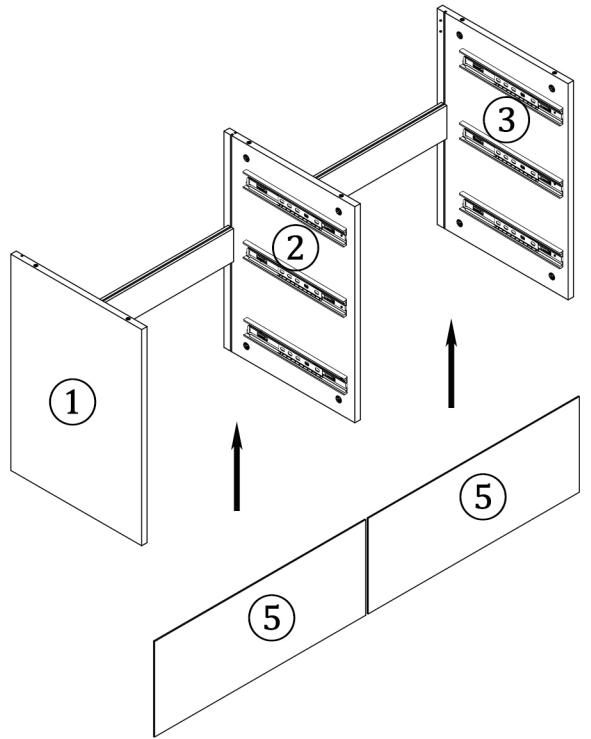


STEP 6

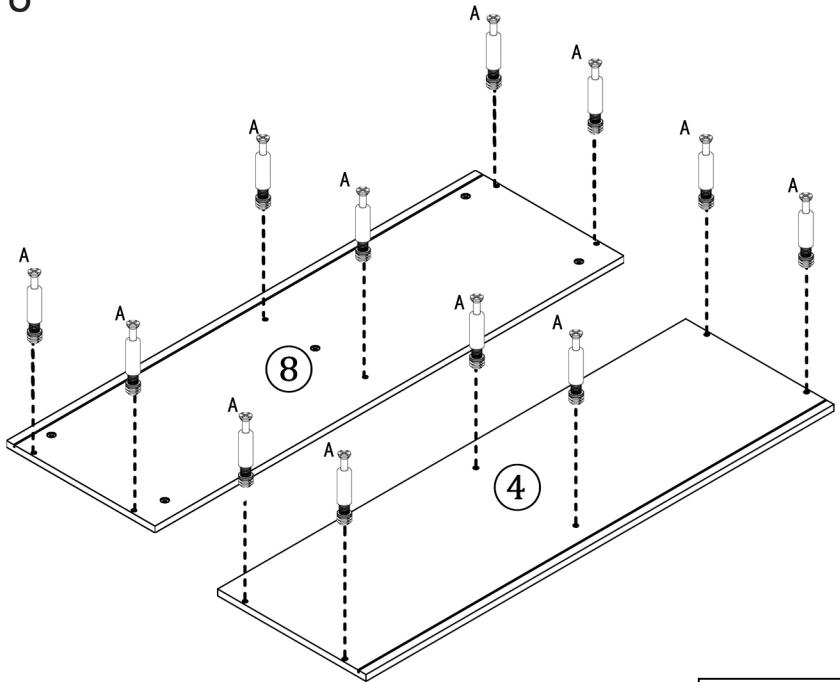

A*12

STEP 7

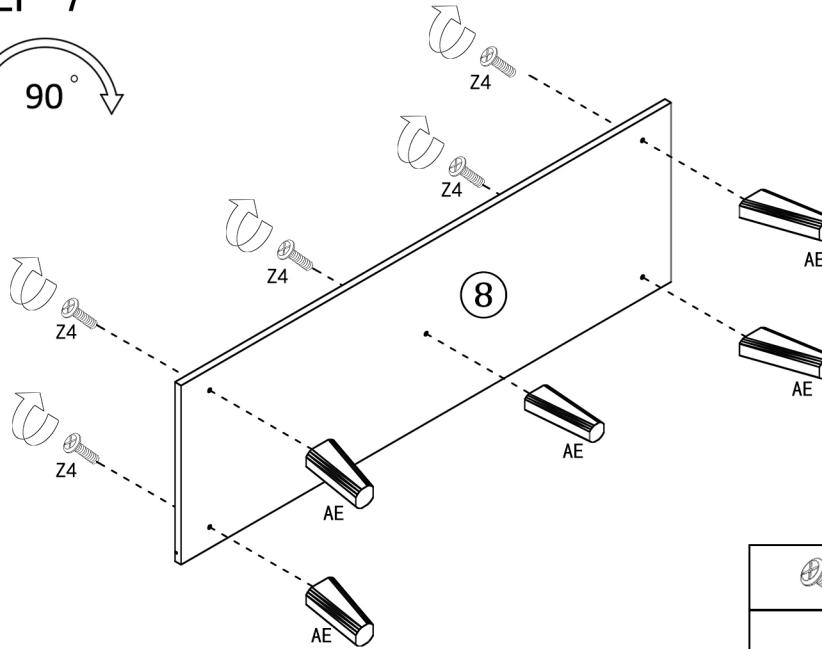


Z4*5

AE*4


AE*1

STEP 8

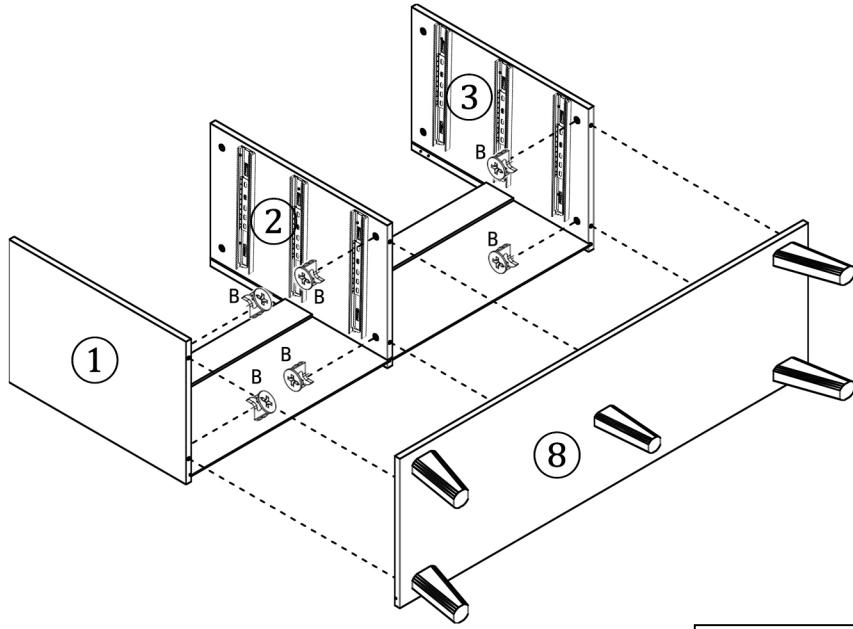


B*6


STEP 9

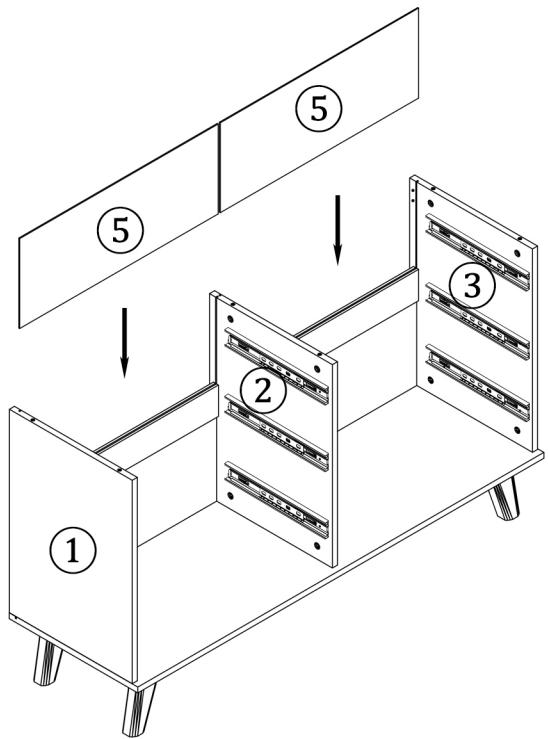


STEP 10

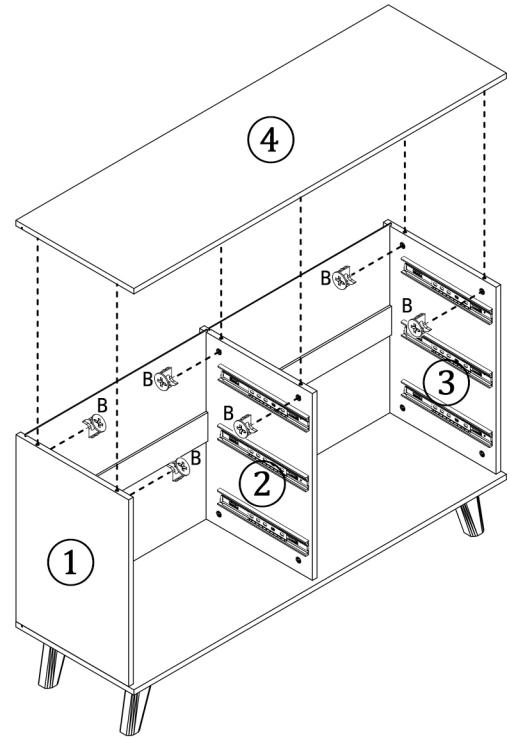


STEP 11

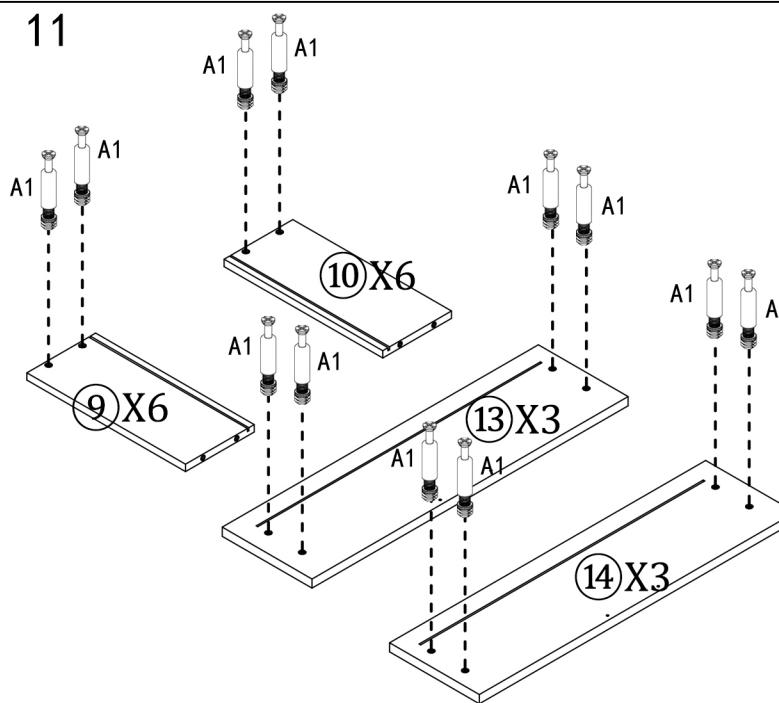


STEP 12

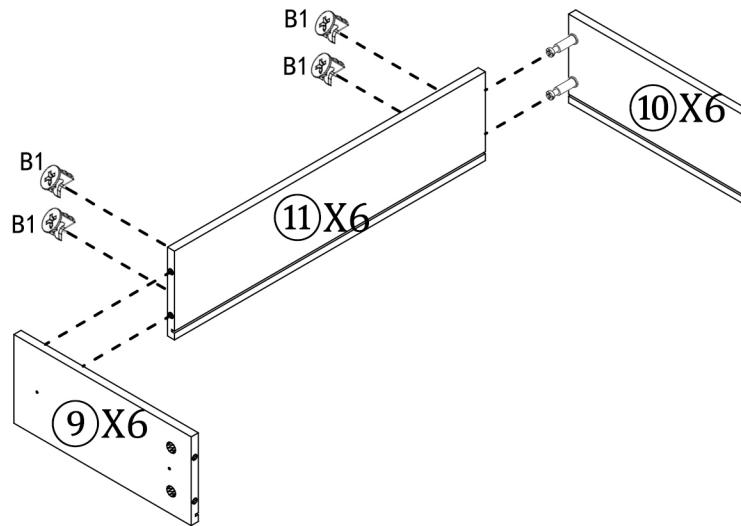

STEP 13

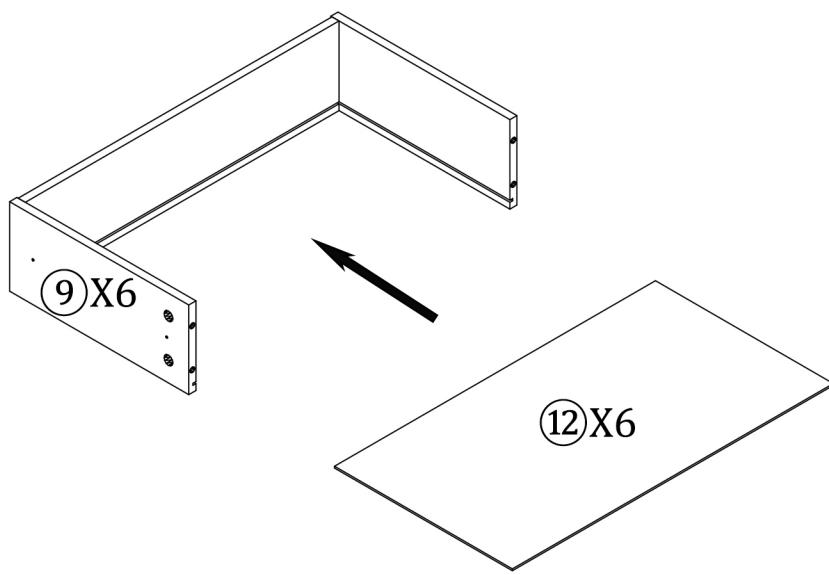


STEP 14

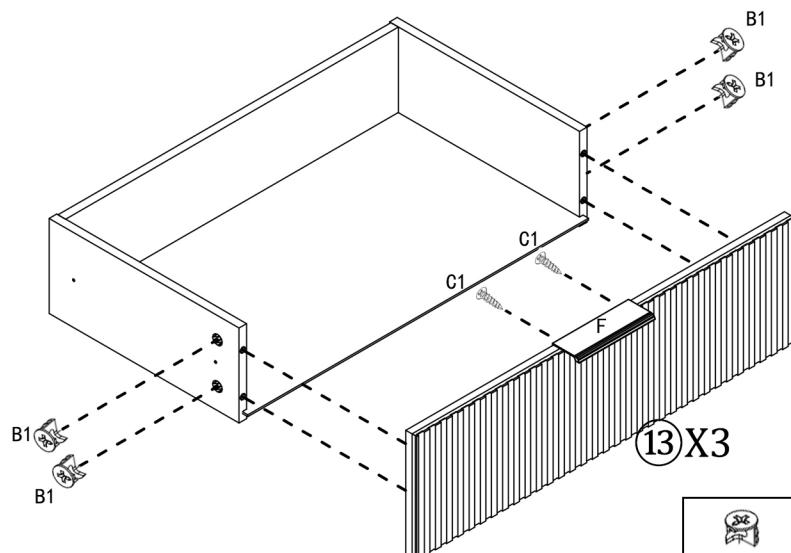



	B1*12
	C1*6
	F*3

STEP 15

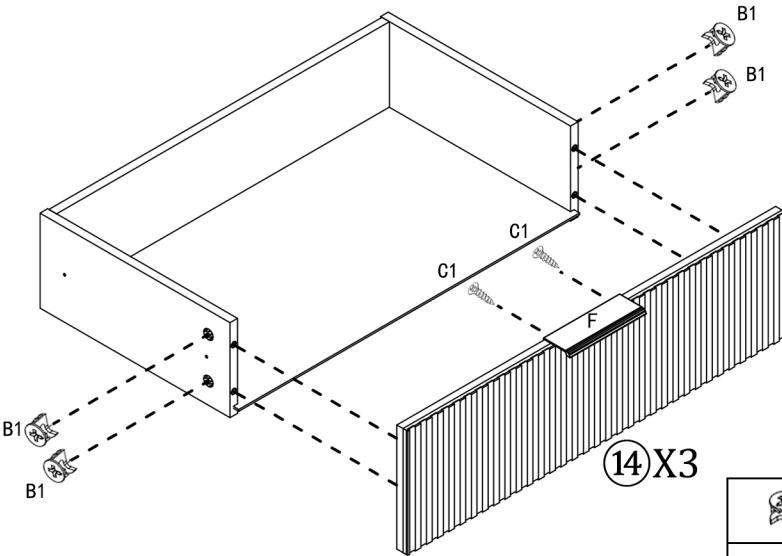


	B1*12
	C1*6
	F*3

STEP 16

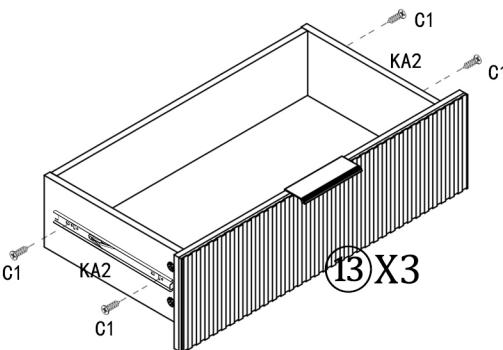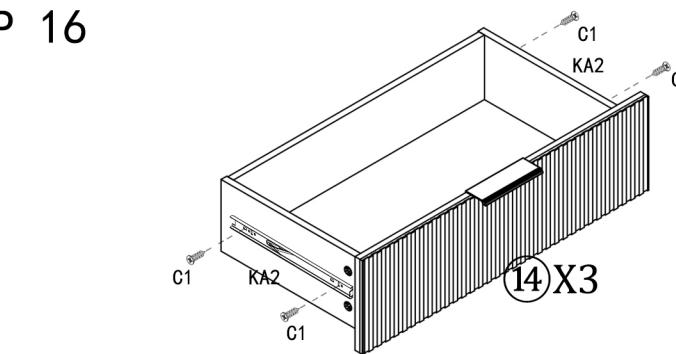


	C1*24
	KA2*12


STEP 17

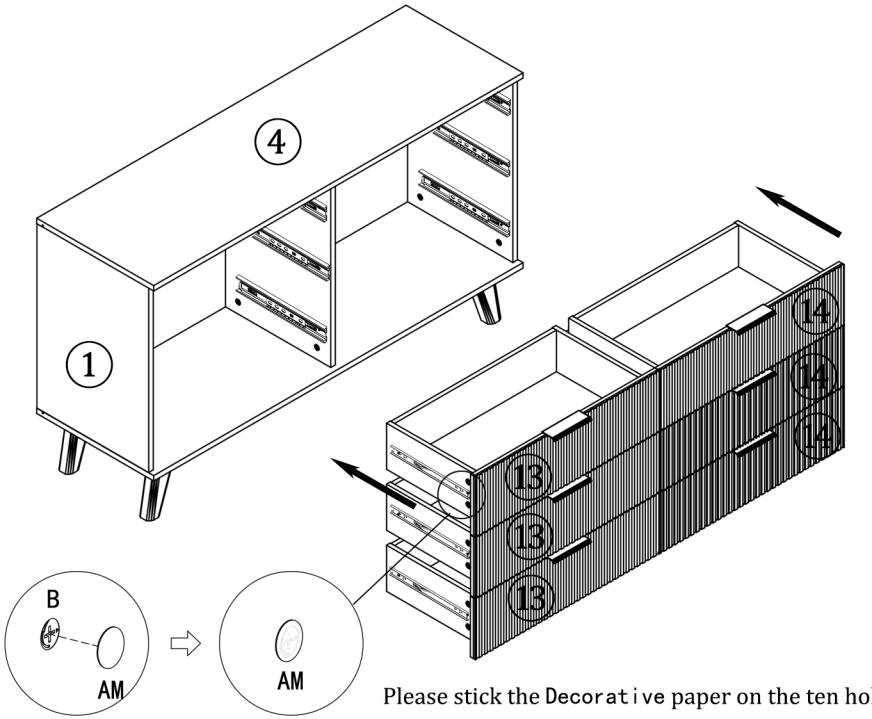


STEP 18

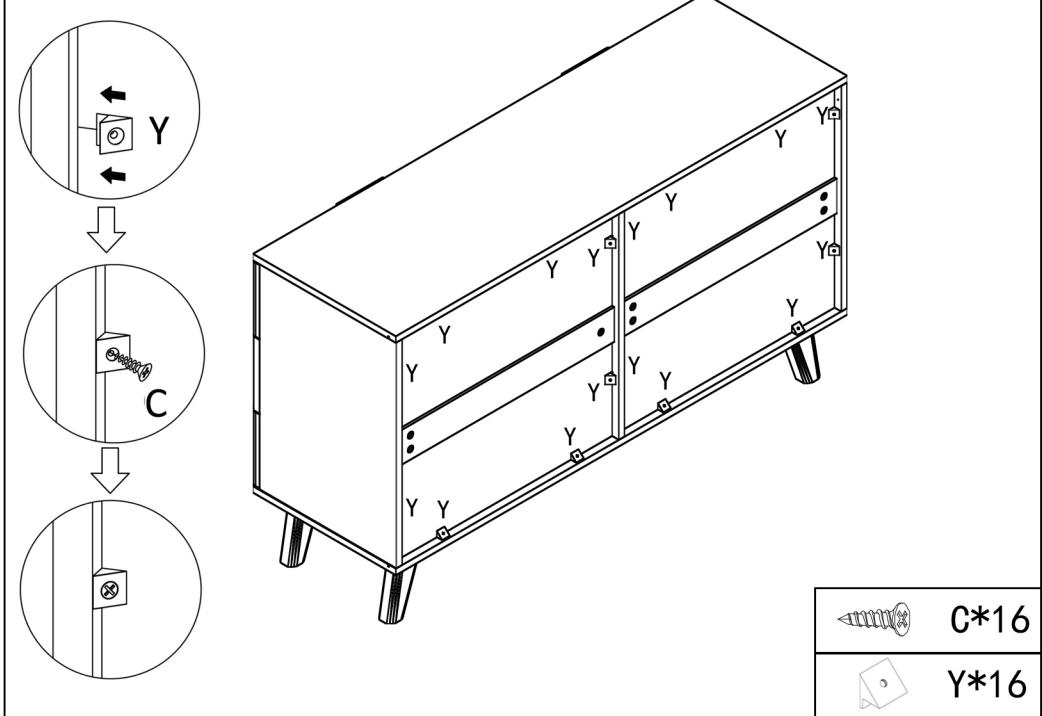

STEP 19

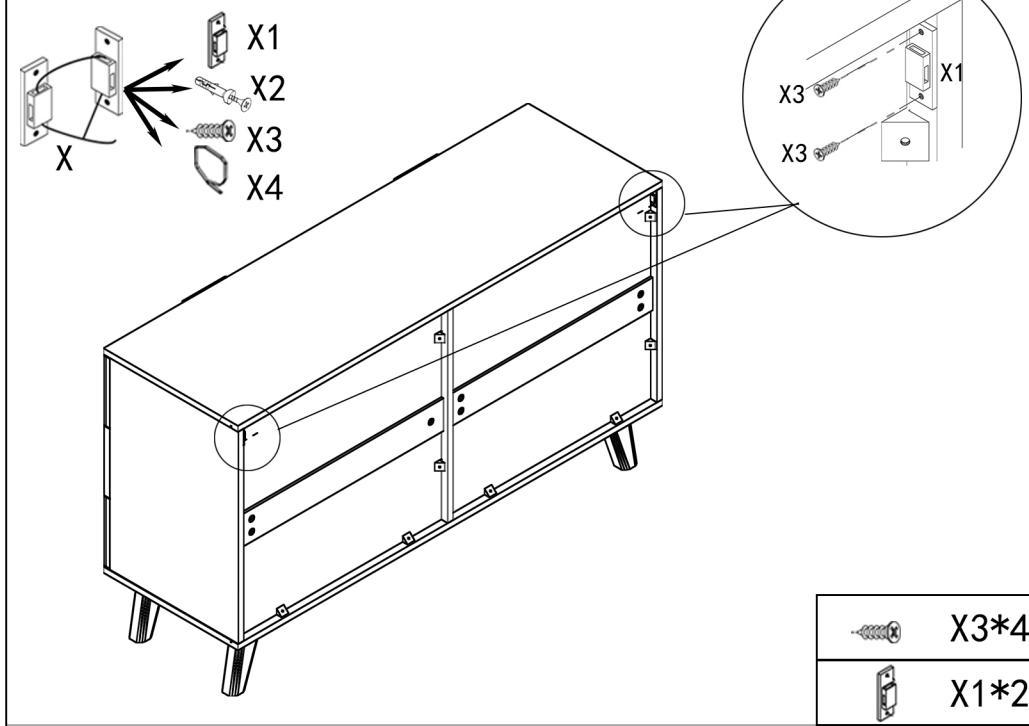



STEP 20

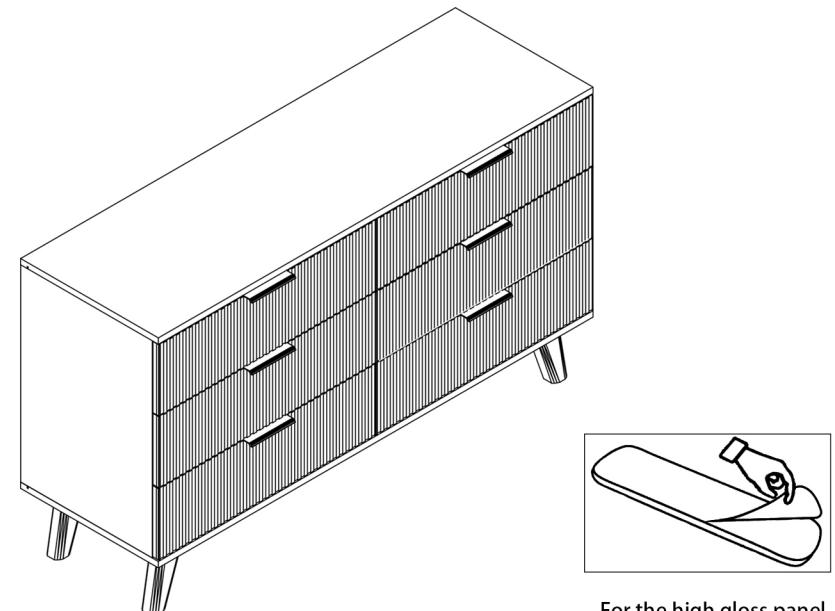

For the high gloss panel,
please peel off the plastic
film after assembling



STEP 21

1. One side of the anti-toppling safety belt is installed on the cabinet body
2. One side of the anti-toppling safety belt is mounted on the wall
3. The seat belt is fastened through both safety buckles and then tightened

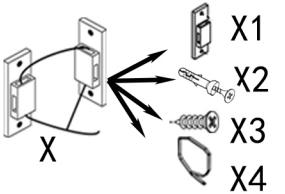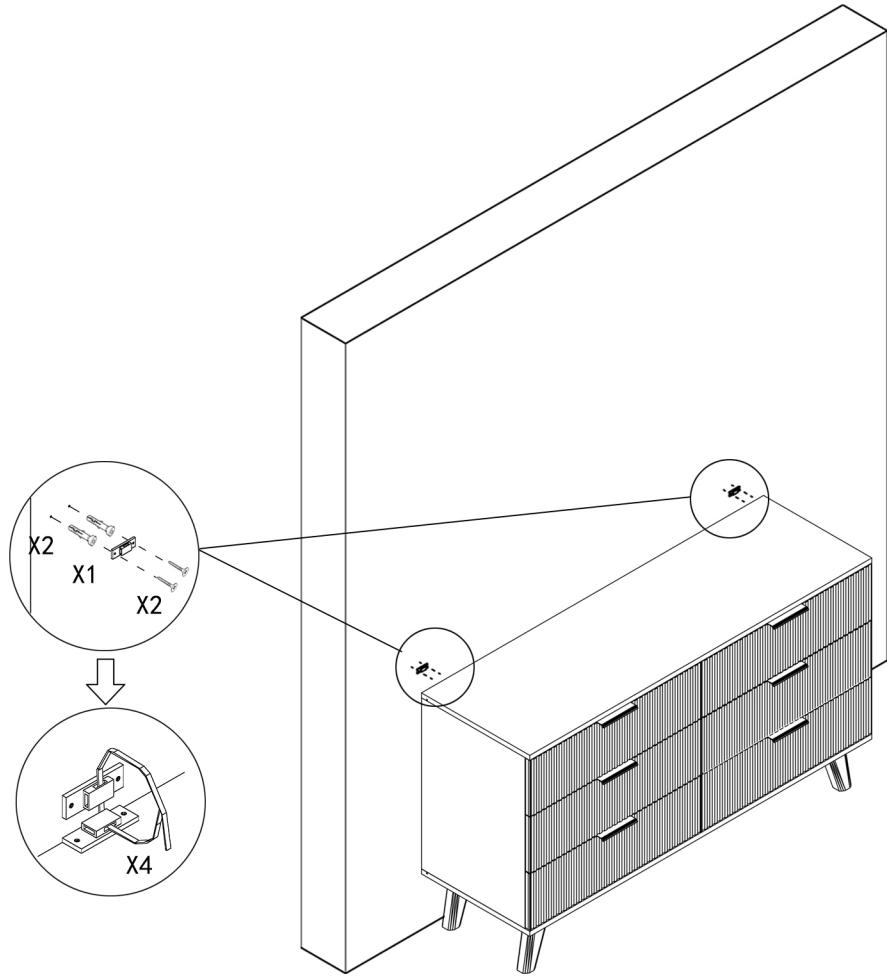

	X4*2
	X1*2
	X2*4

STEP 22

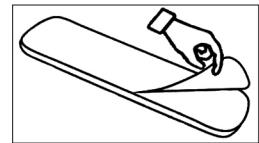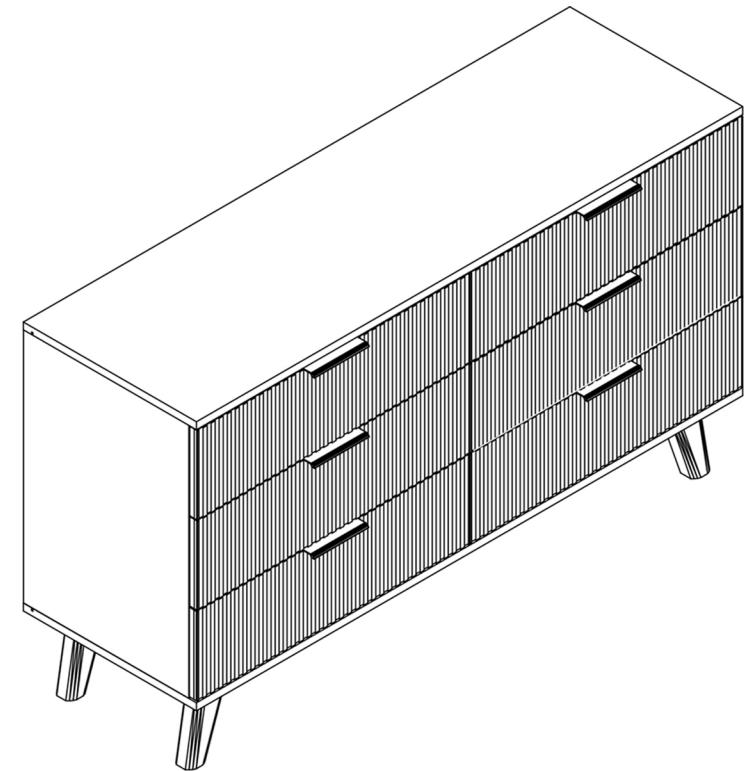

For the high gloss panel,
please peel off the plastic
film after assembling