



GTC4Lusso USA - Exhaust manifolds - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.


Copyright by Ferrari S.p.A. - P.IVA 00159560366

B7.02 Exhaust manifolds


Removing the exhaust manifolds

- Remove the engine compartment diagonal braces ( E2.04).
- Remove the front removable subframe ( E2.02).
- Remove the catalytic converters ( B7.03).


Right hand exhaust manifold

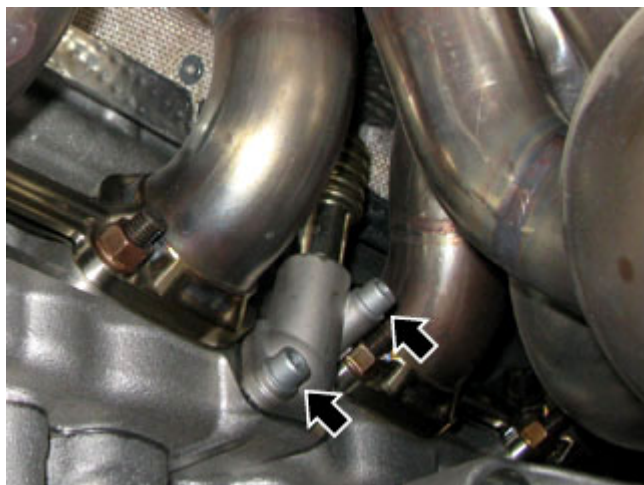


- Undo the screws indicated.

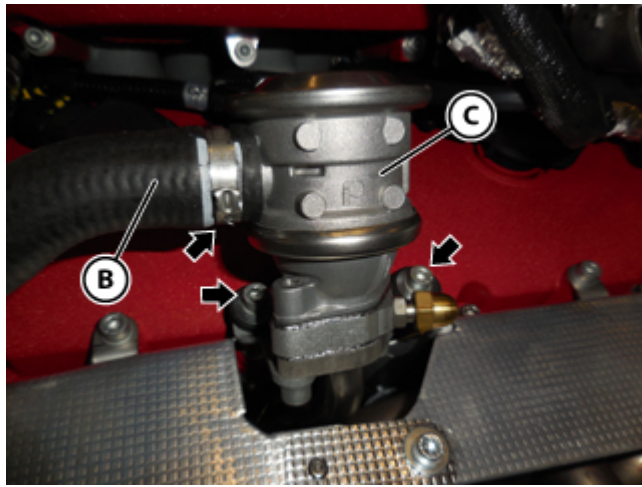

- Remove the indicated collar.
- Disconnect the pipe (B).
- Undo the screws indicated.
- Remove the valve (C) complete with bracket and pipe.

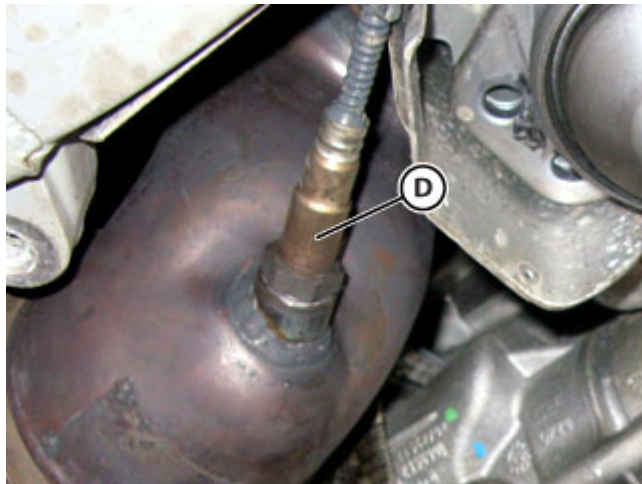


- Unscrew the oxygen sensor (D).

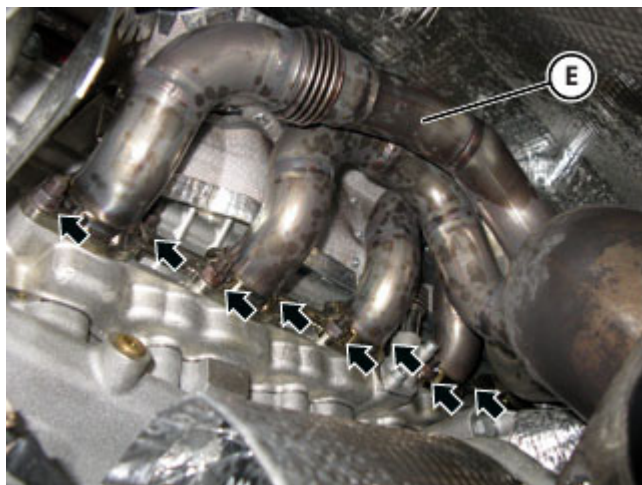

- Undo the nuts indicated.
- Remove the exhaust manifold (E) and the respective gaskets.

Left hand exhaust manifold

- Remove the starter motor ( F2.04).

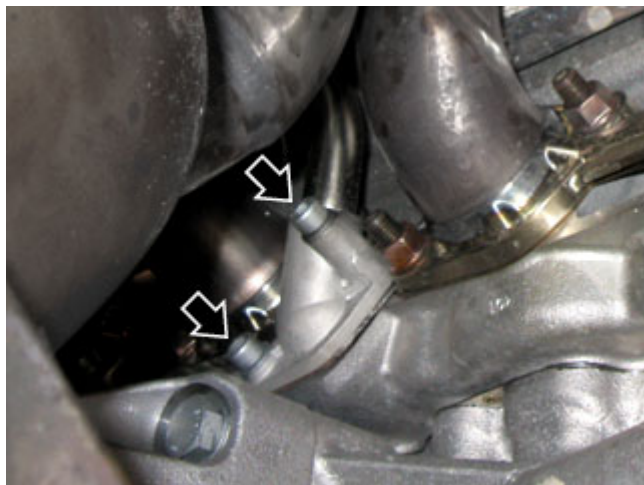


- Undo the screws indicated.




- Remove the indicated collar.
- Disconnect the pipe **(B)**.
- Undo the screws indicated.
- Remove the valve **(C)** complete with bracket and pipe.



- Undo the indicated screw.
- Disconnect the joint **(D)** from the steering box.

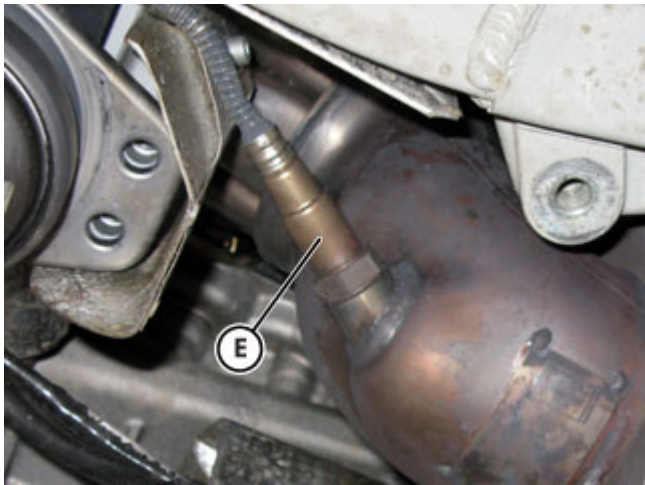

- Unscrew the oxygen sensor **(E)**.

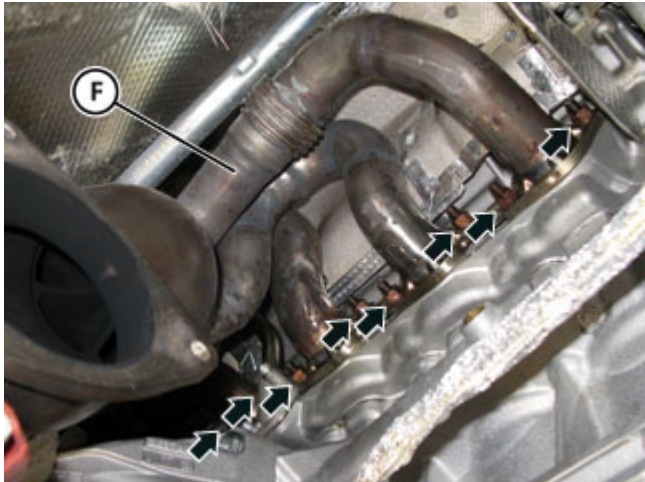


- Undo the nuts indicated.
- Remove the exhaust manifold **(F)** and the respective gaskets.


Refitting the exhaust manifolds

			
Tightening torque		Nm	Class
Fastening the exhaust manifolds	Nut	30 Nm	B
Fastening oxygen sensors	Oxygen sensor	50 Nm	B
Fastening secondary air valves	Screw	10 Nm	B
Fastening steering column	Screw	30 Nm	B

Right hand exhaust manifold

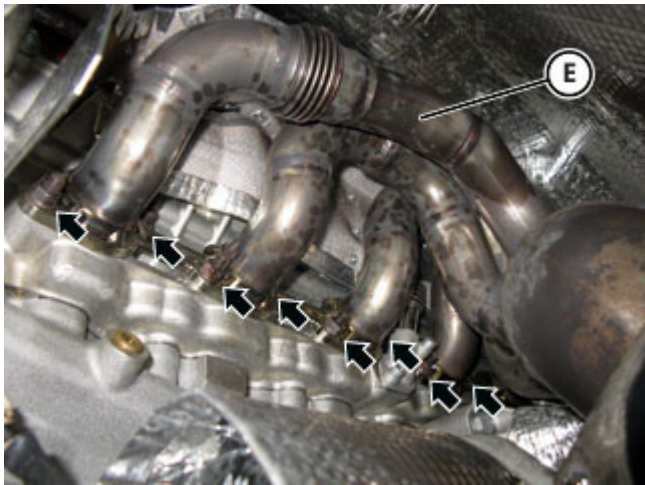


- Check that the mating surfaces between the cylinder head, the gasket and the manifold are completely flat. If necessary, remove any encrustation or gasket residue.
- Replace and refit the gaskets.
- Fit the exhaust manifold (**E**).
- Lubricate the stud bolts with copper based grease **COPASLIP** for high temperatures.
- Dispose of the old nuts indicated and fit and tighten new nuts.

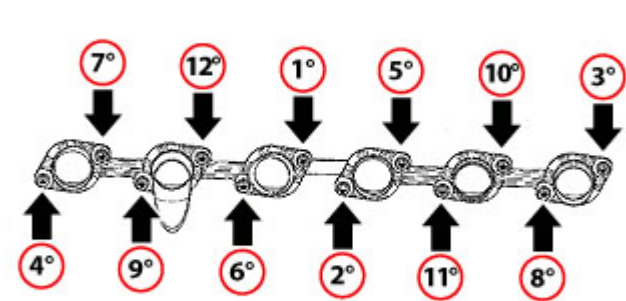


- Definitively tighten the indicated nuts in the sequence given.

Tightening torque	Nm	Class
Nut	30 Nm	B

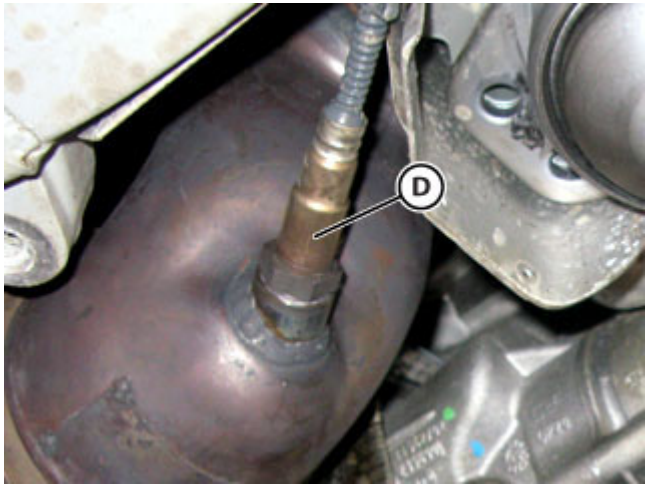

- Screw on the oxygen sensor (**A**).


Tightening torque	Nm	Class
Oxygen sensor	50 Nm	B

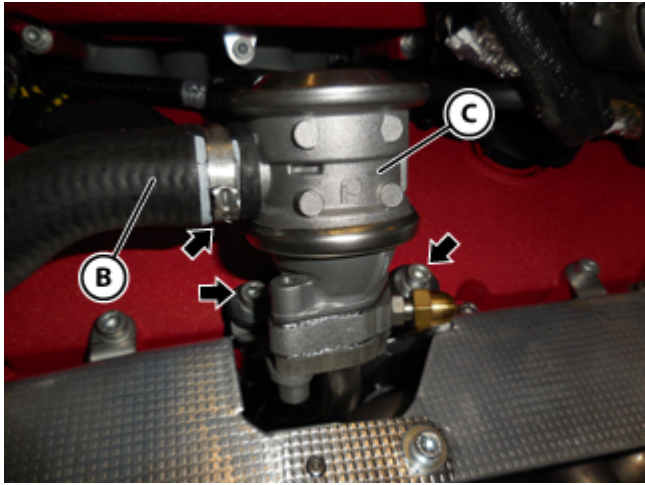

- Replace the pipe seal of the valve **(C)**.
- Fit the valve **(C)** complete with bracket and pipe.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	10 Nm	B


- Connect the pipe **(B)**.
- Fit and tighten a new collar as indicated.

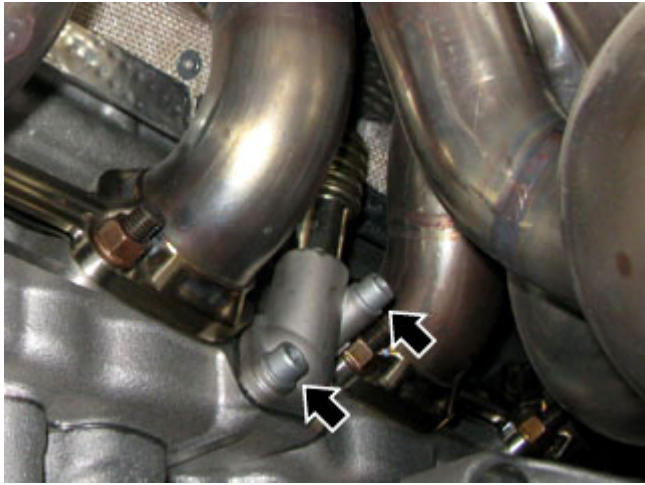

- Tighten the screws indicated.


		
Tightening torque	Nm	Class
Screw	10 Nm	B

Left hand exhaust manifold

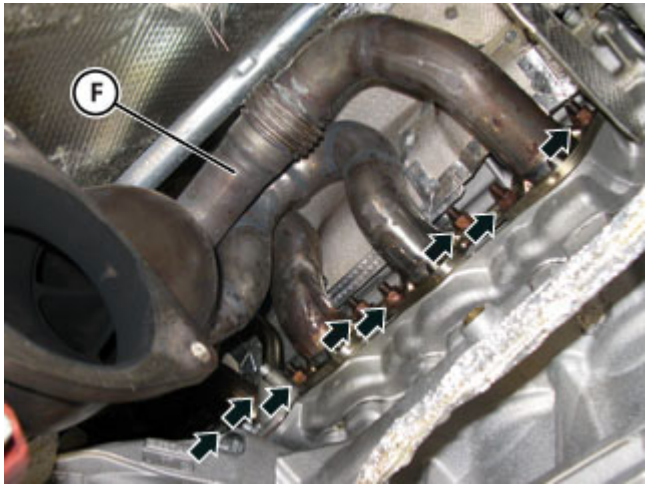


- Check that the mating surfaces between the cylinder head, the gasket and the manifold are completely flat. If necessary, remove any encrustation or gasket residue.
- Dispose of the old metal gasket and refit a new component.
- Lubricate the stud bolts with copper based grease **COPASLIP** for high temperatures.
- Fit the exhaust manifold **(F)**.
- Dispose of the old nuts indicated and fit and tighten new nuts.

- Definitively tighten the indicated nuts in the sequence given.

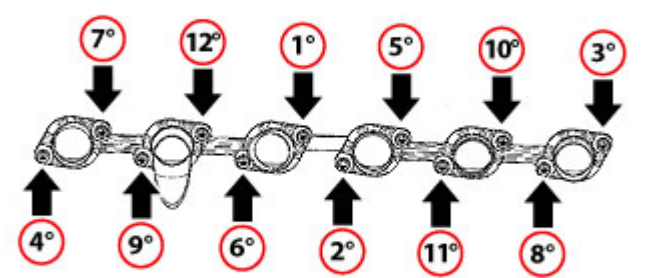

		
Tightening torque	Nm	Class
Nut	30 Nm	B

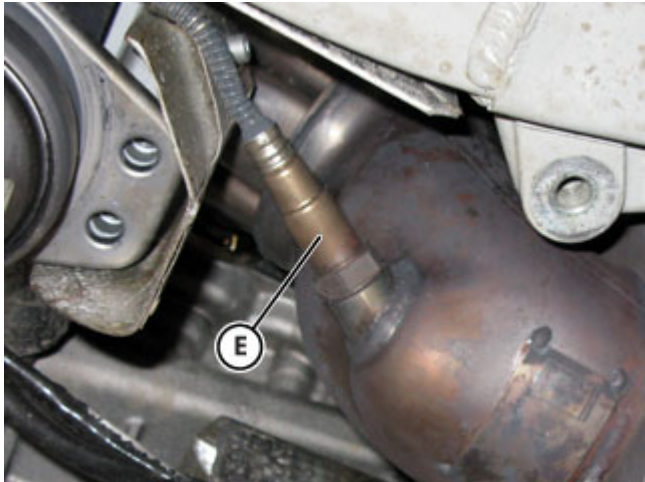

- Fit and tighten the oxygen sensor (E).

		
Tightening torque	Nm	Class
Oxygen sensor	50 Nm	B



- Connect the joint (D) to the steering box.
- Tighten the indicated screw.


		
Tightening torque	Nm	Class
Screw	30 Nm	B



- Replace the pipe seal of the valve (C).
- Fit the valve (C) complete with bracket and pipe.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	10 Nm	B

- Connect the pipe (B).
- Fit and tighten a new collar as indicated.

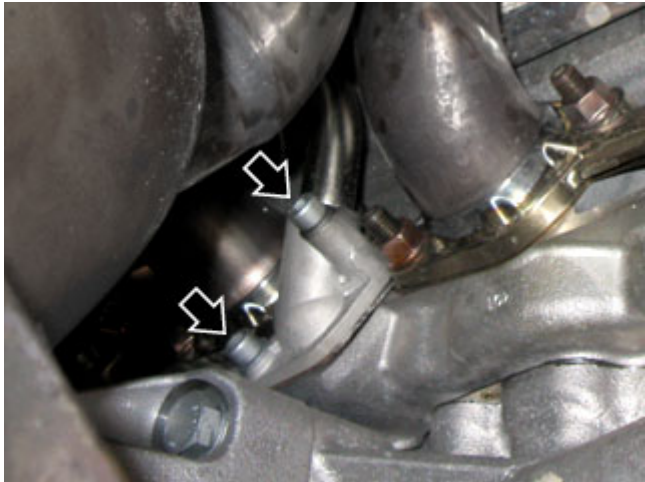

		
Tightening torque	Nm	Class
Screw	10 Nm	B

- Refit the starter motor ( F2.04).
- Refit the catalytic converters ( B7.03).
- Refit the front removable subframe ( E2.02).
- Refit the engine compartment diagonal braces ( E2.04).