



GTC4Lusso USA - Brake pads - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

D3.03 Brake pads

Removing the front brake pads


- Disconnect the battery ( F2.01).
- Remove the complete wheels ( D2.01).
-  Remove the front wheels.

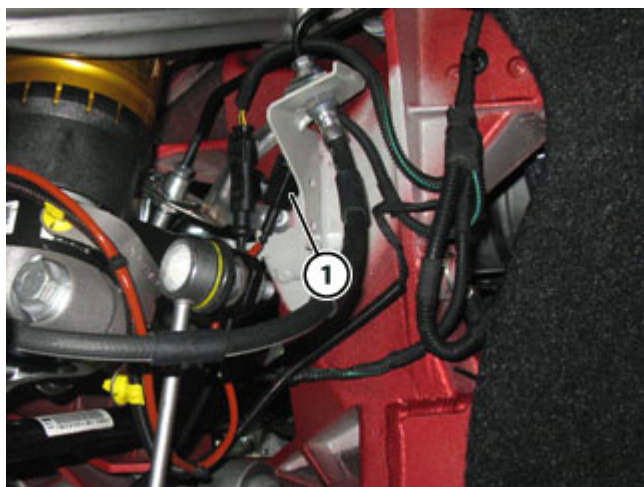

- Detach and disconnect the brake pad wear sensor connector **(1)**, releasing the cable from the relative cable ties.



- Undo the indicated nut.

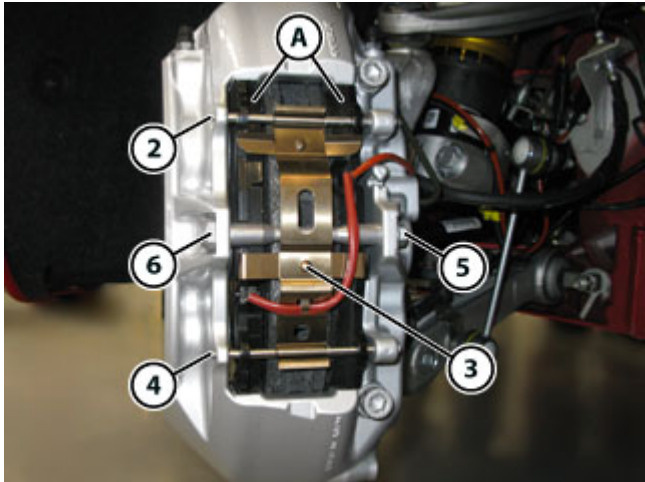


- Using a suitable punch and mallet, remove the pin (2).
- Remove the spring (3).
- Using a suitable punch and mallet, remove the pin (4).
- Undo the screw (5).
- Remove the pin (6).
- Remove the pads (A).

Refitting the front brake pads

			
Tightening torque		Nm	Class
Fastening central pin on front brake pads	Screw	27 ÷ 33 Nm	0


- Separate the calliper pistons using the tool (FACOM DF.6).

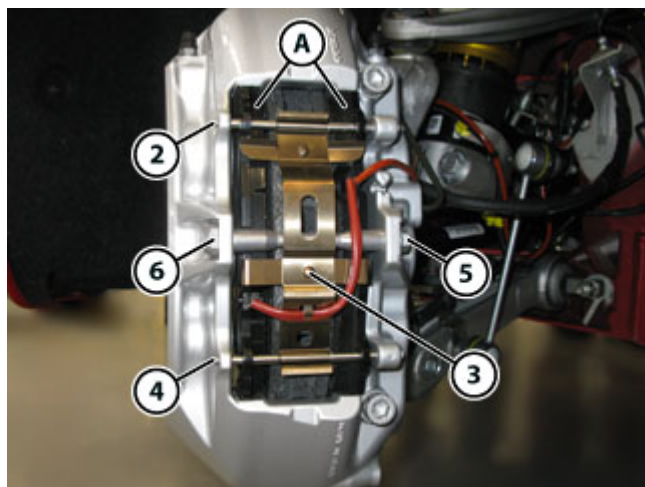

- Position and fit the pads **(A)** correctly in the respective seats.
- Install the pin **(6)**.
- Tighten the screw **(5)**.

		
Tightening torque	Nm	Class
Screw	27 ÷ 33 Nm	0

- Using a suitable punch and mallet, fit the pin **(4)**.
- Fit the spring **(3)**.
- Using a suitable punch and mallet, fit the pin **(2)**.
- Tighten in the indicated nut, fitting the relative rubber lined clip.

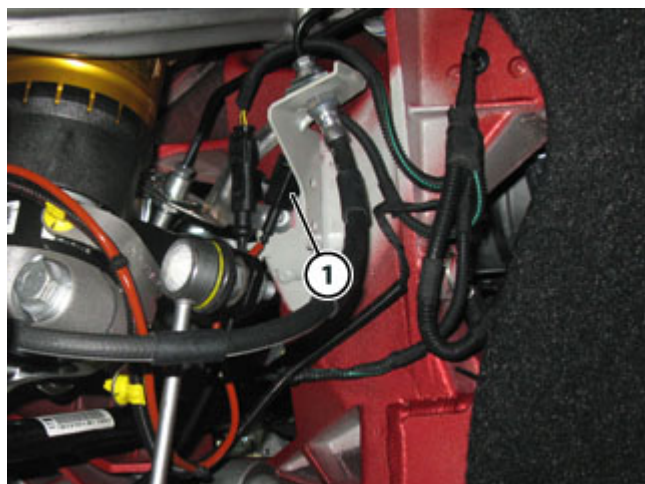

- Connect and fasten the brake pad wear sensor connector **(1)**, securing the cable correctly with new cable ties.

➤ Refit the complete wheels ( **D2.01**).
 ➤ Refit the front wheels.

➤ Connect the battery ( **F2.01**).


➤ Only in the case of replacing the pads. Bed-in the CCM brake pads ( **D3.03**).

Removing the rear brake pads

- Disconnect the battery ( F2.01).
- Remove the complete wheels ( D2.01).
-  Remove the rear wheels.




- Detach and disconnect the brake pad wear sensor connector (1), releasing the cable from the relative cable ties.

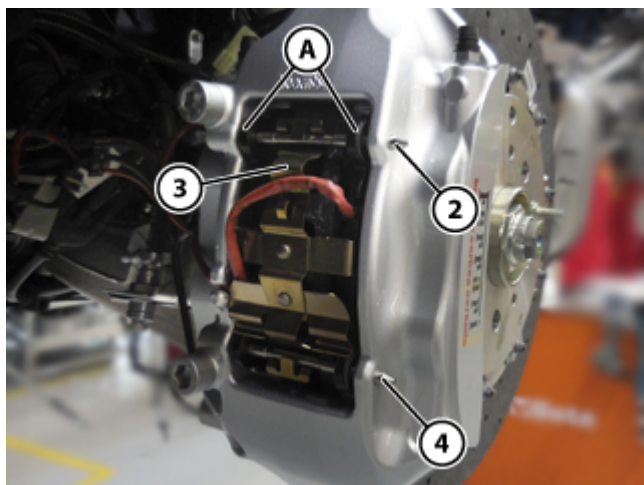


- Using a suitable punch and mallet, remove the pin (2).
- Remove the spring (3).
- Using a suitable punch and mallet, remove the pin (4).
- Remove the pads (A).

Refitting the rear brake pads

- Separate the calliper pistons using the tool (FACOM DF.6).

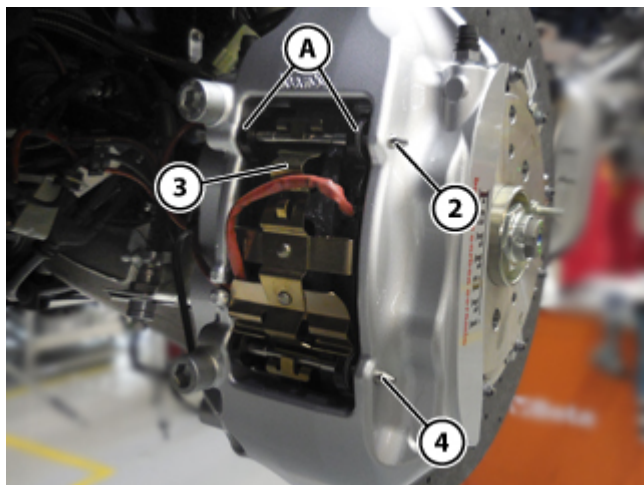

- Position and fit the pads (A) correctly in the respective seats.
- Using a suitable punch and mallet, fit the pin (4).
- Fit the spring (3).
- Using a suitable punch and mallet, fit the pin (2).

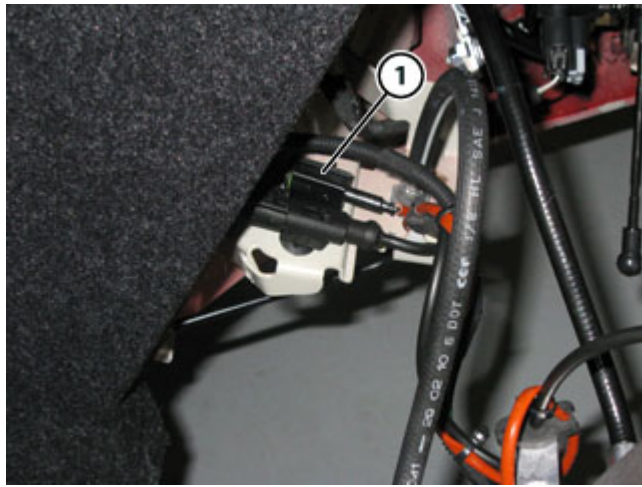

- Connect and fasten the brake pad wear sensor connector **(1)**, securing the cable correctly with new cable ties.

➤ Refit the complete wheels (🔧 D2.01).

➤ Refit the rear wheels.

➤ Connect the battery (🔧 F2.01).

➤ Only in the case of replacing the pads. Bed-in the CCM brake pads (🔧 D3.03).

Bedding-in CCM brake pads

The following procedure is applicable for both CCM1 and CCM2 brake systems and must be performed EACH TIME the CCM brake pads and/or CCM brake discs are replaced.

For vehicles intended for ROAD use

- Brake **4 times** from **80 Km/h** to **30 Km/h** with constant pressure on the brake pedal and without activating the ABS system.
- Allow the brake system to cool by driving at **80 Km/h** for approximately **180 seconds**.
- Brake **6 times** from **130 Km/h** to **30 Km/h** with constant pressure on the brake pedal and without activating the ABS system.
- Allow the brake system to cool by driving at **80 Km/h** for **180 seconds**.
- Brake **6 times** from **130 Km/h** to **30 Km/h** with constant pressure on the brake pedal and without activating the ABS system.
- Allow the brake system to cool by driving at **80 Km/h** for **180 seconds**.
- Brake **6 times** from **130 Km/h** to **30 Km/h** with constant pressure on the brake pedal and without activating the ABS system.
- Allow the brake system to cool by driving at **80 Km/h** for **240 seconds**.
- Brake **6 times** from **130 Km/h** to **30 Km/h** with constant pressure on the brake pedal and without activating the ABS system.
- Allow the brake system to cool by driving at **80 Km/h** for **240 seconds**.



The ABS system must be triggered during the last set of braking runs.

- Brake **6 times** from **130 Km/h** to **30 Km/h** with constant pressure on the brake pedal and without activating the ABS system



If the ABS system does not activate after the test braking cycle

- Allow the brake system to cool by driving at **80 Km/h** for **240 seconds**.



If the ABS system does not activate after the test braking cycle



Allow the brake system to cool completely before using the vehicle again after the bedding-in procedure to ensure maximum braking efficacy.

- As soon as you notice an increase in brake pedal travel, stop the car and wait for the brake system to cool completely.

For vehicles intended for TRACK use

- Brake **9 times** from **130 Km/h** to **30 Km/h** with constant pressure on the brake pedal and without activating the ABS system.
- Allow the brake system to cool by driving at **80 Km/h** for approximately **240 seconds**.
- Brake **3 times** from **200 Km/h** to **30 Km/h** with constant pressure on the brake pedal and without activating the ABS system.
- Allow the brake system to cool by driving at **80 Km/h** for **300 seconds**.



Allow the brake system to cool completely before using the vehicle again after the bedding-in procedure to ensure maximum braking efficacy.

- As soon as you notice an increase in brake pedal travel, stop the car and wait for the brake system to cool completely.