



GTC4Lusso USA - Brake discs - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

D3.05 Brake discs

Removing the brake discs



Check the discs carefully for damage and cleanliness before fitting.

The friction surface of the discs must be clean and free of stains or residue of oily or silicone-based substances.

Discs with evident signs of dirt must be cleaned appropriately.


The edges of the discs must be in good condition, with no cracks or other signs of damage.

Discs with evident signs of damage must be replaced.



Always replace the CCM brake discs on both sides of the same axle.

- Remove the complete wheels ( D2.01).
- To remove the front brake discs. Remove the front brake callipers ( D3.04).
- To remove the rear brake discs. Remove the rear brake callipers ( D3.04).
-  DO NOT disconnect the brake fluid pipe from the calliper.

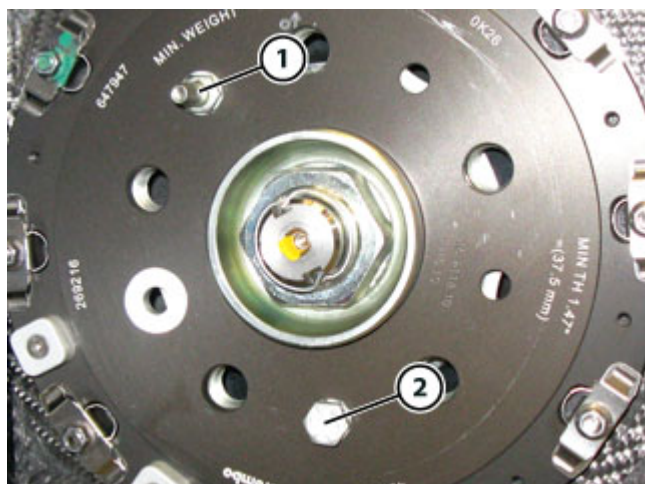

- Undo the pin (1).
- Undo the screw (2).
- Remove the disc.

Refitting the brake discs



Check the discs carefully for damage and cleanliness before fitting.

The friction surface of the discs must be clean and free of stains or residue of oily or silicone-based substances.

Discs with evident signs of dirt must be cleaned appropriately.


The edges of the discs must be in good condition, with no cracks or other signs of damage.

Discs with evident signs of damage must be replaced.



Always replace the CCM brake discs on both sides of the same axle.

- Check that the disc is in proper working condition and inspect the disc contact surface, even if new.
- If any dirt, stains or greasy/oily patches are noted on the disc surface, clean thoroughly with a regular solvent, degreaser and/or soap and water.

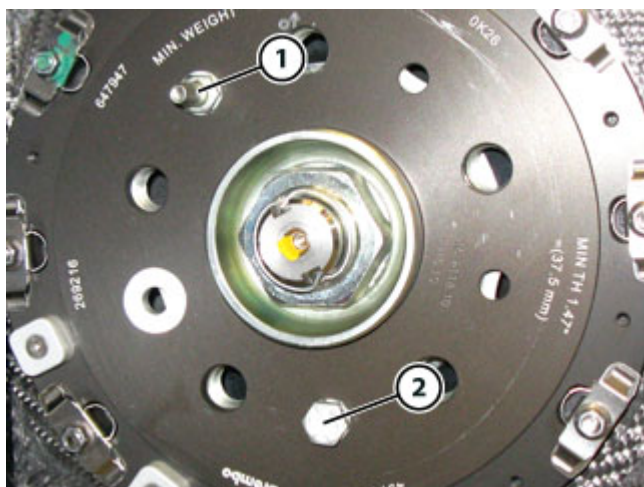

- Fit the disc.
- Use the wheel fastener stud bolts to centre the disc on the wheel bearing.
- Hand tighten the screw (2).
- Tighten the pin (1).
- Remove the stud bolts used previously to centre the disc.

- Refit the front brake callipers (D3.04).
- Refit the rear brake callipers (D3.04).
- Refit the complete wheels (D2.01).
- Only in the case of replacing the discs. Bed-in the CCM brake pads (D3.03).

Cleaning CCM brake discs



Always use standard dust and dirt protection measures, such as safety eyewear, face masks and an extractor system, when performing any cleaning work on the discs.


Wear plastic gloves when handling discs.

- Remove the brake discs (D3.05).
- Remove dirt from the brake hat and the braking surface of the rotor with a clean cloth and acetone (C3 H6 O) or alcohol (DO NOT wash).



DO NOT use a drill to remove stubborn material from the holes.
DO NOT countersink the holes.
DO NOT grind the discs.
DO NOT widen the holes with a drill.

- Remove any material from the cross-drilled ventilation holes in the disc with a metal pin or a screwdriver no larger than **5 mm** in diameter.

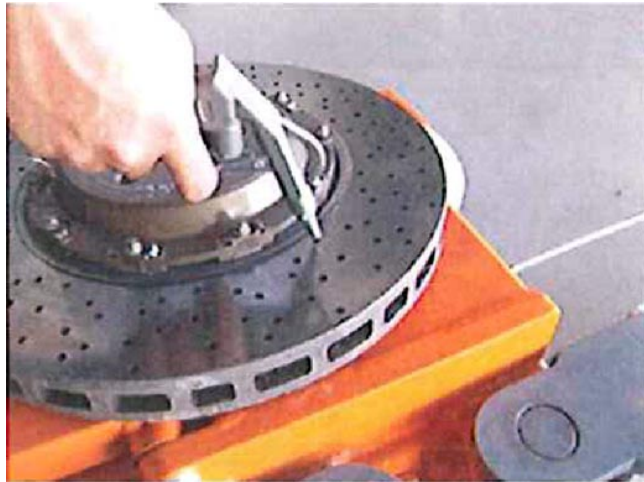

- Blow compressed air into the ventilation holes.

- If evident signs of moisture are found on the discs, place the discs in an oven at a constant temperature of **120 to 150°C** for **2 hours**.