



GTC4Lusso USA - ABS electrohydraulic unit - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

D3.07 ABS electrohydraulic unit

Removing the ABS electrohydraulic unit

- Disconnect the battery (🔑 F2.01).
- Remove the engine compartment cosmetic shields (🔑 E3.14).
- Remove the left hand lateral cosmetic shield.

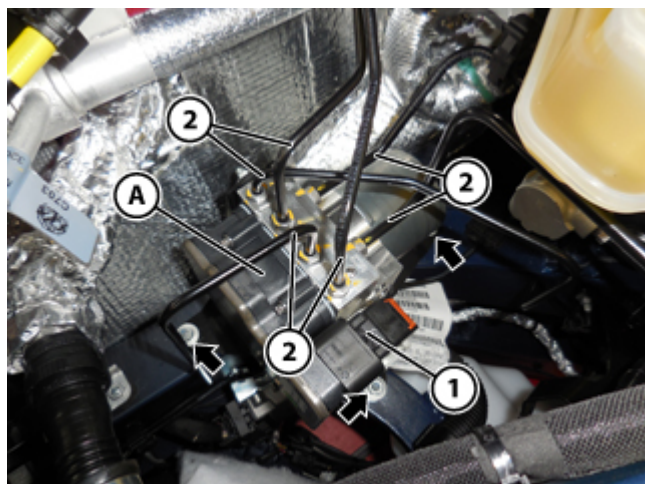

- Disconnect the connector (1).



Hydraulic brake fluid is corrosive.

Contact with brake fluid may cause severe injury or damage to painted parts of the vehicle.


In the event of skin contact with fluid, wash the respective part of the body immediately with plenty of water.

In the event of contact between the fluid and painted parts of the vehicle, wash and dry the respective areas immediately.

- Disconnect the pipes (2), undoing the respective unions.
- Move the pipes (2) out of the way, taking care not to bend them.
- Clean off any brake fluid.
- Undo the nuts indicated.
- Remove the ABS electrohydraulic unit (A) complete with mounting bracket.

Refitting the ABS electrohydraulic unit

			
Tightening torque		Nm	Class
Fastening the ABS electrohydraulic unit	Nut	9 Nm	B
Fastening brake fluid pipes onto ABS electrohydraulic unit	Union	16 Nm	B

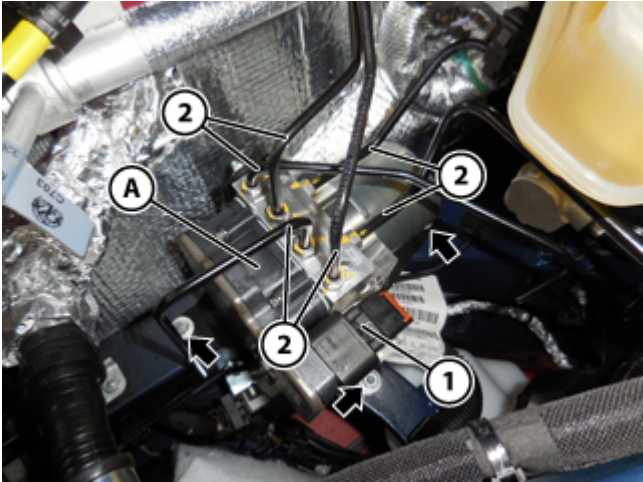

- Fit the ABS electrohydraulic unit **(A)**.
- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	9 Nm	B

- Fit and connect the pipes **(2)**, tightening the respective unions.

		
Tightening torque	Nm	Class
Union	16 Nm	B

- Connect the connector **(1)**.

- Connect the battery ( **F2.01**).
- Fill and bleed the brake system ( **D3.10**).
- Refit the engine compartment cosmetic shields ( **E3.14**).
-  Refit the left hand lateral cosmetic shield.