



GTC4Lusso USA - Horn - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.


Copyright by Ferrari S.p.A. - P.IVA 00159560366

F2.08 Horn

Replacing the horn

			
Tightening torque		Nm	Class
Fastening horn mounting bracket	Screw	12 Nm	B

- Disconnect the battery ( F2.01).
- Remove the front wheelhouses ( E3.05).
-  Remove the front element of the front right hand wheelhouse.

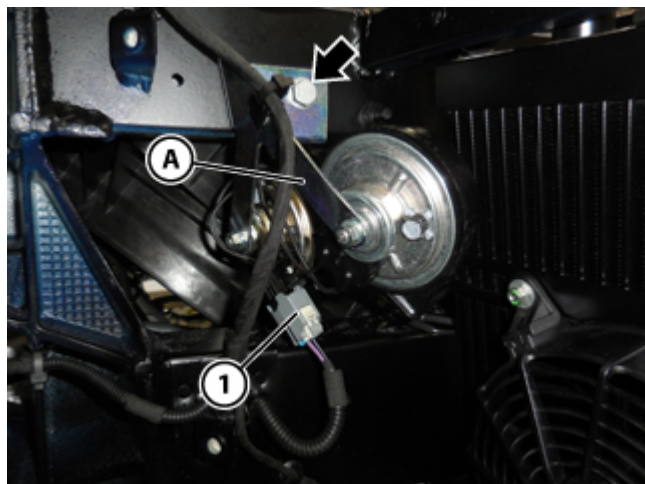

- Disconnect the connector (1).
- Undo the indicated screw.
- Remove the horn (A) and replace.
- Fit the new horn (A).
- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	12 Nm	B

- Connect the connector (1).

- Refit the front wheelhouses ( E3.05).
-  Refit the front element of the front right hand wheelhouse.
- Connect the battery ( F2.01).

