



GTC4Lusso USA - Park assistance - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

F4.05 Park assistance

Replacing the parking sensors

- Disconnect the battery ( F2.01).
- For front sensors only. Remove the front bumper ( E3.03).
- For rear sensors only. Remove the rear bumper ( E3.04).

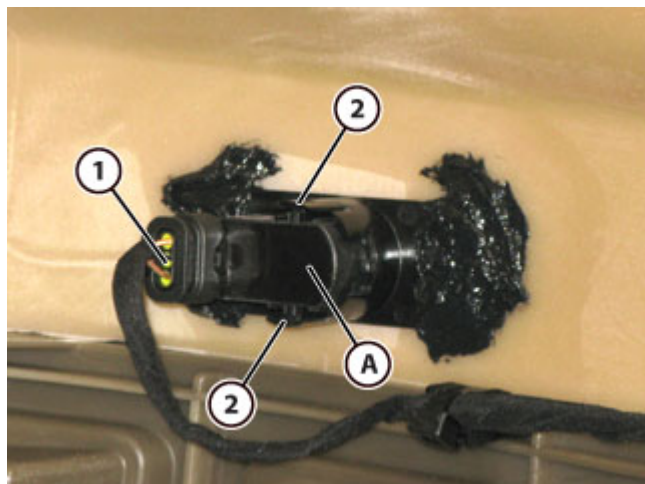


- Disconnect the connector (1).
- Lift the fastener tabs (2) and remove the parking sensor (A).
- Install the new parking sensor (A) correctly between the fastener tabs (2).
- Connect the connector (1).

- For rear sensors only. Refit the rear bumper ( E3.04).
- For front sensors only. Refit the front bumper ( E3.03).
- Connect the battery ( F2.01).


Replacing the parking camera

Front parking camera


- Remove the front bumper ( E3.03).

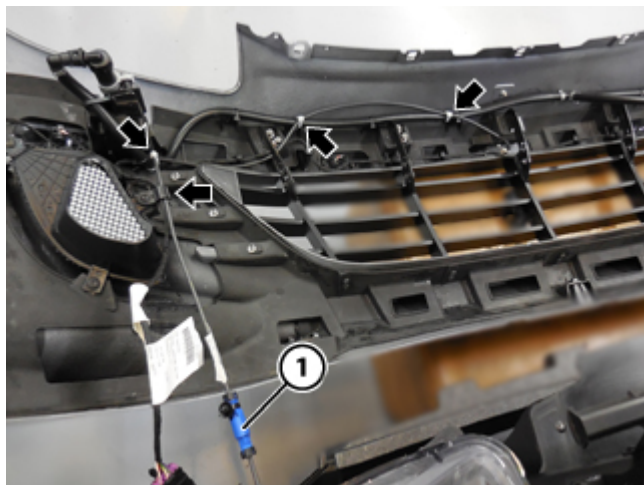

- Disconnect the connector **(1)**.
- Release the cable from the indicated clamps.

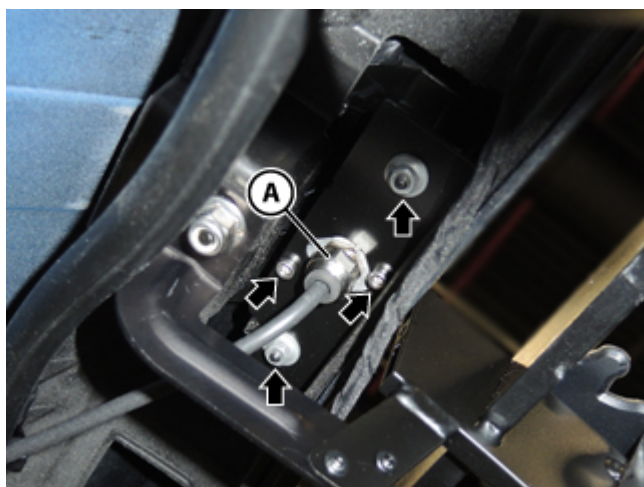

- Undo the indicated screws fastening the bracket.
- Undo the indicated screws fastening the parking camera to the bracket.
- Replace the parking camera **(A)**, detaching the respective cable.
- Fit the new parking camera **(A)**.
- Tighten the indicated screws fastening the parking camera to the bracket.
- Tighten the indicated screws fastening the bracket.

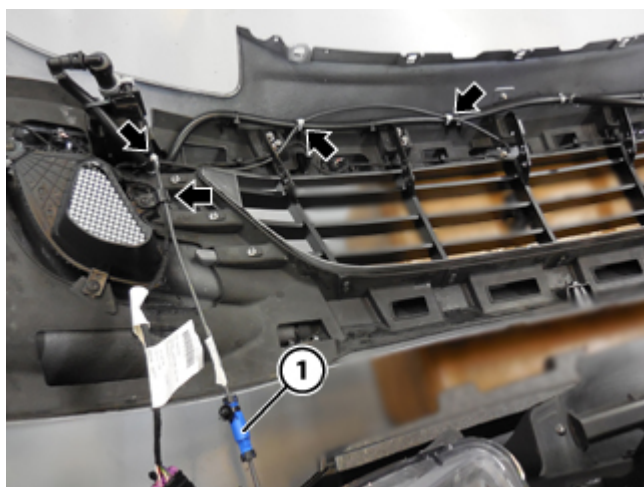


- Fasten the cable to the indicated clamps.
- Connect the connector **(1)**.

- Refit the front bumper (🔧 E3.03).

Rear parking camera

- Remove the rear bumper (🔧 E3.04).

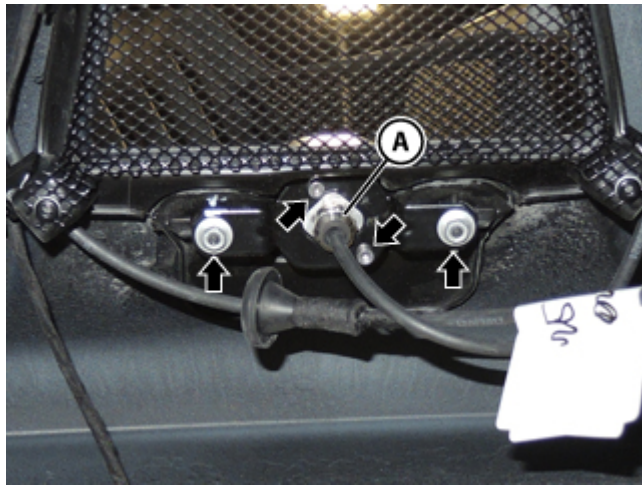

- Undo the indicated screws fastening the bracket.
- Undo the indicated screws fastening the parking camera to the bracket.
- Replace the parking camera **(A)**, detaching the respective cable.
- Fit the new parking camera **(A)**.
- Tighten the indicated screws fastening the parking camera to the bracket.
- Tighten the indicated screws fastening the bracket.

- Refit the rear bumper (🔑 E3.04).

➤ Connect the battery (🔑 F2.01).