



GTC4Lusso USA - AC system expansion valve - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.
Copyright by Ferrari S.p.A. - P.IVA 00159560366

F5.06 AC system expansion valve

Replacing the expansion valve

			
Tightening torque		Nm	Class
Fastening Freon pipes	Nut	16 Nm	B
	Screw	9 Nm	B
	Nut	24 Nm	B
	Screw	5 Nm	B


- Discharge the air conditioning and heating system ( F5.11).
- Remove the windscreen wiper unit ( E3.10).

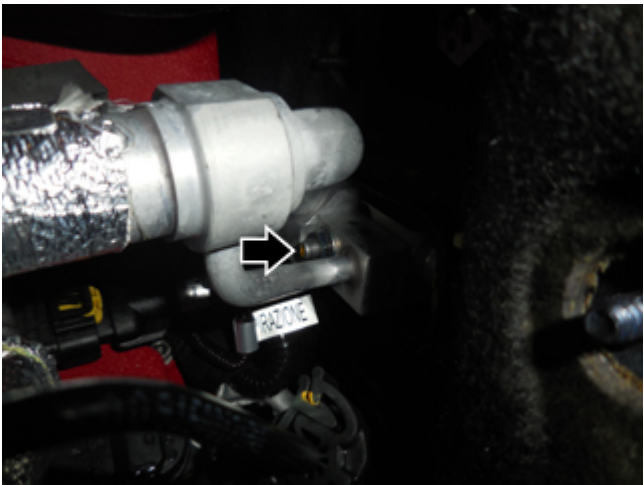

- Undo the indicated nut.




- Undo the indicated nut.

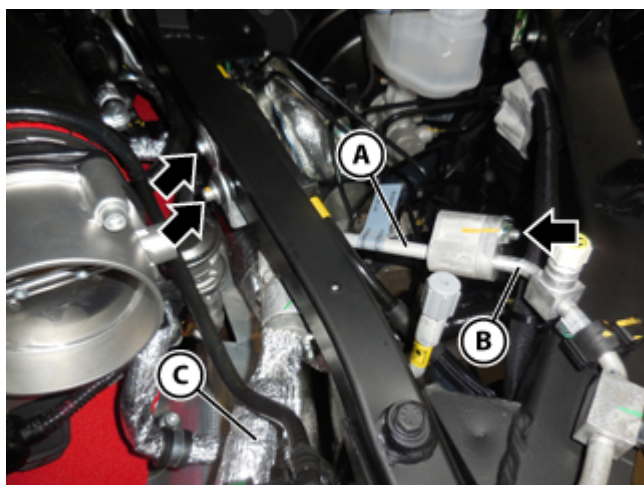

- Undo the screws indicated.
- Undo the indicated nut.
- Disconnect the pipe **(A)** and remove.
- Plug the pipes **(B)** and **(C)**.




- Undo the screws indicated.
- Remove and replace the expansion valve **(D)**.

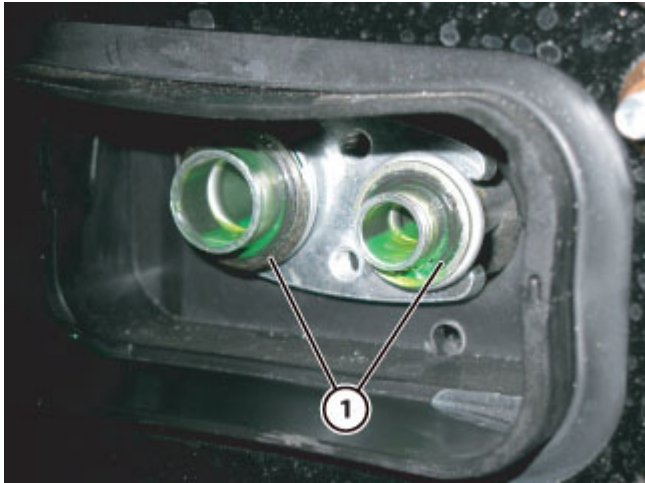

- Replace the seals (1), lubricating with specific **R134A** oil for refrigerant systems.



- Fit the new expansion valve (D) completely in its seat, taking care not to damage the gaskets.
- Tighten the screws indicated.

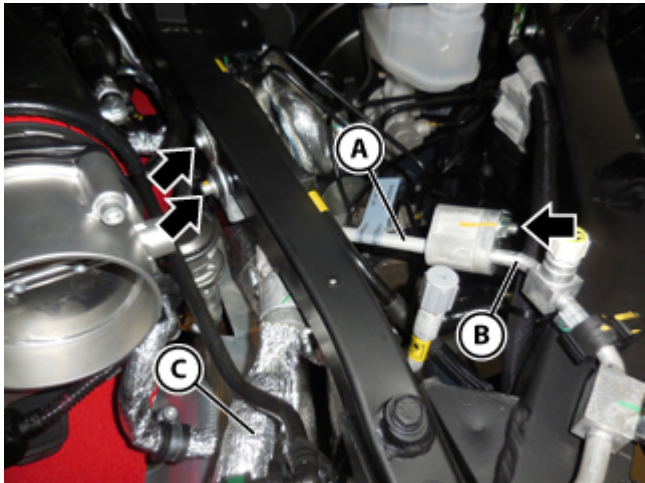

- Replace the seals for the pipes (B) and (C) and lubricate with specific **R134A** oil for refrigerant systems.
- Fit and connect the pipe (A).
- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	16 Nm	B

- Tighten the screw fastening the indicated heat shield (A) of the pipe.
- Tighten the indicated screw.


		
Tightening torque	Nm	Class
Screw	9 Nm	B



- Tighten the indicated nut.



Tightening torque	Nm	Class
Nut	16 Nm	B

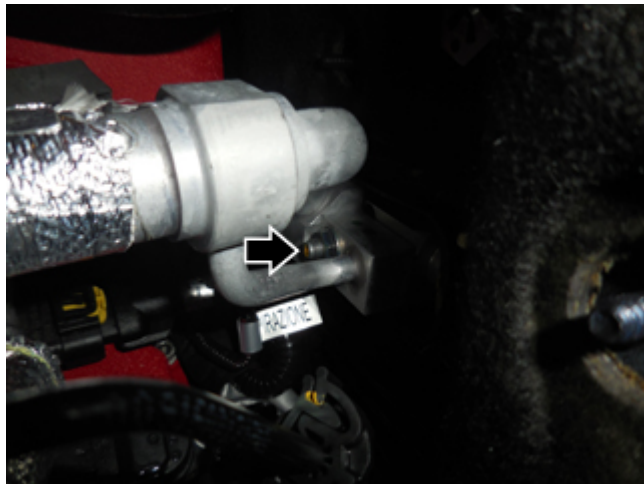

- Tighten the indicated nut.



Tightening torque	Nm	Class
Nut	16 Nm	B

- Refit the windscreen wiper unit (🔧 E3.10).
- Charge the air conditioning and heating system (🔧 F5.11).