



GTC4Lusso USA - AC system recirculation pump - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


F5.09 AC system recirculation pump

Removing the recirculation pump



After loosening or removal, the Caillau Visa hose clamps must be replaced with Mikalor worm drive hose clamps, following the instructions given in Technical Information 2054 of December 2012.

- Disconnect the battery ( F2.01).
- Drain the engine cooling system ( B6.07).
- Remove the flat undertray sections ( E3.13).
-  Remove the front flat undertray section.

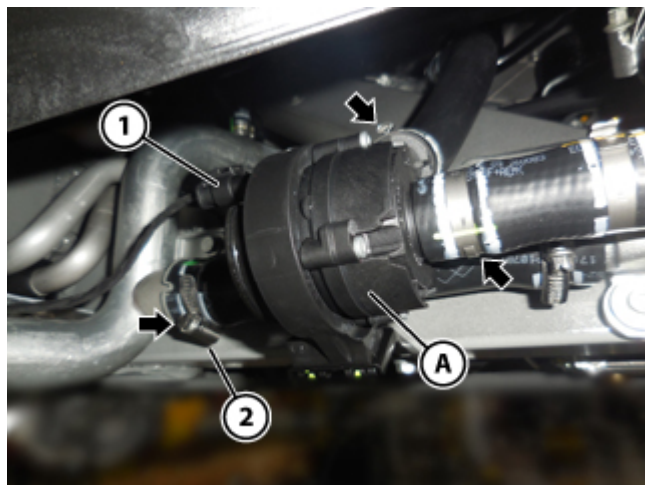


- Disconnect the connector (1).
- Remove the indicated clamps and disconnect the respective pipes.
- Loosen the clamp (2), undoing the indicated nut.
- Remove the recirculation pump (A).

Refitting the recirculation pump



After loosening or removal, the Caillau Visa hose clamps must be replaced with Mikalor worm drive hose clamps, following the instructions given in Technical Information 2054 of December 2012.

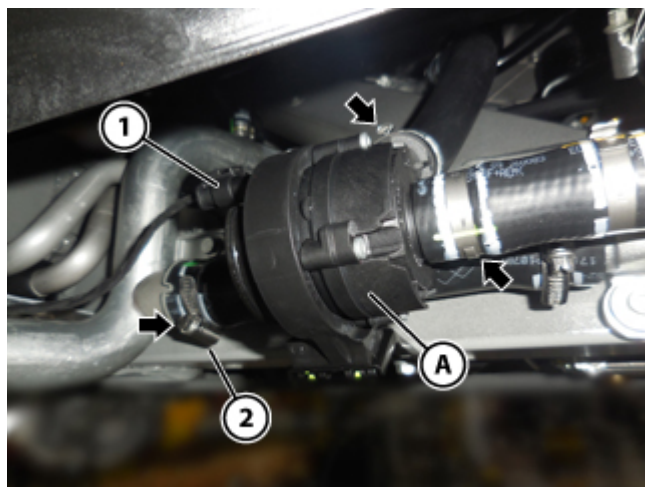

- Fit the recirculation pump **(A)**.
- Tighten the clamp **(2)**, tightening the respective nut indicated.
- Fit and tighten new clamps as indicated, connecting the respective pipes.
- Connect the connector **(1)**.

- Connect the battery (🔧 F2.01).
- Fill the engine coolant system (🔧 A3.07).
- Refit the flat undertray sections (🔧 E3.13).
- Refit the front flat undertray section.