

AMS lite
BIQU Enclosure


BQDry Mini
Installation Guide

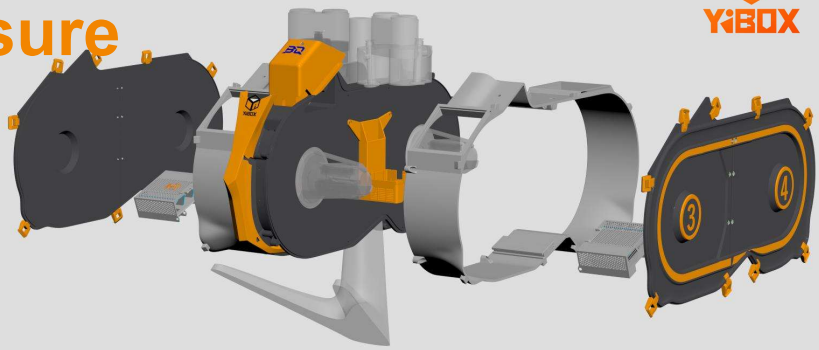

Exploded View

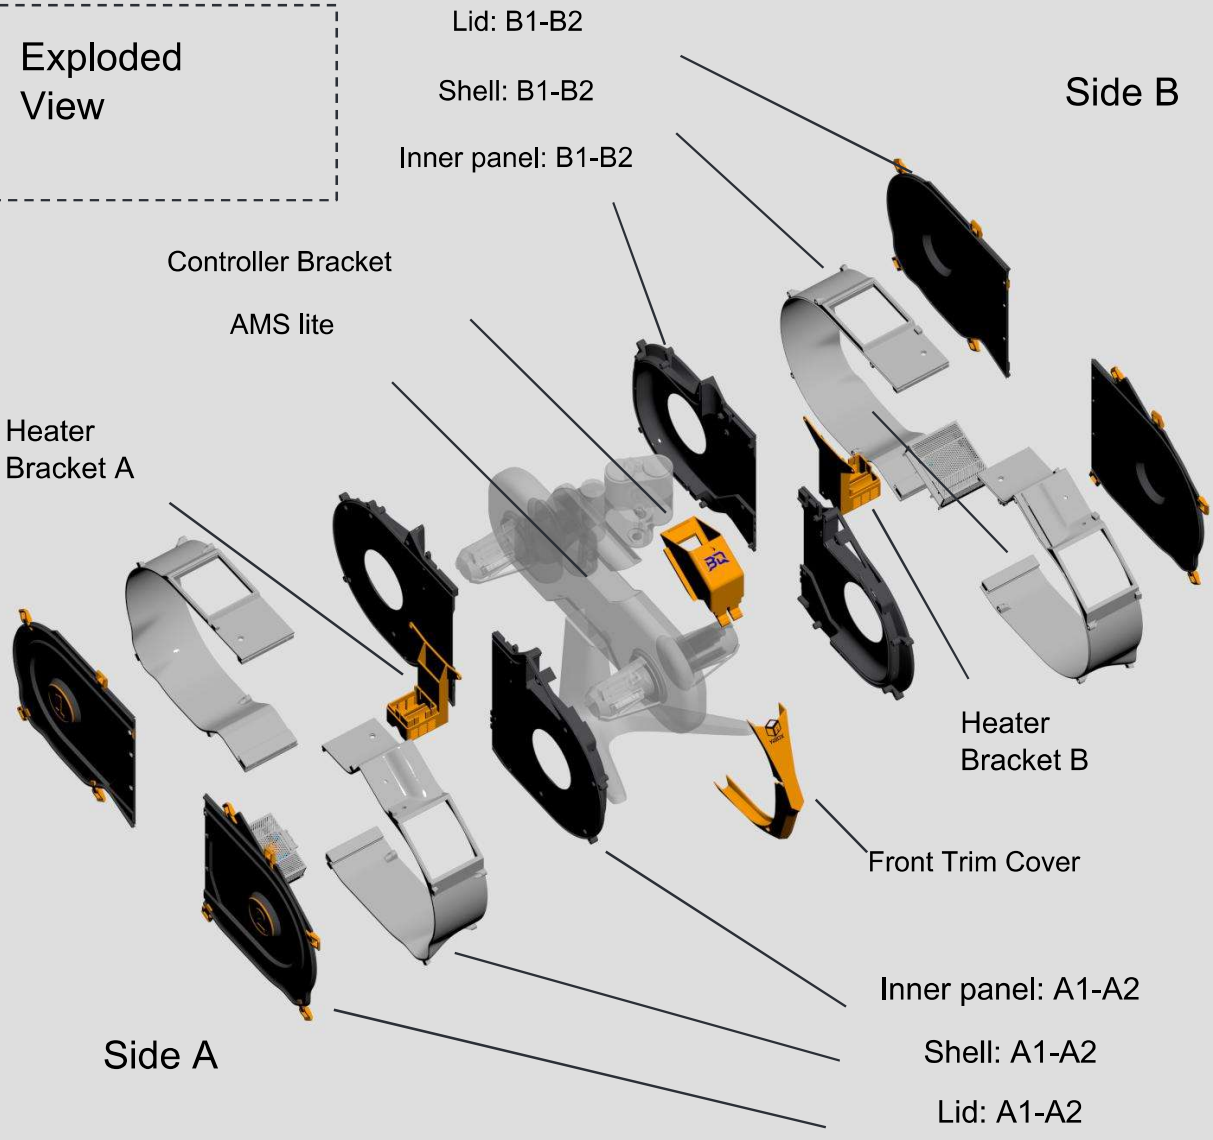


1. Inner Panel Assembly

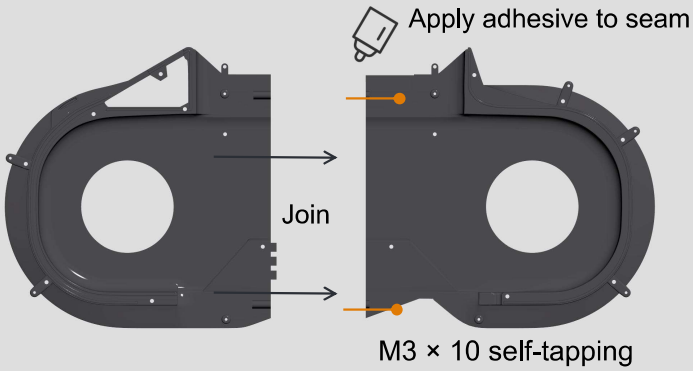


(1) Join the two inner panel halves.
(2) Secure with M3 × 10 self-tapping screws.
(3) Seal the seam with T9000 adhesive.

Repeat for the Side B inner panel.


2. Heater Bracket Installation

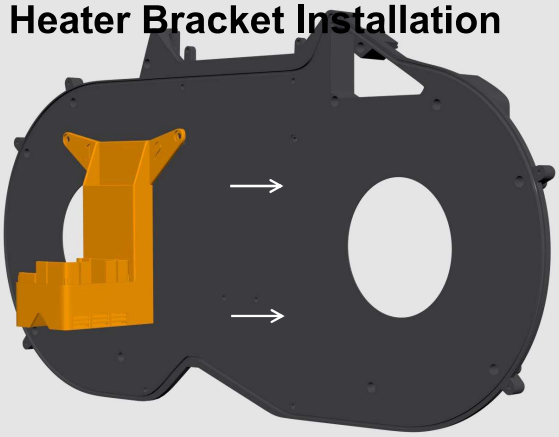

(1) Secure the base of the heater bracket to the inner panel from the rear using M3 × 12 screws.
Note: Parts marked "1, 2" are for Side A; "3, 4" are for Side B.

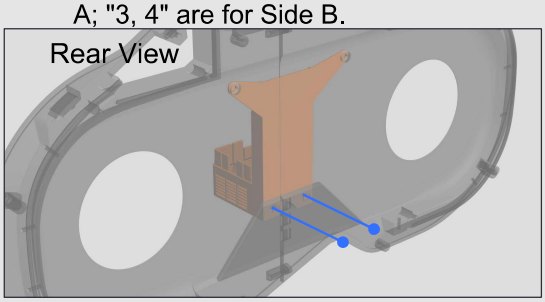



3. Shell Assembly

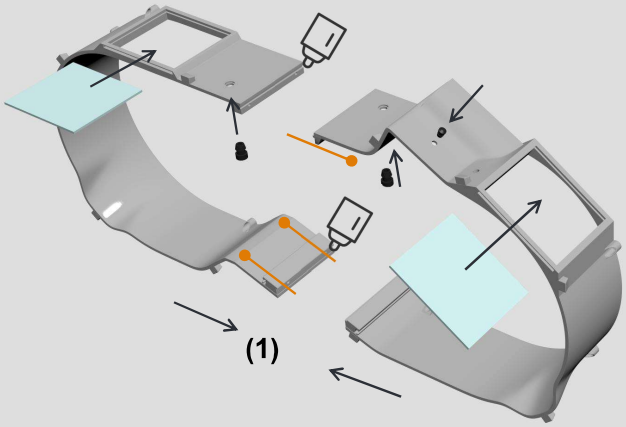

(1) Join the two shell halves.
(2) Apply T9000 adhesive in the groove at the joint.
(3) Secure with M3 × 10 self-tapping screws.
(4) Slide in the acrylic panel from the side. Seal the rear seam with T9000 adhesive.
(5) Insert the tube grommet and vent plug.


4. Shell-to-Panel Assembly

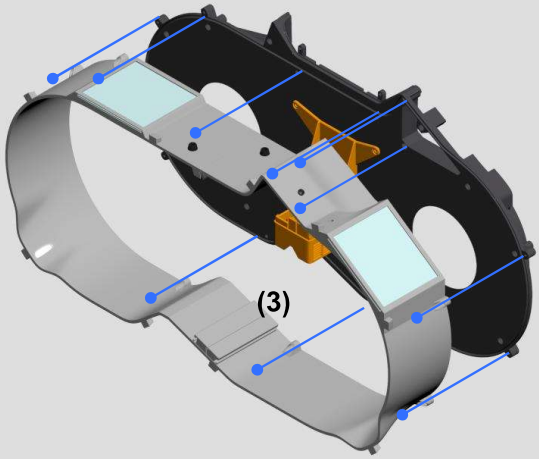

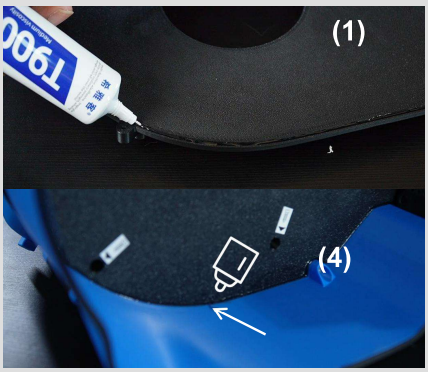

(1) Apply T9000 adhesive in the inner panel groove.
(2) Fit the assembled shell to the inner panel.
(3) Secure with M3 × 12 self-tapping screws.
(4) Apply another bead of T9000 along the inside seam for a tighter seal.


5. Lid Assembly

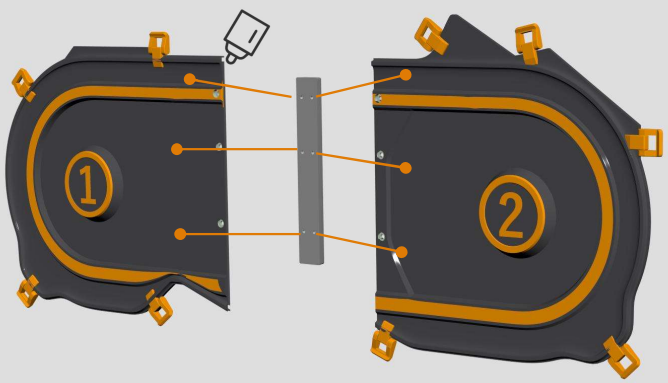

(1) Apply T9000 adhesive in the lid groove.
(2) Join the lid halves with the connector and M3 × 10 self-tapping screws.
(3) Apply 502 instant adhesive in the groove on the back of the lid, then secure the 3 × 2 mm rubber strip in the groove.




6. Main Assembly

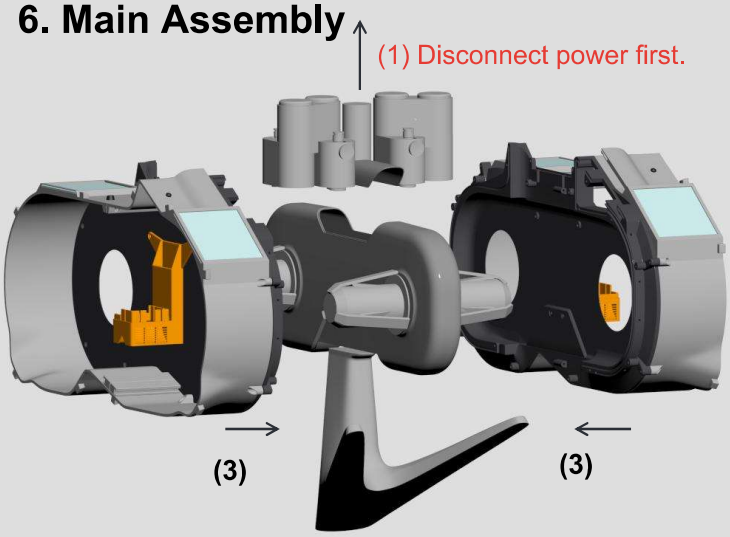


(1) Remove the AMS lite feeder screws and lift the feeder assembly.
(2) Apply T9000 to the mating groove between the two shells.
(3) Fit the assembled Side A and Side B inner panels around the AMS lite.
(4) Reinstall the four feeder screws.
(5) Join the inner panels with M3 × 12 screws.
(6) Install M3 × 10 screws in the two heater bracket holes.
(7) Apply 1 × 3 mm EVA foam strip around the outer edge of the lid.




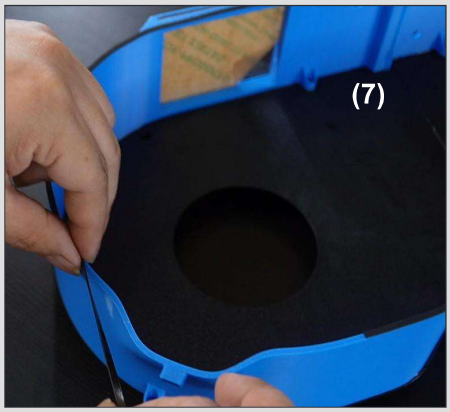

7. Controller Assembly

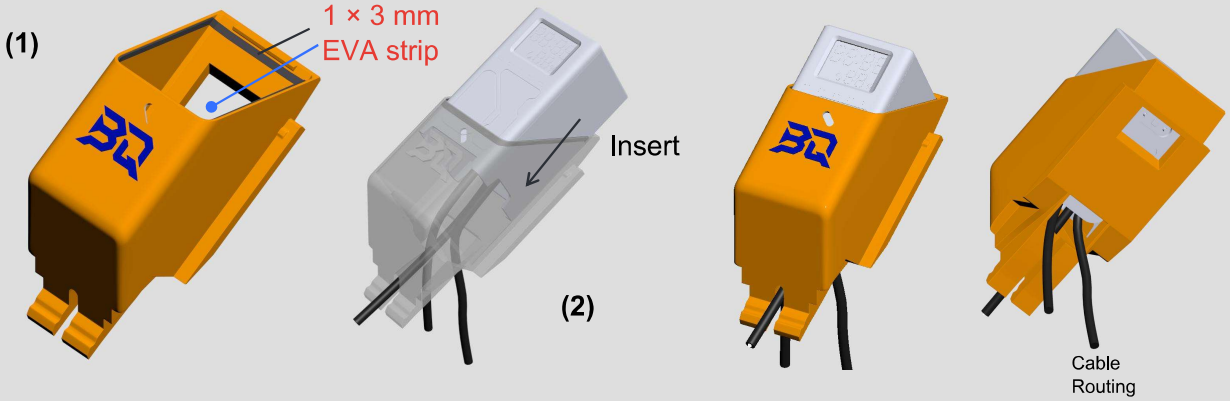


(1) Apply 3 × 1 mm EVA foam strip around the controller opening.
(2) Connect the cables, then push the BQDry Mini controller fully into its bracket until it locks in place.

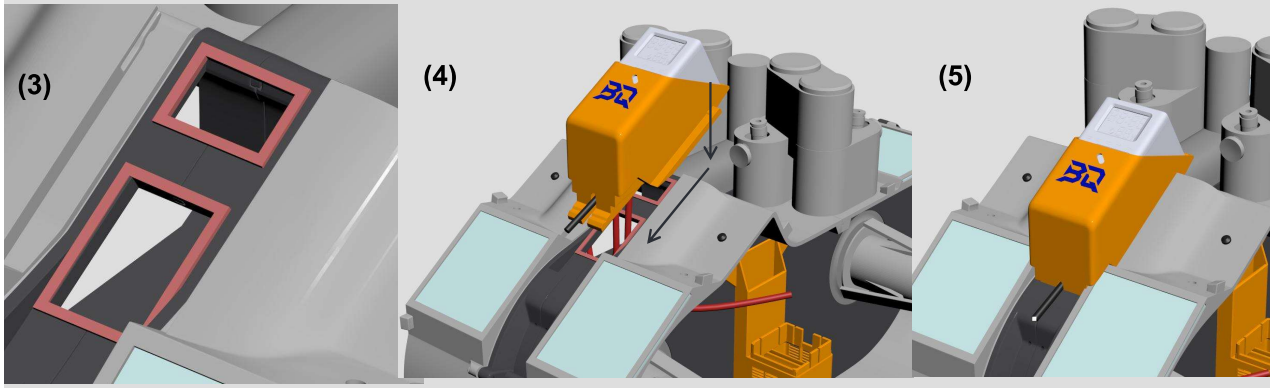

(3) Apply 3 × 1 mm EVA foam strip around the front opening of the shell.
(4) Pass the heater cables from step (2) through the lower hole, then route them out to both sides.
(5) Slide the complete controller assembly into the guide rails.


8. Heater Installation

(1) Remove the original air outlet duct from the hea
(2) Insert the heater module into its bracket.
(3) Connect the heater power cable.
(4) Tuck excess cable into the cable compartment I

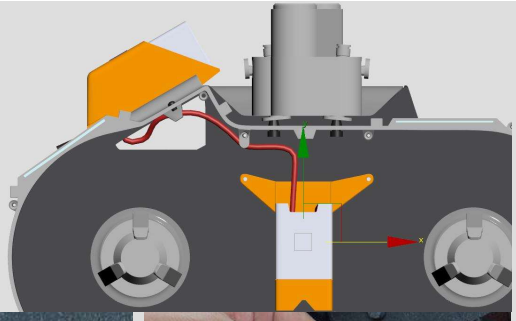






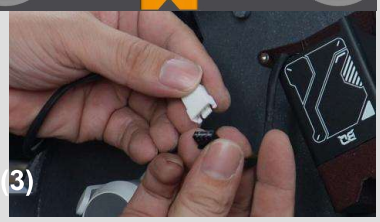



9. Final Assembly

DC Power Connection

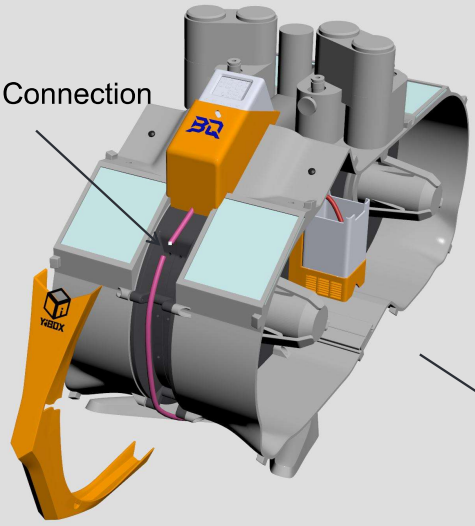

(1) Connect the DC power cable to the controller's power connector. Route the cable through the center groove to the rear of the enclosure.
(2) Snap on the front trim cover.
(3) Insert the desiccant boxes and close the lids.

